


Workshop Service Manual

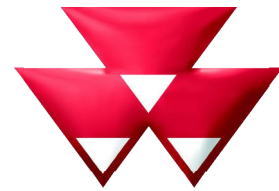

MASSEY FERGUSON

9800 Series Planter

9816

9816 VE

9824

9824 VE

9824 VE (70 cm)

9800 Series Planter

1 General	1-1
1.1 General information	1-3
1.1.1 Introduction to this service manual	1-3
1.1.2 Units of measurement	1-3
1.1.3 Table of contents	1-3
1.1.4 Page numbers	1-3
1.1.5 Intended use	1-3
1.1.6 Proper disposal of waste	1-3
1.2 Safety	1-5
1.2.1 Safety symbol	1-5
1.2.2 Safety messages	1-5
1.2.3 Information messages	1-5
1.2.4 Safety signs	1-5
1.2.5 A word to the operator	1-6
1.2.6 The service manual	1-7
1.2.7 Operation	1-7
1.2.7.1 Prepare for operation	1-7
1.2.7.2 General information	1-7
1.2.7.3 Personal protective equipment	1-8
1.2.7.4 Seat instructions	1-9
1.2.7.5 Shield and guards	1-9
1.2.7.6 Exhaust warning	1-10
1.2.7.7 Flying debris	1-10
1.2.7.8 Handrails	1-10
1.2.7.9 Agricultural chemicals	1-10
1.2.8 Travel on public roads	1-11
1.2.9 Maintenance	1-12
1.2.9.1 General maintenance information	1-12
1.2.9.2 Fire prevention and first aid	1-14
1.2.9.3 High pressure leaks	1-15
1.2.9.4 Tire safety	1-15
1.2.9.5 Replacement parts	1-16
1.2.9.6 D-ring	1-16
1.3 Cylinder stops	1-17
1.3.1 Wheel lift cylinder stops	1-17
1.3.2 Transport pins	1-17
1.4 Machine identification	1-18
1.4.1 Serial number plate	1-18
1.4.2 Serial number description	1-18
1.5 Main machine components	1-20
1.6 Specifications - vacuum planter	1-21
1.6.1 9816 / 9824	1-21
1.6.1.1 Frame specifications	1-21
1.6.1.2 Tire specifications	1-21
1.6.1.3 Machine dimensions	1-22
1.6.1.4 Marker specifications	1-22
1.6.1.5 Row unit specifications	1-22
1.6.1.6 Hydraulic system specifications	1-23
1.6.1.7 Shear pin specifications	1-23
1.6.1.8 Approximate shipping weight	1-23
1.6.1.9 Special bolt torques	1-23

1.6.1.10	Tractor requirement	1-24
1.6.2	9824 export	1-25
1.6.2.1	Frame specifications	1-25
1.6.2.2	Tire specifications	1-25
1.6.2.3	Machine dimensions	1-26
1.6.2.4	Marker specifications	1-26
1.6.2.5	Row unit specifications	1-27
1.6.2.6	Hydraulic system specifications	1-27
1.6.2.7	Shear pin specifications	1-27
1.6.2.8	Approximate shipping weight	1-27
1.6.2.9	Special bolt torques	1-28
1.6.2.10	Tractor requirement	1-28
1.6.2.11	20/20 seedsense terminal specifications	1-29
1.7	Specifications - pressure planter	1-30
1.7.1	9816 / 9824	1-30
1.7.1.1	Frame specifications	1-30
1.7.1.2	Tire specifications	1-30
1.7.1.3	Machine dimensions	1-31
1.7.1.4	Marker specifications	1-31
1.7.1.5	Row unit specifications	1-31
1.7.1.6	Air system specifications	1-32
1.7.1.7	Hydraulic system specifications	1-32
1.7.1.8	Shear pin specifications	1-32
1.7.1.9	Electrical specifications	1-33
1.7.1.10	Approximate shipping weight	1-33
1.7.1.11	Special bolt torques	1-33
1.7.1.12	Tractor requirements	1-33
1.8	Bolt torque values	1-35
2	Frame	2-1
2.1	Planter troubleshooting	2-3
2.2	Wing braces	2-7
2.2.1	Remove the wing braces	2-7
2.2.2	Install the wing braces	2-8
2.3	Inner wing	2-10
2.3.1	Remove the inner wing	2-10
2.3.2	Install the inner wing	2-11
2.4	Outer wing	2-13
2.4.1	Remove the outer wing	2-14
2.4.2	Install the outer wing	2-15
2.5	Tongue and inner tongue with latch	2-17
2.5.1	Remove the tongue roller	2-18
2.5.2	Install the tongue roller	2-18
2.5.3	Remove the inner tongue roller	2-19
2.5.4	Install the inner tongue roller	2-20
2.5.5	Remove the slide buttons	2-21
2.5.6	Install the slide buttons	2-22
2.5.7	Remove the slide blocks	2-23
2.5.8	Install the slide blocks	2-23
2.5.9	Remove the tongue latch	2-24
2.5.10	Install the tongue latch	2-25
2.6	Hitch	2-27
2.6.1	Remove the hitch pivot	2-29
2.6.2	Install the hitch pivot	2-29
2.6.3	Remove the two-point hitch	2-30
2.6.4	Install the two-point hitch	2-31
2.6.5	Remove the drawbar hitch	2-31

2.6.6	Install the drawbar hitch	2-33
2.6.7	Drawbar hitch adjustment	2-36
2.7	Rear hitch (optional)	2-38
2.7.1	Remove the tow hitch clevis at the rear of the machine	2-38
2.7.2	Install the tow hitch clevis at the rear of the machine	2-38
2.8	Lift wheel arm	2-39
2.8.1	Remove a lift wheel arm	2-39
2.8.2	Install a lift wheel arm	2-39
2.9	Markers	2-40
2.9.1	Remove the lower marker arm - 16 row	2-40
2.9.2	Install the lower marker arm - 16 row	2-41
2.9.3	Remove the lower marker arm - 24 row	2-42
2.9.4	Install the lower marker arm - 24 row	2-44
2.9.5	Adjust the marker arm length	2-46
2.9.6	Remove the top marker arm	2-47
2.9.7	Install the top marker arm	2-49
2.9.8	Remove the gauge wheel - 16 row	2-50
2.9.9	Install the gauge wheel - 16 row	2-51
2.9.10	Remove the gauge wheel - 24 row	2-51
2.9.11	Install the gauge wheel - 24 row	2-52
2.9.12	Disassemble the gauge wheel - 16 row	2-52
2.9.13	Assemble the gauge wheel - 16 row	2-53
2.9.14	Disassemble the gauge wheel - 24 row	2-53
2.9.15	Assemble the gauge wheel - 24 row	2-54
2.9.16	Remove the marker disc	2-55
2.9.17	Install the marker disc	2-56
2.9.18	Disassemble the marker disc	2-56
2.9.19	Assemble the marker disc	2-58
2.9.20	Adjust the marker disc	2-59
2.10	Central fill platform and ladder	2-60
2.10.1	Remove the central fill ladder	2-60
2.10.2	Install the central fill ladder	2-61
2.10.3	Remove the platform	2-63
2.10.4	Install the platform	2-63
2.10.5	Remove the cradle	2-64
2.10.6	Install the cradle	2-66
3	Drive system	3-1
3.1	Roller chains	3-3
3.1.1	Roller chain maintenance	3-3
3.1.2	Check roller chain elongation	3-3
3.1.3	Sprocket wear	3-4
3.1.4	Sprocket position	3-4
3.2	Flex shaft drive	3-5
3.2.1	Install/remove the flex drive shaft	3-5
3.3	Ground drive transmission	3-10
3.3.1	Ground drive transmission components	3-10
3.3.2	Adjust the down pressure of the seed transmission	3-11
3.3.3	Transmission shear bolt	3-11
3.3.4	Chain routing	3-12
3.3.5	Roller chain identification	3-13
3.3.6	Remove roller chains	3-14
3.3.7	Install the roller chains	3-14
3.3.8	Front sprocket assembly	3-15
3.3.9	Remove the front sprocket assembly	3-15
3.3.10	Install the front sprocket assembly	3-16
3.3.11	Disassemble the front sprocket assembly	3-16

3.3.12	Assemble the front sprocket assembly	3-17
3.3.13	Remove the top tensioner	3-17
3.3.14	Install the top tensioner	3-17
3.3.15	Disassemble the top tensioner	3-18
3.3.16	Assemble the top tensioner	3-18
3.3.17	Setting the torsion spring	3-19
3.3.18	Remove the rear sprocket assembly	3-20
3.3.19	Install the rear sprocket assembly	3-21
3.3.20	Disassemble the rear sprocket assembly	3-22
3.3.21	Assemble the rear sprocket assembly	3-22
3.3.22	Remove the wheel	3-22
3.3.23	Install the wheel	3-23
3.3.24	Disassemble the wheel	3-25
3.3.25	Assemble the wheel	3-25
3.3.26	Remove the idler sprockets	3-26
3.3.27	Install the idler sprockets	3-26
3.3.28	Remove the idler pulleys	3-27
3.3.29	Install the idler pulleys	3-27
3.3.30	Disassemble the drive shaft	3-28
3.3.31	Assemble the drive shaft	3-31
3.4	Point row clutch - early production	3-35
3.4.1	Remove the point row clutch - early production	3-35
3.4.2	Install the point row clutch - early production	3-35
3.4.3	Assemble the point row clutch - early production	3-36
3.4.4	Disassemble the point row clutch - early production	3-36
3.5	Point row clutch - late production	3-38
3.5.1	Remove the point row clutch - late production	3-38
3.5.2	Install the point row clutch - late production	3-38
3.5.3	Point row clutch - late production	3-39
3.5.4	Remove the support assembly drive sprocket	3-42
3.5.5	Install the support assembly drive sprocket	3-43
3.6	Hydraulic drive	3-44
3.6.1	Hydraulic drive	3-44
3.6.2	Remove the roller chain	3-44
3.6.3	Install the roller chain	3-44
3.6.4	Remove the 16 tooth sprocket	3-44
3.6.5	Install the 16 tooth sprocket	3-45
3.6.6	Remove the tensioner pulley	3-46
3.6.7	Install the tensioner pulley	3-47
3.6.8	Remove the 40 tooth sprocket	3-48
3.6.9	Install the 40 tooth sprocket	3-49
3.7	Drive shaft	3-50
3.7.1	Remove the sprocket bearing assembly	3-50
3.7.2	Install the sprocket bearing assembly	3-50
3.7.3	Remove the center drive shaft	3-50
3.7.4	Install the center drive shaft	3-51
3.7.5	Remove the draft shaft for the inner wing - 16 row	3-53
3.7.6	Install the draft shaft for the inner wing - 16 row	3-54
3.7.7	Remove the draft shaft for the inner wing - 24 row	3-55
3.7.8	Install the draft shaft for the inner wing - 24 row	3-56
3.7.9	Remove the drive shaft for the outer wing - 16 row	3-57
3.7.10	Install the drive shaft for the outer wing - 16 row	3-58
3.7.11	Remove the drive shaft for the outer wing - 24 row	3-60
3.7.12	Install the drive shaft for the outer wing - 24 row	3-61
4	Hydraulic system	4-1
4.1	Hydraulic troubleshooting	4-5

4.2 Hydraulic system description	4-7
4.2.1 Hydraulic seed drive with pump	4-7
4.2.2 Seed meter blowers with tractor hydraulics	4-8
4.2.3 Central fill blower	4-9
4.2.4 Lift circuit	4-10
4.2.5 Marker and fold circuits	4-13
4.3 Hydraulic oil	4-15
4.3.1 Check the hydraulic oil	4-15
4.3.2 Changing the hydraulic oil and filter	4-15
4.4 Hydraulic pump	4-17
4.4.1 Pump components	4-17
4.4.2 Pump specifications	4-17
4.4.3 Remove the pump	4-17
4.4.4 Install the pump	4-19
4.4.5 Disassemble the pump	4-19
4.4.6 Examine the pump	4-24
4.4.7 Assemble the pump	4-25
4.5 Hydraulic seed drive motor	4-30
4.5.1 Eaton T series motor components	4-30
4.5.2 Hydraulic seed drive motor specification	4-30
4.5.3 Remove the hydraulic seed drive motor	4-30
4.5.4 Install the hydraulic seed drive motor	4-32
4.5.5 Disassemble the Eaton T series drive motor	4-32
4.5.6 Examine the Eaton T series motor	4-35
4.5.7 Assemble the Eaton T series motor	4-35
4.6 Central fill blower motor	4-40
4.6.1 Rexroth bent axis motor components	4-40
4.6.2 Motor specifications	4-40
4.6.3 Remove the motor	4-40
4.6.4 Install the motor	4-43
4.6.5 Disassemble the Rexroth bent axis motor	4-45
4.6.6 Inspect the Rexroth bent axis motor	4-45
4.6.7 Assemble the Rexroth bent axis motor	4-46
4.7 Seed meter blower motor - vacuum	4-47
4.7.1 Vacuum motor operation	4-47
4.7.2 Remove the motor	4-47
4.7.3 Install the motor	4-48
4.7.4 Test the pressure to the motor	4-49
4.7.5 Check the case drain	4-50
4.8 Seed meter blower motor - pressure	4-51
4.8.1 Motor specifications	4-51
4.8.2 Remove the motor	4-51
4.8.3 Install the motor	4-52
4.8.4 Concentric GC series motor components	4-53
4.8.5 Disassemble the Concentric GC series motor	4-54
4.8.6 Assemble the Concentric GC series motor	4-54
4.9 Oil cooler	4-56
4.9.1 Cleaning the hydraulic oil coolers	4-56
4.9.2 Examine the oil cooler	4-56
4.9.3 Remove the oil cooler	4-56
4.9.4 Install the oil cooler	4-57
4.10 Fold cylinders	4-58
4.10.1 Cylinder components	4-58
4.10.2 Cylinder specifications	4-58
4.10.3 Remove the cylinder	4-59
4.10.4 Install the cylinder	4-60

4.10.5	Disassemble the cylinder	4-60
4.10.6	Examine the cylinder assembly	4-61
4.10.7	Assemble the cylinder	4-61
4.11	Latch cylinder	4-63
4.11.1	Remove the cylinder	4-63
4.11.2	Install the cylinder	4-64
4.12	Marker cylinder	4-65
4.12.1	Marker cylinder specifications	4-66
4.12.2	Remove the cylinder	4-67
4.12.3	Install the cylinder - 16 row	4-68
4.12.4	Disassemble the cylinder - 16 row	4-68
4.12.5	Examine the cylinder assembly	4-69
4.12.6	Assemble the cylinder - 16 row	4-69
4.12.7	Install the cylinder - 24 row	4-70
4.12.8	Disassemble the cylinder - 24 row	4-70
4.12.9	Examine the cylinder assembly	4-71
4.12.10	Assemble the cylinder - 24 row	4-71
4.13	Lift cylinders	4-73
4.13.1	Lift cylinder specifications	4-75
4.13.2	Remove the wing lift cylinder	4-75
4.13.3	Install the lift cylinder	4-77
4.13.4	Remove the middle lift cylinder	4-77
4.13.5	Install the middle lift cylinder	4-79
4.13.6	Disassemble the lift cylinder	4-79
4.13.7	Examine the cylinder assembly	4-80
4.13.8	Assemble the lift cylinder	4-80
4.14	Drawbar hitch cylinder	4-82
4.14.1	Drawbar hitch cylinder specifications	4-82
4.14.2	Remove the drawbar hitch cylinder	4-82
4.14.3	Install the drawbar hitch cylinder	4-83
4.14.4	Disassemble the drawbar hitch cylinder	4-84
4.14.5	Assemble the drawbar hitch cylinder	4-84
4.15	Marker and fold valve block	4-86
4.15.1	Remove the marker and fold valve block	4-87
4.15.2	Remove the solenoids	4-87
4.15.3	Examine the solenoid valves	4-88
4.15.4	Install the solenoids	4-89
4.15.5	Install the marker and fold valve block	4-89
4.16	Marker sequence valve	4-90
4.16.1	Remove the sequence valve	4-91
4.16.2	Install the sequence valve	4-92
4.16.3	Disassemble the sequence valve	4-92
4.16.4	Examine the sequence valve	4-93
4.16.5	Assemble the sequence valve	4-93
4.17	lift valve block	4-95
4.17.1	Remove the lift valve block	4-96
4.17.2	Install the lift valve block	4-96
4.17.3	Remove the solenoids	4-97
4.17.4	Examine the solenoid valves	4-97
4.17.5	Install the solenoids	4-98
4.18	Flow divider valve	4-99
4.18.1	Remove the flow divider valve	4-99
4.18.2	Install the flow divider valve	4-100
4.18.3	Examine the flow divider valve	4-100
4.18.4	Disassemble the flow divider valve - pressure	4-100
4.18.5	Assemble the flow divider valve - pressure	4-101
4.18.6	Assemble/disassemble the flow divider valve - vacuum	4-102

4.19 Flow control valve	4-103
4.19.1 Remove the flow control valve	4-103
4.19.2 Examine the flow control valve	4-104
4.19.3 Install the flow control valve	4-104
4.19.4 Disassemble the flow control valve	4-105
4.19.5 Assemble the flow control valve	4-105
4.20 Motor control valve	4-106
4.20.1 Remove the motor control valve	4-107
4.20.2 Disassemble the motor control valve	4-107
4.20.3 Assemble the motor control valve	4-108
4.20.4 Examine the motor control valve	4-108
4.20.5 Install the motor control valve	4-109
4.21 Blower control valve	4-110
4.21.1 Remove the blower control valve	4-111
4.21.2 Examine the blower control valve	4-111
4.21.3 Disassemble the blower control valve	4-111
4.21.4 Assemble the blower control valve	4-112
4.21.5 Install the blower control valve	4-113
4.22 Fertilizer pump valve	4-114
4.22.1 Remove the fertilizer pump valve	4-114
4.22.2 Install the fertilizer pump valve	4-115
4.22.3 Disassemble the fertilizer pump valve	4-115
4.22.4 Assemble the fertilizer pump valve	4-116
4.23 DeltaForce	4-117
4.23.1 Hydraulic system overview	4-118
4.23.2 Remove the load pin	4-119
4.23.3 Install the load pin	4-120
4.23.4 Remove a DeltaForce cylinder	4-121
4.23.5 Install a DeltaForce cylinder	4-121
4.23.6 Remove a DeltaForce cylinder valve	4-122
4.23.7 Install a DeltaForce cylinder valve	4-122
4.23.8 Remove/install the DeltaForce valve	4-123
4.23.9 Replace the filter in the DeltaForce valve	4-123
4.24 Alternator	4-124
4.24.1 Remove the alternator motor	4-124
4.24.2 Install the alternator motor	4-124
4.24.3 Remove the alternator	4-125
4.24.4 Install the alternator	4-125
4.25 Hydraulic fertilizer pump	4-127
4.25.1 Remove the hydraulic fertilizer pump	4-127
4.25.2 Install the hydraulic fertilizer pump	4-127
4.25.3 Assemble/disassemble the hydraulic motor	4-129
5 Electrical system	5-1
5.1 Basic troubleshooting information	5-5
5.1.1 Basic troubleshooting procedures	5-5
5.1.2 Tools	5-6
5.1.3 Continuity check	5-6
5.1.4 Voltage check	5-7
5.1.5 Check a connector	5-8
5.1.6 Test for open circuits	5-8
5.1.7 Find open circuit	5-9
5.1.8 Test for short circuits	5-9
5.1.9 Test for high resistance	5-10
5.1.10 Terminal numbers	5-10
5.1.11 Dielectric grease	5-10
5.1.12 Pins and sockets	5-11

5.1.13	Replace a Packard connector	5-11
5.1.14	Replace an AMP connector	5-12
5.2	Transport lamps - non CE	5-13
5.2.1	Lamp harness	5-13
5.2.2	Check the lighting	5-15
5.2.3	Machine lamp plug - non CE	5-16
5.2.4	Turn signal module	5-16
5.2.4.1	Remove the turn signal module	5-17
5.2.4.2	Install the turn signal module	5-18
5.2.5	Change a bulb	5-18
5.2.6	Remove the tow hitch harness	5-19
5.2.7	Install the tow hitch harness	5-20
5.3	Transport lamps - CE	5-21
5.3.1	Lamp harness - CE	5-21
5.3.2	Machine lamp plug - CE	5-22
5.3.3	Transport lamps	5-22
5.3.4	Change a bulb	5-23
5.4	Marker, fold, and lift	5-25
5.4.1	Marker, fold, and lift harness	5-25
5.4.2	Test the control box voltage	5-28
5.4.3	Lift limit switch	5-29
5.4.3.1	Remove the lift limit switch	5-29
5.4.3.2	Install the lift limit switch	5-29
5.4.4	Adjust the frame height limit switch	5-29
5.4.5	Marker position switch	5-30
5.4.5.1	Remove the marker position switch	5-31
5.4.5.2	Install the marker position switch	5-31
5.4.5.3	Adjust the marker position switch	5-31
5.4.6	Solenoid coils	5-32
5.4.6.1	Check the solenoid coils	5-32
5.4.6.2	Remove the solenoid coils	5-33
5.4.6.3	Install the solenoid coils	5-33
5.5	ISOBUS planter controller troubleshooting	5-34
5.6	ISOBus hydraulic drive system	5-35
5.6.1	Fuses	5-35
5.6.2	ISO harness diagram	5-37
5.6.3	ISO harness layout	5-41
5.6.4	Row unit connections - 16 row	5-42
5.6.5	Row unit connections - 24 row	5-44
5.6.6	ISO hitch harness	5-46
5.6.7	ISO monitor harness	5-47
5.6.8	ISO two channel actuator harness	5-50
5.6.9	ISO four channel actuator harness	5-53
5.6.10	ISO bridge module harness	5-57
5.6.11	ISOBus planter controller	5-59
5.6.12	Remove the ISOBus planter controller	5-59
5.6.13	Install the ISOBus planter controller	5-60
5.6.14	PWM solenoid valve	5-60
5.6.14.1	Remove the PWM solenoid valve	5-61
5.6.14.2	Install the PWM solenoid valve	5-62
5.6.15	Shaft speed sensor	5-62
5.6.15.1	Test the shaft speed sensor	5-63
5.6.15.2	Remove the shaft speed sensor	5-63
5.6.15.3	Install the shaft speed sensor	5-63
5.6.16	Lift switch, if equipped	5-64
5.6.16.1	Remove the lift switch	5-64
5.6.16.2	Install the lift switch	5-65

5.6.16.3	Lift switch adjustment	5-66
5.7	ISOBus ground drive system	5-67
5.7.1	ISO harness layout	5-68
5.7.2	Ground speed sensor, if equipped	5-70
5.7.2.1	Test the ground speed sensor	5-70
5.7.2.2	Remove the ground speed sensor	5-71
5.7.2.3	Install the ground speed sensor	5-71
5.8	SM 400 system	5-72
5.8.1	SM 400 harness layout	5-73
5.8.2	Terminator adaptor harness	5-74
5.9	Modules and sensors	5-76
5.9.1	Bridge module	5-76
5.9.1.1	Bridge module diagnostic indicator lamps	5-77
5.9.1.2	Remove the bridge module	5-78
5.9.1.3	Install the bridge module	5-79
5.9.2	Interface module	5-79
5.9.2.1	Interface module diagnostic indicator lamps	5-80
5.9.2.2	Remove an interface module	5-81
5.9.2.3	Install an interface module	5-82
5.9.3	Row unit connections - 16 row	5-83
5.9.4	Row unit connections - 24 row	5-85
5.9.5	Seed sensors	5-87
5.9.6	Remove the seed tubes	5-87
5.9.7	Install the seed tubes	5-87
5.9.8	Clean the seed sensors	5-88
5.9.9	Test the seed sensors	5-88
5.9.10	Test with a seed sensor tester	5-89
5.9.11	Test the seed monitor	5-89
5.10	Point row clutch	5-91
5.10.1	Hitch harness	5-91
5.10.2	Harness extension	5-92
5.10.3	Clutch solenoid	5-92
5.10.4	Remove the clutch solenoid	5-93
5.10.5	Install the clutch solenoid	5-93
5.10.6	Clutch control box	5-93
5.11	Vacuum system	5-95
5.11.1	Electrical system overview	5-95
5.11.2	Status lamp for the single row module and vDrive module	5-98
5.11.3	SeedSense error list	5-99
5.11.4	Troubleshooting - no power to SRM(s)	5-101
5.11.5	Troubleshooting - SRM(s) are red	5-102
5.11.6	Troubleshooting - SRM(s) are yellow	5-103
5.12	Power distribution module	5-105
6	Product containment	6-1
6.1	Central fill air system	6-3
6.1.1	Central fill air pressure	6-3
6.1.2	Adjust the central fill air pressure	6-3
6.1.3	Remove the air pressure gauge	6-3
6.1.4	Install the air pressure gauge	6-4
6.2	Central fill blower	6-5
6.2.1	Central fill blower components	6-5
6.2.2	Remove the central fill blower	6-5
6.2.3	Install the central fill blower	6-7
6.2.4	Start a new or repaired central fill blower	6-7
6.2.5	Disassemble the central fill blower	6-7
6.2.6	Examine the central fill blower	6-9

6.2.7 Assemble the central fill blower	6-9
6.3 Central fill hoppers	6-12
6.3.1 Remove the central fill hoppers	6-12
6.3.2 Install the central fill hoppers	6-13
6.4 Seed delivery hoses	6-14
6.4.1 Plenum	6-14
6.4.2 Left wing - 16 row	6-15
6.4.3 Right wing - 16 row	6-16
6.4.4 Left wing - 24 row	6-17
6.4.5 Right wing - 24 row	6-18
6.4.6 Center	6-19
6.4.7 Seed meter screens	6-20
6.5 Seed meter blower - pressure	6-21
6.5.1 Remove the seed meter blower	6-21
6.5.2 Install the seed meter blower	6-23
6.5.3 Disassemble the seed meter blower	6-24
6.5.4 Examine the seed meter blower	6-24
6.5.5 Assemble the seed meter blower	6-24
6.6 Seed meter blower - vacuum	6-25
6.6.1 Remove the seed meter blower	6-25
6.6.2 Install the seed meter blower	6-26
6.6.3 Disassemble the seed meter blower	6-26
6.6.4 Assemble the seed meter blower	6-27
6.7 Air tubes	6-29
6.7.1 Clean the air tubes	6-29
7 Row units	7-1
7.1 Gauge wheels	7-5
7.1.1 Adjust the gauge wheel to opener clearance	7-5
7.1.2 Calibrate the gauge wheel depth	7-5
7.1.3 Remove the gauge wheels	7-5
7.1.4 Install the gauge wheels	7-6
7.1.5 Gauge wheel arm components	7-8
7.1.6 Disassemble the pivot for the gauge wheel arm	7-9
7.1.7 Assemble the pivot for the gauge wheel arm	7-12
7.1.8 Replace a gauge wheel tire	7-15
7.2 Opener discs	7-16
7.2.1 Replace the opener disc bearings	7-16
7.2.2 Replace the opener discs	7-17
7.2.3 Set the opener disc contact	7-18
7.3 Scraper	7-20
7.3.1 Replace a flat scraper - early production	7-20
7.3.2 Replace a flat scraper - late production	7-20
7.4 Seed tubes	7-22
7.4.1 Remove the seed tubes	7-22
7.4.2 Install the seed tubes	7-22
7.4.3 Replace the tube guard	7-22
7.4.4 Adjust the tube clip - pressure	7-23
7.4.5 Adjust the tube clip - Vacuum	7-23
7.4.6 Clean the seed sensors	7-24
7.5 SpeedTube™	7-25
7.5.1 Yearly maintenance	7-25
7.5.2 SpeedTube™ crop change	7-25
7.5.3 Change from SpeedTube™ to seed tube	7-25
7.5.4 SpeedTube™ inspection	7-26
7.5.5 Replace the belt	7-31

7.6 Depth gauge	7-34
7.6.1 Remove the depth gauge	7-34
7.6.2 Install the depth gauge	7-35
7.6.3 Disassemble the depth gauge	7-37
7.6.4 Assemble the depth gauge	7-38
7.7 Single closing wheel	7-40
7.7.1 Remove the single closing wheel	7-40
7.7.2 Install the single closing wheel	7-40
7.7.3 Disassemble the single closing wheel	7-40
7.7.4 Assemble the single closing wheel	7-41
7.8 Dual closing wheels	7-42
7.8.1 Remove a dual closing wheel	7-42
7.8.2 Install a dual closing wheel	7-43
7.8.3 Replace the bearing in a cast iron closing wheel	7-43
7.8.4 Closing wheel spacing and offset	7-43
7.8.4.1 Adjusting the closing wheel spacing and offset	7-44
7.8.5 Centering the closing wheels	7-44
7.9 Row unit linkage	7-45
7.9.1 Remove the row unit linkage	7-45
7.9.2 Install the row unit linkage	7-46
7.10 Seed meter - vacuum	7-47
7.10.1 Seed meter	7-47
7.10.2 Seed meter components	7-47
7.10.3 Crop kits	7-48
7.10.3.1 Crop setup guide	7-48
7.10.3.2 Replacing a crop kit	7-52
7.10.4 Check the disc shims	7-56
7.10.5 Remove a seed meter	7-59
7.10.6 Install a seed meter	7-60
7.10.7 Assemble the meter to the hopper	7-61
7.10.8 Yearly maintenance	7-62
7.10.9 Replace the vacuum seal	7-63
7.10.10 Remove the drive motor	7-63
7.10.11 Install the drive motor	7-65
7.10.12 vSet 2 troubleshooting	7-67
7.11 Seed meter - pressure	7-69
7.11.1 Seed meter	7-69
7.11.2 Seed meter components	7-69
7.11.3 Remove a seed meter with a hopper	7-70
7.11.4 Install a seed meter with a hopper	7-71
7.11.5 Remove a seed meter with a mini hopper	7-71
7.11.6 Install a seed meter with a mini hopper	7-72
7.11.7 Remove a seed disc	7-73
7.11.8 Install a seed disc	7-74
7.11.9 Adjust the seed gate	7-75
7.11.10 Tickler brush	7-75
7.11.10.1 Removing the tickler brush	7-76
7.11.11 Air cutoff brush	7-77
7.11.12 Check the seed disc clearance	7-77
7.11.13 Check the seed meter clutch alignment	7-78
7.11.14 Seed discs	7-79
7.11.14.1 Seed disc identification tables	7-79
7.11.14.2 Large bean disc	7-84
7.11.14.3 Snap bean disc	7-84
7.11.15 Remove the roller chain	7-84
7.11.16 Install the roller chain	7-85
7.11.17 Remove the idler pulley	7-86

7.11.18	Install the idler pulley	7-86
7.11.19	Remove the sprocket assembly	7-86
7.11.20	Install the sprocket assembly	7-87
7.11.21	Replace the drive shaft and bearing	7-87
7.12	Pneumatic down pressure	7-88
7.12.1	Test the air compressor	7-88
7.12.2	Set the air pressure	7-89
7.12.3	Air pressure	7-90
7.12.4	Air compressor specifications	7-91
7.12.5	Replace the air compressor	7-91
7.12.6	Replace the air filter	7-91
7.12.7	Remove the air springs	7-91
7.12.8	Install the air springs	7-92
7.13	Ground drive planting rates - imperial	7-93
7.13.1	Ground drive planting rate	7-93
7.13.2	Set the planting rate	7-93
7.13.3	Seed population table - 30 seeds per disc	7-95
7.13.4	Seed population table - 50 seeds per disc	7-97
7.13.5	Seed population table - 60 seeds per disc	7-99
7.13.6	Seed population table - 120 seeds per disc	7-100
7.13.7	Planting rate chart	7-102
7.14	Ground drive planting rates - metric	7-103
7.14.1	Set the planting rate	7-103
7.14.2	Seed population table - 30 seeds per disc	7-104
7.14.3	Seed population table - 50 seeds per disc	7-106
7.14.4	Seed population table - 60 seeds per disc	7-108
7.14.5	Seed population table - 120 seeds per disc	7-109
8	Application system	8-1
8.1	Fertilizer piston pump	8-3
8.1.1	Double piston pump lubrication	8-3
8.1.2	Single piston pump lubrication	8-3
8.1.3	Single piston pump components	8-4
8.1.4	Double piston pump components	8-6
8.1.5	Remove the piston pump	8-7
8.1.6	Install the piston pump	8-8
8.1.7	Disassemble the piston pump	8-8
8.1.7.1	Disassemble the check valves	8-8
8.1.7.2	Disassemble the piston	8-9
8.1.7.3	Disassemble the rod packing	8-10
8.1.7.4	Disassemble the outboard crankcase	8-12
8.1.7.5	Disassemble the inboard components	8-13
8.1.7.6	Disassemble the internal crankcase	8-14
8.1.8	Assemble the piston pump	8-14
8.1.8.1	Assemble the internal crankcase	8-15
8.1.8.2	Assemble the inboard components	8-16
8.1.8.3	Assemble the outboard crankcase	8-17
8.1.8.4	Assemble the rod packing	8-18
8.1.8.5	Assemble the piston	8-19
8.1.8.6	Assemble the check valves	8-20
8.1.9	Disassemble the pump drive assembly	8-20
8.1.10	Assemble the pump drive assembly	8-23
8.2	Electric fertilizer pump	8-25
8.2.1	Electric pump troubleshooting	8-25
8.2.2	Remove the pump	8-26
8.2.3	Install the pump	8-28
8.2.4	Disassemble the pump	8-28

8.2.5 Assemble the pump	8-29
8.3 Hydraulic fertilizer pump	8-30
8.3.1 Centrifugal pump troubleshooting	8-30
8.3.2 Remove the pump	8-30
8.3.3 Install the pump	8-32
8.3.4 Disassemble the pump	8-33
8.3.5 Assemble the pump	8-34
8.3.6 Disassemble the motor	8-35
8.3.7 Assemble the motor	8-36
8.4 Flow divider valve	8-40
8.4.1 Flow divider troubleshooting	8-40
8.4.2 Remove the flow divider	8-40
8.4.3 Install the flow divider	8-41
8.4.4 Disassemble the flow divider	8-42
8.4.5 Assemble the flow divider	8-42
8.5 Double disc openers	8-43
8.5.1 Adjust the double disc opener	8-43
8.5.2 Remove the double disc opener	8-43
8.5.3 Install the double disc opener	8-44
8.5.4 Disassemble the double disc opener	8-44
8.5.5 Assemble the double disc opener	8-45
8.6 Single disc opener	8-46
8.6.1 Adjust the single disc opener depth	8-46
8.6.2 Single disc fertilizer opener troubleshooting	8-46
8.6.3 Adjust the single opener disc swivel	8-48
8.6.4 Adjust the single spring tension	8-48
8.6.5 Remove the single disc opener	8-49
8.6.6 Install the single disc opener	8-50
8.6.7 Disassemble the single disc opener	8-50
8.6.8 Assemble the single disc opener	8-52
8.7 Opener mount location	8-54
8.7.1 Opener mount location - 16 row	8-54
8.7.2 Opener mount location - 24 row	8-56
9 Spindles and wheels	9-1
9.1 Lift wheels	9-3
9.1.1 Remove a wheel	9-3
9.1.2 Install a wheel	9-4
9.2 Wheel bearings	9-5
9.2.1 Lubricate the wheel bearings	9-5
9.2.2 Replace the wheel bearings	9-5
9.2.3 Adjust the wheel bearings	9-7
10 Diagrams	10-1
10.1 Hydraulic	10-3
10.1.1 Hydraulic seed drive with pump	10-3
10.1.2 Seed meter blowers with tractor hydraulics	10-4
10.1.3 Central fill blower	10-5
10.1.4 Lift circuit	10-6
10.1.5 Marker and fold circuits	10-8
10.1.6 DeltaForce master tractor remotes option - Precision Planting	10-11
10.1.7 DeltaForce master tractor PTO option - Precision Planting	10-12
10.2 Electrical	10-13
10.2.1 Electrical schematic - vacuum	10-15
10.2.2 C1000	10-17
10.2.2.1 Terminal electrical schematic	10-17

10.2.2.2	Major components	10-19
10.2.3	C2100	10-20
10.2.3.1	Terminal electrical schematic	10-20
10.2.3.2	Major components	10-22
10.2.4	C3000	10-23
10.2.4.1	Major components	10-23
10.2.5	20/20 SeedSense	10-23
10.2.5.1	Terminal electrical connections	10-23
10.2.5.2	Major components	10-26
11	Index	Index-1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com