

CALIFORNIA

Proposition 65 Warning

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.
Wash hands after handling.

8600 T4i series tractors

Models 8650-8660-8670-8680-8690



Foreword

We would like to welcome you to the ever-growing number of people who own a Massey Ferguson tractor; people who appreciate quality. We are proud of every tractor that leaves our factories, each being technically advanced and of high quality.

This Operator Instruction Book contains the specifications for your new tractor. Please ensure that all operators read the instructions and follow them carefully. The pages that follow contain vital information on your tractor; please read them carefully.

Your Massey Ferguson dealer will guarantee you quality servicing and will provide you with all the assistance you need. When it comes to servicing, remember that your dealer knows your tractor best and that he wants you to be completely satisfied.

Please leave this Operator Instruction Book in the tractor if resold. The subsequent owner will need the information it contains.

All information and specifications in this Book are up to date at the time of publication. However, our ongoing policy to improve our products obliges us to reserve the right to make alterations at any time without notice.

Please note that this Book relates to all models and refers to both standard and optional equipment. You may therefore find details relating to equipment that is not fitted on your tractor.

Massey Ferguson, Beauvais

8600 T4i series tractors

1	Tractor identification	15
1.1	Locating serial numbers	17
1.1.1	Locating serial numbers	17
1.2	Your tractor identification details	18
1.2.1	Your tractor identification details	18
2	Safety instructions and safety points - Warranty	19
2.1	Introduction	21
2.1.1	Introduction - Safety instructions	21
2.2	Safety – Symbols and terms	22
2.2.1	Safety – Symbols and terms	22
2.3	Safety signs and instructions	23
2.3.1	Checking and replacing the safety signs and instructions	23
2.3.2	Presentation and location of the safety signs and instructions	24
2.4	General safety instructions	29
2.4.1	Awareness of the safety instructions and symbols	29
2.4.2	Operator familiarity in the use of the tractor	29
2.4.3	Filling the fuel tank	30
2.4.4	Getting into and out of the cab	31
2.4.5	Mandatory procedure before dismounting the tractor	31
2.5	Special safety instructions for preparing the tractor for use	32
2.5.1	Protective clothing	32
2.5.2	Activated carbon filter information	32
2.5.3	Safety devices and items	34
2.5.4	Checking the tractor	35
2.6	Specific safety instructions for starting the tractor	37
2.6.1	Protection of persons other than the operator	37
2.6.2	Start up safely	37
2.6.3	Checks to be carried out after start-up	38
2.7	Specific safety instructions for using the tractor	39
2.7.1	General instructions	39
2.7.2	Protection of persons other than the operator	40
2.7.3	Overturning	40
2.7.4	Tractor towing	42
2.7.5	Road use	42
2.7.6	Power take-off	44
2.7.7	Implements	44
2.7.8	Front-end loader	46
2.8	Specific safety instructions for servicing the tractor	47
2.8.1	Pollution warning to observe when servicing the tractor	47
2.8.2	General instructions	47
2.8.3	Special instructions for cleaning the tractor	47
2.9	Protective structures	49
2.9.1	Protective structures: use and accreditation	49
2.9.2	Cab or ROPS (depending on model)	49
2.9.3	Seat belt	49
2.9.4	Instructor seat	50
2.10	Warranty	51
2.10.1	General	51
2.10.2	Pre-delivery inspection and commissioning at the user's premises	51
2.10.3	Warranty procedure	51
2.10.4	Procedure to follow if changing region	51
2.10.5	Servicing during and after the warranty period	52

2.10.6	California emission control warranty statement	52
2.10.7	United States and Canada emission control warranty statement	54
3	Operation	59
3.1	Cab	61
3.1.1	Steering console	61
3.1.2	Instrument panel	62
3.1.3	Control unit	66
3.1.4	Start switch	67
3.1.5	Pedals	67
3.1.6	Steering Wheel	68
3.1.7	Seat	68
3.1.8	Right-hand console	73
3.1.9	Multifunction armrest	74
3.1.10	Work lights module	75
3.1.11	Left-hand console	76
3.1.12	Upper console	77
3.1.13	Air conditioning	78
3.1.14	Accessories sockets	83
3.1.15	Sun visor	84
3.1.16	High-visibility roof hatch	85
3.1.17	Suspended cab	85
3.2	Dash Control Center control screens on the instrument panel	87
3.2.1	Using the instrument panel control screen	87
3.2.2	Dash Control Center screens	87
3.3	Body	92
3.3.1	Opening the hood	92
3.3.2	Adjusting the external rear-view mirrors	93
3.3.3	Adjusting the left-hand step	95
3.4	Engine	97
3.4.1	Running-in	97
3.4.2	Filling with fuel	97
3.4.3	Start-up	99
3.4.4	Start-up sheet	100
3.4.5	Cold weather starting	101
3.4.6	Information on the different modes of the E3 engine with DEF technology	101
3.4.7	Stopping the engine	103
3.4.8	Engine speed	104
3.4.9	Forward speed calibration	105
3.5	Transmission	107
3.5.1	General	107
3.5.2	Coupler clutch function	107
3.5.3	Range shifting	107
3.5.4	Power Shuttle	109
3.5.5	Setting start-up speeds	111
3.5.6	Setting speeds	111
3.5.7	Engine underspeed supervisor	112
3.5.8	lever mode	113
3.5.9	pedal mode	114
3.5.10	self-propelled mode	115
3.5.11	Dyna-TM mode	116
3.5.12	Dyna-Step mode (optional)	117
3.5.13	Tractor towing	118
3.6	Brakes	123
3.6.1	Brake pedals	123
3.6.2	Hydraulic trailer brake	123
3.6.3	Pneumatic trailer brake	123
3.6.4	Electromechanically controlled brake on the steering column(ParkLock)	125
3.7	Steering	128
3.7.1	Steering	128
3.8	Front axle	130
3.8.1	Four-wheel drive front axle	130

3.8.2	Suspended front axle	131
3.8.3	Permissible load on the front axle	132
3.8.4	Using a scraper	135
3.9	Differential lock	136
3.9.1	Differential lock	136
3.10	Power take-off	137
3.10.1	Front power take-off	137
3.10.2	Rear power take-off (PTO)	138
3.10.3	Interchangeable 1000 rpm PTO (flanged shaft)	139
3.10.4	Economy PTO	141
3.10.5	PTO external controls	141
3.10.6	Power take-off electronic controls	141
3.11	Linkage	143
3.11.1	Electronic controls for front and rear linkage	143
3.11.2	Rear linkage operation	144
3.11.3	Rear linkage controls on the fenders	147
3.11.4	Front linkage	147
3.12	Linkage	151
3.12.1	Three-point linkage	151
3.12.2	Three-point linkage Top link	151
3.12.3	Three-point linkage Lower links	151
3.12.4	Three-point linkage lift rods	152
3.12.5	Three-point linkage stabilizers	152
3.12.6	Swinging drawbar	153
3.12.7	Three-point linkage Quick linkage hitch	158
3.13	Auxiliary hydraulics	160
3.13.1	General	160
3.13.2	Description and use of the couplers	160
3.13.3	Locking/unlocking the controls	165
3.13.4	Description and use of the cab controls	166
3.13.5	Description and use of the external controls	168
3.13.6	Setting flow rates and time delay	168
3.14	Front-end loader function	170
3.14.1	Layout of components	170
3.14.2	Using the front-end loader controls	171
3.14.3	Front-end loader	174
3.15	Wheels and tires	175
3.15.1	Wheel studs	175
3.15.2	Adjusting the front wheel track width	175
3.15.3	Adjusting the 4WD front axle stops	176
3.15.4	Adjusting the rear wheel track width	177
3.15.5	Tires	179
3.15.6	Dual wheels	179
3.15.7	Adjusting the dual rear wheel track width	180
3.15.8	Tire pressures	192
3.15.9	Liquid ballasting	192
4	Maintenance	193
4.1	Service guide	195
4.1.1	Maintenance	195
4.1.2	Lubrication chart	197
4.2	Cab	199
4.2.1	Air-conditioning system: Condenser	199
4.2.2	Air-conditioning system: Checking the air conditioning system	199
4.2.3	Air-conditioning system: dryer	200
4.2.4	Cab air filters	200
4.2.5	Cab attachment	201
4.2.6	Windshield washer	201
4.3	Engine	202
4.3.1	Recommended products	202
4.3.2	Fuel	202
4.3.3	Biodiesel fuel	204

4.3.4	DEF additive:	205
4.3.5	6-cylinder SisuDiesel engine	206
4.3.6	Engine oil level check.	207
4.3.7	Draining the engine oil.	207
4.3.8	Replacing the engine oil filter	207
4.3.9	Replacing the urea filter.	208
4.3.10	Fuel system: Fuel prefilter	209
4.3.11	Fuel system: Fuel filter.	209
4.3.12	Fuel system: water separator prefilter	210
4.3.13	Fuel system: bleeding	211
4.3.14	Fuel system: Fuel injection pump, regulator and injectors.	211
4.3.15	FUEL SYSTEM Injection (E3 engine with DEF technology) (optional)	211
4.3.16	Air filter	211
4.3.17	Cooling system	212
4.3.18	Checking the fan/alternator/air conditioning Poly-V belt	214
4.3.19	Replacing the fan/alternator/air conditioning belts	215
4.4	Transmission	217
4.4.1	Recommended products	217
4.4.2	Checking the transmission oil level	217
4.4.3	Draining the transmission oil	217
4.4.4	Checking the level of the rear final drive units	218
4.4.5	Draining the final drives.	219
4.4.6	Filtering the transmission hydraulic system	219
4.4.7	Checking and cleaning the transmission oil cooler	220
4.4.8	Lubricating the rear PTO shaft	221
4.4.9	Clutch.	222
4.5	Brakes	223
4.5.1	Recommended products	223
4.5.2	Bleeding the brake system	223
4.5.3	Compressed air system protection	223
4.6	Front power take-off	225
4.6.1	Recommended products	225
4.6.2	Draining oil	225
4.6.3	Lubricating the front PTO shaft	225
4.7	Front axle and steering	226
4.7.1	Recommended products	226
4.7.2	Four-wheel drive front axle: Checking the front axle beam oil level	226
4.7.3	Four-wheel drive front axle: draining the oil from the front axle beam	226
4.7.4	Four-wheel drive front axle: checking the oil level in the final drives	227
4.7.5	Four-wheel drive front axle: draining the oil in the final drives	227
4.7.6	Four-wheel drive front axle: lubrication	228
4.8	Linkage	229
4.8.1	Recommended products	229
4.8.2	Check the linkage shaft oil level	229
4.9	Linkage	230
4.9.1	Three-point linkage LUBRICATION	230
4.9.2	Front linkage: LUBRICATION	230
4.9.3	Ball hitch: lubrication	232
4.10	Auxiliary hydraulics	234
4.10.1	Recommended products	234
4.10.2	Checking the auxiliary hydraulic system oil level	234
4.10.3	Draining the auxiliary hydraulic system	235
4.10.4	Filtering the auxiliary hydraulic system	235
4.10.5	Checking and cleaning the auxiliary hydraulic system oil cooler	236
4.11	Electrical equipment	238
4.11.1	Batteries	238
4.11.2	Alternator	238
4.11.3	Power socket (ASAE)	238
4.11.4	Adjusting the headlights	239
4.11.5	Fuse box description	240
4.11.6	Battery isolator	247

4.12	Pressure washing	249
4.12.1	Pressure washing	249
4.13	Storing your tractor	250
4.13.1	Storing your tractor	250
4.13.2	Storing DEF additive	250
4.14	Faults and solutions	251
4.14.1	General table of faults	251
4.14.2	Indicator light panel	253
4.14.3	Indication of faults	257
4.14.4	Instrument panel error codes	259
4.14.5	Error codes for E3 engine with AdBlue/DEF technology	261
4.14.6	Transmission error codes	261
4.14.7	Four-wheel drive front axle error codes	263
4.14.8	PTO error codes	263
4.14.9	Multifunction armrest error codes	264
4.14.10	Hydraulic valve error codes	264
4.14.11	Headlights module error codes	266
4.14.12	Suspended cab error codes	266
4.14.13	Linkage error codes	267
5	Technical specifications	269
5.1	General specifications	271
5.1.1	Model 8650	271
5.1.2	Model 8660	271
5.1.3	Model 8670	272
5.1.4	Model 8680	273
5.1.5	Model 8690	274
5.2	Cab	276
5.2.1	Noise levels (dBA) at operator's ears	276
5.3	Engine	277
5.3.1	Engine specifications	277
5.3.2	Fuel system and air filter	277
5.3.3	COOLING	278
5.3.4	Tightening torques	278
5.4	Transmission	279
5.4.1	Forward speed for all models with transmission in Dyna-VT mode	279
5.4.2	Gearbox	279
5.4.3	Final drives	280
5.4.4	Rear differential lock	280
5.5	Brakes	281
5.5.1	Brake system technical specifications	281
5.6	Front axle and steering	282
5.6.1	Four-wheel drive front axle	282
5.6.2	Steering	282
5.7	Power take-off	284
5.7.1	Specifications	284
5.7.2	Tightening torques	284
5.8	Linkage	285
5.8.1	Rear linkage	285
5.9	Auxiliary hydraulics	286
5.9.1	Load Sensing system 180 l/min (47.6 gal/min (US)):	286
5.10	Electrical equipment	287
5.10.1	Electrical equipment technical specifications	287
5.11	Wheels and tires	288
5.11.1	Rim	288
5.11.2	Tires	288
5.11.3	Tightening torques	288
5.12	Capacities and dimensions	289
5.12.1	Capacities	289
5.12.2	Dimensions and weights	290
5.12.3	Attachment points: All models with 5 t (6 US ton) front linkage	292
5.12.4	Attachment points: all models without front linkage	293

6	Accessories	295
6.1	Cab	297
6.1.1	Cab accessories	297
6.2	Engine	298
6.2.1	Engine accessories	298
6.3	Front axle and steering	299
6.3.1	Front axle and steering accessories	299
6.4	Power take-off	300
6.4.1	Power take-off accessories	300
6.5	Linkage	301
6.5.1	Linkage accessories	301
6.6	Auxiliary hydraulics	302
6.6.1	Auxiliary hydraulics accessories	302
6.7	Wheels and tires	303
6.7.1	Wheels and tires accessories	303
7	Appendix	305
7.1	Conversion table	307
7.1.1	Conversion table	307

1. Tractor identification


1.1	Locating serial numbers	17
1.1.1	Locating serial numbers	17
1.2	Your tractor identification details	18
1.2.1	Your tractor identification details	18

1.1 Locating serial numbers

1.1.1 Locating serial numbers

T002037

IMPORTANT: Please quote the serial number of your tractor in all correspondence with your dealer or agent.

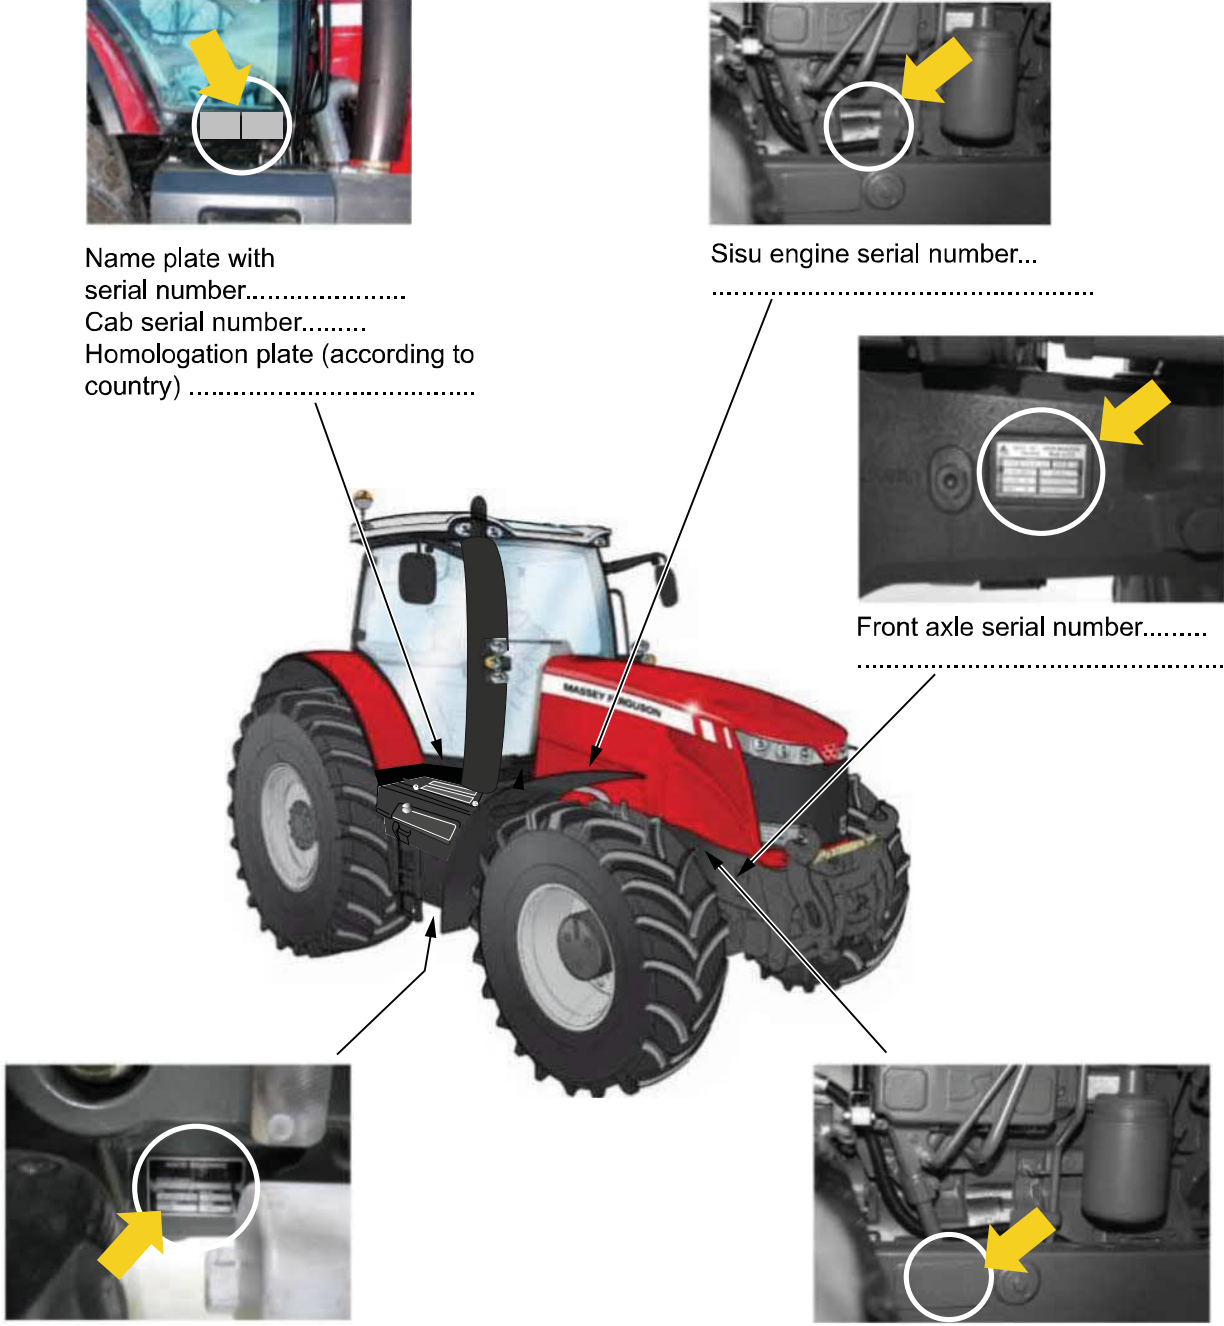

Name plate with serial number.....
Cab serial number.....
Homologation plate (according to country)

Sisu engine serial number... ..

Front axle serial number.....

Transmission serial number.. ..

Chassis number.....

Fig. 1.

I025728

1

1.2 Your tractor identification details

1.2.1 Your tractor identification details

T000966

Model: _____

Serial number: _____

Engine serial number: _____

Owner's name: _____

Street: _____

Zip Code: _____

Town: _____

County: _____

Country: _____

Dealer code: _____

Tractor received from (check one of the following):

- Factory: Other dealer (transfer):

Notes: _____

2. Safety instructions and safety points - Warranty

2.1	Introduction	21
2.1.1	Introduction - Safety instructions	21
2.2	Safety – Symbols and terms	22
2.2.1	Safety – Symbols and terms	22
2.3	Safety signs and instructions	23
2.3.1	Checking and replacing the safety signs and instructions	23
2.3.2	Presentation and location of the safety signs and instructions	24
2.4	General safety instructions	29
2.4.1	Awareness of the safety instructions and symbols	29
2.4.2	Operator familiarity in the use of the tractor	29
2.4.3	Filling the fuel tank	30
2.4.4	Getting into and out of the cab	31
2.4.5	Mandatory procedure before dismounting the tractor	31
2.5	Special safety instructions for preparing the tractor for use	32
2.5.1	Protective clothing	32
2.5.2	Activated carbon filter information	32
2.5.3	Safety devices and items	34
2.5.4	Checking the tractor	35
2.6	Specific safety instructions for starting the tractor	37
2.6.1	Protection of persons other than the operator	37
2.6.2	Start up safely	37
2.6.3	Checks to be carried out after start-up	38
2.7	Specific safety instructions for using the tractor	39
2.7.1	General instructions	39
2.7.2	Protection of persons other than the operator	40
2.7.3	Overturning	40
2.7.4	Tractor towing	42
2.7.5	Road use	42
2.7.6	Power take-off	44
2.7.7	Implements	44
2.7.8	Front-end loader	46
2.8	Specific safety instructions for servicing the tractor	47
2.8.1	Pollution warning to observe when servicing the tractor	47
2.8.2	General instructions	47
2.8.3	Special instructions for cleaning the tractor	47
2.9	Protective structures	49
2.9.1	Protective structures: use and accreditation	49
2.9.2	Cab or ROPS (depending on model)	49
2.9.3	Seat belt	49
2.9.4	Instructor seat	50
2.10	Warranty	51
2.10.1	General	51
2.10.2	Pre-delivery inspection and commissioning at the user's premises	51
2.10.3	Warranty procedure	51
2.10.4	Procedure to follow if changing region	51
2.10.5	Servicing during and after the warranty period	52
2.10.6	California emission control warranty statement	52
2.10.7	United States and Canada emission control warranty statement	54

2.1 Introduction

2.1.1 Introduction - Safety instructions

T000867

2

Operator Instruction Book

NOTE: This Operator Instruction Book is widely published and distributed and the availability of the attachments indicated, whether fitted to the basic tractor or as an accessory, may vary depending on the country or region in which the tractor is used. To find out which attachments are available in a given region, contact a Massey Ferguson dealer.

The purpose of this book is to enable the owner and the operator to operate the tractor appropriately under normal conditions of use. Providing they follow the instructions carefully, the tractor will give many years of service in the Massey Ferguson tradition.

The commissioning of equipment by the Massey Ferguson dealer on the user's premises enables the dealer to ensure that these operating and servicing instructions are properly understood. Always consult the Massey Ferguson dealer if there is any part of this book that you do not understand. It is important that these instructions are understood and followed.

This book does not cover all operation and safety instructions relevant to the implements and attachments that may be fitted at the time of tractor delivery or later. It is essential that operators use and understand the Operator Instruction Books relating to these implements and attachments.

IMPORTANT: This book must always be kept with the tractor. For extra copies, contact your Massey Ferguson dealer.

This chapter in the Operator Instruction Book highlights certain basic safety-related situations which may be encountered during normal operation and servicing of the tractor and provides the information needed to handle these situations.

This chapter supplements any safety instructions given in other chapters of this book.

It may be necessary to take additional precautions, depending on the implements and accessories used and the working conditions on-site or in the servicing area. Massey Ferguson can under no circumstances exercise direct control over the commissioning, operation, inspection, lubrication, or servicing of the tractor. It is therefore YOUR responsibility to take suitable safety precautions in such areas.



WARNING:

It is your responsibility to read and understand the instructions that appear in this chapter before using the tractor. They must then be strictly adhered to throughout the working day.

Servicing, spare parts, accessories and conditions of use

Daily servicing should become a routine, and a logbook of operating hours should be kept.

When spare parts are required, it is important to use only genuine Massey Ferguson parts. Massey Ferguson dealers supply genuine parts and can offer advice concerning their fitting and use. The use of lower quality parts may cause serious damage. Customers are advised to purchase their spare parts only from an approved Massey Ferguson dealer. In the same way, you must only use accessories specifically adapted to your tractor.

Owing to the considerable variation in operating conditions, it is not possible for the manufacturer to formulate complete or absolute assertions in its publications concerning the performance or operating methods of its machines or to accept liability for any loss or damage which may result from such assertions or possible errors or omissions.

If the tractor is to be used in abnormal conditions which could cause damage (use in deep water or in paddy fields for instance), you should consult your Massey Ferguson dealer to obtain special instructions to prevent the warranty from becoming void.

These tractors are designed only for usual farming activities (intended use). Use for any other activity is considered to be contrary to the intended use.

Strict compliance with repairs, servicing, and operating conditions as specified by Massey Ferguson are an essential component of the intended use.

IMPORTANT: Massey Ferguson accepts no responsibility in the event of damage to equipment or personal injury resulting from improper use.

The tractor must only be used, serviced and repaired by personnel who have full knowledge of its specific features and who are aware of the applicable safety measures (prevention of accidents).

Customers are strongly advised to contact a Massey Ferguson dealer in the event of after-sale problems and for any adjustments which may be necessary.

2.2 Safety – Symbols and terms

2.2.1 Safety – Symbols and terms

T000969

2

Signal



This safety alert symbol means CAUTION! BE ALERT! YOUR SAFETY DEPENDS ON IT!

The safety alert symbol identifies important safety notices on machines, safety signs, in instruction books or elsewhere. When you see this symbol, be alert to the risk of injury or death. Follow the instructions in the safety notice.

SAFETY is paramount! Why?

- ACCIDENTS DISABLE AND KILL
- ACCIDENTS ARE COSTLY
- ACCIDENTS CAN BE AVOIDED

Terms

The words DANGER, WARNING or CAUTION are used with the safety alert symbol. It is essential to learn how to recognize these safety messages and to follow the recommended safety measures and instructions.



DANGER:

indicates an imminently hazardous situation which, if not avoided, will result in DEATH or VERY SERIOUS INJURY.



WARNING:

indicates a potentially hazardous situation which, if not avoided, could result in DEATH or SERIOUS INJURY.



CAUTION:

indicates a potentially hazardous situation which, if not avoided, may result in MINOR or MODERATE INJURY.

The terms IMPORTANT and NOTE are not directly related to personal safety, but are used to provide additional information and advice on the operation or maintenance of equipment.

IMPORTANT: *identifies specific instructions or procedures which, if not strictly applied, could damage or destroy the tractor, its equipment or the surrounding area.*

NOTE: *identifies points of particular interest for the most effective and suitable operation or repair.*

2.3 Safety signs and instructions

2.3.1 Checking and replacing the safety signs and instructions

T000871

**WARNING:*****Never remove or obscure the safety signs and instructions.***

Replace any safety signs and instructions that are illegible or missing. Replacement signs are available from the dealer in the event of loss or damage. If a second-hand tractor has been purchased, check that all of the safety signs and instructions are correct, legible and in the correct position. To do this, refer to the section on the presentation and location of these signs.

2.3.2 Presentation and location of the safety signs and instructions

T001270

2

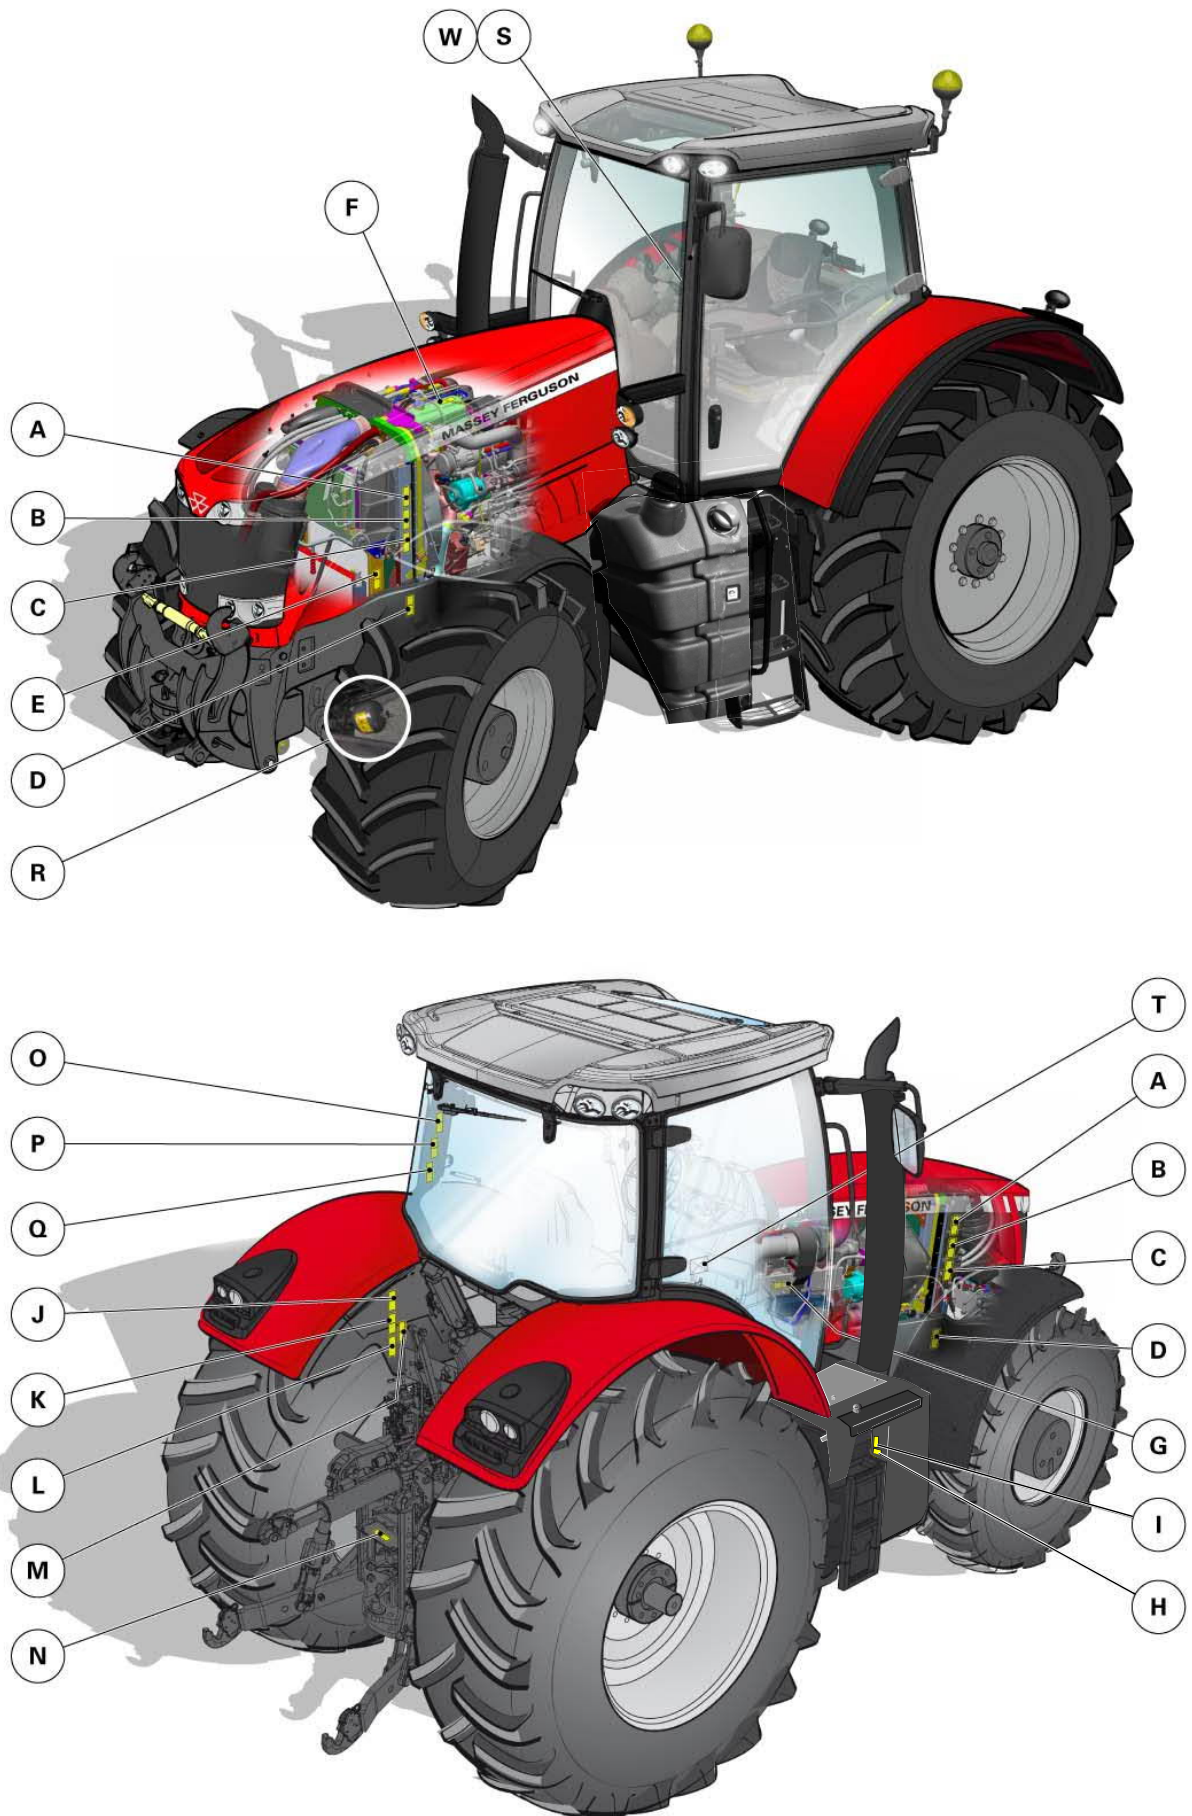


Fig. 1.

I027317

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com