400 Tractor

Service Manual

5692



Reprinted

SECTION

A

Service Shop Profit Through Seasonal Tune Up

Procedure for Using a Tune Up Tester on Case 400 Series Distributor Ignition Engines

Test Procedure for Starting Circuit and Charging Circuit

Spark Plugs and Distributor

``400'' Series Case Tractors and Engine Power Units

TABLE OF CONTENTS

		PAGE
I.	SERVICE SHOP PROFIT THROUGH SEASONAL TUNE UP	A-3 thru A-10
II.	PROCEDURE FOR USING A TUNE-UP TESTER ON 400 SERIES DISTRIBUTOR IGNITION ENGINES	A-11 thru A-28
	Volts Ignition Tester	
	Cranking Voltage Test Charging Voltage Test	
	Secondary Resistance and Polarity Test	
	Ignition Output and Leakage Test.	
	Tach-Dwell Tester	Δ_20 thm Δ_22
	Measuring Engine Speed.	
	Dwell and Dwell Variation Tests	
	Vacuum — Pressure Tester	A-24
	Manifold Vacuum Test	
	Electronic Distributor Tester	A-26 thru A-28
	Distributor Advance Test.	
	Ignition Timing Test	
III.	TEST PROCEDURE FOR THE STARTING CIRCUIT AND CHARGING CIRCUIT	6-99 thru 6-19
	The Starting Circuit	
	Battery Visual Inspection	
	Battery Specific Gravity Test Battery Capacity Test	
	Cranking Voltage Test	
	Cable and Switch Tests	
	Ground Cable Test.	
	Starting Motor Amperage Draw Test	A-38
	The Charging Circuit	
	Introduction	
	· Generator	
	Circuit Breaker	
	Voltage Control	A-42
IV.	SERVICING THE SPARK PLUGS AND DISTRIBUTOR	A-43 thru A-57
	Spark Plugs	A-44 thru A-48
	Introduction	
	Removal and Inspection	
	Spark Plug Heat Range	
	Cleaning and Installation	A-48
	Distributor	
	Introduction.	
	Contact Point and Condenser Removal and Installation Inspection of Distributor Cap, Rotor and Cam	
	Checking and Setting Ignition Timing	

SERVICE SHOP PROFIT THROUGH SEASONAL TUNE UP

Ι

× 9

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com