

O P E R A T O R ' S M A N U A L

OFFSET AGRICULTURAL DISKS

DH5210-DH5212-DH5214-DH5216

DH5217-DH5219-DH5221



FRONTIER
EQUIPMENT™

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may be ordered from your John Deere dealer.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in customary U.S. units. Only use the correct replacement parts and fasteners.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE DOWN PRODUCT IDENTIFICATION NUMBERS. Accurately record all the numbers to help in tracing the machine should it be stolen. Your John Deere dealer also needs these numbers when you order parts. File the identification numbers in a secure place away from the machine.

WARRANTY coverage is provided by John Deere according to the terms of the Construction, Utility, and Forestry Products Standard Warranty Statement. Carefully read the warranty statement on the back of your original purchase order for details on coverage and limitations of this warranty.

This warranty provides you the assurance that Frontier will back its products where defects appear within the warranty period. In some circumstances, Frontier also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused or modified to change its performance beyond the original factory specifications, or if the equipment is used for a purpose other than that which it was designed for, the warranty will become void and field improvements may be denied.

THE TIRE MANUFACTURERS warranty is separate and apart from the equipment warranty and may not apply outside the U.S.

Contents

Introduction	1
General Arrangement – Models DH5210 / DH5212 / DH5214	4
General Arrangement – Models DH5216 / DH5217 / DH5219 / DH5221	5
General Information	6
Pre-Delivery Checklist	7
Delivery Checklist	7
After Sale Checklist	8
Daily Checklist	8
Seasonal Checklist	8
Decal Identification and Placement	9
Safety First	10
Attaching the Disc to the Tractor	11
Transporting the Disc	11
Adjusting the Transport Levelling Control Arm	12
Transport and Operating Safety	13
Operating the Disk	
General Operating Guidelines	14
Reposition the Hitch	14
Change the Gang Angles	15
Adjust the Levelling Control Arm	16
Service and Maintenance Safety	17
Lubricate the Disk	18
Check the Oil-Bath Bearings	19
Adjusting the Scrapers	19
Repack and Pre-Load Wheel Hub Bearings	20
Fluid and Fastener Specifications	
Disc Gang Assembly Axles	21
Fastener Torque Values	21
Oil-Bath Bearing Oil	21
Tire and Wheel Service	21
Keep Gang Assemblies Tight	22
Assembly Safety	23
Assemble the Disk	24
Disk Gang Assembly Procedure	32
Detailed Parts Diagrams	33
Hitch and Bridle Assembly (Models DH5210 / DH5212 / DH5214)	34
Hitch and Bridle Assembly (Models DH5216 / DH5217 / DH5219 / DH5221)	35
Frame and Transport Assembly (Models DH5210 / DH5212 / DH5214)	36
Frame and Transport Assembly (Models DH5216 / DH5217 / DH5219 / DH5221)	37
Control Arm Assembly	38
Gang Bars and Scrapers	39

Gang Assembly (1.625 Axle)	40
Gang Assembly (2.125 Axle)	41
Oil-Bath Bearing Assembly (1.625 Axle)	42
Oil-Bath Bearing Assembly (2.125 Axle)	43
Disc Blades	44
Oscillating Scraper (Optional)	45
Hydraulic Cylinder (Canadian Tool & Die)	46
Hydraulic Cylinder (RAM Industries)	47
8-Bolt Hub	48
Tire and Wheel Assembly	49
Light Kit	50
Decals, Reflectors and Logos	51
Specifications	52
Storage	53

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com