OPERATOR'S MANUAL

DISC PLOUGH

MODEL DP3203 DP4205 DP4206



OPERATOR'S MANUAL

DISC PLOUGH





Introduction:

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.


MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench. RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers Section.

Accurately record all the numbers to help in tracing the machine should it be stolen. File the identification numbers in a secure place; do not keep them on the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied.

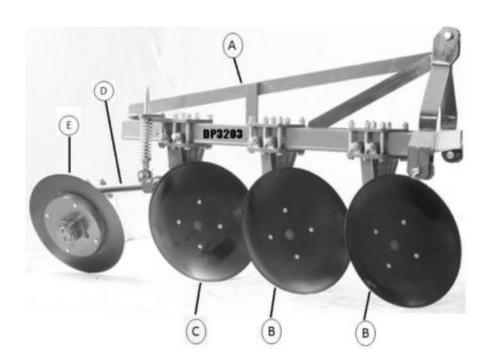


A = Main Frame


B = Front Arm Assy

C = Rear Arm Assy

D = Swing Tail Assy

E = Disc Furrow Assy

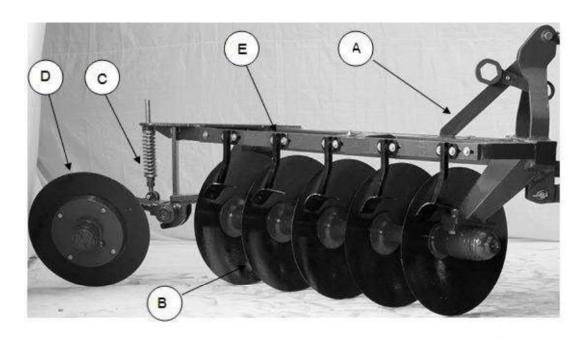

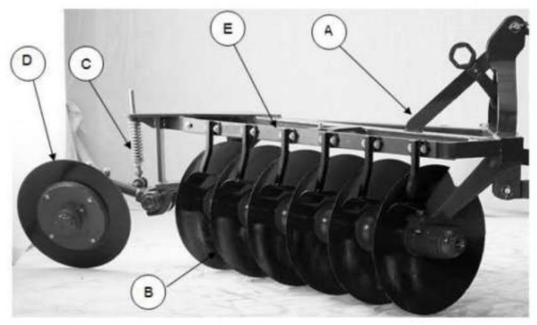

A = Main Frame

D = Disc Furrow Assy

E= Scraper Frame Assy

A Message to Our Customers

We appreciate the confidence placed in us by your purchase of this machine. Before this machine was brought to the market, countless hours were spent designing and testing to ensure that its performance would be at the highest level. To achieve maximum performance, it is imperative this machine be operated in accordance with the procedures outlined in this manual. Information in this manual is divided into sections. These sections are identified at the top of each page. Specific information within each section is organized into modules. These modules are encased in boxes

with principle modules identified with a heading at the top left side of the box. Two-part page numbers identify both the section and page of that section.

By reviewing this manual often, one will quickly learn which section to go to for specific information. For instance, machine adjustments would be found in the Operating Machine section, lubrication intervals in the Lubrication section, opener maintenance in the Service section, etc. A detailed Table of Contents is found immediately behind this page.

Thank you very much for purchasing this machine.

Customer Responsibility

It is the Customer or Operator's responsibility to read the Operator's Manual, to operate, lubricate, maintain and store the product in accordance with all instructions and safety procedures. Failure of the operator to read the Operator's Manual is a misuse of this equipment.

It is the Customer's or Operator's responsibility to inspect the product and to have any parts repaired or replaced when continued operation would cause damage or excessive wear to other parts or cause safety hazards.

It is the Customer's responsibility to deliver the product to Authorized Dealer, from whom they purchased it, for service or replacement of defective parts which are covered by warranty. Repairs to be submitted for warranty consideration must be made within thirty days (30) of failure.

It is the Customer's responsibility for any cost incurred by the Dealer for travelling to or hauling of the product for the purpose of performing a warranty obligation or inspection.

Contents

Page
Insp

Inspection Checklists	Attaching and Detaching the Disc Plough
Pre-Delivery Inspection7	Use Your Tractor Operator's Manual21
Owner's Record7	Tractor Requirement21
Delivery Inspection7	Attaching Disc Plough to Tractor22
After-Sales Inspection8	Detaching Disc Plough from Tractor23
Inspection Before Each Day of Operation8	
Inspection Before Each Season8	Transporting
Installation Instruction8	Transport Safely25
Equipment matching8	
	Operating the Disc Plough
Safety	Parking26
Recognize safety information10	Field Operation26
Understand Signal Words10	
Follow Safety Instructions10	Adjustments
Operate Machine Safely11	Adjustment28
Keep Riders Off Machine11	
Avoid rollover accident11	Lubrication and Maintenance
Wear Protective Clothing12	Safe Lubrication and Maintenance30
Prepare for Emergencies12	Lubrication and Maintenance Procedures30
Use Safety Lights and Devices13	Grease31
Transport Safety13	Lubrication Symbols31
Tow Loads Safely14	Alternative Lubricants31
Comply with the Transport Speed Limit14	Lubrication of Disc Plough32
Service Machine Safely14	Greasing Points34
Practice Safe Maintenance15	Daily Maintenance before and after Work32
Remove Paint Before Welding or Heating15	Every 100 Hours Work33
Store Attachments Safely16	Every 1000 Hours Work33
Dispose of Waste Properly16	Practice Safe Maintenance35
	Bolt and Screw Torque Required36
Safety Signs	Supporting Raised Machine37
Safety Sign Locations17	Maintenance of Disc Plough37
Caution - Read Operator Manual	Storage38
And safety operation18	
	Troubleshooting
Preparing the Tractor	Disc Plough Trouble shooting39
Use Your Tractor Operator's Manual20	Serial Number41
Front Counterweight20	Keep Machined Secure41
Rear Wheel Counterweight20	Specifications41
Determine Front End Ballast W/O Implement	Parts Catalogue42
Codes	Warranty Statement57
Tightening20	

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com