


O P E R A T O R ' S M A N U A L

HEADER TRANSPORT HEAVY DUTY

Gross Vehicle Weight Capacity up to 20,000 Lbs.

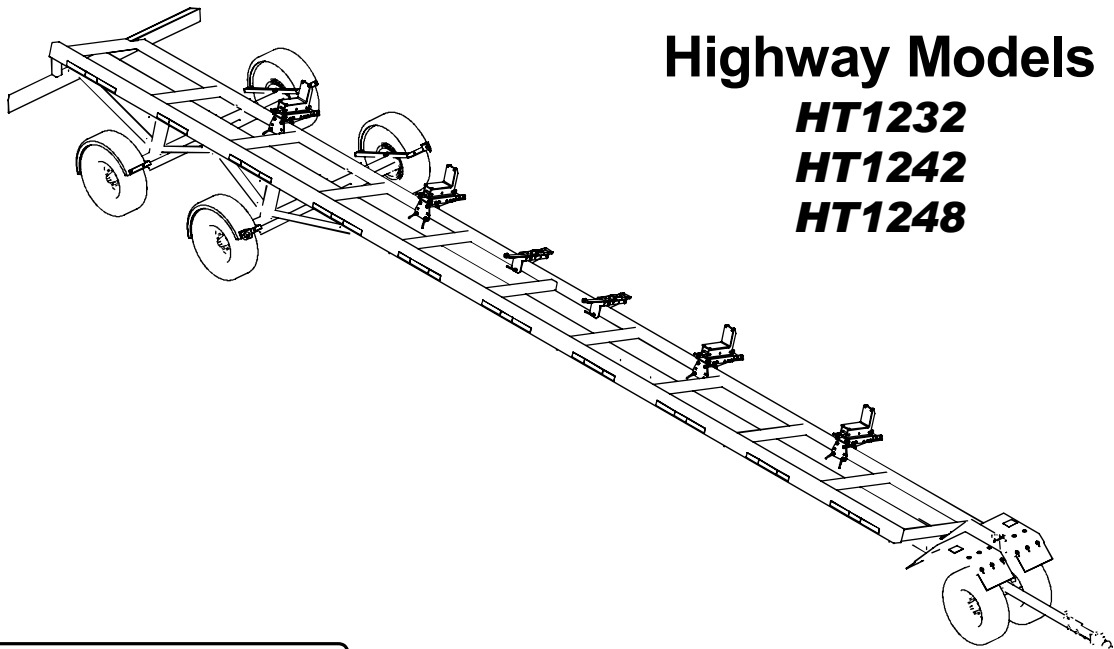

Highway Models

HT1232

HT1242

HT1248


Instruction Manual
#5MM8H000010
Revision= AG 07/29/2013

STARTING WITH SERIAL NO.
1XFHT12XAB0110033-

FRONTIER™

TABLE OF CONTENTS

Introduction	ii
Specifications	1-2
Safety Decals	3-4
Safety Rules	5-8
Maintenance Schedule	9
Bolt Torque Requirements	10-11
Long Telescoping Tongue Breakdown	12
Short Telescoping Tongue Breakdown	13
Front Idler Axle & Hub Breakdown	14
Front Idler Suspension Axle & Hub Breakdown	15
Front Brake Axle & Hub Breakdown	16
Front Brake Suspension Axle & Hub Breakdown	17
Bearing Inspection/Lubrication	18
Seal Inspection/Bearing Adjustment	19
Electric Brakes Adjustment	20
Break-Away System	21-22
Mounting Brackets	23-26
Header Securement	27
Adjustable Tie-Down / Header Securement	28
Optional Equipment	29-32
Main Parts Breakdown	33-34
Electrical Diagrams	35-36
GVW Ratings	37
Head Transport Check List	38
Dealer Instructions	39

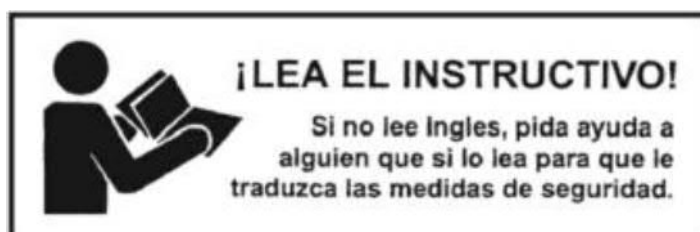

TO THE DEALER:

Assembly and proper installation of this product is the responsibility of the John Deere dealer. Read manual instructions and safety rules. Make sure all items on the Dealer’s Pre-Delivery and Delivery Check Lists in the Owner’s/Operator’s Manual are completed before releasing to the owner.

TO THE OWNER:

Read this manual before operating your Frontier equipment. The information presented will prepare you to do a better and safer job. Keep this manual handy for ready reference. Require all operators to read this manual carefully and become acquainted with all the adjustment and operating procedures before attempting to operate. Replacement manual can be obtained from your selling dealer.

The equipment you have purchased has been carefully engineered and manufactured to provide dependable and satisfactory use. Like all mechanical products, it will require cleaning and upkeep. Lubricate the unit as specified. Observe all safety information in this manual and safety decals on the equipment.

For service, your authorized John Deere dealer has trained technicians, genuine Frontier service parts, and the necessary tools and equipment to handle all your needs.

Use only genuine Frontier service parts. Substitute parts will void the warranty and may not meet standards required for safe and satisfactory operations. Record the model number and serial number of your equipment in the spaces provided:

Model: _____ Date of Purchase: _____

Serial Number: (see Safety Decal section for location) _____

Provide this information to your dealer to obtain correct repair parts.

Throughout this manual, the term IMPORTANT is used to indicate that failure to observe can cause damage to equipment. The terms CAUTION, WARNING and DANGER are used in conjunction with the Safety-Alert Symbol (a triangle with an exclamation mark) to indicate the degree of hazard for items of personal safety.



This Safety-Alert Symbol indicates a hazard and means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

▲ DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

▲ WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and include hazards that are exposed when guards are removed.

▲ CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury.

IMPORTANT

Indicates that failure to observe can cause damage to equipment.

NOTE

Indicates helpful information.

SPECIFICATIONS

Frontier HT12 Series

HT1232 - 32ft, HT1242 - 42ft & HT1248 - 48ft	
Features	
Intended Transport Mode	Posted roadway speeds Truck tow configuration
Fits Header Equipment	Deere corn, draper and platform HT1232 - 32' & smaller HT1242 - 39-42' HT1248 - 43-48'
Frame	Steel, all-welded joints, fixed upper and lower bar
Adjustment Points	Only at mounting brackets
Mounting Brackets	HT1232 - 2 adjustable draper brackets, 1 left & 1 right slider attachment HT1242 - 4 adjustable draper brackets, 1 left & 1 right slider attachment HT1248 - 4 adjustable draper brackets, 1 left & 1 right slider attachment compatible with all Deere headers
Tie Downs	2 ratchet straps standard
Steer Axle	Tricycle, fender standard
Rear Axles	Torsion flex 7000 lb-rated (each), fenders standard HT1232, HT1242, HT1248, - Tandem rear axle standard Tandem rear axles are split to eliminate need to remove gauge wheels on draper headers during transport
Hitch	2 5/16 in (5.87 cm) ball w/ safety chains standard 3 in (7.62 cm) pintle eye optional
Tongue	Short Telescoping standard Long Telescoping optional
Lighting & Marking	7 pole RV plug, highway markings
Brakes	Electric w/ breakaway on all rear axles standard Electric brakes on front tricycle axle optional
Tire Tread	ST235 / 80R16 LRE Import Radial Tires Mounted spare wheel and tire optional

SPECIFICATIONS CON'T

Specifications	
GVWR	HT1232 - 20,000 lbs (9,071 kg) HT1242 - 20,000 lbs (9,071 kg) HT1248 - 20,000 lbs (9,071 kg)
Weight, standard equipment including wheels & tires	HT1232 - 3,550 lbs (1,610 kg) HT1242 - 4,450 lbs (2,063 kg) HT1248 - 4,950 lbs (2,245 kg)
Wheels	16 in x 6 in (40.6 cm x 15.2 cm)
Tires	ST235 / 80R16 (Import Radial) 10 ply LRE Cold Inflation Pressure - 80 psi (551 kPa)
Hubs	8 bolt on 6.5 in (16.5 cm) bolt circle
Spindles	3,500 lbs (1,587 kg)
Overall Length	HT1232 - 42.7 ft (13.0 m) HT1242 - 52.4 ft (16.0 m) HT1248 - 58.2 ft (17.7 m)
Tongue Length	Short Telescoping - 5.5 ft (1.7 m) Long Telescoping - 7.7 ft (2.3 m)
Wheelbase, to front rear axle	HT1232 - 24.0 ft (7.3 m) HT1242 - 34.2 ft (10.4 m) HT1248 - 37.3 ft (11.4 m)
Tandem Axle Split, center to center	HT1232 - 5.5 ft (1.7 m) HT1242 - 5.5 ft (1.7 m) HT1248 - 5.5 ft (1.7 m)
Overhang, past back rear axle wheel	HT1232 - 5.5 ft (1.7 m) HT1242 - 5.0 ft (1.5 m) HT1248 - 7.8 ft (2.4 m)
Overall/Tread Width	102 in (2.6 m)
Adjustment Range, rear of mounting bracket saddle to center of top bar	30 in to 58 in (76 cm to 147 cm)

GENERAL INFORMATION

The purpose of this manual is to assist you in operating and maintaining your Head Transporter. Read it carefully. It furnishes information and instructions that will help you achieve years of dependable performance.

These instructions have been compiled from field experience and engineering data. Some information may be general in nature, due to unknown and varying operating conditions. However, through experience and these instructions, you should be able to develop procedures

suitable to your particular situation.

The illustrations and data used in this manual were current at the time of printing. However, due to possible inline production changes, your machine may vary slightly in detail. We reserve the right to redesign and change the machines as may be necessary without notification.

Throughout this manual, references are made to right and left direction. These are determined by standing behind the tractor facing the direction of forward travel.

Specifications 2

SAFETY & INSTRUCTIONAL DECALS

ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH


Replace Decals Immediately If Damaged!

Safety Sign Locations

Types of safety signs and locations on equipment are shown in illustration below. Good safety requires that you familiarize yourself with various safety signs, type of warning, and area or particular function related to that area, that requires your SAFETY AWARENESS.



Ref No.	Part Number	Qty	Description
1	5MMQBP065000	1	FHT - Warning - 2-5/16" & Pintle Coupler
2	5MMQBM065000	1	FHT - Warning -High Speed Transport
3	5MMQBK065000	2	FHT - Warning - Fasten Hdr Securely
4	5MMQBL065000	2	FHT - Warning - Do Not Step
5	5MMQBS065000	1	FHT - Important - Lug Nut
6	5MMQBT065000	1	FHT - Caution - General Info
7	5MMQBN065000	1	FHT - Important - Tongue Info

Please order replacement parts by Part Number and Description.

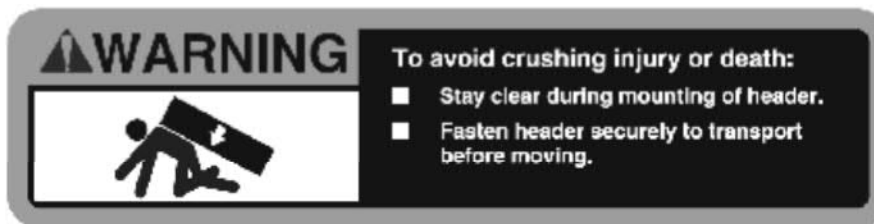

3
Neck - Driver
and
Centered - Bottom Rail

1
Tongue

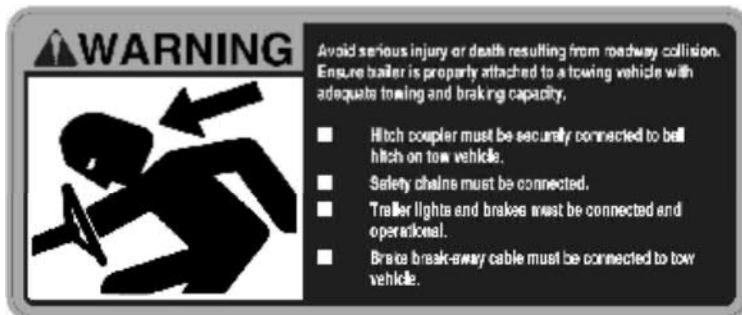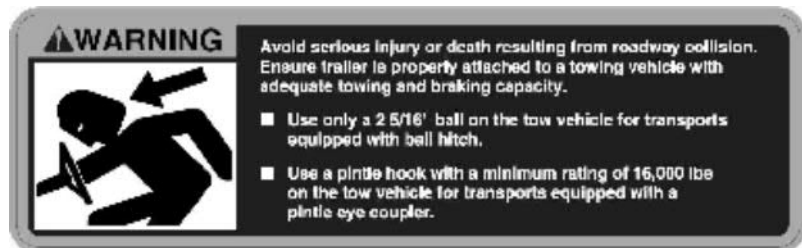

2
Top of Neck

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com