

OPERATOR'S MANUAL

TEDDER

TD3418



FRONTIERTM

5PQ990130 (10/08/2014)

TABLE OF CONTENTS

Introduction	2
Intended Use	2
Serial Number	2
Specifications	2
Safety	3
Power Source Safety	3
Safety Decals	5
Hitching	6
Attaching to the Tractor	6
Transporting	7
Field Transport	7
Road Transport	7
Field Set-up	8
Adjustments	8
Tine Height Adjustment	8
Axle Adjustments	8
Tine Pitch Adjustment	9
General Operation	10
Lubrication and Maintenance	12
Gearbox Lubrication	13
General Lubrication	13
Wheel Bearings	14
Grease Fitting Lubrication	14
PTO Lubrication	15
Timing the Rotors	16
Torque Specifications	19
Standard Torque Chart	19
Metric Torque Chart	20
Warranty	21
Illustrated Parts Breakdowns	22
Tongue Assembly	23
Main Assembly.....	24
Rotor and Wing Assembly.....	25
Axle and Wheel.....	26
Input Gearbox Assembly.....	27
Rotor Gearbox Assembly.....	28
PTO Shaft.....	29
Hydraulics	30
Decals	31

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com