


OPERATOR'S MANUAL

# HYDRAULIC PUMP

HP2025-HP2134

Serial # 1XFHP20XCF0150001 and up  
And 1XFHP21XHF0150021 and up

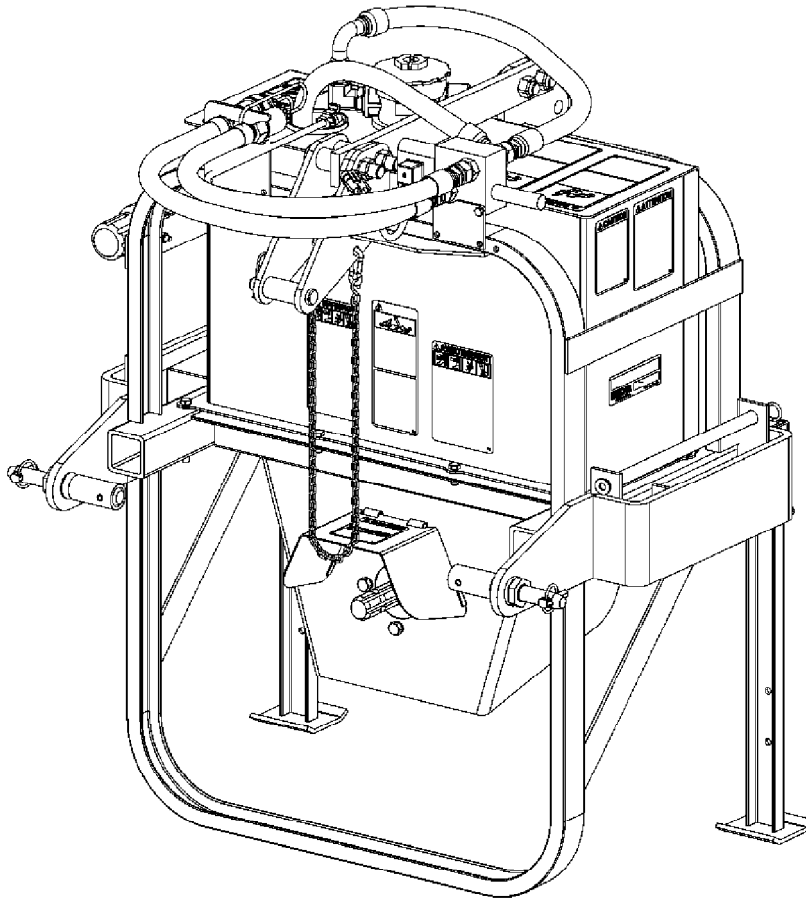

**FRONTIER.**

## SPECIFICATIONS

Features and Specifications	HP2025	HP2134
Width (with counterweights)	38" (60")	38" (60")
Transport Width	44"	44"
Height	47" (55" with oil cooler)	47" (55" with oil cooler)
Length	30"	30"
Hydraulic System	16 gpm at 2700 psi	20 gpm at 3000 psi
Hoses	3/4"	3/4"
Hydraulic Protection	Relief valve at 2700 psi	Relief valve at 3000 psi
Tank Mounted Strainer	Standard	Standard
Tank Mounted Return Filter	Standard with breather	Standard with breather
Hose Protection	Standard	Standard
Pump Manufacturer	Salami	Salami
Pump Description	Gear pump 32 cc/rev. Model 2.5PB (Heavy Duty Series)	Gear pump 40 cc/rev. Model 3PB (Heavy Duty Series)
Gearbox Manufacturer	Breveni	Breveni
Gearbox Description	Model ML52	Model ML52
Tractor RPM	540	540
Pump RPM	1836	1836
PTO Manufacturer	Comer	Comer
PTO Description	40	40
Parking Stand	Standard	Standard
Hitch Category	Cat. 1 & 2	Cat. 1 & 2
Quick Hitch Compatibility	ASABE Compatible Cat. 1 & 2	ASABE Compatible Cat. 1 & 2
HP Requirements - min-max (hp)	25-35	35-56
Operating Weight (lbs) with hydraulic oil.	535	535
Shipping Weight (lbs)	535	535
Approx. Set-up Time	1.5 to 2 hrs	1.5 to 2 hrs
Counterweight Support	Capacity of 700 lbs (5 x 70 lbs each side) Accepts 42 & 70 lbs John Deere Quick Tatch Weights	Capacity of 700 lbs (5 x 70 lbs each side) Accepts 42 & 70 lbs John Deere Quick Tatch Weights
Rear Attachment Bracket	Standard (750 lbs)	Standard (750 lbs)
Hose Support for JD3000 & JD4000 series loaders	Standard	Standard
Quick Couplers – Front & Rear	1/2" Standard	3/4" Standard
Thermal Protection	Standard	Standard
Pre-drilled holes for oil cooler support	Standard	Standard
Oil Cooler	Option	Option

---

# TABLE OF CONTENTS

---

SPECIFICATIONS.....	x
INTRODUCTION – TO THE PURCHASER.....	3
SAFETY PRECAUTIONS .....	4
Before Operation.....	4
Notice.....	5
The Hydraulic Pump .....	5
Before Operation .....	5
Hydraulic Pump Operation .....	6
The Tractor .....	7
General Information.....	7
Operating the Tractor .....	7
During Operation .....	7
Maintenance .....	8
Transport.....	8
Storage .....	8
SAFETY DECALS .....	9-10
ASSEMBLY.....	11-18
Installation of the Hydraulic Pump .....	11
Hydraulic Oil Fill-Up .....	11
Installation of the Driveline.....	11
Adjusting the Three Point Hitch .....	11
Installation of the Quick Couplers .....	12-13
Installation of the Hose Supports.....	14-15
Installation of the Wiring Harness .....	16-18
Installation of the Hydraulic Hoses.....	19
Installation of the Hydraulic Pump with a Quick Hitch Cat. 1 .....	20
Installation of the Hydraulic Pump with a Quick Hitch Cat. 2.....	20
Installation of the Hydraulic Pump with a Three Point Hitch Cat. 1.....	21
Installation of the Hydraulic Pump with a Three Point Hitch Cat. 2.....	22
Determining Driveline Length .....	23
Connection the Driveline to the Tractor.....	24
Connecting the Hoses and Wiring Harness .....	25
Installation of the Oil Cooler 5RDF0036 – Option .....	26-27

---

# TABLE OF CONTENTS

---

OPERATION .....	28-31
Preparation .....	28
Counterweights .....	28
Operation .....	29
Checking the Oil Temperature .....	29
Checking the Hydraulic Oil Level .....	29
Checking Oil Level of the Multiplier .....	29
Removing the Hydraulic Pump .....	30
Reconnecting the Hydraulic pump .....	31
MAINTENANCE .....	32-40
Lubrication & Periodic Maintenance .....	32
Oil Fill-Up .....	33
Oil Change .....	33
Replacing the Oil in the Multiplier .....	34
Recommended Hydraulic Oil .....	34
Cleaning the Oil Strainer – without an Oil Cooler .....	35
Cleaning the Oil Strainer – with an Oil Cooler .....	36
Instruction for Valve Adjustment .....	37
Troubleshooting .....	38-39
Electrical Diagram .....	40
PARTS .....	41-53
Introduction .....	41
Hydraulic Pump and Tank .....	42-43
Miscellaneous .....	44-45
Hydraulic and Electrical System .....	46-47
Hose Supports .....	48
Hydraulic Block .....	49
Hydraulic Pump .....	50
Multiplier .....	51
Oil Cooler 5RDF0036 - Option .....	52
Driveline .....	53
TORQUE SPECIFICATION TABLES .....	54-56

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)