

Combine Fendt 8300-8350 Series

Workshop Manual



- 0 Introduction - Specifications**
- 1 Cutting table**
- 2 Reel**
- 3 Main crop elevator**
- 4 Threshing unit**
- 5 Straw walkers**
- 6 Shaker shoe - Fanning mill**
- 7 Elevators**
- 8 Engine**
- 9 Unloading auger - Grain tank**
- 10 Drive unit**
- 11 Transmissions**
- 12 Undercarriage**
- 13 Cab**
- 14 Hydraulics**
- 15 Machine housing**
- 16 Electrical system**
- 17 Straw chopper**
- 18 General assembly instructions**
- 19 Miscellaneous data**

Contents

0: Introduction - Specifications	1
0.1 Use of the manual	3
0.2 General specifications	4
0.3 Dimensions and weight	10
0.4 Safety precautions	12
0.4.1 Safety in the workshop	12
0.4.2 Safety - a word to the mechanic	12
0.4.3 Safety - danger, warning and caution	12
0.4.4 Safety decals	12
0.4.5 General	12
0.4.6 Personal safety	12
0.4.7 Considerations with regard to equipment	13
0.4.8 General considerations	13
0.4.9 Operational considerations	14
0.4.10 Maintenance techniques	15
0.5 Practical advice	16
0.6 Start-up instructions	20
0.6.1 General	20
0.6.2 Pre-delivery checks	20
0.6.3 Instruction of combine operator	21
0.7 Conversion tables	24
0.7.1 Conventional Units of Measurement	24
0.8 Locking and sealing agents	26
0.9 Torques	27
0.9.1 Wheels	27
0.9.2 Screws with metric threads	28
0.9.3 Nuts with metric threads	29
1: Cutting table	31
1.1 General	33
1.2 Knife drive - wobble box	35
1.2.1 Removal	35
1.2.2 Mounting	36
1.2.3 Reconditioning the wobble box	38
1.2.4 Fitting knife clips and crop lifters	42
1.3 Table auger	43
1.3.1 Removal	43
1.3.2 Mounting	43
1.3.3 Replacement of shaft on the right-hand side	44
1.3.4 Replacement of shaft on the left-hand side	45
1.3.5 Replacement of crankshaft	45
1.3.6 Replacement of feathering fingers, bearings and bushes	46
1.3.7 Adjustment of table auger and feathering fingers	47
1.4 Table body	48
1.4.1 Adjustment of cut-off strips	48
1.4.2 Adjustment and positioning of ground sensor - PowerFlow	49
1.4.3 Adjustment and positioning of ground sensor - FreeFlow	51
1.5 Slip clutch and chain drive	52
1.5.1 Removal	52
1.5.2 Mounting	52
1.5.3 Replacement of bearings and sprockets	53
1.6 Countershaft	54
1.6.1 Removal	55
1.6.2 Mounting	56
1.7 PowerFlow table	57
1.7.1 Removal, belts	58
1.7.2 Mounting, belts	60
1.7.3 Replacement of front rollers and bearings, scraper adjustment	62

Contents

1.7.4	Replacement of rear rollers and bearings, scraper adjustment	64
1.7.5	Replacement and alignment of bearing housing, rear rollers.	64
1.7.6	Belt tensioning and running-in	66
2:	Reel	69
2.1	Reel	71
2.1.1	Removal	71
2.1.2	Mounting	72
2.1.3	Replacement of reel tine bar and plastic bearings	73
2.1.4	Replacement of guide rollers, eccentric, guide ring and bearings	74
2.1.5	Replacement of reel plates	75
2.1.6	Replacement of reel tube, bearings	75
2.2	Oil motor and chain drive	76
2.2.1	Replacement of oil motor	76
2.3	Hydraulic cylinders	77
2.3.1	Replacement of cylinder – reel up/down	77
2.3.2	Replacement of cylinder – reel forward/back.	78
2.3.3	Reconditioning of hydraulic cylinders.	78
3:	Main crop elevator	83
3.1	General	85
3.2	Main crop elevator.	86
3.2.1	Removal	86
3.2.2	Mounting	87
3.2.3	Bearing block on machine frame	88
3.2.4	Replacement of lifting ram.	88
3.2.5	Reconditioning of hydraulic cylinder	89
3.2.6	Replacement of cutting height preset sensor	90
3.3	Elevator chain	91
3.3.1	Removal	91
3.3.2	Mounting	91
3.3.3	Replacement of slats	92
3.3.4	Replacement of slide rails in crop elevator	92
3.3.5	Replacement of intermediate plate	92
3.4	Elevator chain top shaft	93
3.4.1	Removal	93
3.4.2	Mounting	93
3.4.3	Replacement of bearings.	94
3.4.4	Replacement of sprockets	95
3.4.5	Replacement of shaft protection tube	96
3.5	Elevator chain front shaft	97
3.5.1	Removal	97
3.5.2	Mounting	97
3.5.3	Replacement of shaft, bearings and plate wheels.	98
3.6	Elevator countershaft	99
3.6.1	Removal	99
3.6.2	Mounting	100
3.6.3	Replacement of bearings and sprockets	100
3.7	Table clutch and chain drive.	101
3.7.1	Removal	101
3.7.2	Mounting	101
3.7.3	Reconditioning of clutch	101
3.8	Adapter	102
3.8.1	Removal	102
3.8.2	Mounting	103
3.8.3	Replacement of cylinder/connecting rod	103
3.8.4	Reconditioning of hydraulic cylinder	104
3.8.5	Replacement of angle sensor	105
3.9	Hydraulic reversing	106

Contents

3.9.1	Removal	106
3.9.2	Mounting	106
3.10	Electrical Reversing	107
3.10.1	Removal	107
3.10.2	Mounting	107
4:	Threshing unit	109
4.1	General	111
4.2	Stone trap	112
4.2.1	Removal	112
4.2.2	Mounting	112
4.3	Concave	113
4.3.1	Removal	113
4.3.2	Mounting	113
4.3.3	Lateral adjustment of the concave	114
4.3.4	Concave setting – initial setting	114
4.3.5	Replacement of lead-in plate	115
4.3.6	Replacement of concave extension	115
4.3.7	Replacement of shaft for concave setting	116
4.4	Threshing cylinder	117
4.4.1	Removal	117
4.4.2	Mounting	118
4.4.3	Replacement of bearings	119
4.4.4	Replacement of rasp bars and backing bars	120
4.4.5	Replacement of shaft and cylinder spiders	120
4.5	Cylinder variator - table clutch	121
4.5.1	Removal, hydraulic variator	121
4.5.2	Mounting, hydraulic variator	121
4.5.3	Reconditioning of hydraulic variator pulley	122
4.5.4	Removal, mechanical variator	124
4.5.5	Mounting, mechanical variator	124
4.5.6	Reconditioning of mechanical variator pulley	125
4.5.7	Removal, magnetic clutch	126
4.5.8	Mounting, magnetic clutch	127
4.5.9	Reconditioning of magnetic clutch	128
4.6	Bracket for counter drive	130
4.6.1	Removal	130
4.6.2	Mounting and alignment	130
4.7	Rear beater	131
4.7.1	Removal	131
4.7.2	Mounting	132
4.7.3	Replacement of bearings	133
4.8	Rear beater concave	134
4.8.1	Removal	134
4.8.2	Mounting	134
4.9	Rotary separator cylinder	135
4.9.1	Removal	135
4.9.2	Mounting	136
4.9.3	Replacement of bearings	137
4.9.4	Replacement of rasp bars	137
4.10	Rotary separator concave	138
4.10.1	Removal	138
4.10.2	Mounting	139
4.10.3	Concave setting - initial setting	139
4.10.4	Replacement of shaft for concave setting	140
5:	Straw walkers	141
5.1	General	143
5.2	Straw walkers	144

Contents

5.2.1	Removal	144
5.2.2	Mounting	144
5.3	Crank - front	145
5.3.1	Removal	145
5.3.2	Mounting	146
5.3.3	Replacement of bearings	146
5.4	Crank - rear	147
5.4.1	Removal	147
5.4.2	Mounting	147
5.4.3	Replacement of bearings	147
5.5	Straw walker transmission - chain	148
5.5.1	Removal	148
5.5.2	Mounting	148
6:	Shaker shoe - Fanning mill	149
6.1	General	151
6.2	Fanning mill	152
6.2.1	Removal	152
6.2.2	Mounting	153
6.2.3	Replacement of fan blades	154
6.2.4	Replacement of fanning mill deflectors	154
6.2.5	Replacement of seals	155
6.3	Main grain pan	156
6.3.1	Removal	156
6.3.2	Mounting	157
6.3.3	Replacement of swivel arm and bearings	157
6.3.4	Replacement of seals	158
6.4	Second grain pan	159
6.4.1	Removal	159
6.4.2	Mounting	159
6.4.3	Replacement of swivel arm and bearings	160
6.4.4	Adjustment of second grain pan	161
6.5	Top shaker shoe	163
6.5.1	Removal	163
6.5.2	Mounting	164
6.5.3	Replacement of swivel arm and bearings	165
6.5.4	Replacement of seals	165
6.5.5	Electric sieve setting – initial setting	166
6.6	Bottom shaker shoe	167
6.6.1	Removal	167
6.6.2	Mounting	168
6.6.3	Replacement of swivel arm and bearings	168
6.6.4	Replacement of seals	169
6.6.5	Electric sieve setting – initial setting	169
6.7	Bottom augers	170
6.7.1	Removal	170
6.7.2	Mounting	170
6.8	Eccentric drive	171
6.8.1	Removal	171
6.8.2	Mounting	172
6.8.3	Adjustment of connecting rod / alignment of shaker shoes	173
6.8.4	Replacement of connecting rod bearing	174
6.8.5	Replacement of bearings and eccentric shaft	175
6.9	Transmissions	176
6.9.1	Replacement and reconditioning of fanning mill variator	176
6.9.2	Adjustment of fanning mill variator	177
6.9.3	Replacement and reconditioning of counter drive, shaker shoe	178

Contents

7: Elevators	179
7.1 Tank filling elevator	181
7.1.1 Removal	181
7.1.2 Mounting	182
7.1.3 Replacement of top shaft, bearings and sprockets	182
7.1.4 Replacement of bottom sprocket	183
7.1.5 Replacement of elevator chain	183
7.1.6 Moisture sensor	184
7.1.7 Yieldmeter sensor	184
7.2 Returns elevator	185
7.2.1 Removal	185
7.2.2 Mounting	185
7.2.3 Replacement of top shaft, bearings and sprockets	186
7.2.4 Replacement of bottom sprocket	186
7.2.5 Replacement of elevator chain	186
7.2.6 Returns volume sensor	186
7.3 Returns thresher	187
7.3.1 Removal	187
7.3.2 Mounting	187
7.3.3 Replacement of sprockets	187
7.3.4 Replacement of threshing cylinder	187
7.3.5 Reconditioning of right-angle gear	188
7.4 Tank filling auger	190
7.4.1 Removal	190
7.4.2 Mounting	190
7.4.3 Replacement of top bearing	190
7.4.4 Reconditioning of right-angle gear	191
7.5 Transmission	192
7.5.1 Replacement of shaft, bearings and sprockets	192
8: Engine	193
8.1 General	195
8.2 Replacement of engine	196
8.2.1 Removal of engine assembly	196
8.2.2 Mounting of engine assembly	199
9: Unloading auger - Grain tank	201
9.1 Unloading auger	203
9.1.1 Removal	203
9.1.2 Mounting	203
9.1.3 Replacement of bearings and universal joints	204
9.2 Unloading tube	205
9.2.1 Removal	205
9.2.2 Mounting	205
9.2.3 Replacement of swivel bearing	206
9.2.4 Replacement of hydraulic cylinder	207
9.2.5 Reconditioning of hydraulic cylinder	208
9.3 Bottom auger and cover plate	209
9.3.1 Removal	209
9.3.2 Mounting	209
9.3.3 Replacement of bearings, safety clutch	210
9.4 Transmission	211
9.4.1 Replacement of unloading auger shaft, bearings	211
9.4.2 Replacement and reconditioning of magnetic clutch	211
9.5 Grain tank covers	213
9.5.1 Removal	213
9.5.2 Mounting	213

Contents

10: Drive unit	215
10.1 Radiator - Intercooler.....	217
10.1.1 Removal.....	217
10.1.2 Mounting.....	217
10.2 Oil cooler.....	218
10.2.1 Removal.....	218
10.2.2 Mounting.....	218
10.3 Condenser - air-conditioning.....	219
10.3.1 Removal.....	219
10.3.2 Mounting.....	219
10.4 Rotary screen.....	220
10.4.1 Removal.....	220
10.4.2 Mounting.....	221
10.4.3 Adjustment of rotary screen and cleaning blade.....	222
10.4.4 Replacement of drive shaft and clutch.....	223
10.5 Dust aspirator.....	226
10.5.1 Removal.....	226
10.5.2 Mounting.....	226
10.6 Hydrostatic pump.....	227
10.6.1 Removal.....	227
10.6.2 Mounting.....	228
10.6.3 Tensioning device.....	229
10.7 Auxiliary hydraulic pump.....	230
10.7.1 Removal.....	230
10.7.2 Mounting.....	230
10.8 Hydraulic oil tank.....	231
10.8.1 Removal.....	231
10.8.2 Mounting.....	231
10.9 Fuel tank.....	232
10.9.1 Removal.....	232
10.9.2 Mounting.....	232
10.9.3 Tank gauge.....	232
10.10 Compressor - air-conditioning.....	234
10.10.1 Removal.....	234
10.10.2 Mounting.....	234
10.11 Power take-off.....	235
10.11.1 Removal.....	235
10.11.2 Mounting.....	236
10.11.3 Replacement of clutch disc.....	237
10.11.4 Replacement of output shaft, bearing and hub.....	238
11: Transmissions	239
11.1 General.....	241
11.2 Countershaft.....	242
11.2.1 Removal.....	242
11.2.2 Mounting.....	243
11.2.3 Replacement of bearings.....	244
11.2.4 Reconditioning of safety clutch.....	244
11.3 Replacement of belts, right-hand side.....	245
11.3.1 Rear beater - counter drive, cylinder variator.....	245
11.3.2 Counter drive, variator - threshing cylinder.....	246
11.3.3 Rear beater - rotary separator.....	247
11.3.4 Fanning mill - fanning mill variator.....	247
11.3.5 Rear beater - fanning mill variator.....	248
11.3.6 Unloading auger shaft - unloading auger.....	249
11.3.7 Unloading auger shaft - rotary screen clutch.....	250
11.3.8 Unloading auger shaft - dust aspirator.....	251
11.3.9 Countershaft - counter drive, elevators.....	252
11.4 Replacement of chains, right-hand side.....	253

Contents

11.4.1	Counter drive, elevators - returns elevator	253
11.4.2	Counter drive, elevators - tank filling elevator	253
11.4.3	Counter drive, elevators - tank filling auger	253
11.4.4	Returns elevator - returns thresher	254
11.4.5	Reel drive	254
11.4.6	Elevator chain top shaft - electrical reversing	255
11.5	Replacement of belts, left-hand side	256
11.5.1	Countershaft - straw walker drive	256
11.5.2	Countershaft - rear beater	256
11.5.3	Countershaft - counter drive, straw chopper	257
11.5.4	Counter drive - straw chopper	257
11.5.5	Engine - countershaft	258
11.5.6	Rear beater - countershaft, shaker shoe drive	259
11.5.7	Countershaft, shaker shoe drive - eccentric shaft	260
11.5.8	Countershaft, shaker shoe drive - straw walker crank	260
11.5.9	Rear beater - elevator chain top shaft	261
11.5.10	Engine - unloading auger shaft	261
11.5.11	Engine - hydrostatic pump	262
11.5.12	Table countershaft - knife drive	263
11.5.13	Countershaft - hydraulic pump, chaff spreader	263
11.6	Replacement of chains, left-hand side	264
11.6.1	Table countershaft - table auger	264
11.6.2	Elevator chain top shaft - elevator countershaft	264
11.6.3	Table auger - belt rollers (PowerFlow)	265
11.6.4	Straw walker drive	265
11.6.5	Hydraulic motor, reversing - elevator countershaft	266
12:	Undercarriage	267
12.1	Auto Level final drive bracket - 4 speeds	269
12.1.1	Removal	269
12.1.2	Mounting	270
12.1.3	Replacement of bushing	272
12.1.4	Replacement of hydraulic cylinder	273
12.1.5	Reconditioning of hydraulic cylinder	274
12.2	Final drive - 3 gear ranges	275
12.2.1	Removal	275
12.2.2	Mounting	275
12.2.3	Reconditioning of final drives	277
12.3	Gearbox - 4 gear ranges	280
12.3.1	Removal	280
12.3.2	Mounting	281
12.3.3	Adjustment of shifter cylinders and sensor	282
12.3.4	Adjustment of shifter cylinders and sensor	283
12.3.5	Replacement of lubrication pump	287
12.3.6	Replacement of shifter forks	288
12.3.7	Reconditioning of differential	289
12.3.8	Reconditioning of gearbox	293
12.4	Auto Level final drive bracket - 3 gear ranges	296
12.5	Final drive - 3 gear ranges	297
12.6	Gearbox - 3 gear ranges	298
12.6.1	Removal	298
12.6.2	Mounting	298
12.6.3	Replacement and adjustment of shifter cables	299
12.6.4	Replacement of shifter forks	300
12.6.5	Reconditioning of differential	300
12.6.6	Reconditioning of gearbox	300
12.7	Hydrostatic motor	301
12.7.1	Removal	301
12.7.2	Mounting	301
12.8	Brakes, machines with 4 gear ranges	302

Contents

12.8.1	Replacement of brake blocks	302
12.8.2	Replacement of brake discs	303
12.8.3	Replacement of handbrake shoes	305
12.8.4	Bleeding of the brakes	305
12.9	Rear axle	307
12.9.1	General	307
12.9.2	Removal	307
12.9.3	Mounting	307
12.9.4	Replacement of king pins and bushings	308
12.9.5	Replacement of steering cylinder	309
12.9.6	Reconditioning of hydraulic cylinder	309
12.9.7	Adjustment of toe-in and steering deflection	310
13:	Cab	313
13.1	Pedals and levers	315
13.1.1	Gear lever	315
13.1.2	Multi-function lever	316
13.1.3	Throttle lever and cable	318
13.1.4	Brake pedals and main cylinder	320
13.1.5	Handbrake lever and cable	323
13.2	Control panel, right-hand side	324
13.3	Replacement of windscreen	325
13.4	Control panel in roof	326
13.5	Roof	327
13.5.1	Outer roof	327
13.5.2	Inspection doors	327
13.5.3	Replacement of windscreen wiper	328
13.5.4	Replacement of blower	328
13.5.5	Replacement of heating element	329
13.5.6	Replacement of evaporator	329
14:	Hydraulics	331
14.1	General	333
14.1.1	Emptying and filling the hydrostatic system	334
14.1.2	Running-in and bleeding the hydrostatic system	336
14.1.3	Running-in and bleeding of auxiliary hydraulics	336
14.2	Hydrostatic system	339
14.2.1	Hydraulic pump	339
14.2.2	Oil motor	339
14.2.3	Oil cooler	339
14.2.4	Hydraulic oil filter	341
14.3	Auxiliary hydraulics	343
14.3.1	Hydraulic pump	343
14.3.2	Hydraulic oil tank and return oil filter	343
14.3.3	Oil cooler	343
14.3.4	Hydraulic valve - main valve	345
14.4	Table	347
14.4.1	Hydraulic cylinders - table up/down	347
14.4.2	Pressure accumulators - cutting table	347
14.4.3	Hydraulic valve - table up/down (standard machine)	347
14.4.4	Hydraulic valve - table up/down (Auto Level machine)	349
14.4.5	Hydraulic cylinder - table levelling	351
14.4.6	Pressure accumulators - levelling	351
14.4.7	Hydraulic valve - levelling	351
14.5	Auto Level	353
14.5.1	Hydraulic cylinders - machine levelling	353
14.5.2	Hydraulic valve - machine up/down/levelling	355
14.6	Reel	357
14.6.1	Hydraulic cylinders - reel up/down	357

Contents

14.6.2	Hydraulic valve - reel up/down	357
14.6.3	Hydraulic cylinders - reel fore/aft	359
14.6.4	Hydraulic valve - reel fore/aft	359
14.6.5	Oil motor	361
14.6.6	Flowdivider	361
14.7	Gearshift	363
14.7.1	Hydraulic cylinders - gearshift	363
14.7.2	Hydraulic valves - gearshift	363
14.8	Steering	365
14.8.1	Hydraulic cylinders - steering	365
14.8.2	Orbitrol steering valve	365
14.9	Cylinder variator	367
14.9.1	Cylinder variator	367
14.9.2	Hydraulic valve - variator	367
14.10	Unloading auger	369
14.10.1	Hydraulic cylinder - unloading auger	369
14.10.2	Hydraulic valve - unloading auger	369
14.11	Reversing	371
14.11.1	Oil motor	371
14.11.2	Hydraulic valve - reversing	371
15:	Machine housing	373
15.1	General	375
16:	Electrical system	377
16.1	General	379
16.2	Description of FIELDSTAR	380
16.3	Electric box	381
16.3.1	Removal	381
16.3.2	Mounting	381
16.3.3	Replacement of computer	381
16.3.4	Replacement of relay base, busbar	381
16.4	Key to symbols	382
16.5	Diagrams - components	384
16.5.1	Ignition, diagram 10-2	385
16.5.2	Start/stop, diagram 20-0	387
16.5.3	SISU engine, 74 ETA, EEM, diagram 25-1	395
16.5.4	SISU engine, Citius 84 CTA-4V, EEM, diagram 25-2	399
16.5.5	Electric transmission, diagram 30-3	403
16.5.6	Electric transmission, diagram 30-4	407
16.5.7	Power, diagram 40-0	411
16.5.8	CAN, diagram 50-0	413
16.5.9	Terminal, diagram 60-3	415
16.5.10	GPS/Com-Unit, diagram 70-2	419
16.5.11	Main light flash, diagram 80-0	421
16.5.12	Parking light, diagram 90-0	427
16.5.13	Stoplight, diagram 110-0	431
16.5.14	Work light, rear, diagram 120-0	435
16.5.15	Direction flashers, diagram 130-1	439
16.5.16	Work light, roof, diagram 150-0	447
16.5.17	Work light, side, diagram 160-0	451
16.5.18	Cab light, diagram 170-0	455
16.5.19	External connectors, diagram 200-0	457
16.5.20	Table trailer, diagram 210-1	461
16.5.21	Blower/air-conditioning, diagram 220-0	465
16.5.22	Wiper, diagram 230-0	469
16.5.23	Lighter/seat adjustment, diagram 240-0	471
16.5.24	Radio, diagram 250-2	473
16.5.25	Horn, diagram 260-0	475

Contents

16.5.26	Electrical concave setting, diagram 270-1	477
16.5.27	Electrical gearshift, diagram 280-3	481
16.5.28	Full warning/rotating yellow beacon, diagram 300-1	483
16.5.29	Table attachment, diagram 310-1	487
16.5.30	Table WWHU, attachment, diagram 310-2	491
16.5.31	Reversing, diagram 320-0	495
16.5.32	Bottom cover/grain tank cover, diagram 330-0	499
16.5.33	Unloading auger, diagram 340-0	503
16.5.34	Table up/down, diagram 350-2	507
16.5.35	Table up/down, diagram 350-3	511
16.5.36	Variator, reel, fanning mill, diagram 360-0	515
16.5.37	Reel, diagram 370-0	519
16.5.38	Indicators, yield, loss, diagram 380-2	521
16.5.39	Vertical knives, diagram 400-0	525
16.5.40	Vertical knives, diagram 400-1	527
16.5.41	Electrical sieves, diagram 410-0	529
16.5.42	Electrical straw deflectors, straw chopper, diagram 420-0	531
16.5.43	Four-wheel drive, diagram 430-0	533
16.5.44	Revolution sensors, diagram 510-1	535
16.5.45	Sensors, diagram 520-0	545
16.5.46	Sensors, diagram 530-2	549
16.5.47	Tilt sensor, diagram 540-0	553
16.5.48	Auto Level table, diagram 550-0-1	555
16.5.49	Auto Level table WWHU, diagram 550-1	561
16.5.50	Auto Level machine, diagram 560-0	565
16.5.51	Maize header, diagram 595-0	569
16.5.52	Main switch, diagram 900-0	571
17:	Straw chopper	573
17.1	General	575
18:	General assembly instructions	577
18.1	Mounting of gib-head keys	579
18.2	Mounting of tightening pins	580
18.3	Mounting of hydraulic pipes and screw connections	581
18.4	Mounting of flanged bearing with locking collar	583
18.5	Mounting of sliding bushings	584
18.6	Removal of revolution sensor	585
18.7	Mounting of tightening rings	586
19:	Miscellaneous data	587
19.1	General	589
19.2	Speeds - adjustment values	590
19.3	Maintenance	591
19.3.1	Lubrication Chart	591
19.3.2	Lubrication points, left-hand machine side	598
19.3.3	Lubrication points, right-hand machine side	612
19.3.4	Recommended lubricants	626
19.3.5	Gear	627
19.3.6	Air-conditioning	629

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com