



Large Square Baler

870N

870R

870S

990N

990R

990S

1270N

1270S

1290N

1290S

1290NXD

1290SXD

12130N

12130S

S/N: AGCFxxxxxEHB0x101 and After

Large Square Baler

1 General	1-1
1.1 General information	1-5
1.1.1 Introduction to this service manual	1-5
1.1.2 Units of measurement	1-5
1.1.3 Table of contents	1-5
1.1.4 Page numbers	1-5
1.1.5 Installing a stake nut	1-5
1.1.6 Removing a gib key	1-6
1.1.7 Installing a gib key	1-6
1.1.8 Removing an eccentric locking collar	1-7
1.1.9 Installing an eccentric locking collar	1-7
1.2 Safety	1-9
1.2.1 Safety alert symbol	1-9
1.2.2 Safety messages	1-9
1.2.3 Informational messages	1-9
1.2.4 Safety signs	1-9
1.2.5 Safety warnings	1-10
1.2.6 A word to the technician	1-10
1.2.7 The service manual	1-11
1.2.8 The operator manual	1-12
1.2.9 Toolbox	1-12
1.2.10 Operation	1-12
1.2.10.1 General information	1-12
1.2.10.2 Prepare for operation	1-13
1.2.10.3 Personal protective equipment	1-14
1.2.10.4 Seat instructions	1-14
1.2.10.5 Shield and guards	1-14
1.2.10.6 Exhaust warning	1-15
1.2.10.7 Flying debris	1-15
1.2.10.8 Handrails	1-16
1.2.10.9 Agricultural chemicals	1-16
1.2.11 Travel on public roads	1-16
1.2.12 Maintenance	1-18
1.2.12.1 General maintenance information	1-18
1.2.12.2 Fire prevention and first aid	1-20
1.2.12.3 High pressure leaks	1-21
1.2.12.4 Accumulator safety	1-22
1.2.12.5 Tire safety	1-22
1.3 Specifications	1-23
1.3.1 Dimensions and weights	1-23
1.3.2 Drive system specifications	1-24
1.3.3 Shearbolt specifications	1-25
1.3.4 Hydraulic specifications - on board	1-26
1.3.5 Pickup specifications	1-26
1.3.6 Rotor cutter specifications - early production	1-27
1.3.7 Rotor cutter specifications - late production	1-28
1.3.8 Packer specifications	1-29
1.3.9 Packer/cutter specification, if equipped	1-29
1.3.10 Stuffer specifications	1-29
1.3.11 Plunger specifications	1-30
1.3.12 Twine specifications	1-30
1.3.13 Knotter and needle specifications	1-31

1.3.14	Bale chamber tension specifications	1-31
1.3.15	Ejector specifications	1-31
1.3.16	Roller bale chute specifications, if equipped	1-32
1.3.17	Lamp specification	1-32
1.3.18	Knotter lubrication pump specifications	1-32
1.3.19	Chain lubrication pump specifications, if equipped	1-33
1.3.20	Lubricants and capacities	1-33
1.3.21	Tire specifications	1-34
1.3.22	Brake specifications, if equipped	1-35
1.3.23	Maximum speed	1-37
1.3.24	Tractor requirements	1-37
1.3.25	Noise levels	1-38
1.4	Bolt torque values	1-39
1.5	Machine identification	1-41
1.5.1	Serial number plate location	1-41
1.5.2	Serial number description	1-42
1.6	Machine components	1-43
1.6.1	Outside view - left-hand side	1-43
1.6.2	Outside view - right-hand side	1-44
1.6.3	Inside view - left-hand side	1-45
1.6.4	Inside view - right-hand side	1-46
1.6.5	Description of operation	1-46
1.7	Service schedule	1-48
1.8	Lubrication points	1-52
1.8.1	Driveline lubrication and maintenance	1-52
1.8.1.1	Removing and installing the implement driveline shields	1-53
1.8.2	Lubricating the hitch ball, if equipped	1-54
1.8.3	Lubricating the main drive slip clutch	1-54
1.8.4	Lubricating the overrunning clutch	1-55
1.8.5	Lubricating the flywheel bearing	1-55
1.8.6	Lubricating the connecting rods	1-55
1.8.7	Lubricating the packer crank bearings	1-56
1.8.8	Inspecting the packer crank bearings	1-57
1.8.9	Lubricating the packer/cutter crank bearings	1-57
1.8.10	Inspecting the packer/cutter crank bearings	1-57
1.8.11	Lubricating the cutter rotor clutch, if equipped	1-58
1.8.12	Lubricating the anchor for the rotor cutter chain tensioner	1-58
1.8.13	Lubricating the rotor cutter bearings	1-59
1.8.14	Lubricating the knife cranks, if equipped	1-59
1.8.15	Lubricating the main drive sprocket	1-60
1.8.16	Lubricating the stuffer drive	1-60
1.8.17	Lubricating the knotter/needle clutch	1-61
1.8.18	Lubricating the brake linkage	1-61
1.8.19	Lubricating the tandem axle pivot bushings	1-62
1.8.20	Lubricating the metering wheel shaft	1-62
1.8.21	Lubricating the six twine knotter center fitting	1-62
1.8.22	Lubricating the tucker arm and twine arm cam rollers	1-63
1.8.23	Lubricating the bale density cylinders	1-63
1.8.24	Lubricating the packer clutch	1-64
1.8.25	Lubricating the main packer/cutter crank bearing	1-64
1.8.26	Lubricating the packer/cutter chain tensioner	1-64
1.8.27	Lubricating the pickup overrunning clutch	1-65
1.8.28	Lubricating the pickup linkage roller	1-65
1.8.29	Lubricating the pickup spring pivot	1-66
1.9	Connecting to the tractor - CE	1-67
1.9.1	Removing the shipping bracket	1-67
1.9.2	Hitch component identification	1-67

1.9.3	Baler height setting	1-68
1.9.4	Tractor setup dimensions with an 80 mm (3.15 in) ball hitch, a CE spherical ball hitch, or a 50 mm (2 in) ring hitch	1-68
1.9.5	Tractor setup dimensions with a 40 mm (1.6 in) high ring hitch	1-69
1.9.6	Installing the machine hitch	1-69
1.9.7	Connecting the machine hitch to the tractor drawbar	1-71
1.9.8	Connecting a 50 mm (2 in) ring hitch to the tractor	1-72
1.9.9	Connecting an 80 mm (3.15 in) ball hitch to the tractor	1-72
1.9.10	Connecting a 40 mm (1.6 in) high ring hitch to the tractor	1-72
1.9.11	Operating a hydraulic tongue jack	1-73
1.9.12	Installing the safety transport chain	1-73
1.9.13	Constant velocity implement driveline, if equipped	1-74
1.9.13.1	Connecting a quick disconnect yoke to a power take off	1-74
1.9.13.2	Making marks on the constant velocity implement driveline	1-75
1.9.13.3	Checking the constant velocity implement driveline angle	1-76
1.9.13.4	Adjusting the constant velocity implement driveline angle	1-76
1.9.13.5	Checking the constant velocity implement driveline clearance	1-77
1.10	Checklists	1-78
1.10.1	Daily checklist	1-78
1.10.2	Inspection after the first hour of operation	1-78
1.11	Lighting and reflectors - CE	1-79
1.11.1	Lighting and reflectors	1-79
1.12	Lighting and reflectors - NA	1-80
1.12.1	Lighting and reflectors	1-80
1.13	Baler operation	1-81
1.13.1	Preparing to bale	1-81
1.13.2	Starting the baler	1-81
1.13.2.1	The plunger is away from the bale	1-81
1.13.2.2	The plunger is near or on the bale	1-81
1.13.2.3	Baler fails to start	1-82
1.13.3	Baling the first bale	1-82
1.13.4	Baling	1-83
1.13.5	Stopping the baler	1-83
1.14	Preparing to road the machine or to move the machine on a trailer	1-85
1.15	Lifting and tie down	1-88
1.15.1	Lifting a baler correctly	1-88
1.15.2	Lifting points	1-88
1.15.3	Tie down points	1-89
1.16	Air brake pressure release	1-91
1.17	Disconnecting the tractor	1-92
2	Main frame	2-1
2.1	Wheels and tires	2-3
2.1.1	Tire specifications	2-3
2.1.2	Remove a wheel	2-3
2.1.3	Installing a wheel	2-4
2.2	Single axle	2-5
2.2.1	Removing an axle shaft without brakes	2-5
2.2.2	Removing the axle shaft with brakes	2-5
2.2.3	Inspecting an axle	2-5
2.2.4	Installing an axle shaft without brakes	2-5
2.2.5	Installing an axle shaft with brakes	2-6
2.3	Tandem axle	2-7
2.3.1	Tandem axle steering lock	2-7
2.3.2	Removing the rear tandem axle	2-7
2.3.3	Removing the front tandem axle	2-8

2.3.4	Inspecting an axle	2-9
2.3.5	Installing the rear tandem axle	2-9
2.3.6	Installing the front tandem axle	2-11
2.3.7	Adjusting the rear wheel alignment	2-11
2.4	Wheel bearing	2-13
2.4.1	Inspect the wheel bearings for too much movement	2-13
2.4.2	Remove a wheel	2-13
2.4.3	Removing the wheel bearings - single axle without brakes	2-13
2.4.4	Remove the wheel bearings - machines with brakes	2-14
2.4.5	Inspecting the wheel bearing	2-15
2.4.6	Installing the wheel bearings - single axle without brakes	2-16
2.4.7	Install the wheel bearings - single axle with brakes and all tandem axles	2-16
2.5	Axle frame group	2-19
2.5.1	Removing the axle frame - single axle without brakes	2-19
2.5.2	Removing the axle frame - single axle with hydraulic brakes	2-19
2.5.3	Removing the axle frame - single axle with air brakes	2-20
2.5.4	Removing the axle frame - tandem axle without brakes	2-20
2.5.5	Removing the axle frame - tandem axle with hydraulic brakes	2-21
2.5.6	Removing the axle frame - tandem axle with air brakes	2-21
2.5.7	Installing the axle frame - single axle without brakes	2-22
2.5.8	Installing the axle frame - single axle with hydraulic brakes	2-22
2.5.9	Installing the axle frame - single axle with air brakes	2-23
2.5.10	Installing the axle frame - tandem axle without brakes	2-23
2.5.11	Installing the axle frame - tandem axle with hydraulic brakes	2-24
2.5.12	Installing the axle frame - tandem axle with air brakes	2-24
2.5.13	Removing the leaf spring assembly	2-25
2.5.14	Inspecting the leaf spring assembly	2-25
2.5.15	Installing the leaf spring assembly	2-26
2.6	Brakes	2-27
2.6.1	Inspection procedure for brakes	2-27
2.6.2	Inspect the air brake system	2-27
2.6.3	Connecting the machine hydraulic brake hoses to the tractor	2-28
2.6.4	Bleeding the hydraulic brake system	2-28
2.6.5	Inspect the brake lining thickness	2-28
2.6.6	Replace the brake linings	2-29
2.6.7	Adjust the brakes	2-31
2.6.8	Rubber brake wiper	2-32
2.6.9	Inspect the park brake system	2-32
3	Drive system	3-1
3.1	Implement driveline	3-3
3.1.1	Equal angle implement driveline, if equipped	3-3
3.1.1.1	Connecting a quick disconnect yoke to a power take-off	3-3
3.1.1.2	Adjusting the angles of an equal angle implement driveline	3-4
3.1.2	Constant velocity implement driveline, if equipped	3-5
3.1.2.1	Connecting a quick disconnect yoke to a power take off	3-5
3.1.2.2	Making marks on the constant velocity implement driveline	3-6
3.1.2.3	Checking the constant velocity implement driveline angle	3-7
3.1.2.4	Adjusting the constant velocity implement driveline angle	3-7
3.1.2.5	Checking the constant velocity implement driveline clearance	3-8
3.1.3	Removing the implement driveline (IDL)	3-9
3.1.4	Installing the implement driveline (IDL)	3-10
3.1.5	Replacing a pawl on a quick disconnect yoke	3-12
3.1.6	Replacing the cross and bearing	3-15
3.2	Main drive shaft	3-22
3.2.1	Driveline troubleshooting	3-22
3.2.2	Main drive shaft	3-22

3.2.3	Removing the main drive shaft	3-23
3.2.4	Inspecting the main drive shaft	3-25
3.2.5	Installing the main drive shaft	3-25
3.3	Main drive clutch	3-27
3.3.1	Main drive slip clutch adjustment	3-27
3.3.2	Lubricating the main drive slip clutch	3-28
3.3.3	Removing the main drive clutch	3-28
3.3.4	Disassembling the main drive clutch	3-28
3.3.5	Inspecting the main drive clutch	3-29
3.3.6	Assembling the main drive clutch	3-31
3.3.7	Disassembling the main drive overrunning clutch	3-32
3.3.8	Inspecting the main drive overrunning clutch	3-32
3.3.9	Assembling the main drive overrunning clutch	3-33
3.3.10	Installing the main drive clutch	3-33
3.4	Flywheel	3-34
3.4.1	Flywheel brake	3-34
3.4.2	Inspecting the flywheel brake lining	3-34
3.4.3	Replacing the flywheel shearbolt	3-35
3.4.4	Shearbolt troubleshooting	3-36
3.4.5	Removing the flywheel	3-38
3.4.6	Inspecting the flywheel	3-40
3.4.7	Inspecting the pinion seal	3-41
3.4.8	Replacing the pinion seal	3-41
3.4.9	Installing the flywheel	3-42
3.5	Auxiliary drive shaft	3-47
3.5.1	Removing the auxiliary drive shaft	3-47
3.5.2	Inspecting the auxiliary drive shaft	3-48
3.5.3	Installing the auxiliary drive shaft	3-49
3.6	Gearbox	3-51
3.6.1	Removing the gearbox	3-51
3.6.2	Installing the gearbox	3-53
3.6.3	80x70 (2x3), 80x90 (3x3), 120x70 (2x4), 120x90 (3x4), and 120x90 XD (3x4 XD) gearbox components	3-56
3.6.4	Disassembling a 80x70 (2x3), 80x90 (3x3), 120x70 (2x4), 120x90 (3x4), and 120x90 XD (3x4 XD) gearbox	3-57
3.6.5	Assembling a 80x70 (2x3), 80x90 (3x3), 120x70 (2x4), 120x90 (3x4), and 120x90 XD (3x4 XD) gearbox	3-61
3.6.6	Disassembling a 120x130 (4x4) gearbox	3-75
3.6.7	Assembling the 120x130 (4x4) gearbox	3-82
3.6.8	Adjusting the gearbox crank arm bolts	3-87
3.6.9	Gearbox troubleshooting	3-87
4	Hydraulic system	4-1
4.1	Hydraulic system general information	4-3
4.1.1	Hydraulic reservoir general information	4-3
4.1.2	Hydraulic components, left-hand side	4-4
4.1.3	Hydraulic components, rear	4-4
4.1.4	Connecting the machine hydraulic hoses to the tractor	4-5
4.2	Bale density circuit	4-6
4.2.1	Bale density circuit description	4-6
4.2.2	Filling the hydraulic system	4-6
4.2.3	Replacing a cartridge	4-6
4.3	Baler control valve assembly	4-8
4.3.1	Removing the baler control valve assembly	4-8
4.3.2	Installing the baler control valve assembly	4-10
4.3.3	Disassembling the baler control valve assembly	4-11
4.3.4	Inspecting the baler control valve assembly	4-13

4.3.5 Assembling the baler control valve assembly	4-15
4.4 Bale ejector/chute valve	4-18
4.4.1 Bale ejector hydraulic connections	4-18
4.4.2 Bale chute hydraulic connections	4-18
4.4.3 Removing the bale ejector/chute valve	4-19
4.4.4 Installing the bale ejector/chute valve	4-20
4.5 Accumulator auxiliary valve	4-22
4.5.1 Accumulator hydraulic system	4-22
4.5.2 Accumulator and bale ejector hydraulic connections	4-22
4.5.3 Disassembling the accumulator auxiliary valve	4-23
4.5.4 Inspecting the accumulator auxiliary valve	4-23
4.5.5 Assembling the accumulator auxiliary valve	4-24
4.6 Pickup lift cylinder	4-26
4.6.1 Pickup lift cylinder components	4-26
4.6.2 Removing the pickup lift cylinder	4-26
4.6.3 Installing the pickup lift cylinder	4-27
4.6.4 Disassembling the pickup lift cylinder	4-28
4.6.5 Inspecting the pickup lift cylinder	4-29
4.6.6 Assembling the pickup lift cylinder	4-29
4.7 Bale density cylinders	4-30
4.7.1 Bale density cylinder components	4-30
4.7.2 Removing the bale density cylinders	4-30
4.7.3 Installing the bale density cylinders	4-31
4.7.4 Disassembling the bale density cylinders	4-32
4.7.5 Inspecting the bale density cylinders	4-33
4.7.6 Assembling the bale density cylinders	4-33
4.8 Hydraulic troubleshooting	4-35
4.8.1 Testing the load control system - load decrease	4-37
4.8.2 Testing the load control system - load increase	4-37
4.9 Cutter hydraulics - GHB0x101 and later	4-39
4.9.1 Removing the knife cylinders	4-39
4.9.2 Installing the knife cylinders	4-41
4.9.3 Disassembling the knife cylinders	4-43
4.9.4 Assembling the knife cylinders	4-44
4.9.5 Removing the cutterbed cylinders	4-45
4.9.6 Installing the cutterbed cylinders	4-46
4.9.7 Disassembling the cutterbed cylinders	4-46
4.9.8 Assembling the cutterbed cylinders	4-47
4.9.9 Removing the cutter valve	4-48
4.9.10 Installing the cutter valve	4-49
4.9.11 Disassembling the cutter valve	4-50
4.9.12 Inspecting the cutter valve	4-50
4.9.13 Assembling the cutter valve	4-52
4.9.14 Checking the accumulator charge pressure	4-53
4.9.15 Charging an accumulator	4-54
4.9.16 Discharging an accumulator	4-56
4.9.17 Removing the accumulator	4-57
4.9.18 Installing the accumulator	4-58
5 Electrical system	5-1
5.1 Basic troubleshooting information	5-3
5.1.1 Basic troubleshooting procedures	5-3
5.1.2 Tools	5-4
5.1.3 Continuity check	5-4
5.1.4 Voltage check	5-5
5.1.5 Testing a solenoid valve	5-5
5.1.6 Testing a coil	5-7

5.2 Connectors	5-8
5.2.1 Machine lamp plug wiring diagram - North America	5-8
5.2.2 Machine lamp plug wiring diagram CE	5-9
5.2.3 Connecting the control harness plug	5-10
5.2.4 Connecting the four pin plug, machines with a disconnect brake	5-10
5.2.5 Checking a connector	5-10
5.2.6 Terminal numbers	5-11
5.2.7 Pins and sockets	5-11
5.2.8 Replacing a Packard connector	5-12
5.2.9 Replacing an AMP connector	5-13
5.3 Sensors and switches	5-14
5.3.1 Adjusting sensors and switches	5-23
5.3.2 Sensors and switches locations and specifications	5-24
5.3.3 Testing a sensor	5-25
5.3.4 Testing a switch	5-25
5.3.4.1 Testing a switch with the terminal	5-26
5.3.4.2 Testing a switch with a continuity test	5-26
5.4 Terminal	5-27
5.4.1 General terminal information	5-27
5.4.1.1 Terminal harness information	5-27
5.4.1.2 Icon functions	5-27
5.4.1.3 Terminal screen trees	5-33
5.4.2 CAN bus system overview	5-37
5.4.3 Startup screen	5-39
5.4.4 Main work screens	5-40
5.4.4.1 Changing the main work screen boxes	5-41
5.4.4.2 Main work screen boxes	5-41
5.4.4.3 Operating directional arrows	5-45
5.4.4.4 Flakes per bale	5-46
5.4.4.5 Bale density cylinder pressure	5-46
5.4.4.6 Changing between automatic and manual control mode	5-48
5.4.4.7 Plunger load	5-49
5.4.4.8 Plunger load setting information	5-50
5.4.4.9 Setting the plunger load	5-51
5.4.4.10 Feeder slip	5-52
5.4.4.11 Main work screen display area	5-53
5.4.5 Accumulator (if equipped)	5-55
5.4.5.1 Accumulator bale position	5-55
5.4.5.2 Accumulator modes	5-55
5.4.5.3 Accumulator manual mode operation	5-56
5.4.5.4 Accumulator bale unload indication	5-56
5.4.5.5 Accumulator errors	5-56
5.4.5.6 Accumulator shift lockout setting	5-57
5.4.6 Scale, if equipped	5-58
5.4.6.1 Bale weight	5-58
5.4.7 Strokes per flake	5-59
5.4.8 Releasing the bale chamber pressure before ejecting a bale	5-59
5.4.9 Releasing the bale chamber pressure	5-60
5.4.10 Machine settings screen	5-61
5.4.10.1 Machine settings screen information	5-61
5.4.10.2 Setting the chain lubrication interval	5-61
5.4.10.3 Setting the knotter lubrication interval	5-62
5.4.10.4 Setting the knotter lubrication operating time	5-63
5.4.10.5 Manual knotter lubrication start	5-63
5.4.10.6 Manual knotter lubrication stop	5-63
5.4.10.7 Changing the bale length	5-63
5.4.10.8 Changing the crop type	5-64
5.4.10.9 Changing the audio settings	5-64

5.4.11	Service screen	5-65
5.4.11.1	Service screen display	5-65
5.4.11.2	Switch service screen	5-66
5.4.11.3	Voltage service screen	5-69
5.4.11.4	Frequency service screen	5-70
5.4.12	Alarm log screen	5-72
5.4.12.1	Alarm detail screen	5-73
5.4.12.2	Removing an alarm	5-73
5.4.13	Machine configuration screen	5-74
5.4.14	Calibrating the accumulator scale	5-74
5.4.15	Calibrating the bale length, if equipped	5-76
5.4.16	Calibrating the roller bale chute scale with an object of a known weight	5-78
5.4.17	Calibrating the roller bale chute scale with a test bale	5-80
5.4.18	Calibrating the cutter	5-81
5.4.19	Rotor cutter - late production cutter	5-82
5.4.19.1	Changing the cutter knife setting	5-84
5.4.19.2	Lowering the cutterbed	5-86
5.4.19.3	Raising the cutterbed	5-87
5.4.19.4	Removing debris from the cutter knives	5-88
5.4.19.5	Unplugging the cutter	5-91
5.4.20	Work records screen	5-92
5.4.20.1	Job record screen	5-93
5.4.20.2	Changing the current job	5-95
5.4.20.3	Customer record screen	5-95
5.4.20.4	Changing the current customer	5-96
5.4.20.5	Year record screen	5-97
5.4.20.6	Changing the current year	5-98
5.4.20.7	Clearing a record	5-98
5.4.20.8	Storing work records on a data card	5-99
5.4.20.9	Lifetime counter screen	5-99
5.4.21	Indicator icons and error number	5-100
5.4.21.1	Machine indicator icons and error numbers	5-100
5.4.21.2	Accumulator indicator icons and error numbers	5-101
5.4.21.3	Scale indicator icons and error numbers	5-102
5.4.22	Alarms	5-102
5.4.22.1	Alarm information	5-102
5.4.22.2	Visual alarm descriptions	5-102
5.4.22.3	Audible alarm descriptions	5-102
5.4.22.4	Alarm table	5-103
5.5	Terminal troubleshooting	5-113
6	Bale feeding system	6-1
6.1	General information	6-3
6.1.1	Pickup assembly	6-3
6.1.2	Pickup assembly operation and settings	6-3
6.1.3	Pickup height	6-4
6.1.4	Adjusting the pickup assembly flotation - torsion rod system	6-4
6.1.5	Adjusting the pickup assembly flotation - compression spring system	6-5
6.1.6	Adjusting the flotation and the gauge wheels height	6-5
6.2	Chain adjustment	6-7
6.2.1	Adjusting the left-hand pickup chains	6-7
6.2.2	Adjusting the right-hand pickup chains	6-7
6.3	Pickup clutch - FHB0x999 and prior	6-8
6.3.1	Pickup assembly clutch operation	6-8
6.3.2	Pickup assembly slip clutch components	6-8
6.3.3	Pickup assembly overrunning clutch components	6-8
6.3.4	Adjusting the pickup assembly slip clutch	6-9

6.3.5	Adjusting the pickup assembly overrunning clutch	6-9
6.3.6	Removing the pickup assembly clutch	6-9
6.3.7	Disassembling the pickup assembly clutch	6-10
6.3.8	Assembling the pickup assembly clutch	6-10
6.3.9	Installing the pickup assembly clutch	6-11
6.4	Pickup clutch - GHB0x101 and later	6-13
6.4.1	Checking the pickup slip clutch - GHB0x101 and later	6-13
6.4.2	Adjusting the pickup slip clutch - GHB0x101 and later	6-13
6.4.3	Removing the pickup slip clutch - GHB0x101 and later	6-14
6.4.4	Installing the pickup slip clutch - GHB0x101 and later	6-14
6.4.5	Disassembling the pickup slip clutch - GHB0x101 and later	6-14
6.4.6	Assembling the pickup slip clutch - GHB0x101 and later	6-16
6.5	Augers	6-18
6.5.1	Augers general information	6-18
6.5.2	Left-hand auger components	6-18
6.5.3	Removing the primary drive sprocket and the top auger drive sprocket	6-19
6.5.4	Removing the bottom augers	6-20
6.5.5	Removing the scrapers and wear plates	6-21
6.5.6	Right-hand auger components	6-22
6.5.7	Removing the right-hand auger	6-22
6.5.8	Installing the scrapers	6-23
6.5.9	Installing the top auger	6-24
6.5.10	Installing the bottom auger	6-24
6.6	Reel	6-26
6.6.1	Removing the tines	6-26
6.6.2	Installing the tines	6-26
6.6.3	Removing the cam bearings	6-26
6.6.4	Installing the cam bearings	6-27
6.6.5	Removing the reel bearings	6-27
6.6.6	Installing the reel bearings	6-28
6.6.7	Tine bar components	6-30
6.6.8	Removing the tine bar and the bearing	6-30
6.6.9	Installing the tine bar and the bearing	6-33
6.6.10	Removing the reel	6-36
6.6.11	Installing the reel	6-39
6.7	Gauge wheels	6-42
6.7.1	Removing the wheel bearing	6-42
6.7.2	Installing the wheel bearing	6-42
6.7.3	Adjusting the wheel bearing	6-43
6.8	Pickup	6-44
6.8.1	Removing the pickup	6-44
6.8.2	Installing the pickup	6-45
6.9	Troubleshooting	6-48
6.9.1	Troubleshooting the pickup assembly	6-48
7	Bale forming system	7-1
7.1	Optional rotor cutter - FHB0x999 and prior	7-7
7.1.1	Rotor cutter - early production cutter	7-7
7.1.2	Cutterbed	7-7
7.1.2.1	Replacing the knives	7-7
7.1.2.2	Sharpening the knives	7-9
7.1.2.3	Lowering the cutterbed	7-10
7.1.2.4	Removing the cutterbed	7-10
7.1.2.5	Removing the knife selector rod and knives	7-12
7.1.2.6	Removing the springs	7-13
7.1.2.7	Removing the knife roller pivots	7-14
7.1.2.8	Installing roller pivots - wide cutterbed	7-15

7.1.2.9	Installing roller pivots - narrow cutterbed	7-19
7.1.2.10	Installing the springs	7-24
7.1.2.11	Installing the knife selector rod and knives	7-24
7.1.2.12	Installing the cutterbed	7-25
7.1.2.13	Raising the cutterbed	7-26
7.1.2.14	Filler plate location - narrow cutterbed	7-27
7.1.2.15	Filler plate location - wide cutterbed	7-29
7.1.3	Cutter group assembly	7-30
7.1.4	Removing the cutter assembly	7-31
7.1.5	Installing the cutter assembly	7-34
7.1.6	Replacing the cutter strippers	7-36
7.1.7	Knife engaging and disengaging	7-39
7.1.8	Changing the cut length	7-40
7.1.9	Gearbox	7-41
7.1.9.1	Cutter gearbox components	7-41
7.1.9.2	Disassembling the cutter gearbox	7-41
7.1.9.3	Assembling the cutter gearbox	7-43
7.1.10	Slip clutch and drive chain	7-48
7.1.10.1	Removing the cutter drive chain	7-48
7.1.10.2	Removing the cutter slip clutch	7-48
7.1.10.3	Replacing the slip clutch hub	7-49
7.1.10.4	Installing the cutter slip clutch	7-50
7.1.10.5	Rotor cutter slip clutch adjustment, if equipped	7-50
7.1.10.6	Installing the cutter drive chain	7-50
7.2	Optional rotor cutter - GHB0x101 and later	7-52
7.2.1	Rotor cutter - late production cutter	7-52
7.2.2	Changing the cutter knife setting	7-52
7.2.3	Lowering the cutterbed	7-54
7.2.4	Raising the cutterbed	7-55
7.2.5	Replacing the knives	7-57
7.2.6	Removing debris from the cutter knives	7-59
7.2.7	Unplugging the cutter	7-62
7.2.8	Sharpening the knives	7-63
7.2.9	Gearbox	7-64
7.2.9.1	Cutter gearbox components	7-64
7.2.9.2	Disassembling the cutter gearbox	7-64
7.2.9.3	Assembling the cutter gearbox	7-66
7.2.10	Slip clutch and drive chain	7-71
7.2.10.1	Removing the cutter drive chain	7-71
7.2.10.2	Removing the cutter slip clutch	7-71
7.2.10.3	Replacing the slip clutch hub	7-72
7.2.10.4	Installing the cutter slip clutch	7-73
7.2.10.5	Rotor cutter slip clutch adjustment, if equipped	7-73
7.2.10.6	Installing the cutter drive chain	7-73
7.2.11	Removing the cutterbed	7-74
7.2.12	Installing the cutterbed	7-76
7.2.13	Disassembling the cutterbed	7-77
7.2.14	Assembling the cutterbed	7-78
7.2.15	Replacing the rotor blades	7-80
7.2.16	Removing the rotor	7-80
7.2.17	Installing the rotor	7-81
7.2.18	Replacing the cutter strippers	7-82
7.3	Optional packer cutter	7-86
7.3.1	Unplugging the cutter	7-86
7.3.2	Changing the cut length	7-86
7.4	Packer	7-88
7.4.1	Adjusting the packer chain	7-88
7.4.2	Adjusting the packer clutch	7-88

7.4.3	Disassembling the packer clutch	7-89
7.4.4	Inspect the packer clutch	7-89
7.4.5	Assemble the packer clutch	7-90
7.4.6	Troubleshooting the packer clutch	7-90
7.4.7	Removing the packer fingers	7-90
7.4.8	Packer crank components	7-92
7.4.9	Installing the packer fingers	7-92
7.4.10	Removing the packer finger links	7-93
7.4.11	Installing the packer finger links	7-94
7.4.12	Replacing the packer finger link bearing	7-94
7.4.13	Packer crank shaft assembly components	7-95
7.4.14	Removing the packer crank	7-95
7.4.15	Assembling the packer crank	7-97
7.4.16	Installing the packer crank	7-107
7.5	Stuffer	7-112
7.5.1	Stuffer general information	7-112
7.5.2	Stuffer cycle	7-112
7.5.3	Stuffer troubleshooting	7-113
7.6	Stuffer finger bar	7-115
7.6.1	Removing the stuffer finger bar - 130x120 and 4x4	7-115
7.6.2	Installing the stuffer finger bar - 130x120 and 4x4	7-116
7.6.3	Removing the stuffer finger bar - all except 130x120 and 4x4	7-117
7.6.4	Installing the stuffer finger bar - all except 130x120 and 4x4	7-117
7.7	Stuffer arm	7-118
7.7.1	Removing the stuffer arm	7-118
7.7.2	Installing the stuffer arm	7-119
7.8	Stuffer arm bearing	7-120
7.8.1	Removing the stuffer arm bearing	7-120
7.8.2	Installing the stuffer arm bearing	7-121
7.9	Stuffer brake	7-122
7.9.1	Stuffer brake general information	7-122
7.9.2	Adjusting the stuffer brake	7-122
7.9.3	Removing the stuffer brake	7-123
7.9.4	Disassembling the stuffer brake	7-125
7.9.5	Assembling the stuffer brake	7-126
7.9.6	Installing the stuffer brake	7-126
7.10	Stuffer clutch	7-128
7.10.1	Removing the stuffer clutch	7-128
7.10.2	Disassembling the stuffer clutch	7-130
7.10.3	Assembling the stuffer clutch	7-130
7.10.4	Installing the stuffer clutch	7-131
7.10.5	Adjusting the stuffer clutch	7-132
7.10.6	Replacing the stuffer drive sprocket bushing	7-133
7.11	Stuffer shaft	7-134
7.11.1	Removing the right-hand stuffer shaft bearing	7-134
7.11.2	Installing the right-hand stuffer shaft bearing	7-135
7.11.3	Removing the left-hand stuffer shaft bearing	7-136
7.11.4	Installing the left-hand stuffer shaft bearing	7-139
7.11.5	Removing the stuffer shaft	7-140
7.11.6	Installing the stuffer shaft	7-143
7.12	Holding fingers	7-145
7.12.1	Holding finger components	7-145
7.12.2	Adjusting the holding fingers	7-145
7.12.3	Removing the holding finger assembly	7-147
7.12.4	Installing the holding finger assembly	7-148
7.12.5	Removing the left-hand holding finger bearing	7-149
7.12.6	Installing the left-hand holding finger bearing	7-149

7.12.7	Removing the right-hand holding finger bearing	7-149
7.12.8	Installing the right-hand holding finger bearing	7-150
7.13	Stuffer sensor door	7-151
7.13.1	Stuffer sensor door general information	7-151
7.13.2	Adjusting the stuffer sensor door	7-151
7.14	Stuffer chute	7-153
7.14.1	Stuffer chute adjustment	7-153
7.15	Plunger	7-154
7.15.1	Plunger components	7-154
7.15.2	Removing the plunger	7-155
7.15.3	Installing the plunger	7-159
7.15.4	Removing the connecting rods	7-162
7.15.5	Installing the connecting rods	7-163
7.15.6	Removing the crank arm bearing assemblies	7-164
7.15.7	Installing the crank arm bearing assemblies	7-168
7.15.8	Removing the main plunger rollers	7-170
7.15.9	Disassembling the main plunger rollers	7-171
7.15.10	Assembling the main plunger rollers	7-171
7.15.11	Installing the main plunger rollers	7-172
7.15.12	Adjusting the front main plunger rollers	7-172
7.15.13	Adjusting the side plunger rollers	7-173
7.15.14	Adjusting the plunger knives	7-174
7.15.15	Adjusting the face angles	7-174
7.15.16	Adjusting the slot cleaners	7-175
7.16	Hay dogs	7-176
7.16.1	Inspecting the top and side hay dogs	7-176
7.16.2	Inspecting the stationary hay dogs	7-176
7.16.3	Adjusting the stationary knife	7-176
7.17	Tension arms	7-178
7.17.1	Bale tension arm components	7-178
7.17.2	Removing the bale tension arms	7-178
7.17.3	Inspecting the bale tension arms	7-179
7.17.4	Installing the bale tension arms	7-180
7.17.5	Bale tension roller components	7-180
7.17.6	Removing the bale tension roller	7-181
7.17.7	Installing the bale tension roller	7-181
7.18	General knotter information	7-182
7.18.1	Double knotter system description	7-182
7.18.2	Double knotter system	7-183
7.18.3	Knotter operation	7-183
7.18.4	Knotter/needle lockout	7-186
7.18.5	Twine specifications	7-187
7.18.6	Monitoring flags	7-188
7.18.7	Monitoring flags	7-189
7.19	Threading a four twine baler	7-190
7.19.1	Installing twine balls	7-190
7.19.2	Threading the left-hand needle twine box	7-190
7.19.3	Threading the right-hand needle twine box	7-191
7.19.4	Threading the needle twine box tensioners	7-193
7.19.5	Threading the needle twines into the needle twine area	7-193
7.19.6	Needle twine tensioners	7-194
7.19.7	Threading the needle slacker arms	7-194
7.19.8	Threading the twines to the needles	7-195
7.19.9	Threading the left-hand knotter twine box	7-196
7.19.10	Threading the right-hand knotter twine box	7-197
7.19.11	Threading the twines into the knotter area	7-199
7.19.12	Threading the twines through the knotters	7-200

7.19.13 Threading and tying the needle and the knotter twines	7-201
7.20 Threading a six twine baler	7-203
7.20.1 Installing twine balls	7-203
7.20.2 Threading the left-hand needle twine box	7-203
7.20.3 Threading the right-hand needle twine box	7-205
7.20.4 Threading the needle twine box tensioners	7-206
7.20.5 Threading the needle twines into the needle twine area	7-207
7.20.6 Threading the needle slacker arms	7-207
7.20.7 Threading the twine hooks for needles	7-208
7.20.8 Threading the twines to the needles	7-209
7.20.9 Threading the left-hand knotter twine box	7-209
7.20.10 Threading the right-hand knotter twine box	7-211
7.20.11 Twine box tensioners for knotters	7-213
7.20.12 Threading the twines into the knotter area	7-213
7.20.13 Threading the twines through the knotters	7-214
7.20.14 Threading and tying the needle and the knotter twines	7-215
7.21 General maintenance	7-217
7.21.1 General maintenance information	7-217
7.21.2 Causes of tying failure	7-217
7.21.3 Knotter head components	7-218
7.21.4 Adjusting the twine box twine tensioner	7-219
7.21.5 Billhook and billhook cam	7-219
7.21.6 Adjusting the billhook and billhook cam	7-219
7.21.7 Replacing a billhook	7-220
7.21.8 Replacing the twine knife	7-221
7.22 Stripper arm adjustment	7-222
7.22.1 Adjusting the stripper arm	7-222
7.22.2 Twine disc operation	7-223
7.22.3 Timing the twine disc	7-224
7.22.4 Adjusting the twine holder	7-225
7.23 Needle maintenance	7-226
7.23.1 Installing a needle	7-226
7.23.2 Centering a needle	7-226
7.23.3 Needle actuating rod length	7-227
7.23.4 Checking needle penetration	7-227
7.23.5 Adjusting needle penetration - all needles	7-227
7.23.6 Adjusting needle penetration - one needle	7-228
7.23.7 Adjusting the needle roller height	7-228
7.23.8 Adjusting the needle lateral load	7-229
7.23.9 Adjusting the twine fingers	7-230
7.24 Twine finger adjustment	7-232
7.24.1 Adjusting the tucker arms	7-232
7.24.2 Timing the baler	7-233
7.24.3 Adjusting the knotter/needle brake	7-233
7.24.4 Inspecting the knotter/needle inner cam lobe	7-235
7.24.5 Adjusting the needle protection linkage	7-235
7.24.6 Checking the needle curve	7-236
7.24.7 Adjusting the twine and tucker finger shaft bearings	7-237
7.25 Twine tensioners	7-238
7.25.1 Removing the lower twine tensioner assembly	7-238
7.25.2 Disassembling the lower twine tensioner assembly	7-238
7.25.3 Disassembling the lower tensioner arm	7-240
7.25.4 Assembling the lower tensioner arm	7-241
7.25.5 Disassembling a lower tensioner	7-242
7.25.6 Assembling a lower tensioner	7-243
7.25.7 Assembling the lower twine tensioner assembly	7-244
7.25.8 Installing the lower twine tensioner assembly	7-245

7.25.9	Upper twine tensioner assembly components	7-245
7.25.10	Disassembling the upper twine tensioner assembly	7-246
7.25.11	Assembling the upper twine tensioner assembly	7-247
7.25.12	Twine tension	7-247
7.26	Knotter frame	7-249
7.26.1	Checking the knotter frame timing	7-249
7.26.2	Knotter Assembly	7-250
7.26.3	Removing the knotter frame	7-251
7.26.4	Installing the knotter frame	7-252
7.27	Knotter assembly	7-254
7.27.1	Removing the knotter assembly	7-254
7.27.2	Disassembling a four twine knotter assembly	7-257
7.27.3	Knotter assembly inspection	7-258
7.27.4	Assembling the four twine knotter assembly	7-258
7.27.5	Six twine knotter assembly specifications	7-261
7.27.6	Disassembling the six twine knotter assembly	7-262
7.27.7	Knotter assembly inspection	7-263
7.27.8	Assembling the six twine knotter assembly	7-264
7.28	Twine finger cam	7-272
7.28.1	Twine finger cam components	7-272
7.28.2	Removing the twine finger cam	7-272
7.28.3	Installing the twine finger cam	7-276
7.29	Knotter clutch	7-277
7.29.1	Knotter clutch components	7-277
7.29.2	Removing the knotter clutch	7-277
7.29.3	Inspecting the knotter clutch	7-279
7.29.4	Installing the knotter clutch	7-280
7.30	Knotter brake	7-283
7.30.1	Knotter brake components	7-283
7.30.2	Removing the knotter brake	7-283
7.30.3	Installing the knotter brake	7-286
7.31	Knotter head	7-291
7.31.1	Knotter head components	7-291
7.31.2	Disassembling the knotter head	7-291
7.31.3	Inspecting the knotter head	7-298
7.31.4	Assembling the knotter head	7-299
7.32	Knotter trip arm	7-306
7.32.1	Knotter trip arm assembly	7-306
7.32.2	Knotter trip arm system components	7-307
7.32.3	Adjusting the knotter trip arm system	7-307
7.32.4	Starwheel components	7-308
7.32.5	Starwheel tower components	7-309
7.32.6	Removing the Starwheel and bell crank	7-309
7.32.7	Installing the starwheel and bell crank	7-312
7.33	Knotter blower	7-317
7.33.1	Knotter blower components	7-317
7.33.2	Removing the knotter blower	7-318
7.33.3	Disassembling the knotter blower	7-319
7.33.4	Assembling the knotter blower	7-320
7.33.5	Installing the knotter blower	7-321
7.34	Knotter stack	7-322
7.34.1	Adjusting the knotter stack preload	7-322
7.34.2	Adjusting the knotter sprocket preload	7-325
7.35	Knotter lubrication pump	7-329
7.35.1	Priming the knotter lubrication lines	7-329
7.36	Removing a bale from the bale chamber	7-331

7.36.1	Operating the ejector, if equipped	7-331
7.36.2	Removing a bale from the bale chamber - no ejector	7-332
7.36.3	Removing high moisture bales	7-333
7.37	Knotter tying troubleshooting	7-334
7.37.1	Tying troubleshooting	7-334
8	Accessories	8-1
8.1	Accumulator	8-3
8.1.1	Adjustments	8-3
8.1.1.1	Adjusting the center bale sensor	8-3
8.1.1.2	Adjusting the front bale stops	8-3
8.1.1.3	Adjusting the counterbalance weights	8-4
8.1.1.4	Adjusting the bale guide	8-5
8.1.1.5	Adjusting the extension panel stops	8-5
8.1.1.6	Adjusting the side cart latch	8-6
8.1.1.7	Testing the side cart latch	8-7
8.1.1.8	Bale shift bar	8-8
8.1.1.9	Adjusting the unloading solenoids	8-8
8.1.1.10	Adjusting the caster brake	8-9
8.1.2	Specifications	8-9
8.1.2.1	Dimensions and weights	8-9
8.1.2.2	Tires and axles	8-9
8.1.2.3	Bale size	8-10
8.1.2.4	Capacity	8-10
8.1.2.5	Control and monitoring system	8-10
8.1.2.6	System voltage	8-10
8.1.2.7	Hydraulics	8-10
8.1.2.8	Bale weight kit (optional)	8-10
8.1.2.9	Lubrication system	8-11
8.1.2.10	Lubrication	8-11
8.2	Bale chute	8-12
8.2.1	Flat bale chute components	8-12
8.2.2	Replacing the flat bale chute pivot bushing	8-12
8.2.3	Raising the roller bale chute	8-12
8.2.4	Lowering the roller bale chute	8-14
8.2.5	Roller bale chute components	8-16
8.2.6	Adjusting the roller bale chute length	8-16
8.2.7	Adjusting the roller bale chute brake	8-18
8.2.8	Replacing the bale chute front roller bearings	8-18
8.2.9	Replacing the bale chute rear roller bearings	8-19
8.2.10	Replacing the roller bale chute brass washers	8-19
8.2.11	Replacing the roller bale chute pivot bushing	8-19
8.3	Electronic Knotter Trip	8-21
8.3.1	Remove and install the encoder	8-21
8.3.2	Remove the knotter trip harness	8-24
8.3.3	Install the knotter trip harness	8-26
8.3.4	Remove the motor, the reset arm, and the reset mount	8-29
8.3.5	Install the reset mount, the reset arm, the motor	8-31
8.3.6	Remove and install the knotter/needle lockout switch	8-34
8.3.7	Install the decals for the electronic knotter trip	8-36
8.3.8	Check the electronic knotter trip system	8-36
9	Diagrams	9-1
9.1	Electrical diagrams and schematics	9-3
9.1.1	Reading a harness diagram	9-3
9.1.2	Wiring diagram color codes	9-5
9.1.3	Electrical components - NA	9-9

9.1.4	Electrical components - CE	9-10
9.1.5	Cutter and pickup electrical components - GHB0x101 and later	9-13
9.1.6	Circuit and connector table	9-13
9.1.7	Main control harness - FHB0x999 and prior	9-33
9.1.8	Main control harness - GHB0x101 and later	9-35
9.1.9	Lower control harness	9-37
9.1.10	Main lamp harness NA	9-38
9.1.11	Main lamp harness CE	9-40
9.1.12	Accumulator extension harness	9-43
9.1.13	Accumulator power harness	9-43
9.1.14	Accumulator switch harness	9-44
9.1.15	Beacon lamp harness	9-44
9.1.16	Cutter harness - FHB0x999 and prior	9-45
9.1.17	Cutter harness - GHB0x101 and later	9-47
9.1.18	Ejector chute harness	9-49
9.1.19	Electronic knotter trip harness	9-50
9.1.20	Front lamp harness	9-50
9.1.21	Left connecting rod harness	9-51
9.1.22	Packer cutter harness - FHB0x999 and prior	9-51
9.1.23	Packer cutter harness - GHB0x101 and later	9-52
9.1.24	Feeder slip harness - GHB0x101 and later	9-52
9.1.25	Release valve harness	9-53
9.1.26	Right connecting rod harness	9-53
9.1.27	Tandem axle harness	9-53
9.1.28	Telemetry adapter harness	9-54
9.1.29	Upper control harness	9-54
9.2	Hydraulic diagrams and schematics	9-56
9.2.1	Machine hydraulic schematic	9-56
9.2.2	Bale ejector and bale chute hydraulic schematic	9-57
9.2.3	Rotor cutter schematic - late production	9-58
9.2.4	Hydraulic brake systems	9-58
9.2.5	Cutter with tandem axle and hydraulic brakes	9-61
9.2.6	Cutter and pickup - GHB0x101 and later	9-63
9.2.7	Packer with tandem axle and pneumatic brakes	9-65
9.2.8	Packer/cutter with single axle and hydraulic jack	9-66
9.3	Pneumatic brake system	9-69
9.3.1	Pneumatic brake system - single axle	9-69
9.3.2	Pneumatic brake system - tandem axle	9-70
9.4	Power flow	9-71
9.4.1	Power flow diagrams	9-71
10	Index	Index-1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com