

Workshop Service Manual



Pickup Header

4300

TABLE OF CONTENT

- General 1
- Frame 2
- Augers 3
- Drive system 4
- Draper 5
- Hydraulic system 6
- Electrical system 7
- Shielding 8
- Index 9

1 General

| | | |
|------------|--|-------------|
| 1.1 | General information | 1-3 |
| 1.1.1 | Introduction to this service manual | 1-3 |
| 1.1.2 | Units of measurement | 1-3 |
| 1.1.3 | Table of contents | 1-3 |
| 1.1.4 | Page numbers | 1-3 |
| 1.1.5 | Intended use | 1-3 |
| 1.1.6 | Proper disposal of waste | 1-3 |
| 1.2 | Safety | 1-5 |
| 1.2.1 | Safety symbol | 1-5 |
| 1.2.2 | Safety messages | 1-5 |
| 1.2.3 | Information messages | 1-5 |
| 1.2.4 | Safety signs | 1-5 |
| 1.2.5 | A word to the technician | 1-6 |
| 1.2.6 | The service manual | 1-7 |
| 1.2.7 | Operation | 1-7 |
| 1.2.7.1 | Prepare for operation | 1-7 |
| 1.2.7.2 | General information | 1-7 |
| 1.2.7.3 | Personal protective equipment | 1-8 |
| 1.2.7.4 | Seat instructions | 1-9 |
| 1.2.7.5 | Shield and guards | 1-9 |
| 1.2.7.6 | Exhaust warning | 1-10 |
| 1.2.7.7 | Flying debris | 1-10 |
| 1.2.7.8 | Handrails | 1-10 |
| 1.2.7.9 | Agricultural chemicals | 1-10 |
| 1.2.8 | Travel on public roads | 1-11 |
| 1.2.9 | Maintenance | 1-12 |
| 1.2.9.1 | General maintenance information | 1-12 |
| 1.2.9.2 | Fire prevention and first aid | 1-14 |
| 1.2.9.3 | High pressure leaks | 1-15 |
| 1.2.9.4 | Replacement parts | 1-15 |
| 1.3 | Cylinder stops | 1-16 |
| 1.3.1 | Header lift cylinder stop | 1-16 |
| 1.3.2 | Hold-down cylinder support | 1-16 |
| 1.3.2.1 | Engage the hold-down cylinder support | 1-16 |
| 1.3.2.2 | Disengage the hold-down cylinder support | 1-16 |
| 1.4 | Machine identification | 1-18 |
| 1.4.1 | Serial number plate | 1-18 |
| 1.4.2 | Serial number description | 1-18 |
| 1.5 | Component identification | 1-20 |
| 1.6 | Specifications | 1-23 |
| 1.6.1 | Header specifications | 1-23 |
| 1.6.2 | Header dimensions | 1-24 |
| 1.6.3 | Lubrication specifications | 1-25 |
| 1.7 | Troubleshooting | 1-26 |
| 1.8 | Connect and disconnect the header | 1-29 |
| 1.8.1 | Connect the header | 1-29 |
| 1.8.2 | Disconnecting the header | 1-31 |
| 1.9 | Connect and disconnect the header - Ideal | 1-34 |
| 1.9.1 | Connect the header | 1-34 |

| | | |
|-------------|---|-------------|
| 1.9.2 | Disconnect the header | 1-35 |
| 1.10 | Field operation | 1-38 |
| 1.10.1 | Draper speed | 1-38 |
| 1.10.2 | Header height | 1-38 |
| 1.10.3 | Pickup height | 1-39 |
| 1.10.3.1 | Adjust the pickup height | 1-39 |
| 1.10.4 | Unplug the header | 1-40 |
| 1.10.5 | Adjust the header floatation | 1-41 |
| 1.11 | Prepare the header for storage | 1-43 |

1.1 General information

1.1.1 Introduction to this service manual

This service manual gives information from engineering tests, operating data, and the latest service techniques at the time of publication. Read this service manual carefully before doing any service on the machine.

The photos and illustrations used in this service manual were current at the time of publication. Production changes can cause machines to vary from the photos and the illustrations. The manufacturer reserves the right to redesign and change machines as necessary without notification.



WARNING:

Some pictures in this manual show the machine with shields or guards removed to permit for a better view of the subject of the picture. All shields and guards must be in position before operating the machine.

Machine movement when in normal use determines right-hand and left-hand.

1.1.2 Units of measurement

Measurements are given in metric units followed by the equivalent in US units. Hardware sizes are given in millimeters for metric hardware and inches for US hardware.

1.1.3 Table of contents

This manual has a table of contents at the front. The table of contents shows the divisions. The individual divisions also have a table of contents.

1.1.4 Page numbers

All pages have two numbers, such as 01-25. The first number shows the division. The second number shows the page in the division.

Page numbers occur on the lower right-hand or lower left-hand corner of each page.

1.1.5 Intended use

This machine is designed solely for use in customary agricultural operations.

Do not use this machine for any application or purpose other than those described in this manual. The manufacturer accepts no liability for damage or injury resulting from misuse of this machine.

Compliance with the conditions of operation, service and repair as specified by the manufacturer constitute essential elements for the intended use of this machine.

This machine should be operated, serviced and repaired only by qualified persons familiar with its characteristics and familiar with the relevant safety rules and procedures.

All generally recognized safety regulations and road traffic regulations must be obeyed at all times.

Any unauthorized modifications performed on this machine will relieve the manufacturer of all liability for any resulting damage or injury.

1.1.6 Proper disposal of waste

Improper disposal of waste can pollute the environment and ecology. A few examples of potentially harmful equipment waste can include, but not limited to, items such as oil, fuel, coolant, brake fluid, filters, battery chemicals, tires, etc.

Use leak proof containers when draining fluids. Do not use food or beverage containers to collect waste fluids, as food or beverage container(s) may mislead someone into drinking from them.

1. General

Do not pour or spill waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire with local environmental or recycling center on the proper way to recycle or dispose waste.

1.2 Safety

1.2.1 Safety symbol

The safety symbol tells you about a potentially hazardous area!

Look for the safety symbol in this manual and on the machine. The safety symbols tell you that there is important safety instructions in the manual.



Fig. 1

1.2.2 Safety messages

The words DANGER, WARNING or CAUTION are used with the safety symbol. Learn these safety messages and obey the recommended precautions and safety instructions.



DANGER:
If you do not obey the recommended precautions and safety instructions, **DEATH OR INJURY will occur.**



WARNING:
If you do not obey the recommended precautions and safety instructions, **DEATH OR INJURY can occur.**



CAUTION:
If you do not obey the recommended precautions and safety instructions, **INJURY can possibly occur.**



Fig. 2

1.2.3 Information messages

The words important and note are not related to personal safety, and are used to give information about the operation and servicing of the machine.

IMPORTANT: Identifies special instructions or procedures which, if not followed, can cause damage to the machine, the process, or the area around the machine.

NOTE: Information to make procedures easier.

1.2.4 Safety signs



WARNING:
Do not remove the safety signs. Replace safety signs that you cannot read, are damaged, or are missing.

Clean the machine surface with a weak soap and water solution before you replace the safety signs. Replacement safety signs are available from your dealer.

1. General

Always make sure that safety signs are in the correct locations and that you can read the safety signs. Illustrations of safety sign locations are in this section.

Keep the safety signs clean. If necessary, use a weak soap and water solution.

1.2.5 A word to the technician

Read and understand the safety section in this service manual before operating or servicing the machine. Read and understand the safety sections in the manuals for all attachments before operating or servicing attachments. The technician has the key to safety. Good safety practices protect everyone.

Study the safety information in this service manual. Make the safety information a working part of the safety program. The safety information in this service manual applies specifically to this type of machine. Always do all other usual and customary safe working precautions. Remember - The technician has the responsibility for safety. Good safety practices can prevent serious injury or death.

The safety section points out some basic safety situations that can occur during the operation and maintenance of the machine. The safety section also suggests possible ways to deal with these situations. The safety section does not replace safety practices in other parts of this service manual.

Practice good safety to help prevent injury or death.

Learn how to operate the machine and how to use the controls correctly.

Do not let other persons operate the machine without instruction and training.

Follow all safety precautions and instructions in the manuals and on safety signs affixed to the machine and all attachments.

Use only approved attachments and equipment.

Make sure the machine has the correct equipment needed by the local regulations.

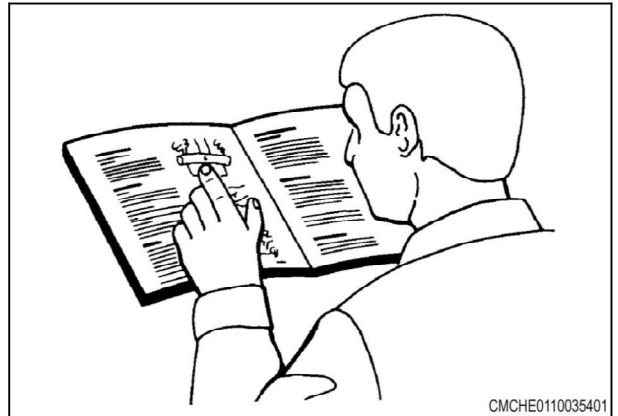


Fig. 3



WARNING:

An operator should not use alcohol or drugs which can affect their alertness or coordination. An operator on prescription or 'over the counter' drugs needs medical advice on whether or not they can properly operate machines. If any attachments used on this equipment have a separate Operator Manual, see that manual for other important safety information.

1.2.6 The service manual

Read the table of contents and basic layout. Become familiar with all parts of this service manual. This service manual gives the technician very important information.

Machine movement when in normal use determines right-hand and left-hand.

This manual covers general safety practices for this machine.

The photos, illustrations, and data used in this manual were current at the time of printing. Inline production changes can make machines vary from the information in the service manual. The manufacturer reserves the right to redesign and change the machine as necessary without notification.

**WARNING:**

In some of the illustrations and photos used in this manual, shields or guards may have been removed for clarity. Never operate the machine with any shields or guards removed. If the removal of shields or guards is necessary to make a repair, they must be replaced before operation.

1.2.7 Operation

1.2.7.1 Prepare for operation

Read and understand the operating instructions and precautions in this manual before you operate or perform service on the machine.

Make sure that you know and understand the positions and operations of all controls. Make sure that all controls are in neutral and the parking brake is applied before you start the machine.

Make sure that all persons are a sufficient distance from your area of work before you start or operate the machine. Do checks on the controls and learn all controls in an area clear of persons and objects before you start work with the machine. Know the dimensions of the machine and have sufficient space available for operation. Do not operate the machine at high speeds around persons, buildings, other equipment, etc.

Always use correct procedures when you do tasks around and operate the machine. Do not let children or persons who do not know how to operate the machine operate the machine. Keep other persons away from your area of work. Do not let other persons ride on the machine.

Make sure that the machine is in the good mechanical condition. Make sure that the machine has the correct equipment as necessary by local regulations.

All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this equipment before you start.

1.2.7.2 General information

When parking, park the machine on a solid level surface and lower the header to the ground. Put all controls in neutral, and apply the parking brake. Stop the engine and take the key with you.



WARNING: Whole body crushing hazard. A loss of hydraulic pressure or movement of the mechanism can cause the raised machine component to fall.

Personal injury or death can occur.

Install the lift cylinder stops before working on the machine to prevent movement.

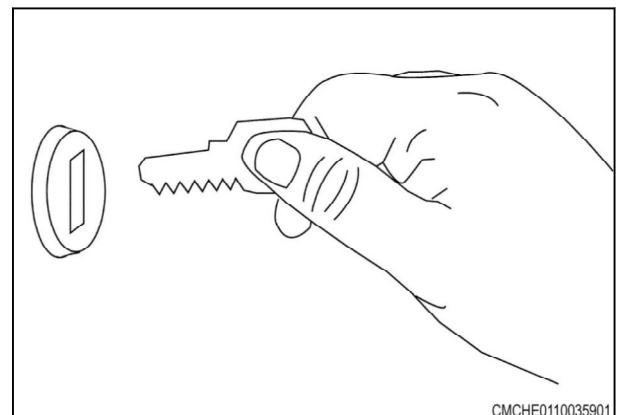


Fig. 4

CMCHE0110035901

1. General

Make sure the machine is in the proper operating condition according to the Operator Manual.

Always operate the machine with the control console turned on.

Do not dismount from moving machinery.

Stay off slopes too steep for operation.

Be aware of the size of the machine and have enough space available to allow for operation.

Stay off slopes too steep for operation. Keep the header as low as possible while going down hills. Never suddenly reverse the wheels to stop or back up.


Where possible avoid operating the machine near ditches, embankments, and holes. Reduce ground speed when operating on rough, slippery, or muddy surfaces and when turning or crossing slopes.



DANGER: Machine electrical shock and electrocution hazard.

Personal injury or death can occur.

Keep the machine clear of overhead electrical power lines.

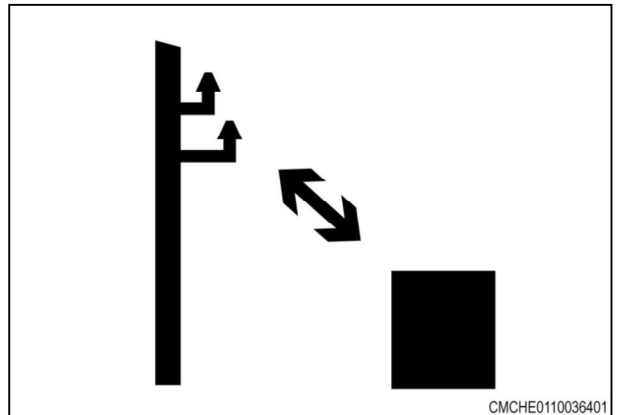


CMCHE0110036401

Fig. 5

1.2.7.3 Personal protective equipment

Put on all personal protective equipment (PPE) and protective clothes that are supplied to you or that are necessary for the conditions and by applicable laws. PPE includes equipment to prevent injury to your eyes, lungs, ears, head, hands and feet.

Always keep hands, feet, hair, and your clothes away from parts that move. Do not put on loose clothing, jewelry, watches, or other items that can tangle in parts that move. Tie up long hair that can also tangle in moving parts.

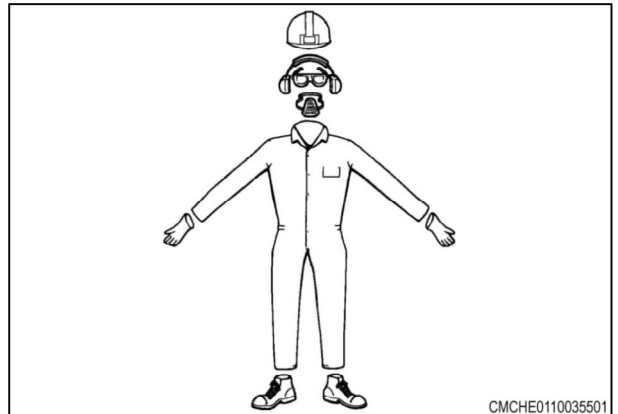

CMCHE0110035501

Fig. 6

1.2.7.4 Seat instructions

Put on the seat belt before you operate the machine. Always sit in the seat and have the seat belt on while you operate the machine. Replace the seat belts when they become worn or broken.

Do not use a seat belt loosely. Make sure that there is some tension on the seat belt. Do not wear the seat belt in a twisted condition or pinched between the structural parts of the seat.

Put on the seat belt if the instructional seat is used. Use the instructional seat only to train new operators or to find a problem. The instructional seat is only for short periods of use.

Do not let children use the instructional seat or be in the cab. Do not let other persons use the instructional seat or be in the cab.

Drive the machine at slower speed and on level ground when the instructional seat is used. Do not start, stop, or turn quickly when the instructional seat is used. Do not drive on highways or public roads when the instructional seat is used.

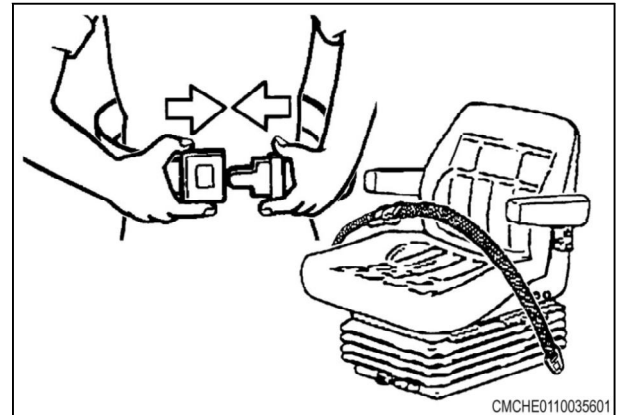


Fig. 7

1.2.7.5 Shield and guards



WARNING: Entanglement hazard.
Belts and components that rotate.

Severe personal injury or death can occur.

Do not open, remove, or put your hand behind shields if the engine is running. Stop the machine before doing service to the machine.

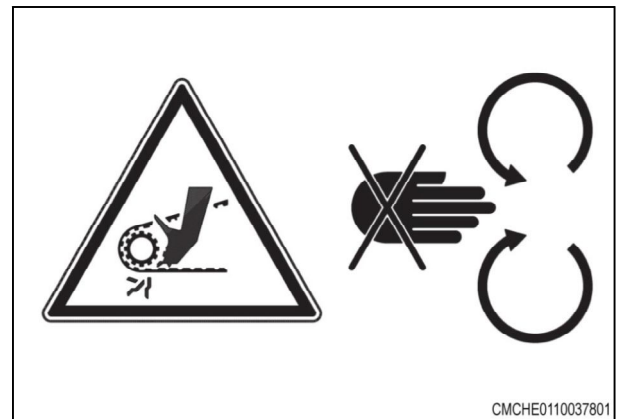


Fig. 8

All shields and guards must be in the correct position and in good condition. Keep away from the components that rotate.



DANGER: Entanglement hazard.
Rotating components.

Severe personal injury or death can occur.

Do not make adjustments or repairs to components while they are moving. Stop the machine before doing service to the machine.

Do not operate the machine with the drive shaft shields open or removed.

Keep away from the components that turn.

Make sure guards that turn are free.



Fig. 9

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com