

Operator's Manual



Pickup Header

4300

Pickup Header

1	Safety	7
1.1	Introduction	9
1.1.1	Safety symbol	9
1.1.2	Safety messages	9
1.1.3	Information messages	9
1.1.4	Safety signs	9
1.1.5	A word to the operator	10
1.1.6	This manual	11
1.1.6.1	Operator manual holder	11
1.2	Operation	12
1.2.1	Prepare for operation	12
1.2.2	General information	12
1.2.3	Personal protective equipment	14
1.2.4	Seat instructions	14
1.2.5	Shield and guards	15
1.2.6	Exhaust warning	15
1.2.7	Flying debris	16
1.2.8	Handrails	16
1.2.9	Agricultural chemicals	16
1.3	Travel on public roads	17
1.4	Maintenance	19
1.4.1	General maintenance information	19
1.4.2	Fire prevention and first aid	20
1.4.3	High pressure leaks	21
1.4.4	Tire safety	22
1.4.5	Replacement parts	22
1.5	Cylinder stops	23
1.5.1	Header lift cylinder stop	23
1.5.2	Hold-down cylinder support	23
1.5.2.1	Engage the hold-down cylinder support	23
1.5.2.2	Disengage the hold-down cylinder support	23
1.6	Safety signs	25
2	Introduction	31
2.1	Introduction	33
2.1.1	Units of measurement	33
2.1.2	Replacement parts	33
2.1.3	Intended use	33
2.1.4	Proper disposal of waste	33
2.2	Machine identification	34
2.2.1	Serial number plate	34
2.2.2	Serial number description	34
2.3	Component identification	36
2.4	End shields	38
2.4.1	Open the left side end shield	38
2.4.2	Close the left side end shield	38
3	Operation	41
3.1	Checklists	43
3.1.1	Check the machine before operation	43

3.2	Connect and disconnect the header - Fendt combine	44
3.2.1	Connect the header	44
3.2.2	Disconnect the header	46
3.3	Connect and disconnect the header - Ideal combine	49
3.3.1	Connect the header	49
3.3.2	Disconnect the header	50
3.4	Header transport	53
3.4.1	Transport lamps	53
3.5	Field operation	54
3.5.1	Stop the machine	54
3.5.2	Break in the header	54
3.5.3	Draper speed	55
3.5.4	Header height	56
3.5.5	Pickup height	56
3.5.5.1	Adjust the pickup height	57
3.5.6	Adjust the header floatation	57
3.5.7	Hold-down position	60
3.5.8	Adjust the hold-down rod angle	60
3.5.9	Unplug the header	61
3.5.10	Adjust the pan seal assembly	61
3.6	Auger	63
3.6.1	Auger speed	63
3.6.2	Auger position	63
3.6.3	Adjust the auger position	63
3.6.4	Auger float	64
3.6.4.1	Lock the auger float	64
3.6.4.2	Unlock the auger float	65
3.6.5	Stripper plate clearance	66
3.6.5.1	Examine the stripper plate clearance	66
3.6.5.2	Adjust the stripper plate clearance	67
3.7	Driveline	68
3.7.1	Driveline clutch	68
3.7.2	Driveline guard	68
3.8	Crop deflectors	69
3.8.1	Install the crop deflectors	69
3.8.2	Remove the crop deflectors	70
3.9	Prepare the header for storage	71
4	Maintenance	73
4.1	Service Schedule	75
4.2	Service	76
4.2.1	Prepare the header for service	76
4.2.2	Yearly service	76
4.3	Lubrication	77
4.3.1	Lubricate the machine	77
4.3.2	Lubrication points	78
4.4	End shields	79
4.4.1	Remove the left side end shield	79
4.4.2	Install the left side end shield	80
4.4.3	Remove the right side end shield	81
4.4.4	Install the right side end shield	82
4.4.5	Replace the end shield brackets	83
4.5	Draper belt tension	84
4.5.1	Check the draper belt tension	84
4.5.2	Adjust the front draper belt tension	85
4.5.3	Adjust the rear draper belt tension	86

4.6	Draper belts	88
4.6.1	Remove the front draper belt	88
4.6.2	Install the front draper belt	89
4.6.3	Remove the rear draper belt	91
4.6.4	Install the rear draper belt	92
4.6.5	Draper fingers and draper guides	93
4.6.5.1	Replace a draper finger	93
4.6.5.2	Replace a draper guide	93
4.7	Cutterbar seal	95
4.7.1	Adjust the cutterbar seal	95
4.7.2	Remove the cutterbar rubber seal	95
4.8	Driveline	97
4.8.1	Lubricate the header drive shaft	97
4.8.2	Remove the header driveline	97
4.8.3	Install the header driveline	98
4.8.4	Replace the driveline clutch	100
4.8.5	Remove the driveline guard	101
4.8.6	Install the driveline guard	103
4.8.7	Clean the splined shaft	104
4.9	Auger drive	106
4.9.1	Lubricate the auger drive chain	106
4.9.2	Remove the auger drive chain	106
4.9.3	Install the auger drive chain	107
4.9.4	Adjust the auger drive chain tension	108
4.9.5	Remove the driven sprocket	109
4.9.6	Install the driven sprocket	109
4.9.7	Remove the drive sprocket	113
4.9.8	Install the drive sprocket	114
4.10	Auger	116
4.10.1	Replace the auger fingers	116
4.10.2	Replace the auger finger guides	117
4.10.3	Replace the auger finger holders	118
4.10.4	Replace the stripper plates	121
4.10.5	Replace the flighting extensions	121
4.11	Hold down	123
4.11.1	Replace the hold-down rods	123
4.12	Hydraulic	125
4.12.1	Bleed the cylinders and the lines	125
4.13	Electrical	126
4.13.1	Height controllers	126
4.13.1.1	Manually examine the voltage range	126
4.13.1.2	Adjust the header height control voltage range - right-hand side	128
4.13.1.3	Adjust the header height control voltage range - left-hand side	129
4.13.2	Examine the draper speed sensor adjustment	130
4.13.3	Adjust the draper speed sensor	130
4.13.4	Lamps	131
4.13.5	Adjust the transport lamps	131
4.14	Wheels and tires	132
4.14.1	Replace the wheels	132
5	Troubleshooting	135
5.1	Troubleshooting	137
6	Specifications	141
6.1	Specifications	143
6.1.1	Header specifications	143

6.1.2	Header dimensions	144
6.1.3	Lubrication specifications	145
7	Assembly	147
7.1	Preparing for assembly	149
7.1.1	Unload the header	149
7.1.2	Lower the header	150
7.2	Assembly	152
7.2.1	Remove the transport hardware	152
7.2.2	Set the rigid wheels to the field position	153
7.2.3	Set the caster wheels to the field position	154
7.2.4	Install the crop deflectors	155
7.2.5	Install the driveline storage bracket	156
7.2.6	Adjust the transport lamps	157
7.2.7	Extend the hold down	158
7.2.8	Change the header opening	158
7.2.9	Reduce the header opening	159
7.2.10	Combine completion kits	162
7.3	Checklists	163
7.3.1	Pre-delivery checklist	163
7.3.2	Delivery checklist	163
8	Index	165

1 Safety

1.1	Introduction	9
1.1.1	Safety symbol	9
1.1.2	Safety messages	9
1.1.3	Information messages	9
1.1.4	Safety signs	9
1.1.5	A word to the operator	10
1.1.6	This manual	11
1.1.6.1	Operator manual holder	11
1.2	Operation	12
1.2.1	Prepare for operation	12
1.2.2	General information	12
1.2.3	Personal protective equipment	14
1.2.4	Seat instructions	14
1.2.5	Shield and guards	15
1.2.6	Exhaust warning	15
1.2.7	Flying debris	16
1.2.8	Handrails	16
1.2.9	Agricultural chemicals	16
1.3	Travel on public roads	17
1.4	Maintenance	19
1.4.1	General maintenance information	19
1.4.2	Fire prevention and first aid	20
1.4.3	High pressure leaks	21
1.4.4	Tire safety	22
1.4.5	Replacement parts	22
1.5	Cylinder stops	23
1.5.1	Header lift cylinder stop	23
1.5.2	Hold-down cylinder support	23
1.5.2.1	Engage the hold-down cylinder support	23
1.5.2.2	Disengage the hold-down cylinder support	23
1.6	Safety signs	25

1.1 Introduction

1.1.1 Safety symbol

The safety symbol tells you about a potentially hazardous area!

Look for the safety symbol in this manual and on the machine. The safety symbols tell you that there is important safety instructions in the manual.



Fig. 1

1.1.2 Safety messages

The words DANGER, WARNING or CAUTION are used with the safety symbol. Learn these safety messages and obey the recommended precautions and safety instructions.



DANGER:
If you do not obey the recommended precautions and safety instructions, **DEATH OR INJURY will occur.**



WARNING:
If you do not obey the recommended precautions and safety instructions, **DEATH OR INJURY can occur.**



CAUTION:
If you do not obey the recommended precautions and safety instructions, **INJURY can possibly occur.**



Fig. 2

1.1.3 Information messages

The words important and note are not related to personal safety, and are used to give information about the operation and servicing of the machine.

IMPORTANT: Identifies special instructions or procedures which, if not followed, can cause damage to the machine, the process, or the area around the machine.

NOTE: Information to make procedures easier.

1.1.4 Safety signs



WARNING:
Do not remove the safety signs. Replace safety signs that you cannot read, are damaged, or are missing.

Clean the machine surface with a weak soap and water solution before you replace the safety signs. Replacement safety signs are available from your dealer.

1. Safety

Always make sure that safety signs are in the correct locations and that you can read the safety signs. Illustrations of safety sign locations are in this section.

Keep the safety signs clean. If necessary, use a weak soap and water solution.

1.1.5 A word to the operator

It is your responsibility to read and understand the safety section in this manual and the manual for all implements before you operate this machine. You are responsible for your safety. Good safety procedures prevent injury to you and the persons around you.

Make the information in the safety section of this manual a part of your safety procedure. This safety section is written only for this type of machine. Safety is your responsibility. You can prevent injury and death.

This safety section gives basic safety examples that can occur during the operation and maintenance of your machine. This safety section is not a replacement for safety instruction in other sections of this manual.

Injury or death can occur if the safety instruction is not obeyed.

Learn how to operate the machine and how to use the controls correctly.

Do not operate the machine if you do not know how to operate the machine. Do not let persons operate the machine that do not know how to operate the machine.

Follow all safety instructions in the manuals and on the safety signs on the machine, the implements, and the attachments.

Use only approved attachments and implements.

Make sure that your machine has the correct equipment that is necessary by the local regulations.

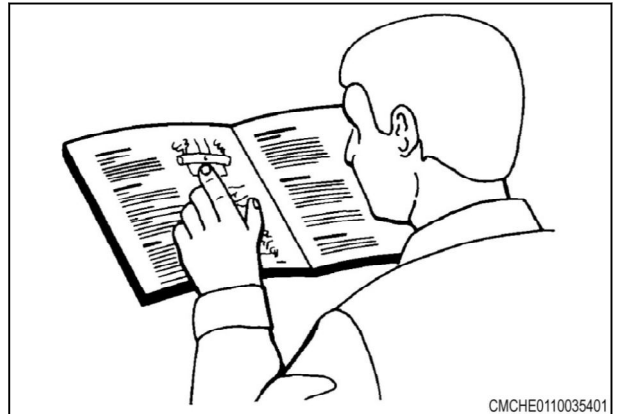


Fig. 3



WARNING:

Do not use alcohol or drugs that can have an effect on alertness or coordination. If you use prescription or 'over the counter' drugs, get medical advice about the safe operation of machines.



CAUTION:

If attachments or implements used with this machine have a different operator manual, see that operator manual for other important safety instructions.

**CAUTION:**

See the engine operation and maintenance manual for other important safety instructions.

**CAUTION:**

See the combine operator manual for other important safety instructions.

1.1.6 This manual

This manual covers general safety instructions for this machine. Keep this manual with the machine.

Right and left, as used in this manual, are given as if you are in the operator seat.

The photos, illustrations, and data used in this manual were up to date when published, but in-line production changes can make your machine have small differences. The manufacturer reserves the right to redesign and change the machine as necessary without notification.

**WARNING:**

In some of the illustrations and photos used in this manual, shields or guards are removed. Operate the machine only with all shields and guards in the correct installed positions. If the removal of shields or guards is necessary to make a repair, they must be installed before operation.

1.1.6.1 Operator manual holder

The operator manual holder (1) is located under on the back of the header

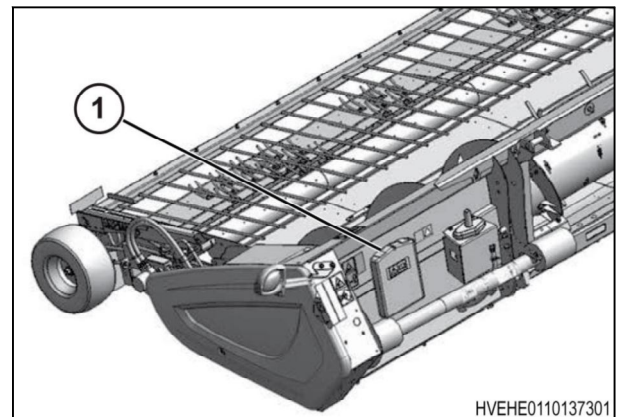


Fig. 4

1.2 Operation

1.2.1 Prepare for operation

Read and understand the operating instructions and precautions in this manual before you operate or perform service on the machine.

Make sure that you know and understand the positions and operations of all controls. Make sure that all controls are in neutral and the parking brake is applied before you start the machine.

Make sure that all persons are a sufficient distance from your area of work before you start or operate the machine. Do checks on the controls and learn all controls in an area clear of persons and objects before you start work with the machine. Know the dimensions of the machine and have sufficient space available for operation. Do not operate the machine at high speeds around persons, buildings, other equipment, etc.

Always use correct procedures when you do tasks around and operate the machine. Do not let children or persons who do not know how to operate the machine operate the machine. Keep other persons away from your area of work. Do not let other persons ride on the machine.

Make sure that the machine is in the good mechanical condition. Make sure that the machine has the correct equipment as necessary by local regulations.

All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this equipment before you start.

1.2.2 General information

When parking, park the machine on a solid level surface and lower the header to the ground. Put all controls in neutral and apply the park brake. Stop the engine and take the key with you.



WARNING:
Do not leave the machine unattended with the header raised. Lower the header fully before leaving the machine. A sudden loss of hydraulic pressure can cause the header to drop without warning.

Make sure the machine is in the proper operating condition according to the Operator Manual.

Always operate the machine with the control console turned on.

Do not dismount from moving machinery.

Stay off slopes too steep for operation.

Be aware of the size of the machine and have enough space available to allow for operation.

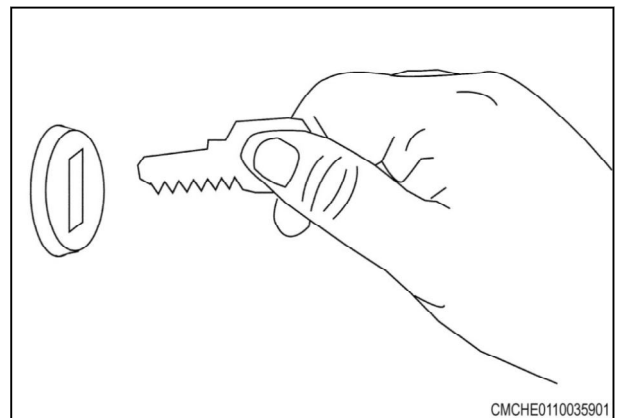


Fig. 5

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com