

**Workshop Service Manual**



# **9300 DynaFlex™ Draper Header**

**9325**

**9330**

**9335**

**9340**

**9345**

**9350**

# TABLE OF CONTENT

- General ..... 1
- Frame ..... 2
- Augers ..... 3
- Drive system ..... 4
- Hydraulic system ..... 5
- Electrical system ..... 6
- Shielding ..... 7
- Reels ..... 8
- Cutterbar ..... 9
- Attachements ..... 10
- Diagrams ..... 11
- Index ..... 12

# 1 General

<b>1.1</b>	<b>General information</b>	<b>1-5</b>
1.1.1	Introduction to this service manual	1-5
1.1.2	Units of measurement	1-5
1.1.3	Table of contents	1-5
1.1.4	Page numbers	1-5
1.1.5	Intended use	1-5
1.1.6	Proper disposal of waste	1-5
<b>1.2</b>	<b>Safety</b>	<b>1-7</b>
1.2.1	Safety symbol	1-7
1.2.2	Safety messages	1-7
1.2.3	Information messages	1-7
1.2.4	Safety signs	1-7
1.2.5	A word to the technician	1-8
1.2.6	The service manual	1-9
<b>1.3</b>	<b>Operation</b>	<b>1-10</b>
1.3.1	Prepare for operation	1-10
1.3.2	General information	1-10
1.3.3	Personal protective equipment	1-11
1.3.4	Seat instructions	1-12
1.3.5	Shield and guards	1-12
1.3.6	Exhaust warning	1-13
1.3.7	Flying debris	1-13
1.3.8	Handrails	1-14
1.3.9	Agricultural chemicals	1-14
<b>1.4</b>	<b>Travel on public roads</b>	<b>1-15</b>
<b>1.5</b>	<b>Maintenance</b>	<b>1-17</b>
1.5.1	General maintenance information	1-17
1.5.2	Fire prevention and first aid	1-18
1.5.3	High pressure leaks	1-19
1.5.4	Tire safety	1-20
1.5.5	Replacement parts	1-20
<b>1.6</b>	<b>Cylinder stops</b>	<b>1-21</b>
1.6.1	Engage the stop for the reel lift cylinder	1-21
1.6.2	Disengage the stop for the reel lift cylinder	1-21
1.6.3	Header lift cylinder stop	1-22
<b>1.7</b>	<b>Shields</b>	<b>1-23</b>
1.7.1	Draper drive shields	1-23
1.7.2	Auger shaft shield	1-23
1.7.3	End shields	1-23
1.7.4	Reel drive shield	1-24
1.7.5	Top covers	1-25
<b>1.8</b>	<b>Safety and informational signs</b>	<b>1-26</b>
1.8.1	Operators manual	1-28
1.8.2	Warning - Hydraulic fluid pressure	1-28
1.8.3	Warning - Entanglement hazard	1-29
1.8.4	Warning - Crushing hazard	1-29
1.8.5	Warning - Crushing hazard	1-29
1.8.6	Reflector yellow	1-29
1.8.7	Reflector red	1-30
1.8.8	Reflector orange	1-30

1.8.9	Informational decals	1-30
<b>1.9</b>	<b>Introduction</b>	<b>1-34</b>
1.9.1	Units of measurement	1-34
1.9.2	Replacement parts	1-34
1.9.3	Intended use	1-34
1.9.4	Recommended header/combine usage	1-34
1.9.5	Proper disposal of waste	1-34
<b>1.10</b>	<b>Machine identification</b>	<b>1-35</b>
1.10.1	Serial number plate	1-35
1.10.2	Serial number description	1-35
<b>1.11</b>	<b>Configure a header</b>	<b>1-37</b>
1.11.1	Required kits to install the header on the combines	1-38
1.11.2	Break in the header	1-38
1.11.3	Check draper belt	1-38
1.11.4	Parking stands	1-39
<b>1.12</b>	<b>Install the header</b>	<b>1-40</b>
<b>1.13</b>	<b>Remove the header</b>	<b>1-43</b>
<b>1.14</b>	<b>Reel speed</b>	<b>1-45</b>
<b>1.15</b>	<b>Cutterbar</b>	<b>1-46</b>
1.15.1	Lock and unlock the cutterbar	1-46
<b>1.16</b>	<b>Sickle storage</b>	<b>1-47</b>
<b>1.17</b>	<b>Header extremity lights</b>	<b>1-48</b>
<b>1.18</b>	<b>Flighting filler</b>	<b>1-49</b>
<b>1.19</b>	<b>Variable speed drive lockout</b>	<b>1-50</b>
1.19.1	Lockout variable speed drive	1-50
<b>1.20</b>	<b>Feeder chain speed</b>	<b>1-51</b>
<b>1.21</b>	<b>Draper maintenance</b>	<b>1-52</b>
1.21.1	Draper care	1-52
1.21.2	Remove clogged material from header	1-52
1.21.3	Draper speed	1-52
<b>1.22</b>	<b>Adjustments</b>	<b>1-53</b>
1.22.1	Synchronize the reel lift arms	1-53
1.22.2	Adjust the minimum reel lift height	1-53
1.22.3	Reel position	1-55
1.22.4	Adjust the roller chain	1-58
1.22.5	Adjust the cutterbar flex pressure - IDEAL	1-58
1.22.6	Adjust cutterbar flex pressure - 2009 and later axial combines	1-58
1.22.7	Adjust cutterbar flex pressure - 2003 to 2008 axial combines	1-59
1.22.8	Bleed air for the cutter flex system	1-60
1.22.9	Adjust the tine pitch	1-60
1.22.10	Adjust header pitch - IDEAL combines	1-61
1.22.11	Adjust the header pitch - 2009 and later axial combines	1-62
1.22.12	Adjust the auger	1-62
1.22.13	Adjust left and right draper tension	1-64
1.22.14	Adjust main drive belt tension	1-65
1.22.15	Adjust the center draper drive belt tension	1-66
1.22.16	Adjust auger drive belt tension	1-67
1.22.17	Adjust variable speed belt	1-67
1.22.18	Adjust reel speed sensors	1-68
1.22.19	Set the sickle time	1-68
<b>1.23</b>	<b>Specifications</b>	<b>1-69</b>
1.23.1	Header depth	1-69
1.23.2	Header width	1-70
1.23.3	Weights	1-70
1.23.4	Pick up reel	1-70

1.23.5	Reel drive	1-71
1.23.6	Reel height control	1-71
1.23.7	Cutterbar	1-72
1.23.8	Sickle	1-72
1.23.9	Header tilt	1-73
1.23.10	Side drapers	1-73
1.23.11	Center drapers	1-73
1.23.12	Center conveyor	1-73
1.23.13	General lubrication	1-74
1.23.14	Wheels	1-74
1.23.15	Header transport	1-74
<b>1.24</b>	<b>Lubrication and maintenance</b>	<b>1-75</b>
1.24.1	Lubrication details	1-75
1.24.2	Gear box oil level	1-79
<b>1.25</b>	<b>Sealed chain</b>	<b>1-81</b>
1.25.1	Lubricate and clean the sealed chain	1-81
1.25.2	Roller chain maintenance	1-81
1.25.3	Roller chain don'ts	1-82
1.25.4	Adjust the roller chain	1-83
<b>1.26</b>	<b>Header troubleshooting</b>	<b>1-84</b>
1.26.1	Cutterbar	1-84
1.26.2	Reel	1-85
1.26.3	Draper	1-86
1.26.4	Auger	1-87
1.26.5	Float/reel valve assembly	1-88
<b>1.27</b>	<b>Bolt torque values</b>	<b>1-92</b>
<b>1.28</b>	<b>Conversion table</b>	<b>1-94</b>
<b>1.29</b>	<b>Checklists</b>	<b>1-97</b>
1.29.1	Daily checklist	1-97
1.29.2	Before each season checklist	1-97
1.29.3	End of season checklist	1-97
<b>1.30</b>	<b>Special tools</b>	<b>1-98</b>



## 1.1 General information

---

### 1.1.1 Introduction to this service manual

---

This service manual gives information from engineering tests, operating data, and the latest service techniques at the time of publication. Read this service manual carefully before doing any service on the machine.

The photos and illustrations used in this service manual were current at the time of publication. Production changes can cause machines to vary from the photos and the illustrations. The manufacturer reserves the right to redesign and change machines as necessary without notification.



**WARNING:**

**Some pictures in this manual show the machine with shields or guards removed to permit for a better view of the subject of the picture. All shields and guards must be in position before operating the machine.**

Machine movement when in normal use determines right-hand and left-hand.

---

### 1.1.2 Units of measurement

---

Measurements are given in metric units followed by the equivalent in US units. Hardware sizes are given in millimeters for metric hardware and inches for US hardware.

---

### 1.1.3 Table of contents

---

This manual has a table of contents at the front. The table of contents shows the divisions. The individual divisions also have a table of contents.

---

### 1.1.4 Page numbers

---

All pages have two numbers, such as 01-25. The first number shows the division. The second number shows the page in the division.

Page numbers occur on the lower right-hand or lower left-hand corner of each page.

---

### 1.1.5 Intended use

---

This machine is designed solely for use in customary agricultural operations.

Do not use this machine for any application or purpose other than those described in this manual. The manufacturer accepts no liability for damage or injury resulting from misuse of this machine.

Compliance with the conditions of operation, service and repair as specified by the manufacturer constitute essential elements for the intended use of this machine.

This machine should be operated, serviced and repaired only by qualified persons familiar with its characteristics and familiar with the relevant safety rules and procedures.

All generally recognized safety regulations and road traffic regulations must be obeyed at all times.

Any unauthorized modifications performed on this machine will relieve the manufacturer of all liability for any resulting damage or injury.

---

### 1.1.6 Proper disposal of waste

---

Improper disposal of waste can pollute the environment and ecology. A few examples of potentially harmful equipment waste can include, but not limited to, items such as oil, fuel, coolant, brake fluid, filters, battery chemicals, tires, etc.

Use leak proof containers when draining fluids. Do not use food or beverage containers to collect waste fluids, as food or beverage container(s) may mislead someone into drinking from them.

---

*1. General*

---

Do not pour or spill waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire with local environmental or recycling center on the proper way to recycle or dispose waste.



## 1.2 Safety

### 1.2.1 Safety symbol

The safety symbol tells you about a potentially hazardous area!

Look for the safety symbol in this manual and on the machine. The safety symbols tell you that there is important safety instructions in the manual.



Fig. 1

### 1.2.2 Safety messages

The words DANGER, WARNING or CAUTION are used with the safety symbol. Learn these safety messages and obey the recommended precautions and safety instructions.



**DANGER:**  
If you do not obey the recommended precautions and safety instructions, **DEATH OR INJURY will occur.**



**WARNING:**  
If you do not obey the recommended precautions and safety instructions, **DEATH OR INJURY can occur.**



**CAUTION:**  
If you do not obey the recommended precautions and safety instructions, **INJURY can possibly occur.**



Fig. 2

### 1.2.3 Information messages

The words important and note are not related to personal safety, and are used to give information about the operation and servicing of the machine.

**IMPORTANT:** Identifies special instructions or procedures which, if not followed, can cause damage to the machine, the process, or the area around the machine.

**NOTE:** Information to make procedures easier.

### 1.2.4 Safety signs



**WARNING:**  
**Do not remove the safety signs. Replace safety signs that you cannot read, are damaged, or are missing.**

Clean the machine surface with a weak soap and water solution before you replace the safety signs. Replacement safety signs are available from your dealer.

## 1. General

Always make sure that safety signs are in the correct locations and that you can read the safety signs. Illustrations of safety sign locations are in this section.

Keep the safety signs clean. If necessary, use a weak soap and water solution.

### 1.2.5 A word to the technician

Read and understand the safety section in this service manual before operating or servicing the machine. Read and understand the safety sections in the manuals for all attachments before operating or servicing attachments. The technician has the key to safety. Good safety practices protect everyone.

Study the safety information in this service manual. Make the safety information a working part of the safety program. The safety information in this service manual applies specifically to this type of machine. Always do all other usual and customary safe working precautions. Remember - The technician has the responsibility for safety. Good safety practices can prevent serious injury or death.

The safety section points out some basic safety situations that can occur during the operation and maintenance of the machine. The safety section also suggests possible ways to deal with these situations. The safety section does not replace safety practices in other parts of this service manual.

Practice good safety to help prevent injury or death.

Learn how to operate the machine and how to use the controls correctly.

Do not let other persons operate the machine without instruction and training.

Follow all safety precautions and instructions in the manuals and on safety signs affixed to the machine and all attachments.

Use only approved attachments and equipment.

Make sure the machine has the correct equipment needed by the local regulations.

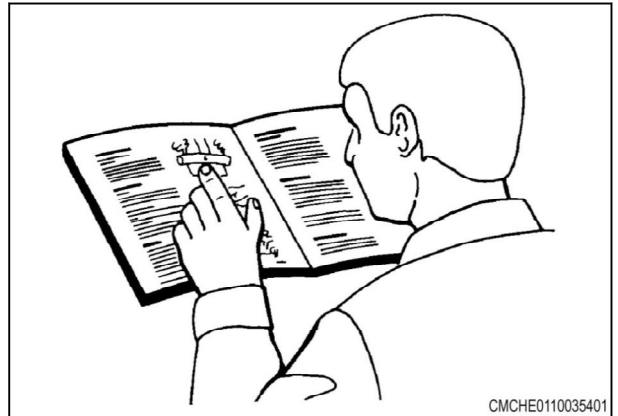


Fig. 3



**WARNING:**

**An operator should not use alcohol or drugs which can affect their alertness or coordination. An operator on prescription or 'over the counter' drugs needs medical advice on whether or not they can properly operate machines. If any attachments used on this equipment have a separate Operator Manual, see that manual for other important safety information.**

### **1.2.6 The service manual**

---

Read the table of contents and basic layout. Become familiar with all parts of this service manual. This service manual gives the technician very important information.

Machine movement when in normal use determines right-hand and left-hand.

This manual covers general safety practices for this machine.

The photos, illustrations, and data used in this manual were current at the time of printing. Inline production changes can make machines vary from the information in the service manual. The manufacturer reserves the right to redesign and change the machine as necessary without notification.



**WARNING:**

**In some of the illustrations and photos used in this manual, shields or guards may have been removed for clarity. Never operate the machine with any shields or guards removed. If the removal of shields or guards is necessary to make a repair, they must be replaced before operation.**

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)