

# 1187C Excavator

## Table of Contents

DIVISION/SECTION	SECTION NO.	FORM NO.
<b>1 GENERAL</b>		
Section Index - General .....		8-74860
Standard Torque Specifications.....	1001	8-71600
Fluids and Lubricants .....	1002	8-74870
Detailed Engine Specifications .....	1426	8-28421
<b>2 ENGINES</b>		
Section Index - Engines .....		8-74880
Engine Removal and Installation and Radiator Removal and Installation .....	2001	8-74890
Stall Tests .....	2002	8-74910
After Cooler System .....	2011	8-91700
Cylinder Head and Valve Train .....	2415	8-28430
Cylinder Block .....	2425	8-28440
Lubrication System.....	2445	8-28450
Cooling System .....	2455	8-28460
Turbocharger.....	2465	8-28470
Turbocharger Failure Analysis .....	2565	9-78235
<b>3 FUEL SYSTEM</b>		
Section Index - Fuel System .....		8-74920
Fuel System and Filters .....	3410	8-28480
Fuel Injection Pump and Drive Gear .....	3412	8-28490
Fuel Injectors.....	3413	8-28500
<b>4 ELECTRICAL</b>		
Section Index - Electrical .....		8-74940
Removal and Installation of Electrical Components.....	4001	8-74950
Specifications, Schematics, Troubleshooting, and Sealed Connector Repair .....	4002	8-74960
Batteries .....	4003	8-74970
Starter .....	4004	8-74980
Alternator .....	4005	8-74990
<b>5 TRACK</b>		
Section Index - Track .....		8-10010
Removal and Installation of Track Components .....	5001	8-10020
Troubleshooting .....	5002	8-10030
Track Chain and Shoes .....	5003	8-10040
Track Rollers, Carrier Roller, Idler, and Sprocket.....	5004	8-10050
<b>6 POWER TRAIN</b>		
Section Index - Power Train.....		8-10060
Removal and Installation of Power Train Components.....	6001	8-10070
Drive Motor.....	6002	8-10100
Final Drive Transmission.....	6003	8-10110

**7 BRAKES**

Section Index - Brakes .....		8-10120
Removal and Installation of Brake Components .....	7001	8-10130
Drive Brake .....	7002	8-10140
Swing Brake .....	7003	8-11110

**8 HYDRAULICS**

Section Index - Hydraulics .....		8-10150
Removal and Installation of Hydraulic Components .....	8001	8-10160
Specifications, Schematics, Troubleshooting, Pressure Checks and Adjustments .....	8002	8-10170
Hydraulic Pump .....	8003	8-10180
Control Valves .....	8004	8-10190
Pilot Control System .....	8005	8-10200
Swing Motor and Swing Relief Valve .....	8006	8-10210
Hydraulic Swivel .....	8007	8-10220
Leveler .....	8008	8-10230
Cylinders .....	8009	8-10250

**9 MOUNTED EQUIPMENT**

Section Index - Mounted Equipment .....		8-10260
Pedals and Levers .....	9001	8-10090
Swing Mechanism Troubleshooting .....	9002	8-10270
Swing Gearbox .....	9003	8-10280
Boom and Arm .....	9004	8-10290
Tree Shear .....	9005	8-10300
Turntable Bearing .....	9006	8-10330

## SECTION INDEX - GENERAL

Section Title	Section Number
Standard Torque Specifications.....	1001
Fluids and Lubricants .....	1002
Detailed Engine Specifications .....	1426

# 1001

## STANDARD TORQUE SPECIFICATIONS

### TABLE OF CONTENTS

<b>Torque Specifications - Decimal Hardware</b> .....	1001-2	<b>Torque Specifications - Steel Hydraulic Fittings</b> .....	1001-4
<b>Torque Specifications - Metric Hardware</b> ...	1001-3	<b>Torque Specifications - O-ring Face Seal Fittings</b> .....	1001-5

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)