
WD1903, WD2303 PIN #Y8G661200 AND ABOVE SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 25 - FRONT MECHANICAL DRIVE	5
SECTION 29 - HYDROSTATIC TRANSMISSION	6
SECTION 33 - BRAKES AND CONTROLS	10
SECTION 35 - HYDRAULIC SYSTEMS	11
SECTION 44 - REAR AXLE	17
SECTION 50 - CLIMATE CONTROL	19
SECTION 55 - ELECTRICAL SYSTEMS	23
SECTION 58 - HEADER ATTACHMENTS	45
SECTION 88 - OPTIONAL EQUIPMENT	49
SECTION 90 - PLATFORM, CAB AND DECALS	52

The following pages are the collation of the contents pages from each section and chapter of the WD1903, WD2303 Service manual. Complete Service part # 84211429.

The sections used through out all Case IH product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the WD1903, WD2303 Self-Propelled Windrowers PIN #Y8G661200 and above.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84211430

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Precautionary Statements	2
	Safety	3
	General Safety Information	5
	Introduction	8
	About Improvements	8
	Product Identification Numbers (PIN)	9
	Engine PIN Number	9
	Company Policy	10
	Parts and Specification	10
	Lubrication	10
	Minimum Hardware Tightening Torques	11
	Installation of Adjustable Fittings in Straight Thread O ring Bosses	13
	Standard Torque Data for Hydraulic Tubes and Fittings	13
	Pipe Thread Fitting Torque	14
	Installation of ORFS (O ring Flat Faced) Fittings	14
	Specifications	15

SECTION 10 - ENGINE

BOOK 1 - 84211430

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	2
	Description of Operation	3
	Cylinder Block Assembly	3
	Engine Overhaul - Introduction	4
	Overhaul	5
	Engine	5
	Removal	5
	Installation	13
	Troubleshooting	23

SECTION 10 - ENGINE

BOOK 1 - 84211430

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	2
	Fuel System	2
	Fuel Tank	3
	Bleeding Air From Filter	3
	Injection System Bleeding	3
	Air Leakage Test	4
	Cold Start Assist	5
	Fuel Tanks	6
	Removal	6
	Installation	9
	Connecting Fuel Tanks	10

SECTION 10 - ENGINE

BOOK 1 - 84211430

Chapter 3 - Air Intake

CONTENTS

Section	Description	Page
	Specifications	2
	Air Cleaner	2
	Description of Operation - Air Cleaner	3
	Air Cleaner	3
	Inner Element	3
	Troubleshooting - Air Cleaner	4
	Description of Operation - Air Filter	5
	Air Filter	5
	Inspection	5
	Air Intake Hoses	8
	Removal	8
	Installation	10
	Troubleshooting - Air Filter	11

SECTION 10 - ENGINE

BOOK 1 - 84211430

Chapter 4 - Cooling System

CONTENTS

Section	Description	Page
	Description of Operation	2
	Cooling System (NEF Tier III 6 cyl. engine)	2
	Troubleshooting	4
	Overhaul	5
	Radiator	5
	Removal	5
	Installation	8

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 1 - 84211430

Chapter 1 - Front Mechanical Drive

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	7
	Front Mechanical Drive	7
	Removal	7
	Installation	9
	Planetary Gearbox Drive	12
	Disassembly	13
	Assembly	17

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211430

Chapter 1 - Ground Drive

CONTENTS

Section	Description	Page
	Specifications	4
	Hydrostatic Transmission Identification	5
	Torque Specifications	6
	Torque Chart	6
	Motor Area	6
	Description of Operation	7
	Pumps	8
	High Pressure Relief Valves	9
	Check Valves	9
	Charge Pump	10
	Charge Relief Valve (Pump)	10

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211430

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Header Lift Pump	10
	Motors	10
	Variable Displacement Motor	10
	Reservoir	12
	Oil Flow	12
	Neutral	12
	Forward/Reverse	12
	Hydraulic Diagram	13
	Solenoid Valve	15
	Low-Range Operation	15
	High-Range Operation	15
	Cooling Circuit	15
	Relief Valve	15
	Operation	15
	Linkage	16
	Operation	16
	Sauer-Danfoss Authorized Service Centers - North America	17
	Troubleshooting	21
	Excessive Noise	21
	Overheating Transmissions	21
	Loss of Propulsion	21
	Control Linkage Inspection	22
	High-Pressure Relief Valve Check	22
	Charge Pump Relief Valve	22
	Check Valve	23
	Pressure Testing	23
	Port Locations	25
	Charge Pressure	26
	Charge Pressure System Test	26
	Tandem Pump Charge Pressure Test	26
	Complete Charge System Test	29

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211430

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	High Pressure Relief Valve Test	31
	Gage Port and Relief Valve Locations	31
	Pressure Port Locations	33
	Case Pressure Test (Pump)	34
	Case Pressure Test (Motor)	34
	Suction Test	35
	Case Flow Test	35
	Ground Speed Circuit	36
	Operation	36
	Troubleshooting	36
	Ground Speed Display Does Not Function	37
	Troubleshooting Charts	39
	Windrower Will Not Shift into High Range	39
	Windrower Will Not Shift into Low Range	40
	Charge Pump	41
	Hydrostatic System	42
	Explanation of Terms Used in Failure Analysis	45
	Lack of Lubrication	45
	Operating at Excessive Temperature Levels	45
	Use of Improper Fluid	45
	Cavitation	45
	Overspeeding of the Unit	45
	Parts Worn or Scored From Contamination	45
	Abrasive Contaminants	45
	Plates Scored from Water in Oil (Non-Particle Contaminants)	45
	Minor Repairs	46
	Tandem Pump	47
	Port Locations	47
	Rear Half Pump Breakdown	48
	Front Half Pump Breakdown	50

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211430

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Shaft Seal Replacement	52
	Charge Pump Removal	53
	Charge Pump Inspection	54
	Charge Pump Assembly	55
	O-ring Seals	56
	Trunnion Seal (Control Shaft Side)	57
	Trunnion Cover (Plain)	59
	Removal	60
	Installation	63
	Ground Drive Motor	64
	Removal	64
	Installation	67
	Shaft Seal Replacement	67
	Start-Up	68
	Maintenance	69
	Worm Shaft	70
	Removal	70
	Installation	71

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211430

Chapter 2 - Propulsion System

CONTENTS

Section	Description	Page
	Theory of Operation	2
	Pintle Arm Position Sensor (B-02)	3
	Removal	3
	Installation	3
	Testing	4
	Adjustment	5
	Propulsion Rotary Position Sensor (R-23)	6
	Removal	6
	Installation	6
	Testing	7
	MFH Rotary Position Sensor (R-18)	8
	Removal	8
	Installation	9
	Testing	10
	Neutral Adjustment	11

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211430

Chapter 3 - Active Calibrations

CONTENTS

Section	Description	Page
	Active Calibrations	2

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211430

Chapter 4 - MFH Calibration

CONTENTS

Section	Description	Page
	Dealer Setup Menu Navigation	2
	MFH Calibration	2

SECTION 33 - BRAKES AND CONTROLS

BOOK 1 - 84211430

Chapter 1 - Brakes and Controls

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	2
	Brake Assembly	2
	Removal	2
	Installation	4
	Disassembly	6
	Rotating, Stationary, and Primary Disc Assembly	12
	Installation	12
	Brake Bleeding Procedure	16

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211431

Chapter 1 - Hydraulic Systems

CONTENTS

Section	Description	Page
	Introduction	6
	System Component Locations	7
	Reading Diagram Symbols	8
	Hydraulic System Diagram	13
	Theory of Operation - Ground Drive	15
	Ground Drive	15
	Hydraulic Bleed Procedure	17
	Circuit Diagrams	20
	Service Techniques	25
	General	25
	Oil Level	25
	Hoses and Tubes	26
	O Ring Flat Face Seal Fittings	26
	O Ring Flat Face Seal Fitting Torque Values	26
	Theory of Operation - Header Drive	27
	Header Drive	27
	Electronic Displacement Control (EDC)	29
	Circuit Diagrams	30
	Theory of Operation - Header Lift System	34
	Header Lift System	34
	Neutral State	35
	Header Lift	35
	Accumulator Charge	35
	Header Lower/Flotation	35
	Theory of Operation - Floatation/Accumulators	36
	Floatation/Accumulators	36
	Increase/Decrease Floatation	36
	Circuit Diagrams	37
	Theory of Operation - Header Tilt System	42
	Header Tilt System	42
	Circuit Diagrams	43
	Theory of Operation - Auxiliary Hydraulic Pump	46
	Auxiliary Hydraulic Pump	46

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211431

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Independent Control Valve (ICV) Manifold	47
	Service Parts	47
	Valve Identification Codes	48
	Component Identification and Location	49
	Right-hand (RH) View	49
	Plan View	50
	Front View	51
	Rear View	52
	Bottom View	53
	Left-hand (LH) View (Hidden Against Mounting Plate)	54
	Energized solenoid chart	55
	Zero-Leak Plugs	56
	Removal	56
	Install	56
	Zero-Leak Plug to SAE J514 ORB Plug Cross Reference	57
	Auxiliary Control Valve (Speed Control) Manifold	58
	Service Parts	58
	Valve Identification Codes	59
	Auxiliary Control Valve	60
	Component Identification and Location	60
	Right-Hand (RH) View	60
	Plan View	61
	Bottom View	62
	Left-hand (LH) View (Hidden Against Mounting Plate)	63
	Theory of Operation - Cartridge Valves	64
	Cartridge Valves (Solenoid-Operated)	64
	Two-way Two-position (Normally Closed) Poppet Valves	65
	Three-way Two-position Spool Valve	67
	Two-way Two-position (Normally Open) Poppet Valve	68
	(Normally Open) Pressure Reducing/Relieving Valves	69
	(Normally Closed) Solenoid-operated Proportional Flow Control	70

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211431

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Main Manifold – Cartridge Torque Requirements	71
	Replacement	73
	Installation	74
	Solenoid Coils	75
	Removal	75
	Installation	76
	Cartridge Valves (Non-Solenoid-Operated)	77
	Direct-acting Flow Control Needle Valve	77
	Pilot-Operated Relief Valve	78
	Differential-Pressure-Sensing Valve	79
	Replacement	79
	Adjustment	80
	Minor Repairs	81
	Header Drive Pump	81
	Multifunction Valve Cartridge	81
	Charge Pressure Relief Valve	82
	Diagnosing the EDC and Pilot Control Valve Assembly	83
	Dealer Setup Menu Navigation	84
	EDC and PCP Valve Assembly	86
	Removal	86
	Installation	87
	Charge Cooling Circuit Manifold	89
	Removal	89
	Installation	90
	Major Components	91
	Header Drive Pump	91
	Removal	91
	Pintle Arm Position Sensor (B-02)	93
	Pump Shaft Seal	96
	Inspection	98
	Installation	99

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211431

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Splitter Gear Box	101
	Disassembly	101
	Assembly	103
	Start-up Procedure	108
	Pressure Checks - Header Drive System	112
	Test Equipment	112
	Pressure Readings	113
	Charge Pressure - Header Drive Pump	113
	Charge Pressure - Header Drive Motor	113
	Pump Gauge Information	114
	Case Pressure	115
	High Pressure	115
	Motor Gauge Information	116
	Inlet Vacuum	117
	Case Drain Flow	118
	Cooling Circuit Bypass Pressure	119
	Hydraulic Oil Temperatures	120
	Adjustments	121
	Header Drive Pump	121
	Neutral Adjustment	121
	Multifunction Valves	125
	Diagnosing	125
	Charge Pressure Relief Valve	126
	Diagnosing	126
	Header Drive Motors	127
	Header Drive Speed Sensor Gap	127
	Sauer-Danfoss Authorized Service Centers - North America	128
	Header Lift Pump	132
	Removal	132
	Disassembly	132
	Inspection	134
	Assembly	134
	Installation	137

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211431

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Accumulators - Header Lift	138
	Removal	138
	Inspection	139
	Installation	139
	Accumulator - Surge Suppression	141
	Specifications	141
	Hydraulic Accumulator Breakdown	142
	Checking Pre-charge	143
	Pre-charging Procedure	144
	Removal	145
	Installation	145
	Lift Cylinders	146
	Removal	146
	Inspection	150
	Assembly	151
	Tilt Cylinder	155
	Removal	155
	Inspection	159
	Assembly	160
	Maintenance	163
	Auxiliary Engine Mounted Hydraulic Pump (optional)	164
	Removal	164
	Inspection	164
	Installation	165
	Hydraulic Reservoir	166
	Replacement	166
	Removal	166
	Installation	167

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211431

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting	169
	General Information	169
	Reduced System Pressure	169
	Reduced Hydraulic Flow	169
	Excessive Noise	169
	Overheating	169
	Power Loss	169
	Explanation of Terms Used in Failure Analysis	170
	Parts Evaluation	171
	Discoloration	171
	Scratches or Grooves	171
	Rework	171
	Repeat Failures	171
	Header Drive System	172
	Header Drive Pump	176
	Charge Pump	177
	Header Drive Motor	178

SECTION 44 - REAR AXLE

BOOK 2 - 84211431

Chapter 1 - Non-Suspended Rear Axle

CONTENTS

Section	Description	Page
44 000	Introduction	2
	Overview	2
	Special Tools	2
	Specifications	3
	Description of Operation	4
	Extensions and Axle Tube	4
	Adjustments	8
	Wheel Width	8
	Extension Widths (Spindle to Spindle)	8
	Axle Extension Position	8
	Overhaul	9
	Wheel, Axle Shaft and Hub	9
	Removal	9
	Inspection	11
	Installation	12
	Axle Support Fork	14
	Removal	14
	Inspection	14
	Installation	15
	Extension	16
	Removal	16
	Inspection	18
	Installation	18
	Axle Tube and Pivot Pin	20
	Removal	20
	Inspection	21
	Installation	22

SECTION 44 - REAR AXLE

BOOK 2 - 84211431

Chapter 2 - Suspended Rear Axle

CONTENTS

Section	Description	Page
44 000	Introduction	2
	Overview	2
	Special Tools	2
	Specifications	3
	Description of Operation	4
	Extensions and Axle Tubes	4
	Adjustments	7
	Wheel Width	7
	Extension Widths (Spindle to Spindle)	7
	Axle Extension Position	7
	Overhaul	8
	Wheel, Axle Shaft and Hub	8
	Removal	8
	Inspection	10
	Installation	11
	Axle Support Fork	13
	Removal	13
	Inspection	14
	Installation	14
	Extension	15
	Removal	15
	Inspection	16
	Installation	17
	Air Spring	18
	Removal	18
	Inspection	19
	Installation	19
	Axle Tubes and Pivot Pins	20
	Removal	20
	Inspection	21
	Installation	22

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 84211431

Chapter 1 - Climate Control

CONTENTS

Section	Description	Page
	Specifications	5
	Compressor	5
	Refrigerant	5
	Refrigerant Oil	5
	Special Tools	5
	Description of Operation – Air Conditioning System	6
	The Basics of Refrigeration	6
	Air Conditioning Process	7
	R134a Refrigerant Information	8
	Refrigerant Ingredients	8
	Lubricants	8
	Refrigerant (R134a)	8
	Cab Air Flow	9
	System Components	11
	Compressor Pump	11
	Compressor Clutch (L-27)	11
	Air Conditioning Filters	12
	Removal/Replacement	12
	Recirculation Filter	14
	Removal	15
	Cleaning With Air	16
	Condenser	16
	Receiver/Drier	17
	Expansion Valve	18
	Valve Components	18
	Operation	19
	Port Identification	22
	Evaporator	22
	Blower Fan	22

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 84211431

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Description of Operation – Climate Controls	23
	Cab Environment	23
	Standard Temperature Control	23
	Vents	23
	Deluxe HVAC Control - Optional Factory Installed Only	24
	Climate Control	24
	Automatic Temperature Control (ATC)	24
	Temperature Control, 1	24
	Display Unit, 2	24
	Blower Speed Control, 3	25
	Defog Control, 4	25
	ATC Control, 5	26
	Troubleshooting the Temperature Control System	26
	Compressor Protection Switches	27
	High-pressure Cutout Switch (S-40)	27
	Low-pressure Cutout Switch (S-39)	27
	Troubleshooting and Servicing Air Conditioning System	28
	General Safety and Service Precautions	28
	Cleanliness	29
	Preliminary Troubleshooting and Testing	29
	Operational Checks	29
	Diagnosis Charts – Climate Control System	30
	Test Procedure: Stabilizing the System	33
	Test Ports	33
	Pressure/Temperature Relationships	34
	Leak Testing	34
	Refilling	35
	Contaminants	35
	General	35
	Preventing Mixing of Service Equipment	35

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 84211431

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Refrigerant Extraction and Recycling Equipment	35
	Using Extraction Equipment	36
	Using Recycling Equipment	36
	Recycling Vs. Reclaiming	36
	Containment of Air Conditioning Refrigerants	36
	Recovery	37
	Recharging/Refilling	37
	Using a Manifold Gauge Set	38
	Checking Refrigerant for Excess Air	38
	Containers for Storing Recycled Refrigerant	39
	Disposal of Empty or Near-empty Disposable Containers	39
	Refrigerant Oil	39
	General	39
	Contaminants	40
	Compressor Oil Level - Dipstick Method	41
	Pressure Diagnosis	43
	Manifold Gauge Readings and Interpretations	45
	Overhaul - Air Conditioning System	55
	Condenser	55
	Removal	55
	Repair or Replace	55
	Receiver/Drier	56
	Removal	56
	Installation	56
	High (S-40) Pressure Switch	57
	Removal	57
	Installation	57
	Low (S-39) Pressure Switch	57
	Removal	57
	Installation	58

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 84211431

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Blower Motor	59
	Removal	59
	Disassembly	60
	Assembly	62
	Installation	64
	Expansion Valve	66
	Removal	66
	Installation	67
	HVAC Cores	69
	Inspection and Cleaning	69
	Removal	69
	Installation	70
	Heater Core	71
	Removal	71
	Installation	73
	Evaporator Core	74
	Removal	74
	Installation	76
	Temperature Probe	77
	Removal	77
	Installation	78
	Temperature Sensor	80
	Removal	80
	Installation	80
	Heater Control Valve	81
	Removal	81
	Installation	82
	Compressor and Clutch	84
	Removal	84
	Installation	86
	Overhaul - Compressor	87
	Clutch and Seal Replacement	87
	Removal	87
	Inspection and Assembly	91

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Troubleshooting	3
	Fault Codes and Fault Finding	4
	Electrical Terms and Equipment	5
	Definitions	5
	Electrical System Components	7
	Electrical Components Chart	7
	Rocker Switches	13
	Momentary Rocker Switches	13
	Circuit Breakers	13
	Location of Circuit Breakers	14
	Fuses	15
	Fuse Panel Identification Tables	16
	Basic Circuitry/Component Testing	17
	Continuity Test for Open Circuits	17
	Continuity Test for Short to Ground	18
	Resistance Test for Electrical Components	19
	Measuring Voltage	20
	Diodes	21
	Diode Test Procedure	21
	Electro-hydraulic Solenoid Valve Coils	22
	Test Procedure	22
	Operational Check	22
	Relays	23
	Test Procedure	24
	Welding on the Machine	24
	Protecting The Electronic/Electrical Systems During Charging or Welding	25
	6 Cylinder Main Fuse / Relay Panel	26
	Options Relay	27
	Wiring Harnesses and Connectors - All Models	28
	Connectors	28
	Harness Splices	28

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Fuses, Relays, and Switches	28
	Switch and Relay Contacts	28
	Grounds	28
	Power Sources	28
	Wire Harness Identification	28
	Wire Color Codes	29
	Ground Distribution System	30
	Ground Points	30
	Ground Point R	31
	Ground Point 1	31
	Ground Point 4	32
	Ground Point 5	33
	Ground Point 7	34
	Ground Point 8	34
	Electronic Components	35
	Function Monitoring, Machine Configuration, and Diagnostics Menus	36
	Selectable Functions Monitoring	36
	Configuration Mode	38
	Warning Mode	45
	Critical Warning Displays - Automatic Shutdown	45
	Warning Displays - No Shutdown	47
	Non-Critical Warning Displays	48
	Electronic Fault Codes	49
	System Monitoring	50

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 2 - Power Distribution

CONTENTS

Section	Description	Page
	Description, Power Distribution, and Troubleshooting	2
	XCM Power	2
	Unswitched XCM Power	2
	Operation	2
	Switched XCM Power	3
	Operation	3
	Power Distribution	4
	Main Distribution Panel - Fuse Block	5
	Unswitched Power	6
	Q-29 #2 Main Circuit Breaker	6
	Q-30 #4 Main Circuit Breaker Busbar	6
	Battery Busbar	6
	Q-31 #1 Main Circuit Breaker Busbar	7
	Switched Power	7
	K-33 VI Supply Busbar	7
	K-38 IGN Control Busbar	7
	K-04 ACC Control Busbar	8

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 3 - Environmental Control - Heating, Ventilation and Air-Conditioning

CONTENTS

Section	Description	Page
	Environment Control - Heating, Ventilation and Air-Conditioning	2
	Introduction	2
	ATC Fault Codes	3
	Fault #1 - High Pressure Switch	3
	Fault #2 - Low Pressure Switch	7
	Fault #3 - Blower Speed Select Potentiometer	11
	Fault #4 - Temperature Select Potentiometer	15
	Fault #7 - Cab Temperature Sensor	18
	Fault #8 - Evaporator Temperature Sensor	21
	Fault #9 - Outlet Temperature Sensor	24
	Fault #19 - No Data from Control Module	27
	Testing Display Data Line	28
	Testing ATC Control Switch and Mode Control Switch	32
	Testing ATC Control Panel Power Supply	35
	Component Troubleshooting	39
	Compressor Magnetic Clutch	39
	Testing Clutch Coil	39
	Testing Clutch Circuit	39
	Heater Valve Test	45
	Expansion Valve Testing	49
	Blower Motor Testing	49

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 4 - Lighting Systems

CONTENTS

Section	Description	Page
	Introduction	2
	Lamp Replacement Chart	2
	Flashing Lights and Turn Signals	2
	General	2
	Operation	2
	Troubleshooting	3
	Road Lights, Tail Lights and Console Light Circuits	10
	Operation	10
	Troubleshooting	10
	Work Lights Circuits	19
	Operation	19
	Troubleshooting	19
	Exit Lighting (Left Side Stubble Light)	27
	Operation	27
	Procedure	27
	Console and Dome Lights Circuits	28
	Operation	28
	Troubleshooting	28

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 5 - Engine Electrical Systems

CONTENTS

Section	Description	Page
	Introduction	2
	Electrical Components	2
	Electronic Control Unit	3
	Pinout Diagram - Connector A (X036)	3
	Pinout Diagram - Connector B (X034)	4
	Pinout Diagram - Connector C (X035)	5
	Crankshaft Sensor B-11	6
	Camshaft Sensor B-12	6
	Boost Temperature-Pressure Sensor B-07	7
	Engine Oil Temperature - Pressure Sensor B-06	8
	Rail Fuel Pressure Sensor B-15	9
	Electro-Injectors	10
	Grid Heater	11
	Grid Heater Control Relay	11
	Engine Starting Motor Circuit	12
	Coolant Temperature Sensor B-14	17
	4-Line Display - Engine Coolant Temperature Scale	18
	A-Pillar Display - Engine Coolant Temperature Scale	18
	Fuel Low Pressure/Fuel Temperature Sensor B-08	19
	Filter Heater Relay	20
	Pressure Regulator L-39	20
	Air Filter Switch	20
	Troubleshooting	21
	Fuel Level Gauge Circuit	24
	Sender Resistance Chart	25
	Troubleshooting	26
	Fuel Water Switch	28
	Replacing the Filter	29
	Rotary Radiator Screen Cleaner	32
	Troubleshooting	32

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 6 - Charging Electrical Systems

CONTENTS

Section	Description	Page
	Introduction	3
	Battery	5
	Size and Rating	5
	How a Battery Works	5
	Battery Troubleshooting	5
	Determining the Cause of Failure	6
	Application and Installation	6
	Service History	6
	Visual Inspection	6
	Troubleshooting Summary	8
	Testing The Battery - General	9
	"Key Off" Current Drain	10
	Voltage Drop Test	11
	Charging the Battery	12
	Determining Battery Charge Procedure	12
	Slow Charge Procedure: For Batteries with Charges Below 11.0V	12
	Selecting Battery Charging Method	13
	Slow Charge Procedure	14
	Standard Charge Procedure: Preferred Method for Batteries with Voltage of 11 - 12.5 V	15
	Fast Charge Procedure: Alternative Method for Batteries with Voltages of 11 - 12.5 V	15
	Battery Charging Precautions	16
	Battery Specifications	16
	Alternator	17
	Charging System Excitation Circuit Operation	17
	Alternator and Voltage Regulator	17
	Maintaining the Alternator	18
	Alternator Connections	19
	Alternator and Voltage Regulator Precautions	19
	Belts - Engine	20
	Belt Inspection (check every 1200 hours)	20
	Compressor Belt Replacement	21
	Drive Belt Replacement	22
	Welding On the Machine	23

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 6 - Charging Electrical Systems (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting	23
	Testing the Alternator	23
	Alternator Removal	25
	Alternator Installation	27

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 7 - Electro-Hydraulic Systems

CONTENTS

Section	Description	Page
	Description of Operation	2
	Introduction	2
	Hydraulic Oil Level Switch Circuit	2
	Troubleshooting	4
	Hydraulic Oil Temperature Switch Circuit	6
	Troubleshooting	7
	Hydraulic Charge Pressure Switch Circuit	9
	Troubleshooting	10
	Seat Occupied Circuit	12
	Troubleshooting	13
	Header Drive Circuit	15
	Header Reverse Circuit	17
	Header Speed Circuit	19
	Master Hydraulic Solenoid Circuit	21
	Header Raise/Lower Circuit	23
	Header Raise Circuit	23
	Header Lower Circuit	23

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 7 - Electro-Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Header Tilt Up/Tilt Down Circuit	29
	Header Tilt Up Circuit	29
	Header Tilt Down Circuit	29
	Header Flotation Trim Circuit	31
	Hydrostatic High Speed Circuit	34

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 8 - Dealer Setup/Diagnostics Tests

CONTENTS

Section	Description	Page
	Accessing Diagnostic Mode	2
	Inputs	3
	Engine Inputs	4
	Fuel Inputs	5
	Header Inputs	5
	Hydraulics Inputs	6
	Lights Inputs	7
	Preheat Inputs	7
	Propulsion Inputs	8
	PTO Inputs	8
	Reel Inputs	9
	Outputs	9
	Header Outputs	10
	Preheat Outputs	11
	Wiggle Test	11
	Display (LCD) Test	11
	Fault History Screen	12

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 9 - Audible Alarm

CONTENTS

Section	Description	Page
	Enable/Disable the Low and Medium Priority Fault/Warning Messages	2
	Select Audible Alarm Volume	2
	Audible Alarm Priorities	2
	Low Priority Warnings	2
	Medium Priority Warnings	2
	High Priority Warnings	3

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211432

Chapter 10 - Controller Area Network (CAN)

CONTENTS

Section	Description	Page
55 000	CAN Network Basics	2

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211433 and BOOK 5 - 84211434

Chapter 11 - Fault Codes

CONTENTS

Section	Description	Page
	Introduction	10
	Fault Code Format (SPN/FMI Codes)	11
	SPN/FMI Code Charts	11
	FMI Codes	11
	SPN Codes	12
	Engine Fault Code	17
	FAULT CODE - 102-03 Air Filter Restriction Switch Shorted To High Source	17
	FAULT CODE - 100-12 ECU Recovery - Suppressed - Bad Intelligent Device or Component	20
	FAULT CODE - 103-02 Terminal 15 Failure - Data Erratic, Intermittent or Incorrect	21
	FAULT CODE - 106-12 Coolant Temperature Dynamic Failure - Bad Intelligent Device or Component	26
	FAULT CODE - 107-12 ECU Recovery - Visible - Bad Intelligent Device or Component	34
	FAULT CODE - 111-03 Rail Pressure Sensor Failure - Short to High Source	35
	FAULT CODE - 111-04 Rail Pressure Sensor Failure - Short to Ground	36
	FAULT CODE - 112-03 Offset Between Camshaft and Crankshaft - Short to B+	37
	FAULT CODE - 113-03 Torque Reduction Due to Smoke Limitation - Short to B+	47
	FAULT CODE - 115-02 Oil Temperature Sensor Failure - Data Erratic, Intermittent or Incorrect	48
	FAULT CODE - 115-03 Oil Temperature Sensor Failure - Short to B+	55
	FAULT CODE - 115-04 Oil Temperature Sensor Failure - Short to Ground	62
	FAULT CODE - 115-12 Oil Temperature Sensor Failure - Bad Intelligent Device or Component	69
	FAULT CODE - 116-03 Boost Pressure Sensor Failure - Short to B+	77
	FAULT CODE - 116-04 Boost Pressure Sensor Failure - Short to Ground	85
	FAULT CODE - 116-12 Boost Pressure Sensor Failure - Bad Intelligent Device or Component	93

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211433 and BOOK 5 - 84211434

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 117-02 Common Rail Pressure Limiting Valve Failure - Data Erratic, Intermittent or Incorrect	101
	FAULT CODE - 117-03 Common Rail Pressure Limiting Valve Failure - Short to B+	102
	FAULT CODE - 117-04 Common Rail Pressure Limiting Valve Failure - Short to Ground	105
	FAULT CODE - 118-02 Oil Pressure Sensor Failure - Data Erratic, Intermittent or Incorrect	106
	FAULT CODE - 118-03 Oil Pressure Sensor Failure - Short to B+	113
	FAULT CODE - 118-04 Oil Pressure Sensor Failure - Short to Ground	121
	FAULT CODE - 118-12 Oil Pressure Sensor Failure - Bad Intelligent Device or Component	129
	FAULT CODE - 119-02 Crankshaft Speed Signal Failure - Data Erratic, Intermittent or Incorrect	137
	FAULT CODE - 119-04 Crankshaft Speed Signal Failure - Short to Ground	145
	FAULT CODE - 121-02 Camshaft Speed Signal Failure - Data Erratic, Intermittent or Incorrect	153
	FAULT CODE - 121-04 Camshaft Speed Signal Failure - Short to Ground	161
	FAULT CODE - 123-02 Common Rail Metering Unit Power Stage Failure - Data Erratic, Intermittent or Incorrect	169
	FAULT CODE - 123-12 Common Rail Metering Unit Power Stage Failure - Bad Intelligent Device or Component	171
	FAULT CODE - 124-03 Info: Engine Overspeed Protection - Short to B+	173
	FAULT CODE - 125-02 Injector Cylinder 4 Failure - Data Erratic, Intermittent or Incorrect	174
	FAULT CODE - 125-03 Injector Cylinder 4 Failure - Short to B+	177
	FAULT CODE - 125-12 Injector Cylinder 4 Failure - Bad Intelligent Device or Component	183
	FAULT CODE - 126-02-Injector Cylinder 5 Failure - Data Erratic, Intermittent or Incorrect	185
	FAULT CODE - 126-03 Injector Cylinder 5 Failure - Short to B+	188
	FAULT CODE - 126-12 Injector Cylinder 5 Failure - Bad Intelligent Device or Component	194

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211433 and BOOK 5 - 84211434

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 128-03 Rail Pressure Positive Deviation High and High Fuel Flow Setpoint Value - Short to B+	196
	FAULT CODE - 129-02 Injector Cylinder 6 Failure - Data Erratic, Intermittent or Incorrect	197
	FAULT CODE - 129-03 Injector Cylinder 6 Failure - Short to B+	200
	FAULT CODE - 129-12 Injector Cylinder 6 Failure - Bad Intelligent Device or Component	206
	FAULT CODE - 130-03 Rail Pressure Negative Deviation Too High on Minimum Metering - Short to B+	208
	FAULT CODE - 131-03 Rail Pressure Below Minimum Limit in Controlled Mode - Short to B+	209
	FAULT CODE - 132-03 Rail Pressure Above Maximum Limit in Controlled Mode - Short to B+	210
	FAULT CODE - 136-03 Rail Pressure Drop Rate too High - Short to B+	211
	FAULT CODE - 137-03 Setpoint of Rail Metering Unit Not Plausible in Overrun - Short to B+	212
	FAULT CODE - 138-02 Injector Cylinder 1 Failure - Data Erratic, Intermittent or Incorrect	213
	FAULT CODE - 138-03 Injector Cylinder 1 Failure - Short to B+	216
	FAULT CODE - 138-12 Injector Cylinder 1 Failure - Bad Intelligent Device or Component	222
	FAULT CODE - 139-03 Fuel Flow Setpoint of Common Rail Metering Unit too Low - Short to B+	224
	FAULT CODE - 143-03 ECU Hardware: SPI Communication Failure - Short to B+	225
	FAULT CODE - 145-12 ECU Recovery - Locked - Bad Intelligent Device or Component	226
	FAULT CODE - 146-12 ECU Hardware: Microcontroller Watchdog Failure - Bad Intelligent Device or Component	227
	FAULT CODE - 147-03 Overrun Monitoring Failure - Short to B+	228
	FAULT CODE - 148-02 Injector Cylinder 1 Warning - Data Erratic, Intermittent or Incorrect	229
	FAULT CODE - 149-12 ECU Hardware: TPU Monitoring - Bad Intelligent Device or Component	232
	FAULT CODE - 150-02 Injector Cylinder 2 Failure - Data Erratic, Intermittent or Incorrect	233

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211433 and BOOK 5 - 84211434

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 150-03 Injector Cylinder 2 Failure - Short to B+	236
	FAULT CODE - 150-12 Injector Cylinder 2 Failure - Bad Intelligent Device or Component	242
	FAULT CODE - 151-02 Injector Cylinder 3 Failure - Data Erratic, Intermittent or Incorrect	244
	FAULT CODE - 151-03 Injector Cylinder 3 Failure - Short to B+	247
	FAULT CODE - 151-12 Injector Cylinder 3 Failure - Bad Intelligent Device or Component	253
	FAULT CODE - 153-12 ECU Hardware: Controller Watchdog Failure - Bad Intelligent Device or Component	255
	FAULT CODE - 156-03 Redundant Engine Speed in Overrun Monitoring - Short to B+	256
	FAULT CODE - 158-02 Injector Cylinder 2 Warning - Data Erratic, Intermittent or Incorrect	257
	FAULT CODE - 159-02 Injector Cylinder 3 Warning - Data Erratic, Intermittent or Incorrect	260
	FAULT CODE - 160-02-Injector Cylinder 4 Warning - Data Erratic, Intermittent or Incorrect	263
	FAULT CODE - 161-03 Info Fault: High Pressure Test (Rail Pressure Monitoring Deactivated) - Short to B+	266
	FAULT CODE - 162-03 Coolant Temperature Sensor Failure - Short to B+	267
	FAULT CODE - 162-04 Coolant Temperature Sensor Failure - Short to Ground	276
	FAULT CODE - 162-12 Coolant Temperature Sensor Failure - Bad Intelligent Device or Component	285
	FAULT CODE - 163-02 Injector Cylinder 5 Warning - Data Erratic, Intermittent or Incorrect	293
	FAULT CODE - 164-03 Info: Torque Limitation Due to Engine Protection (Against Excessive Torque, Engine Overspeed and Overheat) - Short to B+	296
	FAULT CODE - 165-03 Boost Air Temperature Sensor Failure - Short to B+	297
	FAULT CODE - 165-04 Boost Air Temperature Sensor Failure - Short to Ground	307
	FAULT CODE - 166-02 Injector Cylinder 6 Warning - Data Erratic, Intermittent or Incorrect	317
	FAULT CODE - 167-03 Injector Bank 1 Failure - Short to B+	320

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211433 and BOOK 5 - 84211434

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 167-04 Injector Bank 1 Failure - Short to Ground	323
	FAULT CODE - 167-12 Injector Bank 1 Failure - Bad Intelligent Device or Component	326
	FAULT CODE - 168-03 Injector Bank 2 Failure - Short to B+	327
	FAULT CODE - 168-04 Injector Bank 2 Failure - Short to Ground	330
	FAULT CODE - 168-12-Injector Bank 2 Failure - Bad Intelligent Device or Component	333
	FAULT CODE - 169-02 ECU Hardware for Injection: CY33X Chip Specific Failure (1) - Data Erratic, Intermittent or Incorrect	334
	FAULT CODE - 169-03 ECU Hardware for Injection: CY33X Chip Specific Failure (1) - Short to B+	335
	FAULT CODE - 169-04 ECU Hardware for Injection: CY33X Chip Specific Failure (1) - Short to Ground	336
	FAULT CODE - 169-12-ECU Hardware for Injection: CY33X Chip Specific Failure (1) - Bad Intelligent Device or Component	337
	FAULT CODE - 170-03 Minimum Injectors Number Not Reached - Short to B+	338
	FAULT CODE - 171-03 Info: Torque Limitation Due to OBD Performance Limiter by Legislation - Short to B+	339
	FAULT CODE - 172-04 Engine Runs With Camshaft Speed Only - Short to Ground	340
	FAULT CODE - 174-02 ECU Hardware: EEPROM Failure - Data Erratic, Intermittent or Incorrect	348
	FAULT CODE - 174-04 ECU Hardware: EEPROM Failure - Short to Ground	349
	FAULT CODE - 174-12 ECU Hardware: EEPROM Failure - Bad Intelligent Device or Component	350
	FAULT CODE - 175-03 Fuel Temperature Sensor Failure - Short to B+	351
	FAULT CODE - 175-04 Fuel Temperature Sensor Failure - Short to Ground	360
	FAULT CODE - 176-02 ECU Hardware: Shut Off During Initialization - Data Erratic, Intermittent or Incorrect	369
	FAULT CODE - 176-04 ECU Hardware: Shut Off During Initialization - Short to Ground	370

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211433 and BOOK 5 - 84211434

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 176-12 ECU Hardware: Shut Off During Initialization – Bad Intelligent Device or Component	371
	FAULT CODE - 177-03 Info: Torque Limitation Due to Fuel Quantity Limitation Because of Injection System Errors - Short to B+	372
	FAULT CODE - 189-12 Coolant Temperature Test Failure - Bad Intelligent Device or Component	373
	FAULT CODE - 190-03 Rail Pressure Sensor Offset Monitoring - Short to B+	382
	FAULT CODE - 190-04 Rail Pressure Sensor Offset Monitoring - Short to Ground	384
	FAULT CODE - 191-12 Oil Pressure Too Low - Bad Intelligent Device or Component	386
	FAULT CODE - 192-12-Oil Temperature Too High - Bad Intelligent Device or Component	394
	FAULT CODE - 193-03 Common Rail Metering Unit Power Stage - Short to B+	402
	FAULT CODE - 194-02 ECU Hardware for Injection: CY33X Chip Specific Failure (2) - Data Erratic, Intermittent or Incorrect	404
	FAULT CODE - 194-03 ECU Hardware for Injection: CY33X Chip Specific Failure (2) - Short to B+	405
	FAULT CODE - 194-04 ECU Hardware for Injection: CY33X Chip Specific Failure (2) - Short to Ground	406
	FAULT CODE - 194-12 ECU Hardware for Injection: CY33X Chip Specific Failure (2) - Bad Intelligent Device or Component	407
	FAULT CODE - 198-04 Common Rail Metering Unit Power Stage - Short to Ground	408
	Fuel Fault Codes	410
	FAULT CODE - 301-04 Fuel Water Switch Shorted To Low Source	410
	Hydraulic Fault Codes	413
	FAULT CODE - 001-03 Hydraulic Charge Pressure Switch Shorted To High Source	413
	FAULT CODE - 002-03 Hydraulic Reservoir Level Sensor Shorted To High Source	416
	FAULT CODE - 003-03 Hydraulic Oil Temperature Switch Shorted To High Source	419

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211433 and BOOK 5 - 84211434

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	Propulsion Fault Codes	422
	FAULT CODE – 404-03 MFH Position Sensor Shorted to High Source	422
	FAULT CODE – 404-04 MFH Position Sensor Shorted to Low Source	426
	FAULT CODE – 404-14 MFH Position Sensor Special Instructions	430
	FAULT CODE – 405-03 Pintle Arm Position Sensor Shorted to High Source	434
	FAULT CODE – 405-04 Pintle Arm Position Sensor Shorted to Low Source	437
	FAULT CODE – 406-03 Propulsion Cylinder Position Pot A Shorted to High Source	440
	FAULT CODE – 406-04 Propulsion Cylinder Position Pot A Shorted to Low Source	444
	FAULT CODE – 406-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration	448
	FAULT CODE – 407-03 Propulsion Cylinder Position Pot B Shorted to High Source	452
	FAULT CODE – 407-04 Propulsion Cylinder Position Pot B Shorted to Low Source	456
	FAULT CODE – 407-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration	460
	FAULT CODE – 408-03 MFH Neutral Switch Shorted to High Source	464
	FAULT CODE – 408-07 MFH Neutral Switch Mechanical Out Of Range	466
	FAULT CODE – 409-03 Park Brake Switch Shorted to High Source	468
	FAULT CODE – 411-13 Propulsion Cylinder Position Pot A Needs Calibration	471
	FAULT CODE – 412-13 Propulsion Cylinder Position Pot A Needs Calibration	475
	FAULT CODE – 413-13 Propulsion Cylinder Position Pot A Needs Calibration	479
	FAULT CODE – 414-13 Propulsion Cylinder Position Pot B Needs Calibration	483
	FAULT CODE – 415-13 Propulsion Cylinder Position Pot B Needs Calibration	487
	FAULT CODE – 416-13 Propulsion Cylinder Position Pot B Needs Calibration	491

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211433 and BOOK 5 - 84211434

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 418-03 MFH Position Sensor Shorted To High Source	495
	FAULT CODE - 418-04 MFH Position Sensor Shorted To Low Source	499
	FAULT CODE - 418-13 MFH Position Sensor Needs Calibration	503
	FAULT CODE - 419-03 MFH Position Sensor Shorted To High Source	506
	FAULT CODE - 419-04 MFH Position Sensor Shorted To Low Source	510
	FAULT CODE - 419-07 MFH Position Sensor Mechanical Out Of Range	514
	FAULT CODE - 419-13 MFH Position Sensor Needs Calibration	517
	FAULT CODE - 420-03 MFH Position Sensor Shorted To High Source	520
	FAULT CODE - 420-04 MFH Position Sensor Shorted To Low Source	524
	FAULT CODE - 420-07 MFH Position Sensor Mechanical Out Of Range	528
	FAULT CODE - 420-13 MFH Position Sensor Needs Calibration	531
	FAULT CODE - 421-03 MFH Position Sensor Shorted To High Source	534
	FAULT CODE - 421-04 MFH Position Sensor Shorted To Low Source	538
	FAULT CODE - 421-13 MFH Position Sensor Needs Calibration	542
	FAULT CODE - 424-03 Propulsion Forward Solenoid L-14p Shorted To High Source	545
	FAULT CODE - 424-04 Propulsion Forward Solenoid L-14p Shorted To Low Source	548
	FAULT CODE - 424-13 Propulsion Forward Coil Needs Calibration	550
	FAULT CODE - 425-03 Propulsion Forward Solenoid L-14t Shorted To High Source	552
	FAULT CODE - 425-04 Propulsion Forward Solenoid L-14t Shorted To Low Source	555
	FAULT CODE - 425-13 Propulsion Forward Coil Needs Calibration	557

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211433 and BOOK 5 - 84211434

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE – 426-03 Propulsion Reverse Solenoid L-15p Shorted To High Source	559
	FAULT CODE – 426-04 Propulsion Reverse Solenoid L-15p Shorted To Low Source	562
	FAULT CODE – 426-13 Propulsion Reverse Coil Needs Calibration	564
	FAULT CODE – 427-03 Propulsion Reverse Solenoid L-15t Shorted To High Source	566
	FAULT CODE – 427-04 Propulsion Reverse Solenoid L-15t Shorted To Low Source	569
	FAULT CODE – 427-13 Propulsion Reverse Coil Needs Calibration	571
	FAULT CODE – 428-03 Propulsion Cylinder Position Sensor R-23A Shorted To High Source	573
	FAULT CODE – 429-03 Propulsion Cylinder Position Sensor R-23A Shorted To High Source	578
	FAULT CODE – 430-03 Propulsion Cylinder Position Sensor R-23A Shorted To High Source	583
	FAULT CODE – 431-03 MFH Position Sensor R-18 Shorted To High Source	587
	FAULT CODE – 432-03 MFH Position Sensor R-18 Shorted To High Source	590
	FAULT CODE – 433-03 Propulsion Cylinder Shorted To High Source	593
	FAULT CODE – 434-03 Propulsion Cylinder Shorted To High Source	597
	FAULT CODE – 435-03 Propulsion Enable Relay K-35 Shorted to High Source	601
	FAULT CODE – 435-04 Propulsion Enable Relay K-35 Shorted to Low Source	603
	PTO Fault Codes	605
	FAULT CODE – 200-12 Header Speed Sensor Bad Intelligent Device	605

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 84211435

Chapter 12 - Wiring Harnesses

CONTENTS

Section	Description	Page
	Standard Wiring Harnesses	2
	FM Harness (Front)	3
	FM Harness (Rear)	4
	FM Harness (Engine LH)	5
	LL and RL Harnesses (Lighting)	6
	CM Harness (Electrical Panel)	7
	CM Harness (Inside Cab)	8
	CM Harness (Seat and Right Hand Console)	9
	OR Harness (Outside Roof)	10
	RM Harness (Inside Roof)	11
	SC-D Harness (Steering Column)	12

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 84211435

Chapter 13 - Connector Information

CONTENTS

Section	Description	Page
	Connector Information	2

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 84211435

Chapter 14 - Troubleshooting Optional Equipment

CONTENTS

Section	Description	Page
	A-Pillar Display	2
	Wire Harness Routing/Connections	3
	Troubleshooting	4
	Cold Start (Thermostart)	7
	Circuit Description	7
	Switch Removal	7
	Switch Connections	8
	Wire Harness Routing	8
	Troubleshooting	9
	Deluxe Mirrors	12
	Circuit Description	12
	Switch Removal	13
	Switch Connectors and Circuitry	13
	Accessing the Outer Roof (OR) Harness	14
	Roof Panel Installation	15
	Wiring Harness Routing	15
	Troubleshooting	17
	Beacon Mount	21
	Circuit Description	21
	Switch Removal	21
	Connectors and Circuitry	22
	Accessing the Outer Roof (OR) Harness	23
	Roof Panel Installation	24
	Wiring Harness Routing and Connections	24
	Troubleshooting	26
	Adjustable Windrow Shields	29
	Circuit Description	29
	Windrow Shields Wide (Open)	30
	Windrow Shields Narrow (Close)	30
	Switch Connection	30
	Troubleshooting	31
	Position Sensor Potentiometer Test	32
	Sickle Header Drive Adapter (2300 and HS Series)	36
	Troubleshooting	37
	Draper Header Drive Adapter	37

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 84211435

Chapter 15 - Electrical Schematics

CONTENTS

Section	Description	Page
	Introduction	2
	Electrical Components Chart	3
	Using Schematics	9
	Power	10
	Grounds	10
	Connections	10
	Harnesses	11
	Standard Harnesses	11
	Optional Harnesses	11
	Wire Harness Routing	12
	Circuit Identification	12
	Windrower Electrical Schematic	13

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com