
LBX SERIES REPAIR MANUAL

COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 31 - IMPLEMENT POWER TAKE-OFF	2
SECTION 33 - BRAKES AND CONTROLS	4
SECTION 35 - HYDRAULIC SYSTEMS	4
SECTION 44 - AXLES AND WHEELS	8
SECTION 55 - ELECTRICAL SYSTEM	8
SECTION 60 - PRODUCT FEEDING	10
SECTION 62 - PRESSING	13
SECTION 68 - TYING/WRAPPING	13
SECTION 70 - EJECTION	15

The following pages are the collation of the contents pages from each section and chapter of the LBX Baler Repair manual. Complete Repair part # 87019910.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the LBX Balers.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87019911

Chapter 1 - General Information

CONTENTS

Description	Page
Introduction	2
Important information	2
General instructions	3
Spare parts	4
Safety regulations	5
Explanation of machine serial numbers	8
Units of measure - conversion chart	9
Minimum hardware tightening torques	10
General features	12
Lubrication schedule	19

SECTION 31 - IMPLEMENT POWER TAKE-OFF

BOOK 1 - 87019911

Chapter 1 - P.T.O. Drive Shaft

CONTENTS

Description	Page
P.t.o. drive shaft	2
Bondioli p.t.o. drive shaft	2
Walterscheid p.t.o. driveshaft	6
CV U-joint	12
Standard U-Joint	14
Center support bearing replacement	16
Flywheel slip clutch	18

SECTION 31 - IMPLEMENT POWER TAKE-OFF

BOOK 1 - 87019911

Chapter 2 - Flywheel

CONTENTS

Description	Page
Flywheel brake adjustment	2
Flywheel - Removal - Installation	2

SECTION 31 - IMPLEMENT POWER TAKE-OFF

BOOK 1 - 87019911

Chapter 3 - Main gearbox

CONTENTS

Description	Page
Description and operation	2
Gearbox shafts	2
Specifications	4
Tightening torques	4
Disassembly of the main gearbox	6
Disassembly of the cranks and upper cover	6
Disassembly of the plunger crank drive shaft	7
Disassembly of the intermediate shaft	10
Disassembly of the stuffer/knotter drive shaft	14
Disassembly of the packer/rotor + pick-up drive shaft	17
Disassembly of the input shaft	20
Assembly of the main gearbox	22
Assembly of the input shaft	22
Assembly of the packer/rotor + pick-up drive shaft	26
Assembly of the stuffer/knotter drive shaft	29
Assembly of the intermediate shaft	32
Assembly of the plunger crank drive shaft	37
Assembly of the upper cover and cranks	40
Replacement of the crank support bearing	42

SECTION 33 - BRAKES AND CONTROLS

BOOK 1 - 87019911

Chapter 1 - Brakes and controls

CONTENTS

Description	Page
Brake shoe - Removal	2
Brake control shaft - Rep.	3
Brake shoe - Installation	4
Air brake valve	6
Description of operation	6
Technical data	8
Disassembly - assembly	8

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 1 - 87019911

Chapter 1 - Bale Density

CONTENTS

Description	Page
Technical data	1
Component sketch and location	2
Description and operation	3
Troubleshooting	5
Hydraulic cylinder - R./l.	6
Set of cylinder gaskets - Rep.	6
Proportional solenoid valve - R./l.	8
Hydraulic pump - R./l.	9

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 1 - 87019911

Chapter 2 - Pick-up Lifting

CONTENTS

Description	Page
Technical data	1
Component location	2
Operation	2
Hydraulic cylinder - R./l.	3
Set of cylinder gaskets - Rep.	4

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 1 - 87019911

Chapter 3 - Blade Control

CONTENTS

Description	Page
Technical data	1
Description, operation and hydraulic sketch for blade control	2
Description, operation and hydraulic sketch for control of blades with rotor	3
Hydraulic cylinders - R./l.	6
Set of hydraulic cylinder gaskets - Rep.	7

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 1 - 87019911

Chapter 4 - Bale Ejector - Chute Positioning - Rear Wheel Locking

CONTENTS

Description	Page
Technical data	1
Hydraulic circuit sketches	2
Operation	3
Troubleshooting	7
Bale ejector and chute closing control valve - R./l.	8
Pressure limiting valve - R./l.	9
Uni-directional valve - R./l.	9
Uni-directional flow rate reducer - R./l.	10
Hydraulic cylinders - R./l.	11
Set of cylinder gaskets - Rep.	12

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 1 - 87019911

Chapter 5 - The LINCOLN Centralised Greasing System Models LBX331, LBX421 and LBX431 from Serial number 4238>

CONTENTS

Description	Page
Specifications	1
Tightening Torques	2
Tooling	2
Grease points	3
Manual - Centralised Greasing System	5
System Component Overview	6
System Operation	8
Grease Outputs and Dispensing	10
Divider Outputs	20

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 1 - 87019911

Chapter 5 - The LINCOLN Centralised Greasing System Models LBX331, LBX421 and LBX431 from Serial number 4238> (Continued)

CONTENTS

Description	Page
Automatic - Centralised Greasing System	38
Grease Reservoir Filling	40
System Operation	41
Divider Outputs	44
Circuit Diagrams (all models)	48
General Notes	56
Fault Finding	57
Maintenance and Overhaul	61
Tubing and connectors	63
General Grease Points	67

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 1 - 87019911

Chapter 6 - Oiler System

CONTENTS

Description	Page
General Information	2
Integrated Automatic Oiler	2
Oil Filter Replacement	4
Main Drive Gearbox	4
Stuffer Drive Gearbox	5
Knotter Drive Gearbox	6
Lubrication Guide	7

SECTION 44 - AXLES AND WHEELS

BOOK 2 - 87019912

Chapter 1 - Axles and Wheels

CONTENTS

Description	Page
Specifications	1
Description of Operation	3
Sectional Views	4
Tire and Wheel	5
Wheel Hub and Bearing	6

SECTION 55 - ELECTRICAL SYSTEM

BOOK 2 - 87019912

Chapter 1 - General

CONTENTS

Description	Page
General characteristics	2
Component discription / Location	2
Printed circuits	2
Sensors	3
Lighting	6
Fuses and relays	7
Motors	8
Switches	8
Solenoids	8
Harnesses and connections	9
General information	9
Symbols	10
Connectors	14
Connector location	18

SECTION 55 - ELECTRICAL SYSTEM

BOOK 2 - 87019912

Chapter 2 - Wiring Diagrams

CONTENTS

Description	Page
Electrical diagrams - Overview	2
List of symbols and where to find them	6
Electrical diagrams	14

SECTION 55 - ELECTRICAL SYSTEM

BOOK 2 - 87019912

Chapter 3 - Troubleshooting

CONTENTS

Description	Page
Description of operation	2
Performance monitor - Basic functions	2
Performance monitor - Dealer diagnostics	2
Dealer diagnostics routine window	2
Dealer diagnostics - inputs	4
Dealer diagnostics - outputs	9
Fault diagnosis	13
Error code overview	13
Error codes	16
Error description	98

SECTION 55 - ELECTRICAL SYSTEM

BOOK 2 - 87019912

Chapter 4 - Electronic modules

CONTENTS

Description	Page
Module replacement / adjustment	2
monitor	2
Baler controller	2
Revs/Min. Status sensor	3
Plunger load sensor	4
Software updates	8
PDT Software Download Tool	8

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87019913

Chapter 1 - Pickup

CONTENTS

Description	Page
Specifications	2
Description of Operation	3
Pickup Removal and Installation	4
Slip Clutch Repair	9
Burnishing The Slip Clutch	13
Driveshaft Bearing Replacement	14
Right Pivot Bearing Replacement	17
Left Pivot Bearing Replacement	19
Auger and Bearing Replacement	19
Gauge Wheel Bearing Replacement	24
Guard Replacement	26
Teeth Replacement	26
Tooth Bar and Tooth Bar Bearing Replacement	27
Cam Bearing Replacement	31
Cam Replacement	35

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87019913

Chapter 1 - Pickup (Continued)

CONTENTS

Description	Page
Right Reel Bearing Replacement	39
Left Reel Bearing Replacement	42
Reel Shaft Replacement	45
Cylinder Repair	50
Height Adjustment	53
Flotation Adjustment	53
Tine Repair	55
Windguard Height Adjustment	55

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87019913

Chapter 2 - Packer

CONTENTS

Description	Page
Specifications	2
Description of Operation	2
Troubleshooting	5
Packer Slip Clutch Replacement	6
Packer Fork Bearing Removal and Installation	8
Packer Shaft Bearing Removal and Installation	12

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87019913

Chapter 3 - Stuffer

CONTENTS

Description	Page
Description of Operation	2
Troubleshooting	6
Stuffer Gearbox Repair	8
Holding Fingers Replacement	33
Stuffer Clutch Repair	37
Stuffer Brake Repair	41
Stuffer Shaft Replacement	47
Trip Mechanism Repair	55
Stuffer Shuttle Feeder Repair	61
Removable Liner Replacement	66

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87019913

Chapter 4 - Rotor

CONTENTS

Description	Page
Specifications	2
Rotor lower drive sprocket replacement	2
Rotor bearings replacement	5
Rotor shaft replacement	9
Rotor scraper replacement	11
Knife drawer replacement	12

SECTION 62 - PRESSING

BOOK 3 - 87019913

Chapter 1 - Plunger and Connecting Rods

CONTENTS

Description	Page
Specifications	2
Tightening Torques	2
Clearances	2
Description of Operation	2
Plunger R./L.	3
Front Connecting Rod Bearing Replacement	17
Rear Connecting Rod Bearing Replacement	21
Plunger Vertical Bearing Replacement	24
Plunger Horizontal Bearing Replacement	29
Knife Clearance	29
Knife Sharpening	30

SECTION 68 - TYING/WRAPPING

BOOK 3 - 87019913

Chapter 1 - Knotter General Information

CONTENTS

Description	Page
Specifications	2
Description of Operation	2
Troubleshooting	3
Knotter Trip Mechanism	12
Knotter Operation Overview	13
Knotter Operation Detail	14
Knotter Adjustments	18

SECTION 68 - TYING/WRAPPING

BOOK 3 - 87019913

Chapter 2 - Knotter Drive

CONTENTS

Description	Page
Knotter Driveshaft Repair	2
Knotter Gearbox Repair	7
Knotter Clutch Cam Lobe Replacement	29
Knotter Clutch Roller and Arm Replacement	30
Knotter Brake R./l.	37

SECTION 68 - TYING/WRAPPING

BOOK 3 - 87019913

Chapter 3 - Knotter and Knotter Stack

CONTENTS

Description	Page
Knotter Stack Repair	2
Knotter Frame Preload Adjustment	31
Pinion Gear Clearance Adjustment	33
Knotter Frame Removal Procedure	34
Billhook And Cam Adjustment	35
Knife Arm Scraper Adjustment And Replacement	36
Twine Disc Timing Adjustment	37
Twine Holder Adjustment	38
Knotter Frame Overhaul	39

SECTION 68 - TYING/WRAPPING

BOOK 3 - 87019913

Chapter 4 - Twine System, Needles and Top Hay Dogs

CONTENTS

Description	Page
Needle Adjustment	2
Needle Cleaner Installation	10
Threading the baler	11
Twine Tension Adjustment	16
Top Hay Dogs R./l.	17

SECTION 70 - EJECTION

BOOK 3 - 87019913

Chapter 1 - Bale Discharge Chute

CONTENTS

Description	Page
Description of Operation	2
Plunger Rail R./l.	2
Side Hay Dogs Replacement	3
Density Cylinder Linkage R./l.	5
Top Compression Plate R./l.	6
Side Compression Plates R./l.	7

SECTION 70 - EJECTION

BOOK 3 - 87019913

Chapter 2 - Bale Ejector

CONTENTS

Description	Page
Description of Operation	2
Sectional View	3
Bale Chute - Rear Roller Sensor Actuator	3
Ejector Lug R./l.	5
Ejector Rail R./l.	5

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com