

---

# **RBX452, RBX462, RBX552, RBX562 REPAIR MANUAL COMPLETE CONTENTS**

|   |           |
|---|-----------|
| <b>SECTION 00 - GENERAL INFORMATION .....</b> | <b>2</b>  |
| <b>SECTION 31 - IMPLEMENT DRIVELINE .....</b> | <b>3</b>  |
| <b>SECTION 35 - HYDRAULICS .....</b>          | <b>7</b>  |
| <b>SECTION 39 - FRAME .....</b>               | <b>11</b> |
| <b>SECTION 44 - AXLES AND WHEELS .....</b>    | <b>12</b> |
| <b>SECTION 55 - ELECTRICAL SYSTEMS .....</b>  | <b>13</b> |
| <b>SECTION 60 - PRODUCT FEEDING .....</b>     | <b>20</b> |
| <b>SECTION 62 - PRESSING .....</b>            | <b>25</b> |
| <b>SECTION 68 - WRAPPING .....</b>            | <b>32</b> |
| <b>SECTION 70 - EJECTION .....</b>            | <b>35</b> |
| <b>SECTION 90 - SHIELDING .....</b>           | <b>35</b> |

**The following pages are the collation of the contents pages from each section and chapter of the RBX452, RBX462, RBX552, and RBX562 Repair manual. Complete Repair part # 87352306.**

**The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.**

**The sections listed above are the sections utilized for the RBX452, RBX462, RBX552, and RBX562 Round Balers.**

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87352307

## Chapter 1 - General Information

### CONTENTS

| Section | Description   | Page |
|---------|---|------|
| 00 000  | Introduction .....  | 2    |
|         | Precautionary Statements .....                                | 3    |
|         | Safety .....  | 4    |
|         | Fluid Safety .....  | 6    |
|         | Safety Decals .....   | 7    |
|         | Information Decals .....                                      | 11   |
|         | Torques and Adjustment .....                                  | 13   |
|         | Technical Information .....                                   | 14   |
|         | Minimum Hardware Tightening Torques .....                     | 15   |
|         | Retaining Compounds and Sealants .....                        | 18   |
|         | Standard Torque Data for Hydraulic Tubes and Fittings .....   | 19   |
|         | Recommended Lubricants .....                                  | 21   |
|         | Roller Chains .....   | 23   |
|         | Conversion Charts .....                                       | 25   |
|         | Ecology and the Environment .....                             | 29   |
|         | Baler Components .....  | 30   |
|         | Power Flow - Baler with Stuffer .....                         | 31   |
|         | Power Flow - Baler with Rotor .....                           | 32   |
|         | Driveline Components Baler with Standard Pickup .....         | 33   |
|         | Driveline Components Baler with Stuffer and Wide Pickup ..... | 34   |
|         | Driveline Components Baler with Rotor and Wide Pickup .....   | 35   |
|         | Specifications .....  | 36   |
|         | Storage and Seasonal Preparation .....                        | 44   |

---

# SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

## Chapter 1 - PTO Driveline

### CONTENTS

| Section | Description                           | Page |
|---------|---------------------------------------|------|
|         | Specifications .....                  | 2    |
|         | PTO Constant Velocity .....           | 2    |
|         | Description of Operation .....        | 5    |
|         | Overhaul .....                        | 6    |
| 31 201  | Front PTO and CV U-joint .....        | 6    |
|         | Disassembly .....                     | 6    |
|         | Inspection .....                      | 9    |
|         | Replacement .....                     | 9    |
|         | Assembly .....                        | 9    |
|         | Installation .....                    | 13   |
| 31 201  | Rear PTO .....                        | 14   |
|         | Removal .....                         | 14   |
|         | Disassembly .....                     | 15   |
|         | Inspection .....                      | 16   |
|         | Assembly .....                        | 17   |
|         | Installation .....                    | 19   |
| 31 201  | Shear Bolt Hub .....                  | 22   |
| 31 201  | Shear Bolt Hub Bearing Balls .....    | 22   |
|         | Replacement .....                     | 22   |
| 31 201  | Slide Collar Quick - Disconnect ..... | 23   |
|         | Removal .....                         | 23   |
|         | Replacement .....                     | 23   |

---

# SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

## Chapter 2 - Gearbox

### CONTENTS

| <b>Section</b> | <b>Description</b>             | <b>Page</b> |
|----------------|--------------------------------|-------------|
|                | Specifications .....           | 2           |
|                | Special Tools .....            | 2           |
|                | Description of Operation ..... | 2           |
|                | Overhaul .....                 | 3           |
| 31 220         | Gearbox .....                  | 3           |
|                | Removal .....                  | 3           |
|                | Gearbox Coupler Seal .....     | 5           |
|                | Replacement .....              | 5           |
|                | Gearbox .....                  | 6           |
|                | Sectional Views .....          | 6           |
|                | Disassembly .....              | 10          |
|                | Inspection .....               | 13          |
|                | Assembly .....                 | 14          |
|                | Installation .....             | 21          |

---

# SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

## Chapter 3 - Clutches

### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Specifications .....                                  | 3    |
|         | Special Tools .....                                   | 3    |
|         | Description of Operation .....                        | 6    |
|         | Overhaul .....  | 7    |
| 31 225  | Main Drive Slip Clutch (RBX452, RBX462, RBX552) ..... | 7    |
|         | Removal .....   | 7    |
|         | Disassembly .....                                     | 7    |
|         | Inspection .....                                      | 8    |
|         | Replacement .....                                     | 8    |
|         | Assembly .....  | 8    |
|         | Installation .....                                    | 9    |
|         | Burnishing .....                                      | 11   |
|         | Adjustment .....                                      | 12   |
| 31 225  | Main Drive Slip Clutch (RBX562) .....                 | 14   |
|         | Removal .....   | 14   |
|         | Disassembly .....                                     | 15   |
|         | Inspection .....                                      | 15   |
|         | Assembly .....  | 15   |
|         | Installation .....                                    | 16   |
|         | Burnishing .....                                      | 19   |
|         | Adjustment .....                                      | 21   |
| 31 225  | Sledge Roll Drive Slip Clutch .....                   | 22   |
|         | Removal .....   | 22   |
|         | Disassembly .....                                     | 23   |
|         | Inspection .....                                      | 23   |
|         | Assembly .....  | 24   |
|         | Installation .....                                    | 24   |
|         | Burnishing .....                                      | 25   |
|         | Adjustment .....                                      | 25   |
| 31 225  | Pickup Slip Clutch – Standard Pickup .....            | 27   |
|         | Removal .....   | 27   |

---

# SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

## Chapter 3 - Clutches (Continued)

### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Disassembly .....   | 28   |
|         | Inspection .....  | 28   |
|         | Assembly .....  | 28   |
|         | Installation .....  | 28   |
|         | Burnishing .....  | 29   |
|         | Adjustment .....  | 29   |
| 31 225  | Pickup Jaw Clutch - 1.8 & 2.1 M Wide Pickup .....             | 30   |
|         | Removal .....   | 30   |
|         | Inspection .....  | 33   |
|         | Installation .....  | 33   |
| 60 280  | Pickup Jaw Clutch - 1.5 M Wide Pickup .....                   | 37   |
|         | Removal .....   | 37   |
|         | Inspection .....  | 38   |
|         | Installation .....  | 38   |
| 31 225  | Pickup Over-run Clutch - 2.1 Wide Pickups (Rotor Units) ..... | 39   |
|         | Removal .....   | 39   |
|         | Inspection .....  | 41   |
|         | Assembly .....  | 42   |
| 31 225  | Belts Drive Linear Clutch (RBX462 and RBX562) .....           | 45   |
|         | Removal .....   | 45   |
|         | Inspection .....  | 47   |
|         | Installation .....  | 48   |
|         | Adjustment .....  | 50   |
| 31 225  | Belts Drive Over-run Clutch (RBX552 Standard) .....           | 53   |
|         | Removal .....   | 53   |
|         | Inspection .....  | 54   |
|         | Installation .....  | 54   |
| 31 225  | Belts Drive Radial Arm Clutch (RBX552 Option) .....           | 57   |
|         | Removal .....   | 57   |
|         | Inspection .....  | 58   |
|         | Installation .....  | 59   |

---

## SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

### Chapter 4 - Drives

#### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Specifications .....                                 | 2    |
|         | Gearbox Output Shaft Cluster Sprocket Location ..... | 2    |
|         | Description of Operation .....                       | 2    |
|         | Overhaul .....                                       | 3    |
| 31 230  | Gearbox Output Driveshaft .....                      | 3    |
|         | Disassembly .....                                    | 3    |
|         | Inspection .....                                     | 6    |
|         | Assembly .....                                       | 6    |

## SECTION 35 - HYDRAULICS

BOOK 1 - 87352307

### Chapter 1 - Tailgate Lift System

#### CONTENTS

| Section | Description                    | Page |
|---------|--------------------------------|------|
| 35 550  | Description of Operation ..... | 2    |
|         | Overhaul .....                 | 4    |
|         | Tailgate Cylinder .....        | 4    |
|         | Removal .....                  | 4    |
|         | Disassembly .....              | 6    |
|         | Inspection .....               | 7    |
|         | Assembly .....                 | 7    |
|         | Installation .....             | 8    |
|         | Tailgate Lockout Valve .....   | 10   |
|         | Adjustment .....               | 10   |
|         | Testing .....                  | 11   |
|         | Disassembly .....              | 12   |
|         | Assembly .....                 | 12   |
|         | Replacement .....              | 13   |
|         | Troubleshooting .....          | 14   |
|         | Tailgate Cylinders .....       | 14   |

---

# SECTION 35 - HYDRAULICS

BOOK 1 - 87352307

## Chapter 2 - Belt Tension System

### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Description of Operation .....                              | 2    |
| 35 540  | Belt Tension System .....                                   | 2    |
|         | Density Cylinder System .....                               | 2    |
|         | Oil – Density Cylinder System .....                         | 4    |
|         | Overhaul .....  | 4    |
|         | Density Cylinder System .....                               | 4    |
|         | Adjustment .....  | 4    |
|         | Belt Tension Removal .....                                  | 5    |
|         | Bale Density Pressure .....                                 | 6    |
|         | Adjustment .....  | 6    |
|         | Belt Tension Cylinder .....                                 | 7    |
|         | Removal .....   | 7    |
|         | Disassembly .....   | 9    |
|         | Inspection .....  | 10   |
|         | Assembly .....  | 11   |
|         | Installation .....  | 12   |
|         | Relief Valve Operation .....                                | 16   |
|         | Relief Valve .....  | 18   |
|         | Removal .....   | 18   |
|         | Installation .....  | 18   |
|         | Cleaning .....  | 18   |
|         | Relief Valve Seals .....                                    | 19   |
|         | Removal .....   | 19   |
|         | Installation .....  | 19   |
|         | Relief Valve .....  | 19   |
|         | Adjustment (The Maximum Pressure of the Relief Valve) ..... | 19   |
|         | Troubleshooting .....                                       | 20   |
|         | Density Cylinders .....                                     | 20   |



---

# SECTION 35 - HYDRAULICS

BOOK 1 - 87352307

## Chapter 3 - Feeding - Pickup Lift Cylinder/Rotor Knives and Reverse Cylinders

### CONTENTS

| Section | Description                       | Page |
|---------|-----------------------------------|------|
| 35 000  | General Procedures .....          | 2    |
|         | Description of Operation .....    | 3    |
| 35 560  | Pickup Lift Cylinder .....        | 3    |
|         | Overhaul .....                    | 3    |
| 35 560  | Pickup Lift Cylinder .....        | 3    |
|         | Removal .....                     | 3    |
|         | Disassembly .....                 | 4    |
|         | Assembly .....                    | 4    |
|         | Installation .....                | 4    |
| 35 565  | Rotor Knife Cylinder .....        | 5    |
|         | Removal .....                     | 5    |
|         | Disassembly .....                 | 6    |
|         | Inspection .....                  | 6    |
|         | Assembly .....                    | 7    |
|         | Installation .....                | 8    |
| 35 764  | Hydraulic Reverser Cylinder ..... | 9    |
|         | Removal .....                     | 9    |
|         | Disassembly .....                 | 10   |
|         | Inspection .....                  | 10   |
|         | Assembly .....                    | 11   |
|         | Installation .....                | 12   |
| 35 204  | Splitter Valve .....              | 13   |
|         | Removal .....                     | 13   |
|         | Disassembly .....                 | 14   |
|         | Inspection .....                  | 14   |
|         | Assembly .....                    | 14   |
|         | Troubleshooting .....             | 17   |
|         | All Cylinders .....               | 17   |
|         | Pickup Cylinders .....            | 17   |
|         | Rotor Cylinders .....             | 17   |

---

# SECTION 35 - HYDRAULICS

BOOK 1 - 87352307

## Chapter 4 - Lubrication - Greaselines and Oiler

### CONTENTS

| Section | Description              | Page |
|---------|--------------------------|------|
| 35 000  | General Procedures ..... | 2    |
|         | Overhaul .....           | 3    |
| 35 595  | Grease System .....      | 3    |
|         | Inspection .....         | 3    |
| 35 597  | Oiler .....              | 4    |
|         | Oil Tank .....           | 4    |
|         | Removal .....            | 4    |
|         | Inspection .....         | 4    |
|         | Installation .....       | 4    |
|         | Oil Feed Lines .....     | 4    |
|         | Inspection .....         | 4    |
|         | Oil Brushes .....        | 6    |
|         | Replacement .....        | 6    |
|         | Pump .....               | 6    |
|         | Removal .....            | 6    |
|         | Disassembly .....        | 7    |
|         | Installation .....       | 7    |
|         | Oil Flow .....           | 8    |
|         | Adjustment .....         | 8    |

---

# SECTION 39 - FRAME

BOOK 2 - 87352308

## Chapter 1 - Tailgate

### CONTENTS

| <b>Section</b> | <b>Description</b>               | <b>Page</b> |
|----------------|----------------------------------|-------------|
|                | Overhaul .....                   | 2           |
| 55 435         | Tailgate (RBX462 & RBX562) ..... | 2           |
|                | Removal .....                    | 3           |
|                | Inspection .....                 | 16          |
|                | Disassembly .....                | 16          |
|                | Assembly .....                   | 17          |
|                | Installation .....               | 17          |
|                | Adjustment .....                 | 32          |
| 55 435         | Tailgate (RBX452 & RBX552) ..... | 33          |
|                | Removal .....                    | 34          |
|                | Inspection .....                 | 45          |
|                | Disassembly .....                | 46          |
|                | Assembly .....                   | 46          |
|                | Installation .....               | 47          |
|                | Adjustment .....                 | 66          |

---

# SECTION 44 - AXLES AND WHEELS

BOOK 2 - 87352308

## Chapter 1 - Axles and Wheels

### CONTENTS

| <b>Section</b> | <b>Description</b>             | <b>Page</b> |
|----------------|--------------------------------|-------------|
|                | Specifications .....           | 2           |
|                | Special Tools .....            | 2           |
|                | Description of Operation ..... | 2           |
|                | Overhaul .....                 | 3           |
| 44 101         | Axle .....                     | 3           |
|                | Adjustment .....               | 3           |
| 44 520         | Tire Pressure .....            | 5           |
|                | Wheel Torques .....            | 5           |
|                | Wheel Bearings .....           | 5           |
|                | Inspection .....               | 5           |

---

# SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

## Chapter 1 - General Information

### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Definition of Terms .....   | 2    |
|         | Electricity .....   | 2    |
|         | Voltage .....   | 2    |
|         | Current .....   | 2    |
|         | Resistance .....  | 2    |
|         | Open Circuit .....  | 2    |
|         | Short Circuit .....   | 2    |
|         | Continuity .....  | 2    |
|         | Voltage Drop .....  | 2    |
|         | Diode .....   | 2    |
|         | Solenoid .....  | 2    |
|         | Relay .....   | 2    |
|         | Overhaul .....  | 3    |
|         | Protecting the Electrical/Electronic Systems During Charging or Welding ..... | 3    |
|         | Special Tools .....   | 3    |
|         | Troubleshooting .....   | 4    |
|         | Electrical Test Procedures .....  | 4    |
|         | Standard Electrical Tests .....   | 5    |
|         | Wire Identification .....   | 9    |
|         | Net-Twine Wrapper Diagnostic Mode Quick Reference Card .....                  | 10   |

---

# SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

## Chapter 2 - Harness and Connectors

### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Description of Operation .....                               | 2    |
|         | Tractor Harness .....  | 2    |
|         | Main Baler Harness (Net Twine Wrapper) .....                 | 4    |
|         | Rotor Knife/Rotor Reverse Solenoid Valve Baler Harness ..... | 6    |
|         | Electric Wrap Tractor Harness .....                          | 8    |
|         | Electric Wrap Monitor Harness .....                          | 10   |
|         | Electric Wrap Baler Harness .....                            | 12   |
|         | Main Lights Baler Harness .....                              | 14   |
|         | Right Lights Baler Harness .....                             | 16   |
|         | Overhaul .....   | 18   |
|         | Wire Harness Connector .....                                 | 18   |
|         | 18-pin Connector .....                                       | 18   |
|         | Inspection .....   | 18   |
|         | Round Connector .....  | 19   |
|         | Disassembly .....  | 19   |
|         | Assembly .....   | 20   |
|         | Gray Rectangular Connector .....                             | 21   |
|         | Disassembly .....  | 21   |
|         | Assembly .....   | 22   |
|         | Light Plug .....   | 22   |
|         | Inspection .....   | 22   |
|         | Power Plug .....   | 23   |
|         | Inspection .....   | 23   |

---

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

### Chapter 3 - Components - Operation, Location, and Testing

#### CONTENTS

| Section | Description  | Page |
|---------|--|------|
| 55 100  | Description of Operation .....                       | 3    |
|         | Components .....                                     | 3    |
|         | Switches .....                                       | 3    |
|         | Remote Over Ride Rocker Switch .....                 | 3    |
|         | Testing .....  | 4    |
|         | Micro Switch - Electric Wrap Full Bale .....         | 4    |
|         | Relays .....   | 5    |
|         | Operator's Panel Internal Relay .....                | 5    |
|         | Electronic Control Unit Internal Relays .....        | 5    |
|         | Main Power Relay .....                               | 6    |
|         | Testing (Internal Relays) .....                      | 6    |
|         | Testing (Main Power Relay) .....                     | 7    |
|         | Circuit Breakers .....                               | 9    |
|         | Operator's Panel Circuit Breaker .....               | 9    |
|         | Testing .....  | 9    |
|         | Backlights .....                                     | 10   |
|         | Operator's Panel Internal Backlights .....           | 10   |
|         | Backlight Bulb and Holder .....                      | 10   |
|         | Testing .....  | 10   |
|         | Horn .....   | 11   |
|         | Inspection .....                                     | 11   |
|         | Operator's Panel Internal Horn .....                 | 11   |
|         | Testing .....  | 11   |
|         | Ferrous Proximity Sensor .....                       | 12   |
|         | Tail Gate Ferrous Proximity Sensor .....             | 12   |
|         | Rotor Knives Cylinder Ferrous Proximity Sensor ..... | 12   |
|         | Testing (Ferrous Proximity Sensor) .....             | 13   |
|         | Rotary Potentiometer .....                           | 13   |

---

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

### Chapter 3 - Components - Operation, Location, and Testing (Continued)

#### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Bale Size Rotary Potentiometer . . . . .   | 14   |
|         | Bale Shape Rotary Potentiometer - Right and Left Side (right side shown) . . . . . | 14   |
|         | Twine Wrapper Rotary Potentiometer . . . . .                                       | 14   |
|         | Net Wrapper Rotary Potentiometer . . . . .   | 15   |
|         | Testing (Rotary Potentiometer) . . . . .   | 15   |
|         | Hall Effect Sensor . . . . .   | 16   |
|         | Net Counter Roll Sensor and Magnet . . . . .                                       | 16   |
|         | Testing (Hall Effect Sensor) . . . . .   | 16   |
|         | Actuator . . . . .   | 17   |
|         | Twine Wrapper Actuator . . . . .   | 17   |
|         | Net Wrapper Actuator . . . . .   | 17   |
|         | Testing . . . . .  | 17   |
|         | Solenoids . . . . .  | 18   |
|         | Hydraulic Rotor Reverse Solenoids (Option) . . . . .                               | 18   |
|         | Testing . . . . .  | 18   |



---

# SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

## Chapter 4 - Net-Twine Wrapper Electrical System, Troubleshooting - Component Adjustment and Calibration

### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Description of Operation .....   | 2    |
|         | Calibration (Adjustments) .....  | 5    |
|         | Power to Tractor Connector and Operator's Panel .....                  | 5    |
|         | Testing .....  | 5    |
|         | Operator Panel Programming for Model .....                             | 8    |
|         | Operator's Panel Keys (Function) .....                                 | 9    |
|         | Main Display Window Indicators .....                                   | 10   |
|         | Bale Shape Display Window .....  | 11   |
|         | Operator's Panel Self Diagnostic Test .....                            | 11   |
|         | Setup/Diagnostic Key .....   | 12   |
|         | Setup/Diagnostic Mode .....  | 14   |
|         | Setup Items .....  | 15   |
|         | Troubleshooting .....  | 52   |
|         | Error Codes .....  | 52   |
|         | "Error" and Flashing Full Bale Pointer .....                           | 53   |
|         | "Error" and Flashing Tailgate Pointer .....                            | 55   |
|         | "Error" and Flashing Left Bale Shape Bars (Right Side Art Shown) ..... | 57   |
|         | "Error" and Flashing Right Bale Shape Bars .....                       | 59   |
|         | "Error" and Flashing Bale Wrap/Actuator Pointer .....                  | 61   |
|         | Twine Bale Wrap System .....   | 65   |
|         | Electronic Circuit .....   | 69   |
|         | Testing .....  | 69   |
|         | Rotor Knife/Rotor Reverse Solenoid Valves Circuit .....                | 69   |
|         | Rotor Knife Ferrous Proximity Switch Circuit .....                     | 71   |
|         | Manual Override Switch Circuit .....                                   | 72   |
|         | Status Light Circuit .....   | 73   |
|         | RBX Series Round Baler EST Software Download Instructions .....        | 75   |

---

## SECTION 55 - ELECTRICAL SYSTEM

BOOK 2 - 87352308

### Chapter 5 – Electric /Twine Wrapper – Electrical System Troubleshooting – Component Adjustment and Calibration

#### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Description of Operation .....                              | 2    |
|         | Calibrations (Adjustments) .....                            | 4    |
|         | Power to Tractor Connector and Operator's Panel .....       | 4    |
|         | Testing .....   | 4    |
|         | Operator's Panel Programming .....                          | 5    |
|         | Operator Panel Keys and Display (Function) .....            | 6    |
|         | Setup/Diagnostic Mode .....                                 | 7    |
|         | Setup Items .....   | 8    |
|         | Troubleshooting .....                                       | 24   |
|         | Twine Wrapper Actuator Position Potentiometer Circuit ..... | 24   |
|         | Twine Wrapper Actuator Circuit .....                        | 26   |
|         | Full Bale Switch Circuit .....                              | 28   |
|         | Right Bale Shape Potentiometer Circuit .....                | 30   |
|         | Left Bale Shape Potentiometer Circuit .....                 | 31   |
|         | Horn/Alarm Circuit .....                                    | 34   |

---

# SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

## Chapter 6 - Lights

### CONTENTS

| <b>Section</b> | <b>Description</b>             | <b>Page</b> |
|----------------|--------------------------------|-------------|
| 55 000         | Description of Operation ..... | 2           |
|                | Wiring Diagram .....           | 3           |
| 55 404         | Troubleshooting .....          | 4           |
|                | Light Module .....             | 14          |
|                | Overhaul .....                 | 14          |
| 55 404         | Light Bulbs .....              | 14          |
|                | Removal .....                  | 14          |
|                | Inspection .....               | 14          |
|                | Installation .....             | 14          |

---

# SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

## Chapter 1 - Standard Pickup

### CONTENTS

| <b>Section</b> | <b>Description</b>                            | <b>Page</b> |
|----------------|---|-------------|
|                | Description of Operation .....                | 2           |
|                | Overhaul .....                                | 2           |
| 60 220         | Standard Pickup .....                         | 2           |
|                | Removal .....                                 | 2           |
|                | Installation .....                            | 4           |
| 60 220         | Tines and Guards – Standard Pickup .....      | 7           |
|                | Removal .....                                 | 7           |
|                | Installation .....                            | 7           |
| 60 220         | Cam Bearing – Standard Pickup .....           | 7           |
|                | Removal .....                                 | 7           |
|                | Installation .....                            | 9           |
| 60 220         | Cam Track – Standard Pickup .....             | 10          |
|                | Removal .....                                 | 10          |
|                | Inspection .....                              | 12          |
|                | Installation .....                            | 12          |
| 60 220         | Tine Bar and Bearings – Standard Pickup ..... | 15          |
|                | Removal .....                                 | 15          |
|                | Inspection .....                              | 16          |
|                | Installation .....                            | 16          |
| 60 220         | Reel Disc and Shaft – Standard Pickup .....   | 18          |
|                | Removal .....                                 | 18          |
|                | Inspection .....                              | 20          |
|                | Assembly .....                                | 21          |

---

# SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

## Chapter 2 - Wide Pickup with Stuffer - 1.5 M

### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Description of Operation .....                                     | 3    |
|         | Overhaul .....   | 3    |
| 60 220  | Wide Pickup with Stuffer – 1.5 M .....                             | 3    |
|         | Removal .....  | 3    |
|         | Installation .....   | 6    |
| 60 220  | Tines and Guards – 1.5 M Wide Pickup .....                         | 9    |
|         | Center Tine .....  | 9    |
|         | Removal .....  | 9    |
|         | Installation .....   | 9    |
|         | End Tine .....   | 10   |
|         | Removal .....  | 10   |
|         | Installation .....   | 10   |
| 60 220  | Cam Bearing – 1.5 M Wide Pickup .....                              | 11   |
|         | Removal .....  | 11   |
|         | Installation .....   | 12   |
| 60 220  | Cam Track – 1.5 M Wide Pickup .....                                | 14   |
|         | Removal .....  | 14   |
|         | Inspection .....   | 15   |
|         | Installation .....   | 15   |
| 60 220  | Tine Bar – 1.5 M Wide Pickup .....                                 | 17   |
|         | Removal .....  | 17   |
|         | Installation .....   | 18   |
| 60 220  | Reel Disc, Cam Arm Shafts and Reel Shaft – 1.5 M Wide Pickup ..... | 20   |
|         | Removal .....  | 20   |
|         | Inspection .....   | 22   |
|         | Installation .....   | 22   |
| 60 220  | Auger, Bearing and Drive Chain – 1.5 M Wide Pickup .....           | 26   |
|         | Removal .....  | 26   |
|         | Assembly .....   | 27   |

---

## SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

### Chapter 2 - Wide Pickup with Stuffer - 1.5 M (Continued)

#### CONTENTS

| Section | Description  | Page |
|---------|--|------|
| 60 220  | Reel Sprocket and Bearing– 1.5 M Wide Pickup ..... | 30   |
|         | Removal .....                                      | 30   |
|         | Installation .....                                 | 30   |
| 60 220  | Stuffer– 1.5 M Wide Pickup .....                   | 32   |
|         | Removal .....                                      | 32   |
|         | Installation .....                                 | 34   |

## SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

### Chapter 3 - Wide Pickup with Stuffer - 1.8 M and 2.1 M

#### CONTENTS

| Section | Description                                  | Page |
|---------|--|------|
| 60 000  | Description of Operation .....               | 3    |
|         | Overhaul .....                               | 3    |
| 60 220  | Wide Pickup with Stuffer – 1.8 & 2.1 M ..... | 3    |
|         | Removal .....                                | 3    |
|         | Installation .....                           | 7    |
| 60 220  | Tines and Guards –1.8 & 2.1 M Pickup .....   | 10   |
|         | Removal .....                                | 10   |
|         | Installation .....                           | 10   |
| 60 220  | Cam Bearing – 1.8 & 2.1 M Pickup .....       | 11   |
|         | Removal .....                                | 11   |
|         | Installation .....                           | 15   |
| 60 220  | Cam Track –1.8 & 2.1 M Pickup .....          | 17   |
|         | Removal .....                                | 17   |
|         | Inspection .....                             | 20   |
|         | Installation .....                           | 21   |

---

## SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

### Chapter 3 - Wide Pickup with Stuffer - 1.8 M and 2.1 M (Continued)

#### CONTENTS

| Section | Description   | Page |
|---------|---|------|
| 60 220  | Tine Pipe and Bearings – 1.8 & 2.1 M Pickup .....         | 24   |
|         | Removal .....   | 24   |
|         | Inspection .....  | 25   |
|         | Installation .....  | 25   |
| 60 220  | Reel Disc and Hex Shaft – 1.8 & 2.1 M Pickup .....        | 27   |
|         | Removal .....   | 27   |
|         | Inspection .....  | 28   |
|         | Installation .....  | 29   |
| 60 220  | Auger, Bearing and Drive Chain – 1.8 & 2.1 M Pickup ..... | 33   |
|         | Removal .....   | 33   |
|         | Installation .....  | 34   |
| 60 280  | Pickup Stuffer Frame – 1.8 & 2.1 M Pickup .....           | 36   |
|         | Removal .....   | 36   |
|         | Inspection .....  | 42   |
|         | Assembly .....  | 43   |
|         | Installation .....  | 43   |
| 60 280  | Jackshaft Outer Bearing – 1.8 & 2.1 M Pickup .....        | 51   |
|         | Removal .....   | 51   |
|         | Installation .....  | 52   |
| 60 280  | Jackshaft Inner Bearing – 1.8 & 2.1 M Pickup .....        | 54   |
|         | Removal .....   | 54   |
|         | Installation .....  | 57   |
| 60 280  | Jackshaft - 1.8 & 2.1 M Pickup (With Jaw Clutch) .....    | 61   |
|         | Removal .....   | 61   |
|         | Inspection .....  | 64   |
|         | Assembly .....  | 65   |
| 60 280  | Stuffer Fork - 1.8 & 2.1 M Pickup .....                   | 70   |
|         | Removal .....   | 70   |
|         | Inspection .....  | 73   |
|         | Assembly .....  | 73   |
|         | Installation .....  | 74   |

---

# SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

## Chapter 4 - Wide Pickup with Rotor - 2.1 M

### CONTENTS

| Section | Description                              | Page |
|---------|--|------|
|         | Special Tools .....                      | 3    |
|         | Description of Operation .....           | 3    |
|         | Overhaul .....                           | 4    |
| 60 260  | Rotor Pickup .....                       | 4    |
|         | Removal .....                            | 4    |
|         | Installation .....                       | 8    |
| 60 260  | Rotor Knife Carriage .....               | 13   |
|         | Removal .....                            | 13   |
|         | Disassembly .....                        | 16   |
|         | Assembly .....                           | 20   |
|         | Installation .....                       | 24   |
| 60 260  | Rotor Knife Spring .....                 | 26   |
|         | Removal .....                            | 26   |
|         | Installation .....                       | 27   |
| 60 260  | Rotor .....                              | 29   |
|         | Removal .....                            | 29   |
|         | Inspection .....                         | 33   |
|         | Installation .....                       | 34   |
| 60 260  | Rotor Frame .....                        | 39   |
|         | Removal .....                            | 39   |
|         | Disassembly (Rotor) .....                | 43   |
|         | Inspection (Rotor) .....                 | 45   |
|         | Assembly (Rotor) .....                   | 45   |
|         | Disassembly (Rotor Knife Carriage) ..... | 48   |
|         | Replacement (Rotor Knife Carriage) ..... | 50   |
|         | Assembly (Rotor Knife Carriage) .....    | 50   |
|         | Installation .....                       | 53   |



---

## SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

### Chapter 4 - Wide Pickup with Rotor - 2.1 M (Continued)

#### CONTENTS

| Section | Description                             | Page |
|---------|---|------|
| 60 260  | Rotor Left Bearing and Jackshaft .....  | 57   |
|         | Removal .....                           | 57   |
|         | Disassembly .....                       | 58   |
|         | Inspection .....                        | 59   |
|         | Assembly .....                          | 60   |
|         | Installation .....                      | 63   |
| 60 260  | Rotor Right Bearing and Jackshaft ..... | 65   |
|         | Removal .....                           | 65   |
|         | Disassembly .....                       | 66   |
|         | Inspection .....                        | 67   |
|         | Assembly .....                          | 68   |
|         | Installation .....                      | 68   |

## SECTION 62 - PRESSING

BOOK 4 - 87352310

### Chapter 1 - Take up Arm

#### CONTENTS

| Section | Description                    | Page |
|---------|--------------------------------|------|
| 62 080  | Description of Operation ..... | 2    |
|         | Overhaul .....                 | 2    |
|         | Take Up Arm .....              | 2    |
|         | Removal .....                  | 2    |
|         | Inspection .....               | 9    |
|         | Assembly .....                 | 9    |

---

# SECTION 62 - PRESSING

BOOK 4 - 87352310

## Chapter 2 - Belts

### CONTENTS

| <b>Section</b> | <b>Description</b>             | <b>Page</b> |
|----------------|--------------------------------|-------------|
|                | Specifications .....           | 2           |
|                | Special Tools .....            | 2           |
|                | Description of Operation ..... | 3           |
|                | Troubleshooting .....          | 4           |
| 62 140         | Belt Failure Analysis .....    | 4           |
| 62 140         | Overhaul .....                 | 8           |
|                | Belt Tension Removal .....     | 8           |
| 62 140         | Belt Lacing Cables .....       | 9           |
|                | Removal .....                  | 9           |
|                | Installation .....             | 9           |
| 62 140         | Laced Belt .....               | 10          |
|                | Removal .....                  | 10          |
|                | Repair .....                   | 10          |
|                | Installation .....             | 14          |
| 62 140         | Belt Storage .....             | 15          |
| 62 140         | Belt Tracking .....            | 15          |
| 62 140         | Belt Slippage .....            | 16          |
| 62 140         | Endless Belt .....             | 17          |
|                | Replacement .....              | 17          |
|                | Removal .....                  | 18          |
|                | Inspection .....               | 27          |
|                | Installation .....             | 27          |

---

## SECTION 62 - PRESSING

BOOK 4 - 87352310

### Chapter 3 - Starter Roll

#### CONTENTS

| Section | Description                    | Page |
|---------|--------------------------------|------|
| 62 000  | Description of Operation ..... | 2    |
|         | Overhaul .....                 | 2    |
| 62 150  | Starter Roll .....             | 2    |
|         | Removal .....                  | 2    |
|         | Disassembly .....              | 5    |
|         | Inspection .....               | 6    |
|         | Assembly .....                 | 6    |

## SECTION 62 - PRESSING

BOOK 4 - 87352310

### Chapter 4 - Stationary Roll

#### CONTENTS

| Section | Description                    | Page |
|---------|--------------------------------|------|
| 62 000  | Description of Operation ..... | 2    |
|         | Overhaul .....                 | 2    |
| 62 150  | Stationary Roll .....          | 2    |
|         | Removal .....                  | 2    |
|         | Inspection .....               | 5    |
|         | Assembly .....                 | 5    |

---

## SECTION 62 - PRESSING

BOOK 4 - 87352310

### Chapter 5 - Floor Roll

#### CONTENTS

| <b>Section</b> | <b>Description</b>             | <b>Page</b> |
|----------------|--------------------------------|-------------|
| 62 000         | Description of Operation ..... | 2           |
|                | Overhaul .....                 | 2           |
| 62 160         | Floor Roll .....               | 2           |
|                | Removal .....                  | 2           |
|                | Disassembly .....              | 4           |
|                | Inspection .....               | 4           |
|                | Assembly .....                 | 5           |
|                | Installation .....             | 5           |

## SECTION 62 - PRESSING

BOOK 4 - 87352310

### Chapter 6 - Belt Rolls

#### CONTENTS

| <b>Section</b> | <b>Description</b>             | <b>Page</b> |
|----------------|--------------------------------|-------------|
| 62 000         | Description of Operation ..... | 3           |
|                | Overhaul .....                 | 4           |
| 62 140         | Drive Roll .....               | 4           |
|                | Removal .....                  | 4           |
|                | Inspection .....               | 11          |
|                | Installation .....             | 11          |
| 62 140         | Drive Shaft Bearings .....     | 24          |
|                | Removal .....                  | 24          |
|                | Inspection .....               | 29          |
|                | Installation .....             | 29          |
| 62 140         | Backwrap Roll .....            | 38          |
|                | Removal .....                  | 38          |
|                | Inspection .....               | 41          |
|                | Installation .....             | 41          |

---

# SECTION 62 - PRESSING

BOOK 4 - 87352310

## Chapter 6 - Belt Rolls (Continued)

### CONTENTS

| Section | Description                                   | Page |
|---------|---|------|
| 62 140  | Tailgate Nose Roll .....                      | 43   |
|         | Removal .....                                 | 44   |
|         | Disassembly .....                             | 45   |
|         | Inspection .....                              | 45   |
|         | Assembly .....                                | 45   |
|         | Installation .....                            | 46   |
| 62 140  | Take-up Arm Rolls .....                       | 49   |
|         | Removal .....                                 | 49   |
|         | Inspection .....                              | 55   |
|         | Installation .....                            | 56   |
| 62 140  | Tailgate Top Rear Idler Roll .....            | 60   |
|         | Removal .....                                 | 60   |
|         | Inspection .....                              | 62   |
|         | Installation .....                            | 62   |
| 62 140  | Tailgate Top Front Idler Roll .....           | 63   |
|         | Removal .....                                 | 63   |
|         | Inspection .....                              | 65   |
|         | Installation .....                            | 65   |
| 62 140  | Adjustable Tailgate Roll .....                | 67   |
|         | Removal .....                                 | 67   |
|         | Disassembly .....                             | 69   |
|         | Assembly .....                                | 70   |
|         | Installation .....                            | 70   |
| 62 140  | Lower Tailgate Roll (RBX462 and RBX562) ..... | 73   |
|         | Removal .....                                 | 73   |
|         | Disassembly .....                             | 74   |
|         | Assembly .....                                | 74   |
|         | Installation .....                            | 74   |

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)