
WDX1002S, WDX1202S, WDX1202 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 25 - FRONT MECHANICAL DRIVE	11
SECTION 29 - HYDROSTATIC TRANSMISSION	12
SECTION 33 - BRAKES AND CONTROLS	16
SECTION 35 - HYDRAULIC SYSTEMS	17
SECTION 44 - REAR AXLE	22
SECTION 50 - CLIMATE CONTROL	24
SECTION 55 - ELECTRICAL SYSTEMS	30
SECTION 58 - HEADER ATTACHMENTS	51
SECTION 88 - OPTIONAL EQUIPMENT	56
SECTION 90 - PLATFORM, CAB AND DECALS	60

The following pages are the collation of the contents pages from each section and chapter of the WDX1002S, WDX1202S and WDX1202 Repair manual. Complete Repair part # 87580753.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the WDX1002S, WDX1202S and WDX1202 Self-Propelled Windrowers.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87580754

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Precautionary Statements	2
	Safety	3
	General Safety Information	5
	Protecting the Electronic/Electrical Systems During Charging or Welding	7
	Introduction	8
	About Improvements	8
	Product Identification Numbers (PIN)	9
	Engine PIN Number	9
	Company Policy	10
	Parts and Accessories	10
	Lubrication	10
	Recommended Lubricants and Coolants	11
	Sealants	12
	Minimum Hardware Tightening Torques	13
	Installation of Adjustable Fittings in Straight Thread O ring Bosses	15
	Standard Torque Data for Hydraulic Tubes and Fittings	15
	Pipe Thread Fitting Torque	16
	Installation of ORFS (O ring Flat Faced) Fittings	16
	Specifications	17

SECTION 10 - ENGINE

BOOK 1 - 87580754

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Engine Overhaul Introduction	5
	Description of Operation	6
	Specifications	6
	Special Tools	14
	Torques	16
	Overhaul	18
	Engine	18
	Removal	18
	Turbocharger	24
	Removal	24
	Fuel System	24
	Removal	24
	Thermostat	29
	Removal	29
	Oil Cooler	29
	Removal	29
	Water Pump	30
	Removal	30
	Cylinder Head	30
	Removal	30
	Front Housing	31
	Removal	31
	Oil Pump	32
	Removal	32
	Rear Housing	33
	Removal	33
	Oil Pan	34
	Removal	34
	Timing Gears	34
	Removal	34
	Pistons	35
	Removal	35

SECTION 10 - ENGINE

BOOK 1 - 87580754

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Main Bearings	36
	Removal	36
	Crankshaft	36
	Removal	36
	Oil Nozzles	37
	Removal	37
	Camshaft	37
	Removal	37
	Tappets	38
	Removal	38
	Block	38
	Inspection	38
	Crankshaft	40
	Inspection	40
	Oil Pump Gear	42
	Inspection, Removal, and Installation	42
	Crankshaft	42
	Installation for Inspection	42
	Camshaft	44
	Inspection	44
	Camshaft Bushings	45
	Inspection and Installation	45
	Tappets	46
	Inspection	46
	Piston	46
	Disassembly	46
	Inspection	47
	Piston	47
	Assembly	47
	Connecting Rod	50
	Inspection	50

SECTION 10 - ENGINE

BOOK 1 - 87580754

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Bushings	50
	Inspection	50
	Rod Markings	51
	Connecting Rods	51
	Inspection	51
	Piston and Connecting Rod	53
	Assembly	53
	Piston Rings	54
	Installation	54
	Piston and Rod Assembly	54
	Installation for Clearance	54
	Rod Bearing	55
	Clearance	55
	Piston	57
	Height Measurement	57
	Cylinder Head	57
	Valve	57
	Removal	57
	Valve Seals	58
	Removal	58
	Inspection/Installation	58
	Cylinder Head	58
	Inspection	58
	Valves	59
	Specifications	59
	Inspection	60
	Valve Stem Play	61
	Valve Guides	61
	Inspection	61
	Valve Seats	61
	Inspection	61

SECTION 10 - ENGINE

BOOK 1 - 87580754

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Valve Springs	63
	Inspection of the Intake and Exhaust Valve Springs	63
	Cylinder Head	63
	Assembly	63
	Installation	64
	Push Rods	64
	Rocker Arm Group	65
	Inspection	65
	Installation	65
	Block Assembly	67
	Tappets	67
	Installation	67
	Camshaft	67
	Installation	67
	Oil Nozzles	68
	Installation	68
	Crankshaft	69
	Installation	69
	Piston and Connecting Rod	70
	Installation	70
	Timing Gearbox	72
	Installation	72
	Camshaft	73
	Timing	73
	Fuel Pump	74
	Installation	74
	Engine Components	76
	Flywheel Housing	76
	Installation	76
	Oil Pump	82
	Installation	82

SECTION 10 - ENGINE

BOOK 1 - 87580754

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Water Pump	82
	Installation	82
	Front Cover	83
	Installation	83
	Crankshaft Pulley	84
	Installation	84
	Oil Pan	85
	Installation	85
	Oil Cooling System	86
	Installation	86
	Injector Assembly	86
	Installation	86
	Valve Covers	87
	Installation	87
	Exhaust Manifold	87
	Installation	87
	Turbocharger	88
	Installation	88
	Engine	89
	Installation	89
	Troubleshooting	96

SECTION 10 - ENGINE

BOOK 1 - 87580754

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	2
	4-Cyl. Engine Without Charge Air Cooling	3
	4-Cyl. Engine Setup For Charge Air Cooling	4
	Torques	5
	Special Tools	6
	Description of Operation	7
	Injection System	7
	Injection Pump	8
	Mechanical Fuel Pump	17
	Fuel Filter	18
	Injection Pump	20
	Removal	20
	Installation	24
	Calibration	29
	Injection Pump	29
	Timing	29
	Injectors	33
	Removal	33
	Reinstallation	34
	Fuel System	36
	Bleeding	36
	Fuel Tanks	37
	Removal	37
	Install	42

SECTION 10 - ENGINE

BOOK 1 - 87580754

Chapter 3 - Air Intake

CONTENTS

Section	Description	Page
	Description of Operation	2
	Air Intake System	2
	Specifications	3
	Air Cleaner	3
	Turbocharger	3
	Sealants	3
	General Torques	4
	Description of Operation	5
	Turbocharger	5
	Overhaul	6
	Turbocharger	6
	Removal	6
	Inspection	6
	Installation	8
	Air Filter	9
	Inspection	9
	Primary (Outer) Air Filter	9
	Removal	9
	Cleaning With Air	11
	Cleaning By Washing	11
	Installation	12
	Secondary (Inner) Air Filter	13
	Removal	13
	Installation	13
	Intake Manifold Assembly	14
	Installation	14
	Troubleshooting	15

SECTION 10 - ENGINE

BOOK 1 - 87580754

Chapter 4 - Cooling System

CONTENTS

Section	Description	Page
	Specifications	2
	Cooling System	2
	Overview - Cooling System	3
	Description of Operation	5
	Overhaul	5
	Thermostat	5
	Removal	5
	Inspection	6
	Installation	6
	Coolant Temperature Sender	6
	Removal	6
	Installation	7
	Fan Belt	7
	Removal	7
	Installation	7
	Spring-loaded Automatic Fan Belt Tensioner	8
	Removal	8
	Installation	8
	Inspection	8
	Coolant Pump	9
	Removal	10
	Installation	10
	Radiator	11
	Removal	11
	Installation	14
	Troubleshooting	17

SECTION 10 - ENGINE

BOOK 1 - 87580754

Chapter 5 - Lubrication System

CONTENTS

Section	Description	Page
	Description of Operation	2
	Lubrication System	2
	Oil Cooler	3
	Oil Pump	4
	Oil Sump	5
	Oil Fume Ventilation	6
	Specifications	7
	Oil Specification	7
	Oil Pump	7
	Repair	7
	Oil Filter Mount and Oil Cooler	7
	Removal	7
	Installation	9
	Oil Pan	9
	Removal	9
	Installation	10

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 2 - 87580755

Chapter 1 - Front Mechanical Drive

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	6
	Front Mechanical Drive	6
	Removal	6
	Installation	9
	Planetary Gearbox Drive	12
	Disassembly	13
	Assembly	17
	Labor Guide	23

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87580755

Chapter 1 - Ground Drive

CONTENTS

Section	Description	Page
	Specifications	5
	Hydrostatic Transmission Identification	6
	Torque Specifications	7
	Torque Chart	7
	Motor Area	7
	Description of Operation	8
	Pumps	9
	High Pressure Relief Valves	10
	Check Valves	10
	Charge Pump	11
	Charge Relief Valve (Pump)	11
	Header Lift Pump	11
	Motors	11
	Fixed Displacement Motor	11
	Variable Displacement Motor	11
	Reservoir	13
	Oil Flow	13
	Neutral	13
	Forward/Reverse	13
	WDX1002S/1202S Hydraulic System Diagram	14
	WDX1202 Hydraulic System Diagram	16
	Solenoid Valve (2-Speed Drive Motor Only)	18
	Low-Range Operation	18
	High-Range Operation	18
	Cooling Circuit	18
	Relief Valve	18
	Operation	18
	Linkage	19
	Operation	19
	Sauer-Danfoss Authorized Service Centers – North America	20
	Troubleshooting	24
	Excessive Noise	24

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87580755

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Overheating Transmissions	24
	Loss of Propulsion	24
	Control Linkage Inspection	25
	High-Pressure Relief Valve Check	25
	Charge Pump Relief Valve	26
	Check Valve	26
	Pressure Testing	27
	Port Locations	29
	Charge Pressure (WDX1002S/1202S)	30
	Charge Pressure (WDX1202)	30
	Charge Pressure System Test	31
	Tandem Pump Charge Pressure Test	31
	Complete Charge System Test (WDX1202 Only)	33
	High Pressure Relief Valve Test	35
	Gage Port and Relief Valve Locations	35
	Pressure Port Locations	37
	Case Pressure Test (Pump)	38
	Case Pressure Test (Motor, WDX1202 only)	38
	Suction Test	39
	Case Flow Test (WDX1202 Only)	39
	Ground Speed Circuit (WDX1002S/1202S)	40
	Operation	40
	Troubleshooting	40
	Ground Speed Display Does Not Function (WDX1002S/1202S)	41
	Ground Speed Circuit (WDX1202)	42
	Operation	42
	Troubleshooting	42
	Ground Speed Display Does Not Function (WDX1202)	43
	Troubleshooting Charts	45
	Windrower Will Not Shift into High Range	45
	Windrower Will Not Shift into Low Range	46
	Charge Pump	47

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87580755

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Hydrostatic System	48
	Explanation of Terms Used in Failure Analysis	51
	Lack of Lubrication	51
	Operating at Excessive Temperature Levels	51
	Use of Improper Fluid	51
	Cavitation	51
	Overspeeding of the Unit	51
	Parts Worn or Scored From Contamination	51
	Abrasive Contaminants	51
	Plates Scored from Water in Oil (Non-Particle Contaminants)	51
	Minor Repairs	52
	Tandem Pump	53
	Port Locations	53
	Rear Half Port Breakdown	54
	Front Half Port Breakdown	56
	Shaft Seal Replacement	58
	Charge Pump Removal	59
	Charge Pump Inspection	60
	Charge Pump Assembly	61
	O Ring Seals	62
	Trunnion Seal (Control Shaft Side)	63
	Trunnion Cover (Plain)	65
	Tandem Pump Removal	66
	Tandem Pump Installation	69
	Ground Drive Motor	71
	Removal	71
	Inspection/Parts Breakdown	72
	Installation	76
	Start-Up	77
	Maintenance	77
	Worm Shaft	78
	Removal	78
	Installation	79

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87580755

Chapter 2 - Propulsion System

CONTENTS

Section	Description	Page
	WDX1002S/1202S	2
	Pintle Arm Rotary Potentiometer (R21)	2
	Removal	2
	Installation	2
	Testing	3
	Propulsion Rotary Potentiometer (R21)	4
	Removal	4
	Installation	4
	Testing	5
	Neutral Adjustment	6
	WDX1202	27
	Theory of Operation	27
	Pintle Arm Rotary Potentiometer (R21)	28
	Removal	28
	Installation	28
	Testing	29
	Propulsion Rotary Position Sensor (R23)	30
	Removal	30
	Installation	30
	Testing	31
	MFH Rotary Position Sensor (R18)	32
	Removal	32
	Installation	33
	Testing	34
	Neutral Adjustment	35

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87580755

Chapter 3 - Active Calibrations (WDX1202 only)

CONTENTS

Section	Description	Page
	Active Calibrations	2

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87580755

Chapter 4 - MFH Calibration (WDX1202 Only)

CONTENTS

Section	Description	Page
	Dealer Setup Menu Navigation	2
	MFH Calibration	2

SECTION 33 - BRAKES AND CONTROLS

BOOK 2 - 87580755

Chapter 1 - Brakes and Controls

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	2
	Brake Assembly	2
	Removal	2
	Installation	5
	Disassembly	6
	Rotating, Stationary, and Primary Disc Assembly	12
	Installation	12
	Brake Bleeding Procedure	16
	Labor Guide	18

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580756

Chapter 1 - Hydraulic Systems

CONTENTS

Section	Description	Page
	Introduction	5
	System Component Locations	6
	Reading Diagram Symbols	7
	WDX1002S/1202S Hydraulic System Diagram	12
	WDX1202 Hydraulic System Diagram	14
	Hydraulic System Operation	16
	Ground Drive	16
	Circuit Diagrams	18
	WDX1002S/1202S	18
	WDX1202	18
	Header Drive	26
	Circuit Diagrams	28
	WDX1002S/1202S	28
	WDX1202	28
	Theory of Operation	35
	Header Lift	35
	Circuit Diagrams	38
	WDX1002S/1202S/1202	38
	Theory of Operation	43
	Header Tilt	43
	Circuit Diagrams	44
	WDX1002S/1202S/1202	44
	Auxiliary Engine Mounted Hydraulic Pump (optional)	47
	Control Valve Manifold (WDX1002S/1202S/1202)	48
	Service Parts	48
	Valve Identification Codes	49
	WDX1002S/1202S Component Identification and Location	50
	Right-hand (RH) View	50
	Plan View	51
	Front View	52
	Rear View	53
	Bottom View	54
	Left-hand (LH) View (Hidden Against Mounting Plate)	55
	WDX1002S/1202S Solenoid Engagement Chart	56
	WDX1202 Component Identification and Location	57
	Right-hand (RH) View	57
	Plan View	58
	Front View	59

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580756

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Rear View	60
	Bottom View	61
	Left-hand (LH) View (Hidden Against Mounting Plate)	62
	WDX1202 Solenoid Engagement Chart	63
	Auxiliary Control Valve (Speed Control) Manifold (WDX1002S/1202S/1202)	64
	Service Parts	64
	Valve Identification Codes	65
	Auxiliary Control Valve Manifold	66
	Component Identification and Location	66
	Right-Hand (RH) View	66
	Plan View	67
	Bottom View	68
	Left-hand (LH) View (Hidden Against Mounting Plate)	69
	Header Control Valve Manifold (WDX1002S/1202S/1202)	70
	Service Parts	70
	Valve Identification Codes	71
	Header Control Manifold - WDX1002S/1202S	72
	Component Identification and Location	72
	Right-hand (RH) View	72
	Front View	73
	Top View	74
	Header Control Manifold - WDX1202	75
	WDX1202 Component Identification and Location	75
	Right-hand (RH) View	75
	Front View	76
	Top View	77
	Cartridge Valves (Solenoid-operated)	78
	Main Control Manifold Valves	79
	Two-way Two-position (Normally Closed) Poppet Valves	79
	Three-way Two-position Spool Valve	81
	Two-way Two-position (Normally Open) Poppet Valve	82
	(Normally Open) Pressure Reducing/Relieving Valves	83
	(Normally Open) Solenoid-operated Relief Valves	84
	(Normally Closed) Solenoid-operated Proportional Flow Control	84
	Replacement	85
	WDX1002S/1202S Main Manifold – Cartridge Torque Requirements	86
	WDX1202 Main Manifold – Cartridge Torque Requirements	87
	Installation	88

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580756

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Solenoid Coils	89
	Removal	89
	Installation	89
	Cartridge Valves (Non-solenoid-operated)	90
	Direct-acting Flow Control Needle Valve	90
	Pilot-operated Relief Valve	91
	Differential-Pressure-Sensing Valve	92
	WDX1002S/1202S Header Control Manifold – Cartridge Torque Requirements	93
	WDX1202 Header Control Manifold – Cartridge Torque Requirements	94
	Needle Valve (AD) and Piloted Relief Valves	95
	Replacement	95
	Adjustment	95
Minor Repairs		96
	Accumulators - Header Lift	96
	Removal	96
	Inspection	97
	Installation	97
	Accumulator - Surge Suppression	99
	Specifications	99
	Hydraulic Accumulator Breakdown	100
	Checking Pre-Charge	101
	Pre-Charging Procedure	102
	Removal	103
	Installation	103
Major Components		104
	Header Drive Pump	104
	Removal	104
	Inspection	105
	Installation	105
	Adjustment Instructions	106
	Header Drive System Pressure Adjustment (Valve L-30)	107
	Pump Flow	114
	Header Lift Pump	115
	Removal	115
	Disassembly	115
	Inspection	117
	Assembly	117
	Installation	120

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580756

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Adjustment Instructions	121
	Header Lift System Pressure Adjustment (Valve L-03)	122
	Auxiliary Engine Mounted Hydraulic Pump (optional)	128
	Removal	128
	Inspection	128
	Installation	128
	Start-up Procedure	129
	Maintenance	130
	Cooling Circuit Bypass Pressure	131
	Temperatures	131
	Troubleshooting	132
	General	132
	Reduced System Pressure	132
	Reduced Hydraulic Flow	132
	Excessive Noise	132
	Overheating	132
	Power Loss	132
	Explanation of Terms Used In Failure Analysis	133
	Parts Evaluation	134
	Discoloration	134
	Scratches or Grooves	134
	Rework	134
	Repeat Failures	134
	Troubleshooting	135
	Header Drive System	135
	Header Drive Pump	138
	Header Drive Motor	139
	Service Techniques	140
	General	140
	Oil Level	140
	Hoses and Tubes	141
	O Ring Flat Face Seal Fittings	141
	O Ring Flat Face Seal Fitting Torque Values	141
	Adjustments	142
	Header Drive Motors	142
	Sauer-Danfoss Authorized Service Centers - North America	143
	Tilt Cylinder	147

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580756

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Removal	147
	Inspection	151
	Assembly	151
Lift Cylinders		155
	Removal	155
	Inspection	159
	Assembly	159
Zero Leak Plugs		163
	Removal	163
	Replacement	163
Plug Torque Requirements		164
Zero-Leak Plug to SAE J514 ORB Plug Cross Reference		164
Hydraulic Reservoir Replacement - WDX1002S and WDX1202S		165
	Removal	165
	Installation	166
	Tank Preparation (Plastic Tanks only)	167
Hydraulic Reservoir Replacement - WDX1202		169
	Removal	169
	Installation	170
	Tank Preparation (Plastic Tanks only)	171

SECTION 44 - REAR AXLE

BOOK 3 - 87580756

Chapter 1 - Non-Suspended Rear Axle

CONTENTS

Section	Description	Page
	Introduction	2
	Overview	2
	Specifications	3
	Special Tools	3
	Description of Operation	4
	Extensions and Axle Tube	4
	Adjustments	3
	Wheel Width	8
	Channel Widths (Spindle to Spindle)	8
	Axle Extension Position	8
	Overhaul	9
	Wheel, Axle Shaft and Hub	9
	Removal	9
	Inspection	10
	Installation	12
	Axle Support Fork	15
	Removal	15
	Inspection	15
	Installation	16
	Rear Axle Extension	18
	Removal	18
	Inspection	19
	Installation	19
	Axle Tube and Center Pivot Pin	20
	Removal	20
	Inspection	21
	Installation	22
	Labor Guide	24

SECTION 44 - REAR AXLE

BOOK 3 - 87580756

Chapter 2 - Suspended Rear Axle

CONTENTS

Section	Description	Page
	Introduction	2
	Overview	2
	Special Tools	2
	Specifications	3
	Description of Operation	4
	Extensions and Axle Tubes	4
	Adjustments	7
	Wheel Width	7
	Extension Widths (Spindle to Spindle)	7
	Axle Extension Position	7
	Overhaul	8
	Wheel, Axle Shaft and Hub	8
	Removal	8
	Inspection	10
	Installation	11
	Axle Support Fork	13
	Removal	13
	Inspection	13
	Installation	14
	Extension	15
	Removal	15
	Inspection	16
	Installation	17
	Air Spring	18
	Removal	18
	Inspection	19
	Installation	20
	Axle Tubes and Pivot Pins	21
	Removal	21
	Inspection	22
	Installation	23
	Labor Guide	25

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87580756

Chapter 1 - Climate Control - WDX1002S and WDX1202S

CONTENTS

Section	Description	Page
	Specifications	4
	Special Tools	4
	Description of Operation	5
	The Basics of Refrigeration	5
	Air Conditioning Process	6
	R134a Refrigerant Information	7
	Refrigerant Ingredients	7
	Lubricants	7
	Refrigerant (R134a)	7
	System Components	11
	Compressor Pump	11
	Compressor Clutch (L-27)	11
	Air Conditioning Filter	11
	Condenser	12
	Receiver/Drier	12
	Expansion Valve	13
	Description	13
	Valve Components	13
	Operation	14
	Port Identification	17
	Evaporator	17
	Blower Fan	17
	Description of Operation - Climate Controls	18
	Switches and Controls	18
	Air Conditioner Temperature (Thermostatic) Control Switch	18
	Blower Fan Switch	18
	Compressor Protection Switches	19
	High-pressure Cutout Switch (S-40)	19
	Low-pressure Cutout Switch (S-69)	19

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87580756

Chapter 1 - Climate Control - WDX1002S and WDX1202S (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting and Servicing Air Conditioning System	20
	General Safety and Service Precautions	20
	Cleanliness	21
	Preliminary Troubleshooting and Testing	21
	Operational Checks	21
	Diagnosis Charts - Air Conditioning System	22
	Test Procedure: Stabilizing the System	24
	Test Ports	24
	Pressure/Temperature Relationships	25
	Leak Testing	25
	Refilling	25
	Contaminants	26
	General	26
	Preventing Mixing of Service Equipment	26
	Refrigerant Extraction and Recycling Equipment	26
	Using Extraction Equipment	27
	Using Recycled Equipment	27
	Recycling vs. Reclaiming	27
	Containment of Air Conditioning Refrigerants	27
	Recovery	28
	Flushing	28
	Recharging/Refilling	28
	Using a Manifold Gauge Set	29
	Checking Refrigerant for Excess Air	29
	Containers for Storing Recycled Refrigerant	30
	Disposal of Empty or Near-Empty Disposable Containers	30
	Applicable SAE Standards	30
	Gauge Reading	31
	Manifold Gauge Readings and Interpretations	35
	Performance Test Examples	35
	Overhaul - Air Conditioning System	46
	Condenser	46

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87580756

Chapter 1 - Climate Control - WDX1002S and WDX1202S (Continued)

CONTENTS

Section	Description	Page
	Removal	46
	Inspection and Repair	46
	Installation	46
	Receiver/Drier	47
	Removal	47
	Installation	47
	High (S-40) and Low (S-69) Pressure Switches	47
	Removal	47
	Installation	47
	Blower Motor (M-20) and Fan Assembly	48
	Removal	48
	Inspection	48
	Installation	48
	Expansion Valve	49
	Removal	49
	Installation	49
	Evaporator Core	49
	Removal	49
	Inspection	49
	Installation	49
	Compressor and Clutch - Special Tools	50
	Compressor Clutch Components	50
	Removal	50
	Installation	51
	Overhaul - Compressor	51
	Clutch and seal replacement	51
	Removal	51
	Inspection and Assembly	55
	Labor Guide	60

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87580756

Chapter 2 - Climate Control - WDX1202

CONTENTS

Section	Description	Page
	Specifications	4
	Description of Operation	5
	The Basics of Refrigeration	5
	Air Conditioning Process	6
	R134a Refrigerant Information	7
	Refrigerant Ingredients	7
	Lubricants	7
	Refrigerant (R134a)	7
	Cab Air Flow	8
	System Components	10
	Compressor Pump	10
	Compressor Clutch (L-27)	10
	Air Conditioning Filters	11
	Removal/Replacement	11
	Recirculation Filter	13
	Removal	14
	Cleaning with Air	15
	Condenser	15
	Receiver/Drier	16
	Expansion Valve	17
	Valve Components	17
	Operation	18
	Port Identification	21
	Evaporator	21
	Blower Fan	21
	Description of Operation - Climate Controls	22
	Control Panel - Manual Temperature Control - (A-05)	22
	Blower Fan Switch	22
	Temperature Control Switch	22
	Control Panel - (ATC) Automatic Temperature Control (if equipped)	23
	Control Operation Specifications	23
	Celsius/Fahrenheit Button	24
	Compressor Protection Switches	25
	High-pressure Cutout Switch (S-40)	25
	Low-pressure Cutout Switch (S-69)	25

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87580756

Chapter 2 - Climate Control - WDX1202 (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting and Servicing Air Conditioning System	26
	General Safety and Service Precautions	26
	Cleanliness	27
	Preliminary Troubleshooting and Testing	27
	Operational Checks	27
	ATC Troubleshooting Fault Code Chart	28
	Display Fault Codes	28
	Advanced Diagnostics	31
	Diagnosis Charts – Air Conditioning System	35
	Test Procedure: Stabilizing the System	39
	Test Ports	39
	Pressure/Temperature Relationships	40
	Leak Testing	40
	Refilling	40
	Contaminants	41
	General	41
	Preventing Mixing of Service Equipment	41
	Refrigerant Extraction and Recycling Equipment	41
	Using Extraction Equipment	42
	Using Recycled Equipment	42
	Recycling vs. Reclaiming	42
	Containment of Air Conditioning Refrigerants	42
	Recovery	43
	Flushing	43
	Recharging/Refilling	43
	Using a Manifold Gauge Set	44
	Checking Refrigerant for Excess Air	44
	Containers For Storing Recycled Refrigerant	45
	Disposal of Empty or Near-Empty Disposable Containers	45
	Applicable SAE Standards	45
	Gauge Readings	46
	Manifold Gauge Readings and Interpretations	50
	Performance Test Examples	50
	Overhaul	61
	Condenser	61
	Removal	61
	Inspection and Repair	61
	Installation	61
	Receiver/Drier	62
	Removal	62
	Installation	62

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87580756

Chapter 2 - Climate Control - WDX1202 (Continued)

CONTENTS

Section	Description	Page
	High (S-40) Pressure Switches	62
	Removal	62
	Installation	62
	Low (S-69) Pressure Switches	62
	Removal	62
	Installation	62
	Blower Motor	63
	Removal	63
	Inspection	65
	Assembly	66
	Installation	67
	Blower Fan Resistor	69
	Removal	69
	Installation	69
	Expansion Valve	69
	Removal	69
	Installation	69
	HVAC Cores	70
	Inspection and Cleaning	70
	Removal	70
	Heater Core and/or Evaporator Core	72
	Removal	72
	Inspection	73
	Installation	74
	Compressor and Clutch	77
	Compressor Clutch Components	77
	Removal	77
	Installation	78
	Checking Compressor Oil for Contamination	79
	Adding Compressor Oil	79
	Clutch Procedures	80
	Clutch Run-In	80
	Clutch Test	80
	Clutch Removal	80
	Clutch Inspection	82
	Clutch Installation	83
	Electrical Connection	84
	Tightening Torques	85
	Labor Guide	90

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Troubleshooting	3
	Fault Codes and Fault Finding	4
	Electrical Terms and Equipment	5
	Definition	5
	Electrical System Components	7
	Electrical Components Chart	7
	Rocker Switches	13
	Momentary Rocker Switches	13
	Circuit Breakers	13
	Location of Circuit Breakers - WDX1002S/1202S	14
	Location of Circuit Breakers - WDX1202	14
	Fuses	16
	Fuse Panel Identification Tables	17
	Basic Circuitry/Component Testing	19
	Continuity Test for Open Circuits	19
	Continuity Test for Short to Ground	20
	Resistance Test for Electrical Components	21
	Measuring Voltage	22
	Diodes	23
	Diode Test Procedure	23
	Electro-hydraulic Solenoid Valve Coils	24
	Test Procedure	24
	Operational Check	24
	Relays	25
	Test Procedure	26
	Welding on the Machine	26
	Wiring Harnesses and Connectors - All models	31
	Connectors	31
	Harness Splices	31
	Fuses, Relays and Switches	31
	Switch and Relay Contacts	31

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Grounds	31
	Power Sources	31
	Wire Harness Identification	31
	Wire Color Codes	32
	Primary Harness Connectors	32
	Ground Distribution System - WDX1002S/1202S	33
	Introduction	33
	Ground Distribution System - WDX1202	38
	Introduction	38
	Ground Points	38
	Function Monitoring, Machine Configuration, and Diagnostics Menus - WDX1002S and WDX1202S Models	44
	Selectable Functions Monitoring	44
	Operating Mode	44
	Configuration Mode	44
	Warning Mode	45
	Operational Mode	45
	Configuration Mode	48
	System Monitoring - WDX1002S/1202S Models	55
	Electronic Components - WDX1202 Models	57
	Function Monitoring, Machine Configuration, and Diagnostics Menus - WDX1202 Models	58
	Selectable Functions Monitoring	58
	Machine Configuration/User Setup Menu	60
	Critical Warning Displays - Automatic Shutdown	65
	Critical Warning Displays - No Shutdown	67
	Non-Critical Warning Displays	68
	Electrical Fault Codes	68
	System Monitoring - WDX1202 Models	69

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 2 - Power Distribution

CONTENTS

Section	Description	Page
	Operation and Troubleshooting (WDX1002 and WDX1202S Models)	2
	XCM Power	2
	Unswitched Power	2
	Operation	2
	Switched Power	3
	Operation	3
	Troubleshooting	3
	Power Distribution – WDX1002/1202S	4
	Introduction	4
	Main Distribution Panel – Fuse Block	5
	Unswitched Power	6
	Switched Power	7
	XCM Function and Configure Select Switches	17
	Operation	17
	Troubleshooting	17
	Operation and Troubleshooting (WDX1202 Models)	18
	XCM Power	18
	Unswitched XCM Power	18
	Operation	18
	Switched XCM Power	19
	Operation	19
	Power Distribution – WDX1202	20
	Introduction	20
	Main Distribution Panel – Fuse Block	21
	Unswitched Power	22
	Switched Power	23
	Troubleshooting	24
	XCM Function and Configure Select Switches (WDX1202 Models)	33
	Operation	33
	Troubleshooting	33

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 3 - Air Conditioning Systems

CONTENTS

Section	Description	Page
	Fan (Pressurizer) Circuit - WDX1002S and WDX1202S Models	3
	Operation	3
	Troubleshooting	3
	A/C Clutch Circuit - WDX1002S and WDX1202S Models	9
	Troubleshooting	9
	Air Conditioning Systems	12
	Introduction	12
	General Principles of Operation (Manual and ATC Systems)	12
	Manual HVAC System (Standard)	14
	Operation	14
	Troubleshooting	14
	A/C Clutch Circuit (Manual HVAC)	18
	Operation	18
	Troubleshooting	18
	Automatic (ATC) HVAC System	21
	Operation	21
	Control Operation Specifications	21
	General Operation	22
	Heater Operation	22
	Heater Operation – Sequence of Events	22
	Defrosting/Defogging Operation	23
	Air Conditioner (A/C) Operation	23
	Ventilation	23
	System Component Functions	23
	Automatic Fan Speed Control (AUTO)	23
	Manual Mode Fan Speed Control (Up/Down)	23
	A/C Compressor Clutch Control	23
	Heater Water Valve	24
	Cab Air Temperature Sensor	24
	Evaporator Probe	24
	ATC HVAC Component Usage	24

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 3 - Air Conditioning Systems (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting	25
	Fault Codes	25
	Advanced Diagnostics Display Mode	28
	Revision Level	29
	Setting Parameters	30
	ATC Troubleshooting Quick-Checks	30
	A/C Clutch Circuit (ATC HVAC)	36
	Operation	36
	Troubleshooting	36

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 4 - Lighting Systems

CONTENTS

Section	Description	Page
	Introduction – WDX1002S, WDX1202S, and WDX1202 Models	3
	Lamp Replacement Chart – WDX1002S and WDX1202S Models	3
	Turn Signals and Hazard Lights – WDX1002S and WDX1202S Models	3
	Description	3
	Operation	4
	Troubleshooting	4
	Road Lights, Taillights, and Console Light	11
	Description	11
	Operation	11
	Troubleshooting	12

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 4 - Lighting Systems (Continued)

CONTENTS

Section	Description	Page
	Work Lights - WDX1002S and WDX1202S Models	20
	Operation	20
	Troubleshooting	21
	Overhead Console and Dome Lights - WDX1002S and WDX1202S Models	28
	Operation	28
	Troubleshooting	28
	Introduction - WDX1202 Models	33
	Lamp Replacement Chart - WDX1202 Models	33
	Turn Signals and Hazard Lights - WDX1202 Models	33
	Description	33
	Operation	34
	Troubleshooting	34
	Road Lights, Tail Lights and Console Light - WDX1202 Models	43
	Operation	43
	Troubleshooting	43
	Work Lights - WDX1202 Models	52
	Operation	52
	Exit Lighting (Left Side Stubble Light)	52
	Operation	52
	Functional Check	53
	Procedure	53
	Troubleshooting	53
	Console and Dome Lights - WDX1202 Models	62
	Operation	62
	Troubleshooting	62

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 5 - Engine Electrical Systems

CONTENTS

Section	Description	Page
	General Information	2
	Introduction	2
	Engine Functions for the XCM	2
	Starting Circuits	2
	Air Filter Restriction Switch Circuit	3
	Troubleshooting	4
	Fuel Level Sender Circuit	7
	Troubleshooting	9
	Coolant Temperature Circuit	11
	4-Line Display - Engine Coolant Temperature Scale	13
	A-Pillar Display - Engine Coolant Temperature Scale	13
	Troubleshooting	14
	Engine Fuel Solenoid Circuit	17
	Troubleshooting	17
	Engine Oil Pressure Sensor Circuit	21
	Troubleshooting	23
	Engine Starting Motor Circuit	25
	Cold-Start Injection Advance Circuit (KSB)	29
	Fuel Injection Pump Harness Connections	30
	Preheat Circuit (If Equipped)	31

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 6 - Charging Electrical Systems

CONTENTS

Section	Description	Page
	Introduction	3
	Battery	5
	Size and Rating	5
	How a Battery Works	5
	Battery Troubleshooting	5
	Determining the Cause of Failure	6
	Application and Installation	6
	Service History	6
	Visual Inspection	6
	Troubleshooting Summary	8
	Testing The Battery - General	9
	"Key Off" Current Drain	10
	Voltage Drop Test	11
	Charging the Battery	12
	Determining Battery Charge Procedure	12
	Slow Charge Procedure: For Batteries with Charges Below 11.0V	12
	Selecting Battery Charging Method	13
	Slow Charge Procedure	14
	Standard Charge Procedure: Preferred Method for Batteries with Voltage of 11 - 12.5 V	15
	Fast Charge Procedure: Alternative Method for Batteries with Voltages of 11 - 12.5 V	15
	Battery Charging Precautions	16
	Battery Specifications	16
	Alternator	17
	Charging System Excitation Circuit Operation	17
	Alternator and Voltage Regulator	17
	Maintaining the Alternator	18
	Alternator Connections	19
	Alternator and Voltage Regulator Precautions	19
	Alternator Belt	20

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 6 - Charging Electrical Systems (Continued)

CONTENTS

Section	Description	Page
	Belt Removal/Replacement	20
	Welding On the Machine	22
	Troubleshooting	22
	Testing the Alternator	22
	Alternator Removal	24
	Alternator Installation	26

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 7 - Electro-Hydraulic Systems

CONTENTS

Section	Description	Page
	Hydraulic Oil Level Switch Circuit	2
	Troubleshooting	3
	Hydraulic Oil Temperature Switch Circuit - WDX1002S/1202S/1202	6
	Troubleshooting	7
	Hydraulic Charge Pressure Switch	10
	Troubleshooting	11
	Seat Occupied Circuit	14
	Troubleshooting	15
	Header Drive Circuit - WDX1002S/1202S	19
	Header Drive Circuit - WDX1202	21
	Header Reverse Circuit - WDX1002S/1202S (if equipped)	23
	Header Reverse Circuit - WDX1202	25
	Master Hydraulic Solenoid Circuit	27
	Hydrostatic High Speed Circuit - WDX1202	30

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 8 - Diagnostic Test Mode

CONTENTS

Section	Description	Page
	Introduction	2
	Accessing Diagnostic Mode (WDX1002S/1202S)	2
	Accessing Diagnostic Mode (WDX1202)	3
	Inputs	4
	Engine Inputs	5
	Fuel Inputs	6
	Header Inputs	6
	Hydraulics Inputs	7
	Lights Inputs	8
	Preheat Inputs	8
	Propulsion Inputs	9
	PTO Inputs	9
	Reel Inputs	10
	Outputs	10
	Header Outputs	11
	HVAC Outputs	12
	Preheat Outputs	12
	Inputs and Outputs Component Chart	13
	Wiggle Test	17
	Display (LCD) Test	17
	Fault History Screen	18

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 9 - Audible Alarm

CONTENTS

Section	Description	Page
	Audible Warnings	2
	Critical Warnings – Automatic Shutdown	2
	Critical Warnings – No Shutdown	2
	Non-Critical Warnings	2
	Audible Alarm Volume	3
	HW305/305S	3
	HW325	3
	Audible Alarm Priorities	4
	Low Priority Warnings	4
	Medium Priority Warnings	4
	High Priority Warnings	4
	Enable/Disable the Low Fault Warning	4

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87580757

Chapter 10 - Controller Area Network (CAN)

CONTENTS

Section	Description	Page
	CAN Network Basics	2
	WDX1002S/1202S	2
	WDX1202	2

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87580758

Chapter 11 - Fault Codes

CONTENTS

Section	Description	Page
	Introduction	4
	Fault Code Format (SPN/FMI Codes)	5
	SPN/FMI Code Charts	5
	FMI Codes	5
	SPN Codes	6
	Troubleshooting	9
	Engine Fault Codes	9
	FAULT CODE - 101-03 Oil Pressure Switch Shorted to High Source	9
	FAULT CODE - 101-04 Oil Pressure Switch Shorted to Low Source	11
	FAULT CODE - 102-03 Air Filter Restriction Switch Shorted to High Source ...	13
	FAULT CODE - 104-04 Engine Coolant Temp Sensor Shorted to Low Source ..	16
	Hydraulic Fault Codes	19
	FAULT CODE - 001-03 Hydraulic Charge Pressure Switch Shorted to High Source	19
	FAULT CODE - 002-03 Hydraulic Reservoir Level Sensor Shorted to High Source	22
	FAULT CODE - 003-03 Hydraulic Oil Temperature Switch Shorted to High Source	25
	Propulsion Fault Codes	28
	FAULT CODE - 404-03 MFH Position Sensor Shorted to High Source	28
	FAULT CODE - 404-04 MFH Position Sensor Shorted to Low Source	32
	FAULT CODE - 404-14 MFH Position Sensor Special Instructions	36
	FAULT CODE - 405-03 Pintle Arm Position Sensor Shorted to High Source ...	39
	FAULT CODE - 405-04 Pintle Arm Position Sensor Shorted to Low Source	42
	FAULT CODE - 406-03 Propulsion Cylinder Position Pot A Shorted to High Source	45
	FAULT CODE - 406-04 Propulsion Cylinder Position Pot A Shorted to Low Source	49

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87580758

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 406-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration	53
	FAULT CODE - 407-03 Propulsion Cylinder Position Pot B Shorted to High Source	57
	FAULT CODE - 407-04 Propulsion Cylinder Position Pot B Shorted to Low Source	61
	FAULT CODE - 407-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration	65
	FAULT CODE - 408-03 MFH Neutral Switch Shorted to High Source	69
	FAULT CODE - 408-07 MFH Neutral Switch Mechanical Out of Range	71
	FAULT CODE - 409-03 Park Brake Switch Shorted to High Source	73
	FAULT CODE - 411-13 Propulsion Cylinder Position Pot A Needs Calibration	76
	FAULT CODE - 412-13 Propulsion Cylinder Position Pot A Needs Calibration	80
	FAULT CODE - 413-13 Propulsion Cylinder Position Pot A Needs Calibration	84
	FAULT CODE - 414-13 Propulsion Cylinder Position Pot B Needs Calibration	88
	FAULT CODE - 415-13 Propulsion Cylinder Position Pot B Needs Calibration	92
	FAULT CODE - 416-13 Propulsion Cylinder Position Pot B Needs Calibration	96
	FAULT CODE - 418-03 MFH Position Sensor Shorted to High Source	100
	FAULT CODE - 418-04 MFH Position Sensor Shorted to Low Source	104
	FAULT CODE - 418-13 MFH Position Sensor Needs Calibration	108
	FAULT CODE - 419-03 MFH Position Sensor Shorted to High Source	111
	FAULT CODE - 419-04 MFH Position Sensor Shorted to Low Source	115
	FAULT CODE - 419-07 MFH Position Sensor Mechanical Out of Range	119
	FAULT CODE - 419-13 MFH Position Sensor Needs Calibration	122
	FAULT CODE - 420-03 MFH Position Sensor Shorted to High Source	125

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87580758

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 420-04 MFH Position Sensor Shorted to Low Source	129
	FAULT CODE - 420-07 MFH Position Sensor Mechanical Out of Range	133
	FAULT CODE - 420-13 MFH Position Sensor Needs Calibration	136
	FAULT CODE - 421-03 MFH Position Sensor Shorted to High Source	139
	FAULT CODE - 421-04 MFH Position Sensor Shorted to Low Source	143
	FAULT CODE - 421-13 MFH Position Sensor Needs Calibration	147
	FAULT CODE - 424-03 Propulsion Forward Solenoid L-14p Shorted to High Source	150
	FAULT CODE - 424-04 Propulsion Forward Solenoid L-14p Shorted to Low Source	153
	FAULT CODE - 424-13 Propulsion Forward Coil Needs Calibration	155
	FAULT CODE - 425-03 Propulsion Forward Solenoid L-14t Shorted to High Source	157
	FAULT CODE - 425-04 Propulsion Forward Solenoid L-14t Shorted to Low Source	160
	FAULT CODE - 425-13 Propulsion Forward Coil Needs Calibration	162
	FAULT CODE - 426-03 Propulsion Reverse Solenoid L-15p Shorted to High Source	164
	FAULT CODE - 426-04 Propulsion Reverse Solenoid L-15p Shorted to Low Source	167
	FAULT CODE - 426-13 Propulsion Reverse Coil Needs Calibration	169
	FAULT CODE - 427-03 Propulsion Reverse Solenoid L-15t Shorted to High Source	171
	FAULT CODE - 427-04 Propulsion Reverse Solenoid L-15t Shorted to Low Source	174
	FAULT CODE - 427-13 Propulsion Reverse Coil Needs Calibration	176
	FAULT CODE - 428-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	178
	FAULT CODE - 429-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	183

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87580758

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 430-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	188
	FAULT CODE - 431-03 MFH Position Sensor R-18 Shorted to High Source . .	192
	FAULT CODE - 432-03 MFH Position Sensor R-18 Shorted to High Source . .	195
	FAULT CODE - 433-03 Propulsion Cylinder Shorted to High Source	198
	FAULT CODE - 434-03 Propulsion Cylinder Shorted to High Source	202
	FAULT CODE - 435-03 Propulsion Enable Relay K-35 Shorted to High Source	206
	FAULT CODE - 435-04 Propulsion Enable Relay K-35 Shorted to Low Source	208
	PTO Fault Codes	210
	FAULT CODE - 200-12 Header Speed Sensor Bad Intelligent Device	210

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87580758

Chapter 12 - Standard Wiring Harness Diagrams

CONTENTS

Section	Description	Page
	Standard Wiring Harnesses (WDX1002S/1202S)	2
	FM Harness (Front)	3
	FM Harness (Rear)	4
	FM Harness (Engine LH)	5
	FM Harness (Engine RH)	6
	LL and RL Harnesses (Lighting)	7
	CM Harness (RH Console)	9
	CA Harness (Roof)	11
	SC Harness (Steering Column)	12
	Standard Wiring Harnesses (WDX1202)	13
	FM Harness (Front)	14
	FM Harness (Rear)	15
	FM Harness (Engine LH)	16
	FM Harness (Engine RH)	17
	LL and RL Harnesses (Lighting)	18
	CM Harness (Electrical Panel)	19
	CM Harness (Inside Cab)	20
	CM Harness (Seat and Right Hand Console)	21
	OR Harness (Outside Roof)	22
	RM Harness (Inside Roof)	23
	SC-D Harness (Steering Column)	24

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87580759

Chapter 13 - Wire Harness Connector Information

CONTENTS

Section	Description	Page
	Standard Wire Harness Connector Information (WDX1002S/1202S)	3
	FM Wire Harness Connectors	3
	CM Wire Harness Connectors	17
	MF Wire Harness Connections	33
	CA Wire Harness Connectors	35
	SC Wire Harness	42
	A/C Wire Harness	45
	Optional Wire Harness Connector Information (WDX1002S/1202S)	46
	S14 Battery Cable – Start Solenoid/Motor To Grid Heater Relay	46
	AD Wire Harness – Header Adapter To Old Header	46
	CN-C Wire Harness – Common Draper/Merger, Cab	48
	DR-C Wire Harness – Draper, Cab	51
	DR-F Wire Harness – Draper, Main Frame	56
	LT-C Wire Harness – Electric Counterweight (L Header Trim), Cab	58
	LT-F Wire Harness – Electric Counterweight (L Header Trim), Main Frame	59
	PH-C Wire Harness – Cold Start, Cab	60
	PH-F Wire Harness – Cold Start, Main Frame	62
	PR-C Wire Harness – PTO Reverser, Cab	63
	PR-F Wire Harness – PTO Reverser, Main Frame	64
	RS-C Wire Harness – Reel Speed, Cab	65
	RS-F Wire Harness – Reel Speed, Main Frame	67
	WP Wire Harness – Windshield Wiper	68
	WS-C Wire Harness – Windrow Shields, Cab	69
	WS-F Wire Harness – Windrow Shields, Main Frame	71
	Standard Wire Harness Connector Information (WDX1202)	72
	FM Wire Harness Connectors	72
	CM Wire Harness Connectors	88
	RM Wire Harness Connectors	109
	OR Wire Harness Connectors	116
	SC Wire Harness Connectors	119

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87580759

Chapter 13 - Wire Harness Connector Information (Continued)

CONTENTS

Section	Description	Page
	Optional Wire Harness Connector Information (WDX1202)	121
	S14 Battery Cable – Start Solenoid/Motor To Grid Heater Relay	121
	AD Wire Harness – Header Adapter To Old Header	121
	CN-C Wire Harness – Common Draper/Merger, Cab	123
	CN-F Wire Harness – Common Draper/Merger, Main Frame	127
	DR-C Wire Harness – Draper, Cab	128
	DR-F Wire Harness – Draper, Main Frame	133
	LT-C Wire Harness – Electric Counterweight (L Header Trim), Cab	135
	LT-F Wire Harness – Electric Counterweight (L Header Trim), Main Frame	136
	PH-C Wire Harness – Cold Start, Cab	137
	PH-F Wire Harness – Cold Start, Main Frame	139
	RS-C Wire Harness – Reel Speed, Cab	139
	RS-F Wire Harness – Reel Speed, Main Frame	141
	WS-C Wire Harness – Windrow Shields, Cab	142
	WS-F Wire Harness – Windrow Shields, Main Frame	144
	BE Wire Harness – Beacon Light	145
	MA Wire Harness – Mirror Assembly	146
	Electrical System Labor Guide	147

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87580759

Chapter 14 - Troubleshooting Optional Equipment - WDX1002S/1202S

CONTENTS

Section	Description	Page
	Cold Start (Thermostart)	3
	Circuit Description	3
	Switch Connections	4
	Wire Harness Routing	4
	Troubleshooting	5
	Windshield Wiper Kit	8
	Circuit Description	8
	Switch Removal	10
	WP Wire Harness Connections	11
	Wire Harness Routing	12
	Troubleshooting	13
	Cab Heater Kit	15
	Circuit Description	15
	Switch Removal	16
	Connections	17
	Troubleshooting	19
	Deluxe Lighting Kit	23
	Front Work Lights	23
	Stubble Lights	23
	Circuit Description	24
	Switch Removal	24
	Switch Connection	25
	Wire Harness Routing	26
	Troubleshooting	27
	Adjustable Windrow Shields	31
	Circuit Description	31
	Switch Connection	32
	Troubleshooting	32

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87580759

Chapter 14 - Troubleshooting Optional Equipment - WDX1002S/1202S (Continued)

CONTENTS

Section	Description	Page
	Sickle Header Drive Adapter (HDX1 and HDX2 Series)	39
	Troubleshooting	40
	Draper Header Drive Adapter	43
	Header Power Reverser	43
	Circuit Description	43
	Switch Removal	44
	Switch Connections	44
	Wire Harness Routing	45
	Troubleshooting	46

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87580759

Chapter 15 - Troubleshooting Optional Equipment - WDX1202

CONTENTS

Section	Description	Page
	A-Pillar Display	3
	Wire Harness Routing/Connections	4
	Troubleshooting	5
	Automatic Temperature Control (ATC)	10
	Radio	10
	Circuit Description	10
	Wire Harness Routing	11
	Troubleshooting	12
	Premium Speakers	17
	Troubleshooting	18
	Cold Start (Thermostart)	23
	Circuit Description	23
	Switch Removal	23

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87580759

Chapter 15 - Troubleshooting Optional Equipment - WDX1202 (Continued)

CONTENTS

Section	Description	Page
	Switch Connections	24
	Wire Harness Routing	24
	Troubleshooting	25
Deluxe Mirrors		28
	Circuit Description	28
	Switch Removal	29
	Switch Connectors	29
	Accessing the Outer Roof (OR) Harness	30
	Roof Panel Installation	29
	Wiring Harness Routing	30
	Troubleshooting	33
Windshield Wiper/Washer		39
	Windshield Wiper Circuit Description	39
	Windshield Washer Circuit Description	40
	Switch Removal	40
	Switch Connections	41
	Troubleshooting	42
Beacon Mount		46
	Circuit Description	46
	Switch Removal	46
	Connectors and Circuitry	47
	Accessing the Outer Roof (OR) Harness	48
	Roof Panel Installation	49
	Wiring Harness Routing and Connections	49
	Troubleshooting	51
Adjustable Windrow Shields		59
	Circuit Description	60
	Switch Connection	60
	Troubleshooting	61
Sickle Header Drive Adapter (WDX1 and WDX2 Series)		67
	Header Speed Does Not Indicate on the Display	68
Draper Header Drive Adapter		71

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87580759

Chapter 16 - Electrical Schematics

CONTENTS

Section	Description	Page
	Introduction	2
	Electrical Components Index	3
	Using Schematics	9
	Power	10
	Grounds	10
	Connections	10
	Harnesses	11
	Standard Harnesses	11
	Optional Harnesses	11
	Wire Harness Routing	12
	Circuit Identification	12
	Windrower Electrical Schematic	13

SECTION 58 - HEADER ATTACHMENTS

BOOK 7 - 87580760

Chapter 1 - Draper Header WDX1002S/WDX1202S

CONTENTS

Section	Description	Page
	Overview	3
	WDX1002S and WDX1202S Draper Floatation	3
	Operation	3
	Overhaul	4
	Cut Height Cylinders	4
	Removal	4
	Inspection	5
	Installation	6

SECTION 58 - HEADER ATTACHMENTS

BOOK 7 - 87580760

Chapter 1 - Draper Header WDX1002S/WDX1202S (Continued)

CONTENTS

Section	Description	Page
	Cartridge Valves	7
	Removal	7
	Installation	8
	Hose Routing - Cut Height Cylinders	9
	Hose Routing	10
	Removal	10
	Installation	10
	Hoses - Valve to Valve	10
	Removal	10
	Installation	10
	Without Deck Shift	11
	With Deck Shift	13
	Hydraulic System Check with Header Installed	15
	Electrical System - Fuse and Relay	15
	Removal	15
	Switches	15
	Removal	15
	Solenoid Connectors	15
	Inspection	15
	Troubleshooting - Wire Harnesses	16
	Harness Connectors and Wires	16
	CN-C Wire Harness (Common Draper/Merger, Cab)	16
	DR-C Wire Harness (Draper, Cab)	18
	DR-FS4 Wire Harness, Flow Divider	20
	DV-CS4 Wire Harness	21
	DR-F Wire Harness (Draper, Main Frame)	23
	LT-C Wire harness (Elec Counter Weight L Header Trim, Cab) Deck Shift Only	24
	LT-F Wire harness (Elec Counter Weight L Header Trim, Main Frame) Deck Shift Only	24
	Troubleshooting - Draper System	25
	Diagnostic Charts	25
	Preliminary Diagnostic Chart	25

SECTION 58 - HEADER ATTACHMENTS

BOOK 7 - 87580760

Chapter 1 - Draper Header WDX1002S/WDX1202S (Continued)

CONTENTS

Section	Description	Page
	Accessing Diagnostic Mode	26
	Energized Components	29
	Header to Machine Connector	30
	Theory of Operation - Flow Divider	32
	4 Cylinder Flow Divider Logic	33
	Wire Identification	34
	Fuse F-41 Power Chart	35
	Fuse F-42 Power Chart	35
	Schematics	36

SECTION 58 - HEADER ATTACHMENTS

BOOK 7 - 87580760

Chapter 2 - Draper Setup WDX1002S/WDX1202S

CONTENTS

Section	Description	Page
	Accessing Dealer Setup	2
	Multi-Function Handle (MFH)	2
	Dealer Setup Menu	2
	DIA Options Menu	3
	Exit the Dealer Setup Menu	3
	User Configure Menu	4
	Hydraulic System Check	5
	Hydraulic System Check with Header Installed	5

SECTION 58 - HEADER ATTACHMENTS

BOOK 7 - 87580760

Chapter 3 - Draper Header - WDX1202

CONTENTS

Section	Description	Page
	Overview	3
	WDX1202 Draper Floatation	3
	Operation	3
	Overhaul	4
	Cut Height Cylinders	4
	Removal	4
	Inspection	5
	Installation	6
	Cartridge Valves	7
	Removal	7
	Installation	8
	Hose Routing - Cut height Cylinder	9
	Hose Routing	10
	Removal	10
	Installation	10
	Hoses - Valve To Valve	10
	Removal	10
	Installation	10
	Without Deck Shift	11
	With Deck Shift	13
	Hydraulic System Check	15
	Hydraulic System Check with Header Installed	15
	Electrical System - Fuse and Relay	15
	Removal	15
	Switches	16
	Removal	16
	Solenoid Connectors	16
	Inspection	16
	Troubleshooting - Wire Harnesses	17
	Harness Connectors and Wires	18
	WDX1202 (With Deck Shift)	18
	CN-C Wire Harness (Common Draper/Merger, Cab)	18

SECTION 58 - HEADER ATTACHMENTS

BOOK 7 - 87580760

Chapter 3 - Draper Header - WDX1202 (Continued)

CONTENTS

Section	Description	Page
	RS-C Wire harness (Common Reel Speed/Draper, Cab)	19
	DR-C Wire harness (Draper, Cab)	20
	DV-FD4 Wire Harness, Flow Divider	21
	Wires, DVA and DVB	22
	Wire Harness DV-CD4	22
	DR-F Wire harness (Draper, Main Frame)	25
	CN-F Wire harness (Common Draper/Merger, Main Frame)	26
	DR-F (REV C) Wire harness (Draper, Main Frame)	26
	DRB-F Wire harness (Draper, Main Frame-Power Supply)	27
	DRA-F Wire Harness (Draper, Main Frame-Diode)	27
	LT-C Wire harness (Elec Counter Weight L Header Trim, Cab)	27
	LT-F Wire harness (Elec Counter Weight L Header Trim, Main Frame)	28
	Troubleshooting - Draper System	29
	Diagnostic Charts	29
	Preliminary Diagnostic Chart	29
	Accessing Diagnostic Mode	31
	Energized Components	33
	Header To Machine Connector	34
	Theory of Operation - Flow Divider	36
	4 Cylinder Flow Divider Logic	37
	Wire Identification	38
	Fuse F-41 Power Chart	39
	Fuse F-42 Power Chart	39
	Schematics	40

SECTION 58 - HEADER ATTACHMENTS

BOOK 7 - 87580760

Chapter 4 - Draper Setup - WDX1202

CONTENTS

Section	Description	Page
	Accessing Dealer Setup	2
	Multi-Function Handle (MFH)	2
	Dealer Setup Navigation	2
	Dealer Setup Menu	3
	DIA Options Menu	3
	User Configure Menu	4
	Draper Head PTO Calibration	5

SECTION 88 - OPTIONAL EQUIPMENT

BOOK 7 - 87580760

Chapter 1 - Optional Equipment - WDX1002S/WDX1202S

CONTENTS

Section	Description	Page
	Optional Kits	3
	Instructor Seat	3
	Radio (A-17)	3
	Installation	4
	Wiper	4
	Cab Heater	4
	Adjustable Windrow Shield	5
	Removal	5
	Installation	6
	Cold Start Kit	7
	Removal and Replacement	7
	Auxiliary Fuel Tank	8
	Deluxe Lighting Kit	8
	Service Flood Light	9

SECTION 88 - OPTIONAL EQUIPMENT

BOOK 7 - 87580760

Chapter 1 - Optional Equipment - WDX1002S/WDX1202S (Continued)

CONTENTS

Section	Description	Page
	Replacing Power Outlets	9
	Deluxe Header Tilt Indicator	9
	Hydraulic Tilt Cylinder	10
	Header Lift Arm Quick Latch Kit	10
	Model HDX2 Sickle Header Drive Adapter Kit	10
	Removal	11
	Disassembly	11
	Shaft Removal	12
	Assembly	13
	Installation	15
	Model HDX1 Sickle Header Adapter Kit	16
	Removal	16
	Repair	17
	Disassembly	17
	Inspection	22
	Assembly	24
	Installation	29
	Draper Header Drive Adapter Kit	30
	Deck Shift Draper Header Adapter Kit	30
	Header Power Reverser Kit	30
	Hydraulic Reel Drive Kit	31
	Engine Mounted Auxiliary Drive Pump	31
	Auxiliary Hydraulic Filter	31
	Swath Roller Hitch	32
	Removal	32
	Installation	33
	Chaff Wiper Kit	33
	Removal	34
	Installation	35

SECTION 88 - OPTIONAL EQUIPMENT

BOOK 7 - 87580760

Chapter 2 - Optional Equipment - WDX1202

CONTENTS

Section	Description	Page
	Deluxe Cab Upgrade Package	3
	A-Pillar Display	3
	Removal	4
	Installation	4
	Automatic Temperature Control (ATC)	5
	Removal	5
	Installation	6
	Window Screen Kit	6
	Removal	7
	Installation	7
	Premium Speaker Kit	8
	Removal	8
	Installation	9
	Optional Kits	10
	Radio (A-17)	10
	Removal	10
	Installation	11
	Service Floodlight	11
	Replacing Power Outlets	11
	Cold Start Kit	12
	Removal and Replacement	12
	Deluxe Mirror	12
	Removal	13
	Installation	13
	Wiper/Washer	14
	Deluxe Header Tilt Indicator	14
	Beacon Mount Kit	15
	Removal	15
	Installation	15

SECTION 88 - OPTIONAL EQUIPMENT

BOOK 7 - 87580760

Chapter 2 - Optional Equipment - WDX1202 (Continued)

CONTENTS

Section	Description	Page
	Adjustable Windrow Shield	16
	Removal	16
	Installation	17
	Model HDX2 Sickle Header Drive Adapter Kit	17
	Removal	18
	Disassembly	18
	Shaft Removal	19
	Assembly	20
	Installation	22
	Model HDX1 Sickle Header Drive Adapter Kit	23
	Removal	23
	Repair	24
	Disassembly	24
	Inspection	29
	Assembly	31
	Installation	36
	Draper Header Drive Adapter Kit	37
	Deck Shift Draper Header Adapter Kit	37
	Hydraulic Reel Drive	38
	Auxiliary Drive – Engine Mounted	38
	Auxiliary Hydraulic Filter	38
	Swath Roller Hitch	39
	Removal	39
	Installation	39
	Chaff Wiper Kit	40
	Removal	40
	Installation	42

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 7 - 87580760

Chapter 1 - WDX1002S and WDX1202S

CONTENTS

Section	Description	Page
	Introduction	2
	Overview	2
	Overhaul	3
	Air Ride Seat (WDX1002S and WDX1202S)	3
	Removal	3
	Disassembly	4
	Inspection	8
	Reassembly	10
	Installation	16
	Cab Door	17
	Removal	17
	Installation	18
	Cab Door Handle	19
	Disassembly	19
	Inspection	19
	Reassembly	20
	Cab Floor Mat	20
	Removal	20
	Inspection	21
	Installation	21
	Console	22
	Removal	22
	Assembly	22
	Steering Column	23
	Removal	23
	Installation	24
	Wiper Motor	24
	Remove and Replace	25
	Stereo and Speaker System	25
	Removal	26
	Installation	26
	Switches and Their Functions	27
	Removal	27
	Installation	29
	Safety Decals	31
	Repair Time Schedule	36

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 7 - 87580760

Chapter 2 - WDX1202

CONTENTS

Section	Description	Page
	Overview	3
	Deluxe Operator's Seat	3
	Controls	3
	Armrest Height	3
	Height/Weight Adjustments	3
	Backrest Angle	3
	Fore/Aft Position	3
	Lumbar Adjustment Knob	4
	Seat Belt	4
	Cleaning the Seat Belt	4
	Seat Air Compressor	4
	Height Adjustment	4
	Overhaul	5
	Seat Belt	5
	Replacing the Seat Belt	5
	Seat	5
	Removing the Seat from the Seat Base	5
	Disassembling the Seat	5
	Upper Seat	6
	Removing Armrest	6
	Armrest Adjustment	7
	Replacing Seat Height Switch	9
	Cushions	10
	Removing Bottom Seat Cushion	10
	Removing Seat Back Cushion	11
	Fore/Aft Adjustment Rails	11
	Removing Seat from Slide Rails	11
	Removing Slide Rails from Suspension	11
	Seat Suspension	12
	Disassembly of Seat Suspension	12
	Rubber Bumpers	15
	Inspection of the Seat Suspension Components	15
	Release Valve/Solenoid	15
	Inspection	15
	Air Compressor	16
	Inspection	16

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 7 - 87580760

Chapter 2 - WDX1202 (Continued)

CONTENTS

Section	Description	Page
	Fore/Aft Adjustment Lever	17
	Inspection	17
	Damping Shock Absorber	18
	Inspection	18
	Scissors Suspension	18
	Inspection	18
	Circuit Description	19
	Troubleshooting	21
	Seat Air Compressor Does Not Run	21
	Cab Door	22
	Removal	22
	Installation	22
	Cab Door Handle	22
	Disassembly	22
	Installation	22
	Cab Floor Mat	23
	Removal	23
	Inspection	23
	Cab Suspension	23
	Remove and Replace - Front Cab Mounts	24
	Remove and Replace - Rear Cab Suspension	25
	Console	25
	Removal	25
	Installation	26
	Overhead Switches	26
	Removal/Installation	27
	Stereo System	27
	Removal/Installation	28
	Wiper Motor/Washer	29
	Removal	29
	Installation	33
	Steering Column	36
	Cover Removal	36
	Cover Installation	37
	Column Removal	39
	Column Installation	39

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 7 - 87580760

Chapter 2 - WDX1202 (Continued)

CONTENTS

Section	Description	Page
	Cab Roof	40
	Removal	40
	Inspection	43
	Installation	43
	Multi-Function Handle (MFH)	46
	Removal	46
	Disassembly	50
	Assembly	54
	Installation	56
	Safety Decals	59
	Repair Time Schedule	65

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com