
WD1203 REPAIR MANUAL

COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 25 - FRONT MECHANICAL DRIVE	5
SECTION 29 - HYDROSTATIC TRANSMISSION	6
SECTION 33 - BRAKES AND CONTROLS	10
SECTION 35 - HYDRAULIC SYSTEMS	11
SECTION 44 - REAR AXLE	16
SECTION 50 - CLIMATE CONTROL	18
SECTION 55 - ELECTRICAL SYSTEMS	22
SECTION 58 - HEADER ATTACHMENTS	39
SECTION 88 - OPTIONAL EQUIPMENT	42
SECTION 90 - PLATFORM, CAB AND DECALS	43

The following pages are the collation of the contents pages from each section and chapter of the WD1203 Repair manual. Complete Repair part # 87744701.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the WD1203 Self-Propelled Windrowers.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87744702

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Precautionary Statements	2
	Safety	3
	General Safety Information	5
	Protecting the Electrical Systems During Charging or Welding	7
	Introduction	8
	About Improvements	8
	Product Identification Numbers (PIN)	9
	Engine PIN Number	9
	Company Policy	10
	Parts and Accessories	10
	Lubrication	10
	Minimum Hardware Tightening Torques	11
	Installation of Adjustable Fittings in Straight Thread O-ring Bosses	13
	Standard Torque Data for Hydraulic Tubes and Fittings	13
	Pipe Thread Fitting Torque	14
	Installation of ORFS (O-ring Flat Faced) Fittings	14
	Specifications	15

SECTION 10 - ENGINE

BOOK 1 - 87744702

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Description of Operation	2
	Specifications	2
	Overhaul	3
	Engine	3
	Removal	3
	Installation	9
	Troubleshooting	15

SECTION 10 - ENGINE

BOOK 1 - 87744702

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Fuel System	2
	Injection System Bleeding	2
	Fuel Tanks	3
	Removal	3
	Install	7

SECTION 10 - ENGINE

BOOK 1 - 87744702

Chapter 3 - Air Intake

CONTENTS

Section	Description	Page
	Description of Operation	2
	Air Intake System	2
	Specifications	3
	Air Cleaner	3
	Description of Operation	4
	Air Filter	4
	Inspection	4
	Removal	5
	Installation	6
	Troubleshooting	8

SECTION 10 - ENGINE

BOOK 1 - 87744702

Chapter 4 - Cooling System

CONTENTS

Section	Description	Page
	Specifications	2
	Cooling System	2
	Overview - Cooling System	3
	Description of Operation	5
	Radiator	6
	Removal	6
	Installation	8
	Troubleshooting	11

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 1 - 87744702

Chapter 1 - Front Mechanical Drive

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	6
	Front Mechanical Drive	6
	Removal	6
	Installation	9
	Planetary Gearbox Drive	12
	Disassembly	13
	Assembly	17

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 1 - Ground Drive

CONTENTS

Section	Description	Page
	Specifications	4
	Hydrostatic Transmission Identification	5
	Torque Specifications	6
	Torque Chart	6
	Motor Area	6
	Description Of Operation	7
	Pumps	8
	High-pressure Relief Valves	9
	Check Valves	9
	Charge Pump	10
	Charge Relief Valve (Pump)	10
	Header Lift Pump	10
	Motors	10
	Variable Displacement Motor	10
	Reservoir	12
	Oil Flow	12
	Neutral	12
	Forward/Reverse	12
	WD1203 Hydraulic System Diagram	13
	WD1203 Hydraulic System Diagram - Dealer Installed Draper Kit	15
	Solenoid Valve (2-speed Drive Motor Only)	17
	Low-range Operation	17
	High-range Operation	17
	Cooling Circuit	17
	Relief Valve	17
	Operation	17
	Linkage	18
	Operation	18
	Sauer-danfoss Authorized Service Centers - North America	19
	Troubleshooting	23
	Excessive Noise	23

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Overheating Transmissions	23
	Loss Of Propulsion	23
	Control Linkage Inspection	24
	High-pressure Relief Valve Check	24
	Charge Pump Relief Valve	25
	Check Valve	25
	Pressure Testing	26
	Port Locations	28
	Charge Pressure	29
	Charge Pressure System Test	30
	Tandem Pump Charge Pressure Test	30
	Complete Charge System Test	32
	High Pressure Relief Valve Test	34
	Gage Port and Relief Valve Locations	34
	Pressure Port Locations	36
	Case Pressure Test (Pump)	37
	Case Pressure Test (Motor)	37
	Suction Test	38
	Case Flow Test	38
	Ground Speed Circuit	39
	Operation	39
	Troubleshooting	39
	Ground Speed Display Does Not Function	40
	Troubleshooting Charts	42
	Windrower Will Not Shift Into High Range	42
	Windrower Will Not Shift Into Low Range	43
	Charge Pump	44
	Hydrostatic System	45
	Explanation Of Terms Used In Failure Analysis	48
	Lack Of Lubrication	48
	Operating At Excessive Temperature Levels	48

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Cavitation	48
	Overspeeding Of the Unit	48
	Parts Worn Or Scored From Contamination	48
	Abrasive Contaminants	48
	Plates Scored From Water In Oil (Non-particle Contaminants)	48
Minor Repairs		49
Tandem Pump		50
Port Locations		50
Rear Half Pump Breakdown		51
Front Half Pump Breakdown		53
Shaft Seal Replacement		55
Charge Pump Removal		56
Charge Pump Inspection		57
Charge Pump Assembly		58
O-ring Seals		59
Trunnion Seal (Control Shaft Side)		60
Trunnion Cover (Plain)		62
Tandem Pump Removal		63
Tandem Pump Installation		66
Ground Drive Motor		68
Removal		68
Inspection/Parts Breakdown		69
Installation		71
Start-up		72
Maintenance		72
Worm Shaft		73
Removal		73
Installation		74

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 2 - Propulsion System

CONTENTS

Section	Description	Page
	Theory of Operation	2
	Pintle Arm Position Sensor (B-02)	3
	Removal	3
	Installation	3
	Testing	4
	Adjustment	5
	Propulsion Rotary Position Sensor (R-23)	6
	Removal	6
	Installation	6
	Testing	7
	MFH Rotary Position Sensor (R-18)	8
	Removal	8
	Installation	9
	Testing	10
	Neutral Adjustment	11

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 3 - Active Calibrations

CONTENTS

Section	Description	Page
	Active Calibrations	2

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 4 - MFH Calibration

CONTENTS

Section	Description	Page
	Dealer Setup Menu Navigation	2
	MFH Calibration	2

SECTION 33 - BRAKES AND CONTROLS

BOOK 1 - 87744702

Chapter 1 - Brakes and Controls

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	2
	Brake Assembly	2
	Removal	2
	Installation	5
	Disassembly	6
	Rotating, Stationary, and Primary Disc Assembly	12
	Installation	12
	Brake Bleeding Procedure	16

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87744703

Chapter 1 - Hydraulic Systems

CONTENTS

Section	Description	Page
	Introduction	5
	System Component Locations	6
	Bleeding the Hydraulic System	7
	Hydraulic Manifolds with Factory Draper	9
	Reading Diagram Symbols	10
	Hydraulic System Diagram	15
	Hydraulic System Operation	17
	Ground Drive	17
	Header Drive	23
	Theory of Operation	28
	Header Lift	28
	Header Tilt	34
	Auxiliary Engine Mounted Hydraulic Pump (optional)	37
	Control Valve Manifold	38
	Service Parts	38
	Valve Identification Codes	39
	Component Identification and Location	40
	Right-hand (RH) View	40
	Top View	41
	Front View	42
	Rear View	43
	Bottom View	44
	Back View (Hidden Against Mounting Plate)	45
	Solenoid Engagement Chart	46
	Auxiliary Control Valve (Speed Control) Manifold	47
	Service Parts	47
	Valve Identification Codes	48
	Auxiliary Control Valve Manifold	49
	Component Identification and Location	49
	Right-Hand (RH) View	49
	Top View	50
	Back View (Hidden Against Mounting Plate)	51

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87744703

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Header Control Valve Manifold	52
	Service Parts	52
	Valve Identification Codes	53
	Header Drive With Reverser	54
	Component Identification and Location	54
	Right-hand (RH) View	54
	Front View	55
	Top View	56
	Cartridge Valves (Solenoid-operated)	57
	Main Control Manifold Valves	58
	Two-way Two-position (Normally Closed) Poppet Valves	58
	Three-way Two-position Spool Valve	60
	Two-way Two-position (Normally Open) Poppet Valve	61
	(Normally Open) Pressure Reducing/Relieving Valves	62
	(Normally Open) Solenoid-operated Relief Valves	63
	(Normally Closed) Solenoid-operated Proportional Flow Control	63
	Replacement	64
	Main Manifold - Cartridge Torque Requirements	65
	Installation	66
	Solenoid Coils	67
	Removal	67
	Installation	67
	Cartridge Valves (Non-Solenoid-Operated)	68
	Direct-acting Flow Control Needle Valve	68
	Pilot-operated Relief Valve	69
	Differential-Pressure-Sensing Valve	70
	Header Control Manifold - Cartridge Torque Requirements	71
	Needle Valve (AD) and Piloted Relief Valves	72
	Replacement	72
	Adjustment	72
	Minor Repairs	73

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87744703

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Accumulators - Header Lift	73
	Removal	73
	Inspection	74
	Installation	74
	Accumulator - Surge Suppression	76
	Specifications	76
	Breakdown	77
	Pre-Charge	78
	Checking	78
	Charging	79
	Removal	80
	Installation	80
	Major Components	81
	Header Drive Pump	81
	Removal	81
	Inspection	82
	Installation	82
	Splitter Gear Box	83
	Disassembly	83
	Assembly	85
	Adjustment Instructions	90
	Header Drive System Pressure Adjustment (Valve L-30)	91
	Pump Flow	98
	Header Lift Pump	99
	Removal	99
	Disassembly	99
	Inspection	101
	Assembly	101
	Installation	104
	Adjustment Instructions	105
	Header Lift System Pressure Adjustment (Valve L-03)	106

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87744703

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Auxiliary Engine Mounted Hydraulic Pump (optional)	111
	Removal	111
	Inspection	111
	Installation	111
	Start-up Procedure	112
	Maintenance	112
	Cooling Circuit Bypass Pressure	113
	Temperatures	113
	Troubleshooting - Component	114
	General	114
	Reduced System Pressure	114
	Reduced Hydraulic Flow	114
	Excessive Noise	114
	Overheating	114
	Power Loss	114
	Explanation of Terms Used in Failure Analysis	115
	Parts Evaluation	116
	Discoloration	116
	Scratches or Grooves	116
	Rework	116
	Repeat Failures	116
	Header Drive System	117
	Header Drive Pump	120
	Charge Pump	121
	Header Drive Motor	122
	Service Techniques	123
	General	123
	Oil Level	123
	Hoses and Tubes	124
	O Ring Flat Face Seal Fittings	124
	O Ring Flat Face Seal Fitting Torque Values	124

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87744703

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Adjustments	125
	Header Drive Motors	125
	Sauer-Danfoss Authorized Service Centers - North America	126
	Tilt Cylinder	130
	Removal	130
	Inspection	134
	Assembly	134
	Lift Cylinders	138
	Removal	138
	Inspection	142
	Assembly	142
	Zero-Leak Plugs	146
	Removal	146
	Install	146
	Plug Torque Requirements	147
	Zero-Leak Plug to SAE J514 ORB Plug Cross Reference	147
	Hydraulic Reservoir Replacement	148
	Removal	148
	Installation	149
	Troubleshooting - System	151
	Header Drive System	151
	Further Troubleshooting Tips	154

SECTION 44 - REAR AXLE

BOOK 2 - 87744703

Chapter 1 - Non-Suspended Rear Axle

CONTENTS

Section	Description	Page
	Introduction	2
	Overview	2
	Specifications	3
	Special Tools	3
	Description of Operation	4
	Extensions and Axle Tube	4
	Adjustments	8
	Wheel Width	8
	Channel Widths (Spindle to Spindle)	8
	Axle Extension Position	8
	Overhaul	9
	Wheel, Axle Shaft and Hub	9
	Removal	9
	Inspection	11
	Installation	12
	Axle Support Fork	15
	Removal	15
	Inspection	15
	Installation	16
	Rear Axle Extension	18
	Removal	18
	Inspection	19
	Installation	19
	Axle Tube and Center Pivot Pin	20
	Removal	20
	Inspection	21
	Installation	22

SECTION 44 - REAR AXLE

BOOK 2 - 87744703

Chapter 2 - Suspended Rear Axle

CONTENTS

Section	Description	Page
	Introduction	2
	Overview	2
	Special Tools	2
	Specifications	3
	Description of Operation	4
	Extensions and Axle Tubes	4
	Adjustments	7
	Wheel Width	7
	Extension Widths (Spindle to Spindle)	7
	Axle Extension Position	7
	Overhaul	8
	Wheel, Axle Shaft and Hub	8
	Removal	8
	Inspection	10
	Installation	11
	Axle Support Fork	13
	Removal	13
	Inspection	13
	Installation	14
	Extension	15
	Removal	15
	Inspection	16
	Installation	17
	Air Spring	18
	Removal	18
	Inspection	19
	Installation	20
	Axle Tubes and Pivot Pins	21
	Removal	21
	Inspection	22
	Installation	23

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 87744703

Chapter 1 - Climate Control

CONTENTS

Section	Description	Page
	Specifications	4
	Compressor	4
	Refrigerant	4
	Refrigerant Oil	4
	Special Tools	4
	Description of Operation	5
	The Basics of Refrigeration	5
	Air Conditioning Process	6
	R134a Refrigerant Information	7
	Refrigerant Ingredients	7
	Lubricants	7
	Refrigerant (R134a)	7
	Cab Air Flow	8
	System Components	10
	Compressor Pump	10
	Compressor Clutch (L-27)	10
	Air Conditioning Filters	11
	Removal/Replacement	11
	Recirculation Filter	13
	Removal	14
	Cleaning with Air	15
	Condenser	15
	Receiver/Drier	16
	Expansion Valve	17
	Valve Components	17
	Operation	18
	Port Identification	21
	Evaporator	21
	Blower Fan	21

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 87744703

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Description of Operation - Climate Controls	22
	Control Panel - Manual Temperature Control - (A-05)	22
	Blower Fan Switch	22
	Temperature Control Switch	22
	Control Panel - (ATC) Automatic Temperature Control (if equipped)	23
	Control Operation Specifications	23
	ATC Operator Controls	23
	ON/OFF	23
	LED Display	23
	AUTO	23
	DEF	23
	Fan UP/DOWN	24
	Temperature UP/DOWN	24
	EXT (External Temperature)	24
	ECON (Economy Mode)	24
	Celsius/Fahrenheit button	24
	Compressor Protection Switches	25
	High-pressure Cutout Switch (S-40)	25
	Low-pressure Cutout Switch (S-39)	25
	Troubleshooting and Servicing Air Conditioning System	26
	General Safety and Service Precautions	26
	Cleanliness	27
	Preliminary Troubleshooting and Testing	27
	Operational Checks	27
	ATC Troubleshooting Fault Code Chart	28
	Display Fault Codes	28
	Advanced Diagnostics	31
	Diagnosis Charts - Air Conditioning System	35
	Test Procedure: Stabilizing the System	39
	Test Ports	39

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 87744703

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Pressure/Temperature Relationships	40
	Leak Testing	40
	Refilling	40
	Contaminants	41
	General	41
	Preventing Mixing of Service Equipment	41
	Refrigerant Extraction And Recycling Equipment	41
	Using Extraction Equipment	42
	Using Recycling Equipment	42
	Recycling vs. Reclaiming	42
	Containment of Air Conditioning Refrigerants	42
	Recovery	43
	Flushing	43
	Recharging/Refilling	43
	Using a Manifold Gauge Set	44
	Checking Refrigerant for Excess Air	44
	Containers for Storing Recycled Refrigerant	45
	Disposal of Empty or Near-Empty Disposable Containers	45
	Applicable SAE Standards	45
	Gauge Readings	46
	Manifold Gauge Readings and Interpretations	50
	Performance Test Examples	50
	Overhaul	61
	Condenser	61
	Removal	61
	Inspection and Repair	61
	Installation	61
	Receiver/Drier	62
	Removal	62
	Installation	62
	High (S-40) Pressure Switches	62
	Removal	62
	Installation	62

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 87744703

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Low (S-39) Pressure Switches	62
	Removal	62
	Installation	62
	Blower Motor	63
	Removal	63
	Inspection	65
	Assembly	66
	Installation	67
	Blower Fan Resistor	69
	Removal	69
	Installation	69
	Expansion Valve	70
	Removal	70
	Installation	70
	HVAC Cores	71
	Inspection and Cleaning	71
	Removal	71
	Installation	72
	Heater Core and/or Evaporator Core	74
	Removal	74
	Inspection	75
	Installation	76
	Compressor and Clutch - Special Tools	79
	Compressor Clutch Components	79
	Removal	79
	Installation	80
	Checking Compressor Oil for Contamination	81
	Adding Compressor Oil	81
	Overhaul Compressor	82
	Clutch and Seal Replacement	82
	Removal	82
	Inspection and Assembly	86

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Troubleshooting	3
	Fault Codes and Fault Finding	4
	Electrical Terms and Equipment	5
	Definitions	5
	Electrical System Components	7
	Electrical Components Chart	7
	Rocker Switches	13
	Momentary Rocker Switches	13
	Circuit Breakers	13
	Location of Circuit Breakers	14
	Fuses	15
	Fuse Panel Identification Tables	16
	Basic Circuitry/Component Testing	17
	Continuity Test for Open Circuits	17
	Continuity Test for Short to Ground	18
	Resistance Test for Electrical Components	19
	Measuring Voltage	20
	Diodes	21
	Test Procedure	21
	Electro-hydraulic Solenoid Valve Coils	22
	Test Procedure	22
	Operational Check	22
	Relays	23
	Test Procedure	24
	Welding on the Machine	24
	Protecting The Electronic/Electrical Systems During Charging or Welding	25
	Wiring Harnesses and Connectors - All Models	28
	Connectors	28
	Harness Splices	28
	Fuses, Relays, and Switches	28
	Switch and Relay Contacts	28

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Grounds	28
	Power Sources	28
	Wire Harness Identification	28
	Wire Color Codes	29
	Ground Distribution System	30
	Ground Points	30
	Ground Point R	31
	Ground Point 1	31
	Ground Point 4	32
	Ground Point 5	33
	Ground Point 7	34
	Ground Point 8	34
	Electronic Components	35
	Function Monitoring, Machine Configuration, and Diagnostics Menus	36
	Selectable Functions Monitoring	36
	Machine Configuration/User Setup Menu	38
	Critical Warning Displays - Automatic Shutdown	44
	Critical Warning Displays - No Shutdown	46
	Non-Critical Warning Displays	47
	Electrical Fault Codes	47
	System Monitoring	48

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 2 - Power Distribution

CONTENTS

Section	Description	Page
	Operation and Troubleshooting	2
	XCM Power	2
	Unswitched XCM Power	2
	Operation	2
	Switched XCM Power	3
	Operation	3
	Power Distribution	4
	Introduction	4
	Main Distribution Panel – Fuse Block	5
	Unswitched Power	6
	Independent Fuses	6
	Battery Busbar	6
	Switched Power	7
	Troubleshooting	8
	XCM Function and Configure Select Switches	15
	Operation	15
	Troubleshooting	15

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 3 - Air Conditioning Systems

CONTENTS

Section	Description	Page
	Air Conditioning Systems	3
	Introduction	3
	General Principles of Operation (Manual and ATC Systems)	3

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 3 - Air Conditioning Systems

CONTENTS

Section	Description	Page
	Manual HVAC System (Standard)	5
	Operation	5
	Troubleshooting	5
	A/C Clutch Circuit (Manual HVAC)	9
	Operation	9
	Troubleshooting	9
	Automatic (ATC) HVAC System	11
	Operation	11
	Control Operation Specifications	11
	General Operation	12
	Heater Operation	12
	Heater Operation - Sequence of Events	12
	Defrosting/Defogging Operation	13
	Air Conditioner (A/C) Operation	13
	Ventilation	13
	System Component Functions	13
	Automatic Fan Speed Control (AUTO)	13
	Manual Mode Fan Speed Control (Up/Down)	13
	A/C Compressor Clutch Control	13
	Heater Water Valve	14
	Cab Air Temperature Sensor	14
	Evaporator Probe	14
	ATC HVAC Component Usage	14
	Troubleshooting	15
	Fault Codes	15
	Advanced Diagnostics Display Mode	18
	Revision Level	19
	Setting Parameters	20
	ATC Troubleshooting Quick-Checks	20
	A/C Clutch Circuit (ATC HVAC)	26
	Operation	26
	Troubleshooting	26

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 4 - Lighting Systems

CONTENTS

Section	Description	Page
	Introduction	2
	Lamp Replacement Chart	2
	Turn Signals and Hazard Lights	2
	Description	2
	Operation	3
	Troubleshooting	3
	Road Lights, Tail Lights and Console Light	12
	Operation	12
	Troubleshooting	12
	Work Lights	26
	Operation	26
	Exit Lighting (Left Side Stubble Light)	26
	Operation	26
	Functional Check	27
	Procedure	27
	Troubleshooting	27
	Console and Dome Lights	40
	Operation	40
	Troubleshooting	40

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 5 - Engine Electrical Systems

CONTENTS

Section	Description	Page
	General Information	2
	Introduction	2
	Engine Functions for the XCM	2
	Starting Circuits	2
	Air Filter Restriction Switch Circuit	3
	Troubleshooting	4
	Fuel Level Sender Circuit	7
	Troubleshooting	9
	Coolant Temperature Circuit	11
	4-Line Display - Engine Coolant Temperature Scale	12
	A-Pillar Display - Engine Coolant Temperature Scale	12
	Troubleshooting	13
	Engine Fuel Solenoid Circuit	15
	Troubleshooting	15
	Engine Oil Pressure Sensor Circuit	18
	Troubleshooting	20
	Engine Starting Motor Circuit	22
	Cold-Start Injection Advance Circuit (KSB)	26
	Fuel Injection Pump Harness Connections	27
	Preheat Circuit (If Equipped)	28

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 6 - Charging Electrical Systems

CONTENTS

Section	Description	Page
	Introduction	3
	Battery	5
	Size and Rating	5
	How a Battery Works	5
	Battery Troubleshooting	5
	Determining the Cause of Failure	6
	Application and Installation	6
	Service History	6
	Visual Inspection	6
	Troubleshooting Summary	8
	Testing The Battery - General	9
	"Key Off" Current Drain	10
	Voltage Drop Test	11
	Charging the Battery	12
	Determining Battery Charge Procedure	12
	Slow Charge Procedure: For Batteries with Charges Below 11.0V	12
	Selecting Battery Charging Method	13
	Slow Charge Procedure	14
	Standard Charge Procedure: Preferred Method for Batteries with Voltage of 11 - 12.5 V	15
	Fast Charge Procedure: Alternative Method for Batteries with Voltages of 11 - 12.5 V	15
	Battery Charging Precautions	16
	Battery Specifications	16
	Alternator	17
	Charging System Excitation Circuit Operation	17
	Alternator and Voltage Regulator	17
	Maintaining the Alternator	18
	Alternator Connections	19
	Alternator and Voltage Regulator Precautions	19

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 6 - Charging Electrical Systems (Continued)

CONTENTS

Section	Description	Page
	Belts - Engine	20
	Belt Inspection (check every 1200 hours)	20
	Compressor Belt Replacement	21
	Drive Belt Replacement	22
	Welding On the Machine	23
	Troubleshooting	23
	Testing the Alternator	23
	Alternator Removal	25
	Alternator Installation	27

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 7 - Electro-Hydraulic Systems

CONTENTS

Section	Description	Page
	Hydraulic Oil Level Switch Circuit	2
	Troubleshooting	3
	Hydraulic Oil Temperature Switch Circuit	7
	Troubleshooting	8
	Hydraulic Charge Pressure Switch	12
	Troubleshooting	13
	Seat Occupied Circuit	17
	Troubleshooting	18
	Header Drive Circuit	20
	Header Reverse Circuit	22
	Master Hydraulic Solenoid Circuit	24
	Hydrostatic High Speed Circuit	27

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 8 - Diagnostic Test Mode

CONTENTS

Section	Description	Page
	Accessing Diagnostic Mode	2
	Inputs	3
	Engine Inputs	4
	Fuel Inputs	5
	Header Inputs	5
	Hydraulics Inputs	6
	Lights Inputs	7
	Preheat Inputs	7
	Propulsion Inputs	8
	PTO Inputs	8
	Reel Inputs	9
	Outputs	9
	Header Outputs	10
	HVAC Outputs	11
	Preheat Outputs	11
	Inputs and Outputs Component Chart	12
	Wiggle Test	16
	Display (LCD) Test	16
	Fault History Screen	17

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 9 - Audible Alarm

CONTENTS

Section	Description	Page
	Audible Warnings	2
	Critical Warnings - Automatic Shutdown	2
	Critical Warnings - No Shutdown	2
	Non-Critical Warnings	2
	Audible Alarm Priorities	3
	Low Priority Warnings	3
	Medium Priority Warnings	3
	High Priority Warnings	3
	Enable/Disable the Low Fault Warning	4

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 10 - Controller Area Network (CAN)

CONTENTS

Section	Description	Page
	CAN Network Basics	2

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87744705

Chapter 11 - Fault Codes

CONTENTS

Section	Description	Page
	Introduction	4
	Fault Code Format (SPN/FMI codes)	5
	SPN/FMI Code Charts	5
	FMI Codes	5
	SPN Codes	6
	Troubleshooting	9
	Engine Fault Codes	9
	Fault Code – 101-03 Oil Pressure Switch Shorted to High Source	9
	Fault Code – 101-04 Oil Pressure Switch Shorted to Low Source	11
	Fault Code – 102-03 Air Filter Restriction Switch Shorted to High Source	13
	Fault Code – 104-04 Engine Coolant Temp Sensor Shorted to Low Source	16
	Hydraulic Fault Codes	18
	Fault Code – 001-03 Hydraulic Charge Pressure Switch Shorted to High Source	18
	Fault Code – 002-03 Hydraulic Reservoir Level Sensor Shorted to High Source	21
	Fault Code – 003-03 Hydraulic Oil Temperature Switch Shorted to High Source	24
	Propulsion Fault Codes	27
	Fault Code – 404-03 MFH Position Sensor Shorted to High Source	27
	Fault Code – 404-04 MFH Position Sensor Shorted to Low Source	31
	Fault Code – 404-14 MFH Position Sensor Special Instructions	35
	Fault Code – 405-03 Pintle Arm Position Sensor Shorted to High Source	39
	Fault Code – 405-04 Pintle Arm Position Sensor Shorted to Low Source	43
	Fault Code – 406-03 Propulsion Cylinder Position Pot A Shorted to High Source	47
	Fault Code – 406-04 Propulsion Cylinder Position Pot A Shorted to Low Source	50
	Fault Code – 406-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration	53

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87744705

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	Fault Code – 407-03 Propulsion Cylinder Position Pot B Shorted to High Source	56
	Fault Code – 407-04 Propulsion Cylinder Position Pot B Shorted to Low Source	59
	Fault Code – 407-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration	62
	Fault Code – 408-03 MFH Neutral Switch Shorted to High Source	65
	Fault Code – 408-07 MFH Neutral Switch Mechanical Out Of Range	67
	Fault Code – 409-03 Park Brake Switch Shorted to High Source	69
	Fault Code – 411-13 Propulsion Cylinder Position Pot A Needs Calibration	72
	Fault Code – 412-13 Propulsion Cylinder Position Pot A Needs Calibration	75
	Fault Code – 413-13 Propulsion Cylinder Position Pot A Needs Calibration	78
	Fault Code – 414-13 Propulsion Cylinder Position Pot B Needs Calibration	81
	Fault Code – 415-13 Propulsion Cylinder Position Pot B Needs Calibration	84
	Fault Code – 416-13 Propulsion Cylinder Position Pot B Needs Calibration	87
	Fault Code – 418-03 MFH Position Sensor Shorted to High Source	90
	Fault Code – 418-04 MFH Position Sensor Shorted to Low Source	94
	Fault Code – 418-13 MFH Position Sensor Needs Calibration	98
	Fault Code – 419-03 MFH Position Sensor Shorted to High Source	101
	Fault Code – 419-04 MFH Position Sensor Shorted to Low Source	105
	Fault Code – 419-07 MFH Position Sensor Mechanical Out Of Range	109
	Fault Code – 419-13 MFH Position Sensor Needs Calibration	112
	Fault Code – 420-03 MFH Position Sensor Shorted to High Source	115
	Fault Code – 420-04 MFH Position Sensor Shorted to Low Source	119

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87744705

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	Fault Code – 420-07 MFH Position Sensor Mechanical Out Of Range	123
	Fault Code – 420-13 MFH Position Sensor Needs Calibration	128
	Fault Code – 421-03 MFH Position Sensor Shorted to High Source	131
	Fault Code – 421-04 MFH Position Sensor Shorted to Low Source	135
	Fault Code – 421-13 MFH Position Sensor Needs Calibration	139
	Fault Code – 424-03 Propulsion Forward Solenoid L-14p Shorted to High Source	142
	Fault Code – 424-04 Propulsion Forward Solenoid L-14p Shorted to Low Source	147
	Fault Code – 424-13 Propulsion Forward Coil Needs Calibration	151
	Fault Code – 425-03 Propulsion Forward Solenoid L-14t Shorted to High Source	155
	Fault Code – 425-04 Propulsion Forward Solenoid L-14t Shorted to Low Source	160
	Fault Code – 425-13 Propulsion Forward Coil Needs Calibration	164
	Fault Code – 426-03 Propulsion Reverse Solenoid L-15p Shorted to High Source	166
	Fault Code – 426-04 Propulsion Reverse Solenoid L-15p Shorted to Low Source	171
	Fault Code – 426-13 Propulsion Reverse Coil Needs Calibration	175
	Fault Code – 427-03 Propulsion Reverse Solenoid L-15t Shorted to High Source	177
	Fault Code – 427-04 Propulsion Reverse Solenoid L-15t Shorted to Low Source	182
	Fault Code – 427-13 Propulsion Reverse Coil Needs Calibration	184
	Fault Code – 428-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	186
	Fault Code – 429-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	190
	Fault Code – 430-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	194
	Fault Code – 431-03 MFH Position Sensor R-18 Shorted to High Source	197

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87744705

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	Fault Code – 432-03 MFH Position Sensor R-18 Shorted to High Source	200
	Fault Code – 433-03 Propulsion Cylinder Shorted to High Source	203
	Fault Code – 434-03 Propulsion Cylinder Shorted to High Source	205
	Fault Code – 435-03 Propulsion Enable Relay K-35 Shorted to High Source	207
	Fault Code – 435-04 Propulsion Enable Relay K-35 Shorted to Low Source	209
	PTO Fault Codes	211
	Fault Code – 200-12 Header Speed Sensor Bad Intelligent Device	211

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87744705

Chapter 12 - Standard Wiring Harnesses

CONTENTS

Section	Description	Page
	Standard Wiring Harnesses	2
	Wiring Harnesses	2
	FM Harness (Front)	3
	FM Harness (Rear)	4
	FM Harness (Engine LH)	5
	FM Harness (Engine RH)	6
	LL and RL Harnesses (Lighting)	7
	CM Harness (Electrical Panel)	8
	CM Harness (Inside Cab)	9
	CM Harness (Seat and Right Hand Console)	10
	OR Harness (Outside Roof)	11
	RM Harness (Inside Roof)	12
	SC-D Harness (Steering Column)	13

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87744706

Chapter 13 - Standard Wire Harness Connector Information

CONTENTS

Section	Description	Page
	Standard Wire Harnesses	2

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87744706

Chapter 14 - Troubleshooting Optional Equipment

CONTENTS

Section	Description	Page
	A-Pillar Display	3
	Wire Harness Routing/Connections	4
	Troubleshooting	5
	Automatic Temperature Control (ATC)	8
	Radio	8
	Circuit Description	8
	Wire Harness Routing	9
	Troubleshooting	10
	Premium Speakers	15
	Troubleshooting	16
	Cold Start (Thermostart)	21
	Circuit Description	21
	Switch Removal	21
	Switch Connections	22
	Wire harness routing	22
	Troubleshooting	23
	Deluxe Mirrors	26
	Circuit Description	26
	Switch Removal	27
	Switch Connectors	27

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87744706

Chapter 14 - Troubleshooting Optional Equipment (Continued)

CONTENTS

Section	Description	Page
	Accessing the Outer Roof (OR) Harness	28
	Roof Panel Installation	29
	Wiring harness routing	29
	Troubleshooting	31
	Windshield Wiper/Washer	35
	Windshield Wiper Circuit Description	35
	Windshield Washer Circuit Description	36
	Switch Removal	36
	Switch Connections	37
	Troubleshooting	38
	Beacon Mount	42
	Circuit Description	42
	Switch Removal	42
	Connectors and Circuitry	43
	Accessing the Outer Roof (OR) Harness	44
	Roof Panel Installation	45
	Wiring Harness Routing and Connections	46
	Troubleshooting	47
	Adjustable Windrow Shields	50
	Circuit Description	50
	Switch Connection	51
	Troubleshooting	52
	Sickle Header Drive Adapter (2300 and HS Series)	56
	Header Speed Does Not Indicate on the Display	57
	Draper Header Drive Adapter	59

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87744706

Chapter 15 - Electrical Schematics

CONTENTS

Section	Description	Page
	Introduction	2
	Using Schematics	3
	Power	4
	Grounds	4
	Connections	4
	Harnesses	5
	Standard Harnesses	5
	Optional Harnesses	5
	Wire Harness Routing	6
	Circuit Identification	6
	Windrower Electrical Schematic	7

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 87744707

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Overview	2
	Draper Floatation	2
	Operation	2
	Overhaul	3
	Cut Height Cylinders	3
	Removal	3
	Inspection	4
	Installation	5
	Hydraulic System Check	6
	Hydraulic System Check with Header Installed	6
	Electrical System - Fuse and Relay	6
	Removal	6
	Switches	7
	Removal	7
	Solenoid Connectors	7
	Inspection	7
	Energized Components	10
	Header to Machine Connector	11
	Flow Divider	12
	Theory of Operation	12
	Logic	13
	Wire Harnesses	14
	Troubleshooting	35
	Diagnostic Charts	35

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 87744707

Chapter 2 - Factory Installed Draper Header

CONTENTS

Section	Description	Page
	Cartridge Valves	2
	Removal	2
	Installation	3
	Hose Routing - Cut Height Cylinders	4
	Hose Routing	5
	Removal	5
	Installation	5
	Hoses - Valve to Valve	5
	Removal	5
	Installation	5
	Wire Harnesses	8
	Factory Installed	9
	Relay Panel	10
	Schematics	11

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 87744707

Chapter 3 - Dealer Installed Draper Header

CONTENTS

Section	Description	Page
	Cartridge Valves	2
	Removal	2
	Installation	3
	Hose Routing - Cut Height Cylinders	4
	Hose Routing	5
	Removal	5
	Installation	5
	Hoses - Valve to Valve	5
	Removal	5
	Installation	5
	Wire Harnesses	10
	Fuse F-01 Power Chart	12
	Fuse F-02 Power Chart	12
	Schematics	13

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 87744707

Chapter 4 - Draper Setup

CONTENTS

Section	Description	Page
	Accessing Dealer Setup	2
	Multi-Function Handle (MFH)	2
	Dealer Setup Navigation	2
	Dealer Setup Menu	3
	DIA Options Menu	3
	User Configure Menu	4
	Draper Head PTO Calibration	5

SECTION 88 - OPTIONAL EQUIPMENT

BOOK 6 - 87744707

Chapter 1 - Optional Equipment

CONTENTS

Section	Description	Page
	Deluxe Cab Upgrade Package	2
	A-Pillar Display	2
	Automatic Temperature Control (ATC)	3
	Window Screen Kit	3
	Premium Speaker Kit	3
	Optional Kits	4
	Radio (A-17)	4
	Service Floodlight	4
	Cold Start Kit	5
	Deluxe Mirror	5
	Rear View Mirror	6
	Wiper/Washer	6
	Deluxe Header Tilt Indicator	6
	Beacon Mount Kit	7
	Adjustable Windrow Shield	7
	Model HDX2 Sickle Header Drive Adapter Kit	7
	Model HDX1 Sickle Header Drive Adapter Kit	8
	Draper Header Drive Adapter Kit	8
	Deck Shift Draper Header Adapter Kit	8
	Hydraulic Reel Drive	9
	Auxiliary Drive - Engine Mounted	9
	Rear Suspension Damper	9
	Rear Suspended Axle	10
	Weight Carrier Kit	10
	Swath Roller Hitch	10

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 6 - 87744707

Chapter 1 - WD1203

CONTENTS

Section	Description	Page
	Overview	3
	Deluxe Operator's Seat	3
	Controls	3
	Armrest Height	3
	Height/Weight Adjustments	3
	Backrest Angle	3
	Fore/Aft Position	3
	Lumbar Adjustment Knob	4
	Seat Belt	4
	Cleaning the Seat Belt	4
	Seat Air Compressor	4
	Height Adjustment	4
	Overhaul	5
	Seat Belt	5
	Replacing the Seat Belt	5
	Seat	5
	Removing the Seat from the Seat Base	5
	Disassembling the Seat	5
	Upper Seat	6
	Removing Armrest	6
	Armrest Adjustment	7
	Replacing Seat Height Switch	9
	Cushions	10
	Removing Bottom Seat Cushion	10
	Removing Seat Back Cushion	11
	Fore/Aft Adjustment Rails	11
	Removing Seat from Slide Rails	11
	Removing Slide Rails from Suspension	11
	Seat Suspension	12
	Disassembly of Seat Suspension	12

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 6 - 87744707

Chapter 1 - WD1203 (Continued)

CONTENTS

Section	Description	Page
	Rubber Bumpers	15
	Inspection of the Seat Suspension Components	15
	Release Valve/Solenoid	15
	Inspection	15
	Air Compressor	16
	Inspection	16
	Fore/Aft Adjustment Lever	17
	Inspection	17
	Damping Shock Absorber	18
	Inspection	18
	Scissors Suspension	18
	Inspection	18
	Circuit Description	19
	Troubleshooting	21
	Seat Air Compressor Does Not Run	21
	Cab Door	22
	Removal	22
	Installation	22
	Cab Door Handle	22
	Disassembly	22
	Installation	22
	Cab Floor Mat	23
	Removal	23
	Inspection	23
	Cab Suspension	23
	Remove and Replace - Front Cab Mounts	24
	Remove and Replace - Rear Cab Suspension	25
	Console	25
	Removal	25
	Installation	26

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 6 - 87744707

Chapter 1 - WD1203 (Continued)

CONTENTS

Section	Description	Page
	Overhead Switches	26
	Removal/Installation	27
	Stereo System	27
	Removal/Installation	28
	Wiper Motor/Washer	29
	Removal	29
	Installation	33
	Steering Column	36
	Cover Removal	36
	Cover Installation	37
	Column Removal	39
	Column Installation	39
	Cab Roof	40
	Removal	40
	Inspection	43
	Installation	43
	Safety Decals	46

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com