SERVICE MANUAL 6HK1 ISUZU ENGINES

TABLE OF CONTENTS	
SECTION	DESCRIPTION
0A	General Information
0B	Maintenance
6A	Engine Mechanical
6B	Engine Cooling
6C	Engine Fuel
6D	Starting and Charging
6G	Engine Lubrication
6J	Engine Induction
12	Troubleshooting
13	Special Tool List

SECTION 0A

GENERAL INFORMATION


TABLE OF CONTENTS

ITEM	PAGE
General Repair Instructions	2
Illustration Arrows	3
Abbreviations	41
Main Data and Specifications	5
Service Standards	
Engine External View Drawing	11
Tightening Torque Specifications	12 [']
Angular Nut and Bolt Tightening Method	
Major Component Mounting Nuts And Bolts	

GENERAL REPAIR INSTRUCTIONS

- 1. Before performing any service operation with the engine mounted, disconnect the grounding cable from the battery.
 - This will reduce the chance of cable damage and burning due to short circuiting.
- **2.** Always use the proper tool or tools for the job on hand.
 - Where specified use the specially designed tool or tools.
- **3.** Use genuine CASE parts, referring to the CASE PARTS CATALOG for engine safety.
- **4.** Never reuse cotter pins, gaskets, O-rings, lock washers, and self locking nuts. Discard them as you remove them. Replace them with new ones.
- **5.** Always keep disassembled parts neatly in groups. This will ensure a smooth reassembly operation. It is especially important to keep fastening parts separate. These parts vary in hardness and design, depending on their installation position.
- **6.** All parts should be carefully cleaned before inspection or reassembly.
 - Oil ports and other openings should be cleaned with compressed air to make sure that they are completely free of obstructions.
- 7. Rotating and sliding part surfaces should be lubricated with oil or grease before reassembly.
- 8. If necessary, use sealing compound on gaskets to prevent leakage.
- 9. Nut and bolt torque specifications should be carefully followed.
- **10.** Always release the air pressure from any machine-mounted air tank(s) before dismounting the engine or disconnecting pipes and hoses. To not do so is extremely dangerous.
- 11. Always check and recheck you work. No service operation is complete until you have done this.

ILLUSTRATION ARROWS

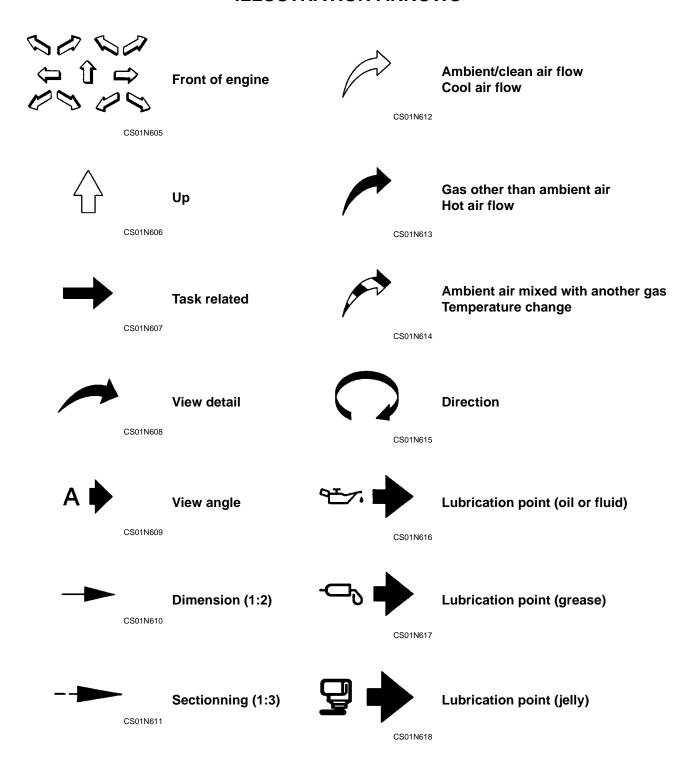

ABBREVIATIONS

List of abbreviations which may be used in this manual

A - Ampere(s)

AC - Alternating Current

ACL - Air Cleaner

Adj - Adjust

AMP - Ampere(s)

ASM - Assembly

ATDC - After Top Dead Center

Auto - Automatic

Bat - Battery

B+ - Battery Positive Voltage BHP - Brake Horsepower

BTDC - Before Top Dead Center

°C - Degrees Celsius cc - Cubic Centimeters

CID - Cubic Inch Displacement

CO - Carbon Monoxide

Conn - Connector

Crank - Crankshaft

Cu.In. - Cubic Inch

Cyl - Cylinder(s)

DOHC - Double Overhead Camshaft

DTC - Diagnostic Test Mode

DTT - Diagnostic Test Terminal

ECM - Engine Control Module

ECT - Engine Coolant Temperature

EGR - Exhaust Gas Recirculation

Exh - Exhaust

°F - Degrees Fahrenheit

FL - Fusible Link

FLW - Fusible Link Wire

FP - Fuel Pump

FRT - Front

ft - Foot

Gal - Gallon

GND - Ground

Gov - Governor

a - Gram

Har - Harness

HC - Hydrocarbons

HD - Heavy Duty

Hg - Hydrargyrum (Mercury)

IC - Integrated Circuit/Ignition Control

ID - Identification/Inside Diameter

IGN - Ignition

INJ - Injection

Int - Intake

kg - Kilograms

km - Kilometers

km/h - Kilometer per Hour

kPa - Kilopascals

kV - Kilovolts (thousands of volts)

kW - Kilowatts

L - Liter

lb ft - Foot Pounds

Ib in - Inch Pounds

LF - Left Front

LH - Left Hand

LR - Left Rear

LS - Left Side

L-4 - In-Line Four Cylinder Engine

Max - Maximum

Min - Minimum

mm - Millimeter

N - Newtons

NA - Naturally Aspirated

NC - Normally Closed

Nm - Newton Meters

NO - Normally Open

NOX - Nitrogen oxides

OD - Outside Diameter

OHC - Overhead Camshaft

PCV - Positive Crankcase Ventilation

PRESS - Pressure

PROM - Programmable Read Only Memory

psi - Pounds per Square Inch

PSP - Power Steering Pressure

Pt. - Pint

PWM - Pulse Width Modulate

Qt. - Quart

REF - Reference

RF - Right Front

RH - Right Hand

RPM - Revolutions Per Minute

RPM Sensor - Engine Speed Sensor

RR - Right Rear

RS - Right Side

RTV - Room Temperature Vulcanizing

SAE - Society of Automotive Engineers

Sec - Secondary

SI - System International

SOHC - Single Overhead Camshaft

Sol - Solenoid

SPEC - Specification

Speedo - Speedometer

ST - Start/Scan Tool

Sw - Switch

SYN - Synchronize

Tach - Tachometer

TDC - Top Dead Center

Term - Terminal

TEMP - Temperature

TURBO - Turbocharger

V - Volt(s)

VAC - Vacuum

V-ref - ECM Reference Voltage

VSS - Vehicle Speed Sensor

VSV - Vacuum Switch Valve

V-6 - Six Cylinder "Vee" Engine

V-8 - Eight Cylinder "Vee" Engine

W - Watt(s)

w/ - With

w/o - Without

WOT - Wide Open Throttle

MAIN DATA AND SPECIFICATIONS

NOTE:

- 1. These specifications are based on the standard engine.
- 2. Specifications for items marked with an asterisk (*) will vary according to the type of equipment on which the engine is installed.

If you are unable to locate the data applicable to these specifications, please contact Isuzu Motors LTD through your machine supplier.

	ITEMS		6HK1	
Engine type			Four cycle, water cooled, in-line, overheat camshaft direct	
			injection	
Combustion cham	ber		Open type in piston crown	
Cylinder liner			Dry	
Timing drive syste	em		Gear drive	
No. of cylinders - I	bore x stroke	mm (in)	6 - 115 x 125 (4.53 x 4.92)	
No. of piston rings	3		Four rings (Compression rings: 3, Oil ring: 1)	
Total piston displa	cement	L (cid)	7.790 (475.4)	
Compression ratio	on (to 1)		17.3	
Compression pres	ssure at 200 min ⁻¹			
	MPa (k	g/cm ² /psi)	3.24 (33/469) or more	
Engine dimension	s*	mm (in)	1,332 x 995 x 1,143 (52.4 x 39.2 x 45.0)	
Engine weight (Dr	·y)*	kg (lb)	650 (1,433)	
Fuel injection orde	er		1 - 5 - 3 - 6 - 2 - 4	
Fuel injection timir	ng (TDC)	deg	9	
Specified fuel type	e		SAE No. 2 diesel fuel	
Idling speed*		min ⁻¹	1000	
Valve clearances	Intake	mm (in)	0.40 (0.016)	
	Exhaust	mm (in)	0.40 (0.016)	
Intake valves	Open at (BTDC)	deg	15	
	Close at (ABDC)	deg	44	
Exhaust valves	Open at (BBDC)	deg	58	
	Close at (ATDC)	deg	11	
Injection pump			Bosch, in-line P-Type	
Governor type*			Mechanical	
Injection nozzles			Multi-hole	
Injection nozzle or	pening pressure			
	MPa (k	g/cm ² /psi)	1st stage: 18.1 (185/2630)	
	`	,	2nd stage: 22.1 (225/3200)	
Main fuel filter			Paper element	

0A-6 GENERAL INFORMATION

ITEMS		6HK1	
Lubrication system			
Lubrication method		Full flow pressure circulation	
Specified engine oil (API grade)		CD	
Oil pressure (at oil gallery)			
kPa (kg/cm ²	/psi)/min ⁻¹	290 - 490 (3.0 - 5.0/43-71)/2000	
, 5	. ,	Condition: SAE 30 API CD grade engine oil at an oil	
		temperature of 80°C (176°F)	
Oil pump type		Gear (Timing gear drive)	
Relief valve opening pressure			
kPa (k	g/cm ² /psi)	780 (8.0/114)	
Oil pressure switch operating press	sure*		
kPa (k	g/cm ² /psi)	29 (0.3/4)	
Main oil filter		Paper element	
By-pass valve opening pressure			
kPa (kg/cm²/psi)		200 (2.0/28.4)	
Oil volume*	L (qts)	36 (38) with combined main and partial oil filter	
Oil cooler		Plate type - Water cooled in water jacket	
Cooling system		Pressured compulsory circulation water	
Coolant volume	L (qts)	14.5 (15.3)	
Water pump		Centrifugal impeller	
Delivery volume			
Lit/min. (Imp. g	ıal/US gal)	167 (37/44) Pump speed a 1.600 min ⁻¹	
Thermostat		Wax pellet	
Valve initial opening temperature*	°C (°F)	82 (180)	
Valve lift	mm (in)	10 (0.39)	
Air cleaner			
Alternator capacity*	V-A	24-50	
Regulator*		IC (Built-in)	
Brush length*	mm (in)	Brushless	
Starter motor output*	V-kW	24-5	
Number of poles*		4	
Turbocharger model*		RHG 6	
Manufacturer		Ishikawajima-Harima Heavy Industries (IHI)	

SERVICE STANDARDS

ITEMS		SERVICE STANDARD	SERVICE LIMIT
Cylinder Head			
Lower Face Warpage	mm (in)	0.05 (0.002) or less	0.20 (0.008) Do not regrind the lower face.
Valve Guide			
Valve Stem Clearance			
Intake	mm (in)	0.04 - 0.06 (0.0016 - 0.0024)	0.20 (0.008)
Exhaust	mm (in)	0.06 - 0.10 (0.0024 - 0.0039)	0.25 (0.010)
Valve Stem Outside Diameter			
Intake	mm (in)	7.95 - 7.96 (0.3130 - 0.3134)	7.89 (0.3106)
Exhaust	mm (in)	7.92 - 7.94 (0.3118 - 0.3126)	7.89 (0.3106)
Valve Guide Upper End Height	mm (in)	14.1 (0.56)	_
Valve and Valve Seat Insert			
Valve Thickness			
Intake	mm (in)	1.71 (0.067)	1.30 (0.051)
Exhaust	mm (in)	1.75 (0.069)	1.30 (0.051)
Valve Depression A	, ,	, , ,	, ,
Intake	mm (in)	1.0 (0.039)	2.5 (0.098)
Exhaust	mm (in)	1.3 (0.051)	2.8 (0.110)
Valve Contact Width	` ,	, ,	,
Intake	mm (in)	2.5 (0.098)	3.2 (0.126)
Exhaust	mm (in)	2.0 (0.079)	2.8 (0.110)
Valve Face Angle			, ,
Intake	deg	30	_
Exhaust	deg	45	_
Valve Spring	-		
Spring Height			
Intake	mm (in)	65.9 (2.59)	64.6 (2.54)
Exhaust	mm (in)	68.1 (2.68)	66.7 (2.63)
Inner and Outer Spring Squareness			
Intake	mm (in)	2.9 (0.114)	3.0 (0.118)
Exhaust	mm (in)	3.0 (0.118)	3.0 (0.118)
Intake Valve Spring Tension			
Compression Height	N (kg/lb)	348 (35.5/78)/46	
Exhaust Valve Spring Tension			
Compression Height	N (kg/lb)	383 (39.0/86)/46	
Rocker Arm Shaft and Rocker Arm			
Rocker Arm Shaft Run-Out	mm (in)		0.30 (0.012)
Rocker Arm Shaft Outside Diam	eter		
	mm (in)	21.979 - 22.000	21.85
		(0.865 - 0.866)	(0.860)
Rocker Arm Inside Diameter	mm (in)	22.010 - 22.035	
		(0.867 - 0.868)	

0A-8 GENERAL INFORMATION

ITEM	MS		SERVICE STANDARD	SERVICE LIMIT
Rocker Arm Shaft an	d			
Rocker Arm Clearance	ce	mm (in)	0.010 - 0.056	0.20
			(0.0004 - 0.0022)	(800.0)
Rocker Arm Pin and	Roller Cleara	ance		
		mm (in)	0.068 - 0.099	0.50
			(0.0027 - 0.0039)	(0.02)
Valve Cap Worn		mm (in)		0.10 (0.004)
Camshaft				
Camshaft Journal Dia	ameter	mm (in)	39.950 - 39.975	39.85
		,	(1.5728 - 1.5738)	(1.5689)
Cam Lobe Height	Intake	mm (in)	54.54 (2.1472)	
	Exhaust	mm (in)	52.85 (2.0807)	
Camshaft Run-Out		mm (in)	0.025 (0.001)	0.05 (0.002)
Camshaft Bearing Ins	side Diamete	` ,	40.00 - 40.037 (1.575 - 1.576)	` ,
Camshaft Bearing Cl		mm (in)	0.025 - 0.087	0.15
]		` '	(0.001 - 0.003)	(0.006)
Crankshaft			,	,
Crankshaft End Play		mm (in)	0.040 - 0.205	0.54 (0.021)
		()	(0.0026 - 0.008)	,
Crankshaft Run-Out		mm (in)	0.06 (0.002) or less	0.45 (0.016)
Crankshaft Journal D	iameter	()	See section 6A crankshaft	- (/
			journal diameter in this	
			manual.	
Crankshaft Journal a	nd			
Bearing Clearance		mm (in)		
No. 4 Bearing		,	0.093 - 0.124	0.14
			(0.00366 - 0.00488)	(0.0055)
Other Bearings			0.063 - 0.094	0.14
			(0.00248 - 0.00370)	(0.0055)
Crankshaft Journal			,	,
and Crankpin Unever	n Wear	mm (in)		0.05 (0.0020)
Piston and Piston Ring			-	
Piston Grade			No	
Cylinder Liner and Pi	ston Clearan	ce		
		mm (in)	0.122 - 0.156	_
			(0.0048 - 0.0061)	
Piston Ring and Pisto	n Ring			
Gloove Clearance	-	mm (in)		
1st Compression R	ing		0.057 - 0.097	0.20
·	-		(0.0022 - 0.0038)	(800.0)
2nd and 3rd Compi	ression Ring		0.085- 0.120	0.15
·	J		(0.0033 - 0.0047)	(0.006)
Oil Ring			0.02 - 0.06 (0.0008 - 0.0024)	0.15 (0.006)

ITEMS		SERVICE STANDARD	SERVICE LIMIT
Piston Ring, Gap	mm (in)		
1st Compression Ring	` ,	0.18 - 0.28 (0.0071 - 0.0110)	1.20 (0.047)
2nd and 3rd Compression Ring		0.35 - 0.50 (0.0138 - 0.0197)	1.20 (0.047)
Oil Ring		0.15 - 0.35 (0.0059 - 0.0138)	1.20 (0.047)
Piston Pin			(0.0)
Piston Pin Diameter	mm (in)	35.995 - 36.000	35.95 (1.4154)
I loter I in Brameter		(1.4171 - 1.4173)	00.00 (1.1101)
Piston Pin Hole Diameter	mm (in)	36.004 - 36.012	
1 Istori in Floie Diameter		(1.4175 - 1.4178)	
Piston Pin and Piston Pin		(
Hole Clearance	mm (in)	0.004 - 0.017	
Tiolo Glodianes		(0.00016 - 0.00067)	
Connecting Rod		(0.00010 0.00001)	
Connecting Rod Alignment	mm (in)	0.05 (0.002) or less	0.20 (0.008)
Connecting Rod Small End	111111 (111)	0.03 (0.002) 01 less	0.20 (0.000)
Bushing Diameter	mm (in)	36.012 - 36.022	
Bushing Diameter	111111 (111 <i>)</i>	(1.4178 - 1.4182)	
Piston Pin and Connecting Rod		(1.4176 - 1.4162)	
Small End Bushing Clearance	mm (in)	0.012 - 0.027	0.05 (0.002)
Small Life Bushing Clearance	111111 (111)	(0.00047 - 0.00106)	0.03 (0.002)
Crankpin and Bearing Clearance	mm (in)	0.037 - 0.076	0.10 (0.004)
Crankpin and Bearing Clearance	111111 (111)	(0.0015 - 0.0030)	0.10 (0.004)
Connecting Rod Big End and		(0.0013 - 0.0030)	
Crankpin Side Face Clearance	mm (in)	0.17 - 0.30 (0.0067 - 0.0118)	0.35 (0.014)
Flywheel	111111 (111)	0.17 - 0.30 (0.0007 - 0.0110)	0.55 (0.014)
Flywheel Friction Surface Depth	mm (in)	43.0 (1.69) for 14 in clutch	44.0 (1.73) for 14 in clutch
	111111 (111)	48.0 (1.89) for 15 in clutch	49.0 (1.93) for 15 in clutch
Flywheel Friction Surface Thickne	.00	40.0 (1.09) 101 13 111 clater	49.0 (1.95) for 15 in clutch
Flywheel Fliction Sunace Thickne	mm (in)	41.0 (1.61)	40.0 (1.57)
Flywheel Friction Surface Roughn		71.0 (1.01)	40.0 (1.07)
i lywneel Fliction Sunace Roughin	mm (in)	Less than	
	11111 (III <i>)</i>	0.05 (0.0020)	
Idler Gear		0.00 (0.0020)	
Idler Gear Shaft A			
Outside Diameter	mm (in)	49.950 - 49.975	
	11111 (111)	(1.9665 - 1.9675)	
Idler Gear Shaft B and C		(1.0000 1.0070)	
Outside Diameter	mm (in)	29.959 - 29.980	29.9
Satorde Diameter	(!!!)	(1.1795 - 1.1803)	(1.1772)
Idler Gear Shaft A and		(1.1700 1.1000)	(1.17.2)
Idle Gear Clearance	mm (in)	0.025 - 0.075	
idic Gear Glearanee		(0.00098 - 0.00295)	
Idler Gear Shaft B and C and		(0.00030 - 0.00233)	
Idle Gear Clearance	mm (in)	0.020 - 0.062	0.20
Idio Oddi Olddianos	(!!!)	(0.0008 - 0.0024)	(0.008)
1		(0.0000 0.0024)	(0.000)

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com