



MF4700

MF4707

MF4708

MF4709

MF4710



MF4700

1 Introduction	1-1
1.1 General	1-9
1.1.1 Using the manual	1-9
1.1.2 General specifications	1-9
1.1.2.1 MF 4707 model	1-9
1.1.2.2 Model MF 4708	1-11
1.1.2.3 Model MF 4709	1-13
1.1.2.4 Model MF 4710	1-15
1.1.3 Capacities and dimensions of the GTA50 transmission	1-17
1.1.3.1 Capacities	1-17
1.1.3.2 MF 4700/Dimensions and weights	1-19
1.1.3.3 Dimensions and weights	1-21
1.1.3.4 Attachment points for 3-cylinder engines	1-23
1.1.3.5 Attachment points for 4-cylinder engines for MF 4708 tractors with Tier 2/ Stage II engine	1-25
1.1.4 Conversion table	1-26
1.1.5 Tightening torques	1-28
1.1.5.1 Tightening torques for screws and nuts	1-28
1.1.5.2 Tightening torques for hydraulic unions	1-32
1.1.6 Retaining compounds and sealing products	1-35
1.2 Error codes	1-37
1.2.1 Error codes	1-37
1.3 Fuse box, electrical diagrams, harnesses and hydraulics diagrams	1-42
1.3.1 Fuse box	1-42
1.3.1.1 Main fuse boxes: Platform models	1-42
1.3.1.2 Main fuse boxes: Cab models	1-70
1.3.1.3 Additional fuse boxes: Platform models	1-82
1.3.1.4 Additional fuse boxes: Cab models	1-90
1.3.1.5 Fuse boxes on the side of the battery	1-91
1.3.2 AGCO Power Tier 2 engine, mechanical reverse shuttle, platform	1-103
1.3.2.1 AP Tier 2 - Summary of electrical diagrams - Mechanical reverse shuttle	1-103
1.3.2.2 AP Tier 2 - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-103
1.3.2.3 AP Tier 2 - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-104
1.3.2.4 AP Tier 2 - Mechanical reverse shuttle/Instrument panel	1-105
1.3.2.5 AP Tier 2 - Mechanical reverse shuttle/Engine	1-106
1.3.2.6 AP Tier 2 - Mechanical reverse shuttle/Linkage	1-107
1.3.2.7 AP Tier 2 - Mechanical reverse shuttle/Rear power take-off	1-108
1.3.2.8 AP Tier 2 - Mechanical reverse shuttle/Lighting	1-109
1.3.2.9 AP Tier 2 - Mechanical reverse shuttle/Lighting 2	1-110
1.3.2.10 AP Tier 2 - Mechanical reverse shuttle/Fenders and European trailer connector	1-111
1.3.2.11 AP Tier 2 - Mechanical reverse shuttle/Fenders and North America trailer connector	1-112
1.3.2.12 AP Tier 2 - Mechanical reverse shuttle/Work lights	1-113
1.3.2.13 AP Tier 2 - Mechanical reverse shuttle/Power socket	1-114
1.3.2.14 AP Tier 2 - Mechanical reverse shuttle/Front loader	1-115
1.3.2.15 AP Tier 2 - Mechanical reverse shuttle/Linkage console	1-116
1.3.2.16 AP Tier 2 - Mechanical reverse shuttle/Transmission	1-117
1.3.2.17 AP Tier 2 - Mechanical reverse shuttle/Earth	1-118
1.3.3 AGCO Power Tier 2 engine, PowerShuttle, platform	1-119

- 1.3.3.1 AP Tier 2 - Summary of electrical diagrams — Electrohydraulic reverse shuttle 1-119
- 1.3.3.2 AP Tier 2 - PowerShuttle/Electrical power supply with battery isolator . . . 1-120
- 1.3.3.3 AP Tier 2 - PowerShuttle/Electrical power supply without battery isolator 1-121
- 1.3.3.4 AP Tier 2 - PowerShuttle/Instrument panel 1-122
- 1.3.3.5 AP Tier 2 - PowerShuttle/Engine 1-123
- 1.3.3.6 AP Tier 2 - PowerShuttle/Linkage 1-124
- 1.3.3.7 AP Tier 2 - PowerShuttle/Rear PTO 1-125
- 1.3.3.8 AP Tier 2 - PowerShuttle/PowerShuttle 1-126
- 1.3.3.9 AP Tier 2 - PowerShuttle/Lighting 1-127
- 1.3.3.10 AP Tier 2 - PowerShuttle/Lighting 2 1-128
- 1.3.3.11 AP Tier 2 - PowerShuttle/Fenders and European trailer connector 1-129
- 1.3.3.12 AP Tier 2 - PowerShuttle/Fenders and North America trailer connector . 1-130
- 1.3.3.13 AP Tier 2 - PowerShuttle/Work lights 1-131
- 1.3.3.14 AP Tier 2 - PowerShuttle/Power socket 1-132
- 1.3.3.15 AP Tier 2 - PowerShuttle/Front loader 1-133
- 1.3.3.16 AP Tier 2 - PowerShuttle/Linkage console 1-134
- 1.3.3.17 AP Tier 2 - PowerShuttle/Transmission 1-135
- 1.3.3.18 AP Tier 2 - PowerShuttle/Earth 1-136
- 1.3.4 AGCO Power Tier 3 engine, mechanical reverse shuttle, platform 1-137
 - 1.3.4.1 AGCO Power Tier 3 - Mechanical reverse shuttle/Summary 1-137
 - 1.3.4.2 AGCO Power Tier 3 - Mechanical reverse shuttle/Electrical power supply with battery isolator 1-139
 - 1.3.4.3 AGCO Power Tier 3 - Mechanical reverse shuttle/Electrical power supply without battery isolator 1-139
 - 1.3.4.4 AGCO Power Tier 3 - Mechanical reverse shuttle/Instrument panel 1-140
 - 1.3.4.5 AGCO Power Tier 3 - Mechanical reverse shuttle/Engine 1-141
 - 1.3.4.6 AGCO Power Tier 3 - Mechanical reverse shuttle/Engine 2 1-142
 - 1.3.4.7 AGCO Power Tier 3 - Mechanical reverse shuttle/Linkage 1-143
 - 1.3.4.8 AGCO Power Tier 3 - Mechanical reverse shuttle/Rear PTO 1-144
 - 1.3.4.9 AGCO Power Tier 3 - Mechanical reverse shuttle/PowerShuttle 1-145
 - 1.3.4.10 AGCO Power Tier 3 - Mechanical reverse shuttle/PowerShuttle 2 1-146
 - 1.3.4.11 AGCO Power Tier 3 - Mechanical reverse shuttle/Lighting 1-147
 - 1.3.4.12 AGCO Power Tier 3 - Mechanical reverse shuttle/Lighting 2 (ISO) 1-148
 - 1.3.4.13 AGCO Power Tier 3 - Mechanical reverse shuttle/Lighting 2 (SAE) 1-149
 - 1.3.4.14 AGCO Power Tier 3 - Mechanical reverse shuttle/Trailer connector (ISO) 1-150
 - 1.3.4.15 AGCO Power Tier 3 - Mechanical reverse shuttle/Trailer connector (SAE) 1-151
 - 1.3.4.16 AGCO Power Tier 3 - Mechanical reverse shuttle/Work lights 1-152
 - 1.3.4.17 AGCO Power Tier 3 - Mechanical reverse shuttle/Power socket (ISO) . . 1-153
 - 1.3.4.18 AGCO Power Tier 3 - Mechanical reverse shuttle/Power socket (SAE) . . 1-154
 - 1.3.4.19 AGCO Power Tier 3 - Mechanical reverse shuttle/Front loader 1-155
 - 1.3.4.20 AGCO Power Tier 3 - Mechanical reverse shuttle/Linkage console 1-156
 - 1.3.4.21 AGCO Power Tier 3 - Mechanical reverse shuttle/Transmission 1-157
 - 1.3.4.22 AGCO Power Tier 3 - Mechanical reverse shuttle/Transmission 2 1-158
 - 1.3.4.23 AGCO Power Tier 3 - Mechanical reverse shuttle/Earth 1-159
- 1.3.5 AGCO Power Tier 3 engine, PowerShuttle, platform 1-160
 - 1.3.5.1 AGCO Power Tier 3 - PowerShuttle/Summary 1-160
 - 1.3.5.2 AGCO Power Tier 3 - PowerShuttle/Electrical power supply without battery isolator 1-162
 - 1.3.5.3 AGCO Power Tier 3 - PowerShuttle/Electrical power supply with battery isolator 1-162
 - 1.3.5.4 AGCO Power Tier 3 - PowerShuttle/Instrument panel 1-163
 - 1.3.5.5 AGCO Power Tier 3 - PowerShuttle/Engine 1-164
 - 1.3.5.6 AGCO Power Tier 3 - Mechanical reverse shuttle/Engine 2 1-165
 - 1.3.5.7 AGCO Power Tier 3 - PowerShuttle/Linkage 1-166
 - 1.3.5.8 AGCO Power Tier 3 - PowerShuttle/Rear PTO 1-167

1.3.5.9	AGCO Power Tier 3 - PowerShuttle/PowerShuttle	1-168
1.3.5.10	AGCO Power Tier 3 - PowerShuttle/PowerShuttle 2	1-169
1.3.5.11	AGCO Power Tier 3 - PowerShuttle/Lighting	1-170
1.3.5.12	AGCO Power Tier 3 - PowerShuttle/Lighting 2 (ISO)	1-171
1.3.5.13	AGCO Power Tier 3 - PowerShuttle/Lighting 2 (SAE)	1-172
1.3.5.14	AGCO Power Tier 3 - PowerShuttle/Trailer connector (ISO)	1-173
1.3.5.15	AGCO Power Tier 3 - PowerShuttle/Trailer connector (SAE)	1-174
1.3.5.16	AGCO Power Tier 3 - PowerShuttle/Work lights	1-175
1.3.5.17	AGCO Power Tier 3 - PowerShuttle/Power socket (ISO)	1-176
1.3.5.18	AGCO Power Tier 3 - PowerShuttle/Power socket (SAE)	1-177
1.3.5.19	AGCO Power Tier 3 - PowerShuttle/Front loader	1-178
1.3.5.20	AGCO Power Tier 3 - PowerShuttle/Linkage console	1-179
1.3.5.21	AGCO Power Tier 3 - PowerShuttle/Transmission	1-180
1.3.5.22	AGCO Power Tier 3 - PowerShuttle/Transmission 2	1-181
1.3.5.23	AGCO Power Tier 3 - PowerShuttle/Earth	1-182
1.3.6	AGCO Power Tier 4i engine, mechanical reverse shuttle, platform	1-183
1.3.6.1	AP Tier 4i - Mechanical reverse shuttle/Summary	1-183
1.3.6.2	AP Tier 4i - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-184
1.3.6.3	AP Tier 4i - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-185
1.3.6.4	AP Tier 4i - Mechanical reverse shuttle/Instrument panel	1-186
1.3.6.5	AP Tier 4i - Mechanical reverse shuttle/Engine	1-187
1.3.6.6	AP Tier 4i - Mechanical reverse shuttle/Linkage	1-188
1.3.6.7	AP Tier 4i - Mechanical reverse shuttle/Rear power take-off	1-189
1.3.6.8	AP Tier 4i - Mechanical reverse shuttle/PowerShuttle	1-190
1.3.6.9	AP Tier 4i - Mechanical reverse shuttle/Lighting	1-191
1.3.6.10	AP Tier 4i - Mechanical reverse shuttle/Lighting 2	1-192
1.3.6.11	AP Tier 4i - Mechanical reverse shuttle/Lighting 3	1-193
1.3.6.12	AP Tier 4i - Mechanical reverse shuttle/Fenders and ISO trailer connector	1-194
1.3.6.13	AP Tier 4i - Mechanical reverse shuttle/Fenders and SAE trailer connector	1-195
1.3.6.14	AP Tier 4i - Mechanical reverse shuttle/Work light	1-196
1.3.6.15	AP Tier 4i - Mechanical reverse shuttle/ISO current socket	1-197
1.3.6.16	AP Tier 4i - Mechanical reverse shuttle/SAE current socket	1-198
1.3.6.17	AP Tier 4i - Mechanical shuttle/Front loader	1-199
1.3.6.18	AP Tier 4i - Mechanical shuttle/Linkage console	1-200
1.3.6.19	AP Tier 4i - Mechanical shuttle/Extension	1-201
1.3.6.20	AP Tier 4i - Mechanical shuttle/Earth	1-202
1.3.7	AGCO Power Tier 4i engine, PowerShuttle, platform	1-203
1.3.7.1	AP Tier 4i - PowerShuttle/Summary	1-203
1.3.7.2	AP Tier 4i - PowerShuttle/Electrical power supply with battery isolator	1-204
1.3.7.3	AP Tier 4i - PowerShuttle/Electrical power supply without battery isolator	1-205
1.3.7.4	AP Tier 4i - PowerShuttle/Instrument panel	1-206
1.3.7.5	AP Tier 4i - PowerShuttle/Engine	1-207
1.3.7.6	AP Tier 4i - PowerShuttle/Linkage	1-208
1.3.7.7	AP Tier 4i - PowerShuttle/Rear PTO	1-209
1.3.7.8	AP Tier 4i - PowerShuttle/PowerShuttle	1-210
1.3.7.9	AP Tier 4i - PowerShuttle/Lighting	1-211
1.3.7.10	AP Tier 4i - PowerShuttle/Lighting 2	1-212
1.3.7.11	AP Tier 4i - PowerShuttle/Lighting 3	1-213
1.3.7.12	AP Tier 4i - PowerShuttle/Fenders and ISO trailer connector	1-214
1.3.7.13	AP Tier 4i - PowerShuttle/Fenders and SAE trailer connector	1-215
1.3.7.14	AP Tier 4i - PowerShuttle/Work light	1-216
1.3.7.15	AP Tier 4i - PowerShuttle/ISO power socket	1-217
1.3.7.16	AP Tier 4i - PowerShuttle/SAE power socket	1-218
1.3.7.17	AP Tier 4i - PowerShuttle/Front loader	1-219

1.3.7.18	AP Tier 4i - PowerShuttle/Linkage console	1-220
1.3.7.19	AP Tier 4i - PowerShuttle/Extension	1-221
1.3.7.20	AP Tier 4i - PowerShuttle/Earth	1-222
1.3.8	AGCO Power Tier 4F engine, mechanical reverse shuttle, platform	1-223
1.3.8.1	AP Tier 4F - Summary of electrical diagrams — Mechanical reverse shuttle	1-223
1.3.8.2	AP Tier 4F - Mechanical shuttle/Electrical power supply with battery isolator	1-224
1.3.8.3	AP Tier 4F - Mechanical shuttle/Electrical power supply without battery isolator	1-225
1.3.8.4	AP Tier 4F - Mechanical shuttle/Instrument panel	1-226
1.3.8.5	AP Tier 4F - Mechanical shuttle/Engine	1-227
1.3.8.6	AP Tier 4F - Mechanical shuttle/Engine 2	1-228
1.3.8.7	AP Tier 4F - Mechanical shuttle/Engine 3	1-229
1.3.8.8	AP Tier 4F - Mechanical shuttle/Linkage	1-230
1.3.8.9	AP Tier 4F - Mechanical shuttle/PTO	1-231
1.3.8.10	AP Tier 4F - Mechanical shuttle/Lighting	1-232
1.3.8.11	AP Tier 4F - Mechanical shuttle/Lighting 2	1-233
1.3.8.12	AP Tier 4F - Mechanical shuttle/Lighting 3	1-234
1.3.8.13	AP Tier 4F - Mechanical shuttle/ISO trailer connector	1-235
1.3.8.14	AP Tier 4F - Mechanical shuttle/SAE trailer connector	1-236
1.3.8.15	AP Tier 4F - Mechanical shuttle/Work lights	1-237
1.3.8.16	AP Tier 4F - Mechanical shuttle/ISO connector	1-238
1.3.8.17	AP Tier 4F - Mechanical shuttle/SAE connector	1-239
1.3.8.18	AP Tier 4F - Mechanical shuttle/Front loader	1-240
1.3.8.19	AP Tier 4F - Mechanical shuttle/Electronic linkage console	1-241
1.3.8.20	AP Tier 4F - Mechanical shuttle/Extension	1-242
1.3.8.21	AP Tier 4F - Mechanical shuttle/Extension	1-243
1.3.9	AGCO Power Tier 4F engine, PowerShuttle, platform	1-244
1.3.9.1	AP Tier 4F - Summary of electrical diagrams - PowerShuttle	1-244
1.3.9.2	AP Tier 4F - PowerShuttle/Electrical power supply with battery isolator	1-245
1.3.9.3	AP Tier 4F - PowerShuttle/Electrical power supply without battery isolator	1-246
1.3.9.4	AP Tier 4F - PowerShuttle/Instrument panel	1-247
1.3.9.5	AP Tier 4F - PowerShuttle/Engine	1-248
1.3.9.6	AP Tier 4F - PowerShuttle/Engine 2	1-249
1.3.9.7	AP Tier 4F - PowerShuttle/Engine 3	1-250
1.3.9.8	AP Tier 4F - PowerShuttle/Linkage	1-251
1.3.9.9	AP Tier 4F - PowerShuttle/Rear PTO	1-252
1.3.9.10	AP Tier 4F - PowerShuttle/PowerShuttle	1-253
1.3.9.11	AP Tier 4F - PowerShuttle/Lighting	1-254
1.3.9.12	AP Tier 4F - PowerShuttle/Lighting 2	1-255
1.3.9.13	AP Tier 4F - PowerShuttle/Lighting 3	1-256
1.3.9.14	AP Tier 4F - PowerShuttle/Trailer connector	1-257
1.3.9.15	AP Tier 4F - PowerShuttle/SAE trailer connector	1-258
1.3.9.16	AP Tier 4F - PowerShuttle/Work lights	1-259
1.3.9.17	AP Tier 4F - PowerShuttle/ISO connector	1-260
1.3.9.18	AP Tier 4F - PowerShuttle/SAE connector	1-261
1.3.9.19	AP Tier 4F - PowerShuttle/Front loader	1-262
1.3.9.20	AP Tier 4F - PowerShuttle/Hybrid console	1-263
1.3.9.21	AP Tier 4F - PowerShuttle/Extension	1-264
1.3.9.22	AP Tier 4F - PowerShuttle/Earth	1-265
1.3.10	AGCO Power Tier 3 engine, mechanical reverse shuttle, cab	1-266
1.3.10.1	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Summary	1-266
1.3.10.2	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-268

1.3.10.3	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-269
1.3.10.4	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Electrical power supply 2	1-269
1.3.10.5	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Instrument panel	1-270
1.3.10.6	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Cab . . .	1-271
1.3.10.7	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Roof . . .	1-272
1.3.10.8	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Engine	1-273
1.3.10.9	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Engine 2	1-274
1.3.10.10	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Linkage	1-275
1.3.10.11	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Rear PTO	1-276
1.3.10.12	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/PowerShuttle	1-277
1.3.10.13	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Lighting	1-278
1.3.10.14	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Lighting 2 (ISO)	1-279
1.3.10.15	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Lighting 2 (SAE)	1-280
1.3.10.16	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Trailer connector (ISO)	1-281
1.3.10.17	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Trailer connector (SAE)	1-282
1.3.10.18	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Work lights	1-283
1.3.10.19	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Connector (ISO)	1-284
1.3.10.20	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Connector (SAE)	1-285
1.3.10.21	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Transmission	1-286
1.3.10.22	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Transmission 2	1-287
1.3.10.23	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Earth .	1-288
1.3.11	AGCO Power Tier 3 engine, PowerShuttle, cab	1-289
1.3.11.1	AGCO Power Tier 3 - Cab version - PowerShuttle/Summary	1-289
1.3.11.2	AGCO Power Tier 3 - Cab version - PowerShuttle/Electrical power supply without battery isolator	1-291
1.3.11.3	AGCO Power Tier 3 - Cab version - PowerShuttle/Electrical power supply with battery isolator	1-291
1.3.11.4	AGCO Power Tier 3 - Cab version - PowerShuttle/Electrical power supply 2	1-292
1.3.11.5	AGCO Power Tier 3 - Cab version - PowerShuttle/Instrument panel . . .	1-293
1.3.11.6	AGCO Power Tier 3 - Cab version - PowerShuttle/Cab	1-294
1.3.11.7	AGCO Power Tier 3 - Cab version - PowerShuttle/Roof	1-295
1.3.11.8	AGCO Power Tier 3 - Cab version - PowerShuttle/Engine	1-296
1.3.11.9	AGCO Power Tier 3 - Cab version - PowerShuttle/Engine	1-297
1.3.11.10	AGCO Power Tier 3 - Cab version - PowerShuttle/Linkage	1-298
1.3.11.11	AGCO Power Tier 3 - Cab version - PowerShuttle/Rear PTO	1-299
1.3.11.12	AGCO Power Tier 3 - Cab version - PowerShuttle/PowerShuttle	1-300
1.3.11.13	AGCO Power Tier 3 - Cab version - PowerShuttle/Lighting	1-301
1.3.11.14	AGCO Power Tier 3 - Cab version - PowerShuttle/Lighting 2 (ISO) . . .	1-302
1.3.11.15	AGCO Power Tier 3 - Cab version - PowerShuttle/Lighting 2 (SAE) . . .	1-303

1.3.11.16	AGCO Power Tier 3 - Cab version - PowerShuttle/Trailer connector (ISO)	1-304
1.3.11.17	AGCO Power Tier 3 - Cab version - PowerShuttle/Trailer connector (SAE)	1-305
1.3.11.18	AGCO Power Tier 3 - Cab version - PowerShuttle/Work lights	1-306
1.3.11.19	AGCO Power Tier 3 - Cab version - PowerShuttle/Connector (ISO)	1-307
1.3.11.20	AGCO Power Tier 3 - Cab version - PowerShuttle/Connector (SAE)	1-308
1.3.11.21	AGCO Power Tier 3 - Cab version - PowerShuttle/Transmission	1-309
1.3.11.22	AGCO Power Tier 3 - Cab version - PowerShuttle/Transmission 2	1-310
1.3.11.23	AGCO Power Tier 3 - Cab version - PowerShuttle/Earth	1-311
1.3.12	AGCO Power Tier 4i engine, mechanical reverse shuttle, cab	1-312
1.3.12.1	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Summary	1-312
1.3.12.2	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-314
1.3.12.3	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-315
1.3.12.4	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Electrical power supply 2	1-315
1.3.12.5	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Instrument panel	1-316
1.3.12.6	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Cab	1-317
1.3.12.7	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Roof	1-318
1.3.12.8	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Engine	1-319
1.3.12.9	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Engine 2	1-320
1.3.12.10	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Linkage	1-321
1.3.12.11	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Rear PTO	1-322
1.3.12.12	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/PowerShuttle	1-323
1.3.12.13	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Lighting	1-324
1.3.12.14	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Lighting 2 (ISO)	1-325
1.3.12.15	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Lighting 2 (SAE)	1-326
1.3.12.16	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Trailer connector (ISO)	1-327
1.3.12.17	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Trailer connector (SAE)	1-328
1.3.12.18	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Work lights	1-329
1.3.12.19	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Power socket (ISO)	1-330
1.3.12.20	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Power socket (SAE)	1-331
1.3.12.21	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Transmission	1-332
1.3.12.22	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Transmission 2	1-333
1.3.12.23	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Earth	1-334
1.3.13	AGCO Power Tier 4i engine, PowerShuttle, cab	1-335
1.3.13.1	AGCO Power Tier 4i - Cab version - PowerShuttle/Summary	1-335
1.3.13.2	AGCO Power Tier 4i - Cab version - PowerShuttle/Electrical power supply with battery isolator	1-337

1.3.13.3	AGCO Power Tier 4i - Cab version - PowerShuttle/Electrical power supply without battery isolator	1-337
1.3.13.4	AGCO Power Tier 4i - Cab version - PowerShuttle/Electrical power supply 2	1-338
1.3.13.5	AGCO Power Tier 4i - Cab version - PowerShuttle/Instrument panel . . .	1-339
1.3.13.6	AGCO Power Tier 4i - Cab version - PowerShuttle/Cab	1-340
1.3.13.7	AGCO Power Tier 4i - Cab version - PowerShuttle/Roof	1-341
1.3.13.8	AGCO Power Tier 4i - Cab version - PowerShuttle/Engine	1-342
1.3.13.9	AGCO Power Tier 4i - Cab version - PowerShuttle/Engine 2	1-343
1.3.13.10	AGCO Power Tier 4i - Cab version - PowerShuttle/Linkage	1-344
1.3.13.11	AGCO Power Tier 4i - Cab version - PowerShuttle/Rear PTO	1-345
1.3.13.12	AGCO Power Tier 4i - Cab version - PowerShuttle/PowerShuttle	1-346
1.3.13.13	AGCO Power Tier 4i - Cab version - PowerShuttle/Lighting	1-347
1.3.13.14	AGCO Power Tier 4i - Cab version - PowerShuttle/Lighting 2 (ISO) . . .	1-348
1.3.13.15	AGCO Power Tier 4i - Cab version - PowerShuttle/Lighting 2 (SAE) . .	1-349
1.3.13.16	AGCO Power Tier 4i - Cab version - PowerShuttle/Trailer connector (ISO)	1-350
1.3.13.17	AGCO Power Tier 4i - Cab version - PowerShuttle/Trailer connector (SAE)	1-351
1.3.13.18	AGCO Power Tier 4i - Cab version - PowerShuttle/Work lights	1-352
1.3.13.19	AGCO Power Tier 4i - Cab version - PowerShuttle/Power socket (ISO)	1-353
1.3.13.20	AGCO Power Tier 4i - Cab version - PowerShuttle/Power socket (SAE)	1-354
1.3.13.21	AGCO Power Tier 4i - Cab version - PowerShuttle/Transmission	1-355
1.3.13.22	AGCO Power Tier 4i - Cab version - PowerShuttle/Transmission 2 . . .	1-356
1.3.13.23	AGCO Power Tier 4i - Cab version - PowerShuttle/Earth	1-357
1.3.14	AGCO Power Tier 4F engine, mechanical reverse shuttle, cab	1-358
1.3.14.1	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Summary	1-358
1.3.14.2	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-360
1.3.14.3	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-361
1.3.14.4	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Electrical power supply 2	1-362
1.3.14.5	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Instrument panel	1-363
1.3.14.6	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Cab . .	1-364
1.3.14.7	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Roof .	1-365
1.3.14.8	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Engine	1-366
1.3.14.9	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Engine 2	1-367
1.3.14.10	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Engine 3	1-368
1.3.14.11	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Linkage	1-369
1.3.14.12	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Rear PTO	1-370
1.3.14.13	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/PowerShuttle	1-371
1.3.14.14	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Lighting	1-372
1.3.14.15	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Lighting 2 (ISO)	1-373
1.3.14.16	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Lighting 2 (SAE)	1-374
1.3.14.17	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Trailer connector (ISO)	1-375

1.3.14.18	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Trailer connector (SAE)	1-376
1.3.14.19	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Work lights	1-377
1.3.14.20	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Power socket (ISO)	1-378
1.3.14.21	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Power socket (SAE)	1-379
1.3.14.22	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Transmission	1-380
1.3.14.23	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Transmission 2	1-381
1.3.14.24	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Earth	1-382
1.3.15	AGCO Power Tier 4F engine, PowerShuttle, cab	1-383
1.3.15.1	AGCO Power Tier 4F - Cab version - PowerShuttle/Summary	1-383
1.3.15.2	AGCO Power Tier 4F - Cab version - PowerShuttle/Electrical power supply with battery isolator	1-385
1.3.15.3	AGCO Power Tier 4F - Cab version - PowerShuttle/Electrical power supply without battery isolator	1-385
1.3.15.4	AGCO Power Tier 4F - Cab version - PowerShuttle/Electrical power supply 2	1-386
1.3.15.5	AGCO Power Tier 4F - Cab version - PowerShuttle/Instrument panel	1-387
1.3.15.6	AGCO Power Tier 4F - Cab version - PowerShuttle/Cab	1-388
1.3.15.7	AGCO Power Tier 4F - Cab version - PowerShuttle/Roof	1-389
1.3.15.8	AGCO Power Tier 4F - Cab version - PowerShuttle/Engine	1-390
1.3.15.9	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Engine 2	1-391
1.3.15.10	AGCO Power Tier 4F - Cab version - PowerShuttle/Engine 3	1-392
1.3.15.11	AGCO Power Tier 4F - Cab version - PowerShuttle/Linkage	1-393
1.3.15.12	AGCO Power Tier 4F - Cab version - PowerShuttle/Rear PTO	1-394
1.3.15.13	AGCO Power Tier 4F - Cab version - PowerShuttle/PowerShuttle	1-395
1.3.15.14	AGCO Power Tier 4F - Cab version - PowerShuttle/Lighting	1-396
1.3.15.15	AGCO Power Tier 4F - Cab version - PowerShuttle/Lighting 2 (ISO)	1-397
1.3.15.16	AGCO Power Tier 4F - Cab version - PowerShuttle/Lighting 2 (SAE)	1-398
1.3.15.17	AGCO Power Tier 4F - Cab version - PowerShuttle/Trailer connector (ISO)	1-399
1.3.15.18	AGCO Power Tier 4F - Cab version - PowerShuttle/Trailer connector (SAE)	1-400
1.3.15.19	AGCO Power Tier 4F - Cab version - PowerShuttle/Work lights	1-401
1.3.15.20	AGCO Power Tier 4F - Cab version - PowerShuttle/Power socket (ISO)	1-402
1.3.15.21	AGCO Power Tier 4F - Cab version - PowerShuttle/Power socket (SAE)	1-403
1.3.15.22	AGCO Power Tier 4F - Cab version - PowerShuttle/Transmission	1-404
1.3.15.23	AGCO Power Tier 4F - Cab version - PowerShuttle/Transmission 2	1-405
1.3.15.24	AGCO Power Tier 4F - Cab version - PowerShuttle/Earth	1-406
1.3.16	Hydraulics diagram	1-407
1.4	Adjustments, bleeding and calibrations	1-411
1.4.1	Bleeding	1-411
1.4.1.1	Bleeding the main brake system	1-411
1.4.1.2	Bleeding the trailer brake circuit	1-412
1.4.2	Calibrations	1-413
1.4.2.1	List of calibration procedures	1-413
1.4.2.2	Calibrating the clutch pedal	1-413
1.4.2.3	Forward speed calibration	1-414
1.4.2.4	Calibrating the linkage controls - version with cab	1-415
1.4.2.5	PowerShuttle transmission calibration	1-417
1.4.2.6	PowerShuttle transmission calibration errors	1-418

1.4.2.7	Calibrating the rear linkage - version without cab and standard linkage console	1-419
1.4.2.8	Linkage calibration faults	1-421
2	Separation of assemblies	2-1
2.1	Engine cover	2-3
2.1.1	Removing/refitting the bonnet	2-3
2.2	Rear fenders	2-4
2.2.1	Removing/refitting the rear fenders	2-4
2.3	Seat	2-8
2.3.1	Removing/refitting the seat	2-8
2.4	Platform	2-9
2.4.1	Removing/refitting the platform	2-9
2.5	Operator environment	2-14
2.5.1	Removing the cab	2-14
2.5.2	Refitting the cab	2-18
2.6	Four-wheel drive front axle	2-23
2.6.1	Removing/refitting the 4WD front axle	2-23
2.7	Arch	2-26
2.7.1	Removing/refitting the ROPS	2-26
2.8	Power take-off cover plate	2-29
2.8.1	Removing/refitting the power take-off cover plate	2-29
2.9	Engine - Front cradle	2-31
2.9.1	Removing/refitting the engine — front cradle	2-31
2.10	Engine - Gearbox	2-35
2.10.1	Removing and refitting the engine without SCR Technology - Gearbox	2-35
2.10.2	Removing/Refitting engine - gearbox assembly with SCR Technology	2-39
2.11	Gearbox - Rear axle	2-46
2.11.1	Removing/refitting the gearbox — rear axle assembly	2-46
2.12	PTO unit	2-53
2.12.1	Removing/refitting the power take-off unit	2-53
3	Engine	3-1
3.1	Simpson engine	3-3
3.1.1	General	3-3
3.1.1.1	General	3-3
3.1.1.2	Principles of operation	3-5
3.1.2	Layout of components	3-15
3.1.2.1	Layout of components	3-15
3.1.3	Adjustments, bleeding and calibration	3-17
3.1.3.1	Checking and adjusting the valve clearance	3-17
3.1.3.2	Timing adjustment	3-18
3.1.4	Disassembly/reassembly	3-19
3.1.4.1	Rocker arm cover	3-19
3.1.4.2	High-pressure pipes (common rail – injector)	3-21
3.1.4.3	High-pressure pipes (common rail – pump)	3-22
3.1.4.4	Injection system high-pressure pump (CB18)	3-23
3.1.4.5	Injectors	3-30
3.1.4.6	Fan	3-31
3.1.4.7	Cooling pump	3-31
3.1.4.8	Front bearing seal	3-34
3.1.4.9	Engine flywheel and front bearing seal	3-38
3.1.4.10	Oil sump	3-43
3.1.4.11	Oil pump	3-44
3.1.4.12	Inlet manifold	3-45

3.1.4.13	Exhaust manifold	3-47
3.1.4.14	Rocker arm rail	3-49
3.1.4.15	Valve springs	3-51
3.1.4.16	Valve stem seals	3-52
3.1.4.17	Cylinder head gasket	3-53
3.1.4.18	Control valves	3-58
3.1.4.19	Inlet system	3-60
3.1.4.20	Timing gear and housing	3-64
3.1.4.21	Camshaft	3-67
3.1.4.22	Pistons and connecting rods	3-70
3.1.4.23	Crankshaft	3-74
3.1.4.24	Liners	3-78
3.1.5	Service tools	3-80
3.1.5.1	Simpson engine	3-80
3.2	AGCO Power Tier 2/Tier 3 engine	3-85
3.2.1	Introduction	3-85
3.2.1.1	Safety instructions	3-85
3.2.1.2	To the user	3-86
3.2.1.3	Engine construction	3-90
3.2.2	Specifications	3-100
3.2.2.1	Technical data	3-100
3.2.2.2	Tightening torques	3-107
3.2.2.3	Liquid quality requirements	3-109
3.2.2.4	Terminal diagram for CV54 ECU	3-114
3.2.2.5	Terminal diagram for C63 ECU	3-117
3.2.3	Maintenance	3-119
3.2.3.1	Cylinder block	3-119
3.2.3.2	Cylinder head	3-122
3.2.3.3	Valve mechanism	3-127
3.2.3.4	Crankshaft	3-131
3.2.3.5	Connecting rods and pistons	3-134
3.2.3.6	Counterbalance in 4 cylinder engines	3-139
3.2.3.7	Timing gear assembly	3-141
3.2.3.8	Lubrication system	3-144
3.2.3.9	Cooling system	3-146
3.2.3.10	Air control system maintenance	3-148
3.2.3.11	Fuel system	3-151
3.2.3.12	Fuel system	3-157
3.2.3.13	Engine control system	3-165
3.2.3.14	Sensors of the engine	3-169
3.3	AGCO Power Tier 4F engine	3-170
3.3.1	Introduction	3-170
3.3.1.1	Safety instructions	3-170
3.3.1.2	To the user	3-171
3.3.1.3	Engine construction	3-174
3.3.2	Specifications	3-190
3.3.2.1	Technical data	3-190
3.3.2.2	Tightening torques	3-197
3.3.2.3	Special tools	3-199
3.3.2.4	Liquid quality requirements	3-207
3.3.2.5	Terminal diagram	3-212
3.3.3	Maintenance	3-215
3.3.3.1	Cylinder block	3-215
3.3.3.2	Cylinder head	3-218
3.3.3.3	Valve mechanism	3-223
3.3.3.4	Crankshaft	3-227
3.3.3.5	Connecting rods and pistons	3-230
3.3.3.6	Counterbalance in 4 cylinder engines	3-235

3.3.3.7	Timing gear assembly	3-237
3.3.3.8	Lubrication system	3-240
3.3.3.9	Cooling system	3-242
3.3.3.10	Air control system maintenance	3-245
3.3.3.11	Fuel system	3-248
3.3.3.12	SCR system	3-254
3.3.3.13	Engine control system	3-269
3.4	SCR system	3-274
3.4.1	General	3-274
3.4.1.1	General	3-274
3.4.1.2	Information about degraded mode: DEF or AdBlue™ level is too low	3-275
3.4.1.3	Information on the various degraded modes: SCR system fault	3-277
3.4.2	Layout of components	3-280
3.4.2.1	Layout of the SCR system components (platform version)	3-280
3.4.2.2	Layout of the SCR system components (cab version)	3-281
3.4.3	Disassembly/reassembly	3-282
3.4.3.1	Removing and refitting the SCR system (platform version)	3-282
3.4.3.2	Removing and refitting the SCR system (Cab version)	3-287
4	Clutch	4-1
4.1	Mechanical clutch	4-3
4.1.1	General	4-3
4.1.1.1	General	4-3
4.1.1.2	Operating principle of the mechanical clutch	4-4
4.1.2	Layout of components	4-7
4.1.2.1	Mechanical clutch control	4-7
4.1.2.2	Hydraulic clutch control	4-8
4.1.3	Adjustments, bleeding and calibration	4-11
4.1.3.1	Adjusting the clutch pedal height	4-11
4.1.3.2	Checking the sealing of the hydraulic clutch control	4-12
4.1.3.3	Bleeding the clutch hydraulic concentric slave cylinder	4-14
4.1.3.4	Checking the PTO shaft damper	4-15
4.1.4	Disassembly/reassembly	4-16
4.1.4.1	Removing the mechanical clutch	4-16
4.1.4.2	Refitting the mechanical clutch	4-17
4.1.4.3	Removing the mechanical clutch control	4-18
4.1.4.4	Refitting the mechanical clutch control	4-21
4.1.4.5	Disassembling the mechanical clutch control	4-23
4.1.4.6	Refitting the mechanical clutch control	4-23
4.1.4.7	Removing the hydraulic clutch control	4-23
4.1.4.8	Refitting the hydraulic clutch control	4-25
4.1.4.9	Disassembling the hydraulic clutch control	4-25
4.1.4.10	Reassembling the hydraulic clutch control	4-27
4.1.5	Service tools	4-32
4.1.5.1	Mechanical clutch	4-32
4.2	PowerShuttle torsional vibration damper	4-33
4.2.1	General	4-33
4.2.1.1	General	4-33
4.2.2	Layout of components	4-34
4.2.2.1	Layout of components	4-34
4.2.2.2	Tightening sequence for the screws	4-36
4.2.2.3	Tightening torques and application of threadlock compound	4-37
4.2.3	Disassembly/reassembly	4-37
4.2.3.1	Removing and refitting the torsional vibration damper	4-37
5	Gearbox	5-1
5.1	Mechanical reverse shuttle	5-5

5.1.1	General	5-5
5.1.1.1	General	5-5
5.1.1.2	Operating principle of the synchronized mechanical reverse shuttle	5-5
5.1.1.3	Principle of operation of the single-cone synchronisers	5-7
5.1.2	Layout of components	5-11
5.1.2.1	Synchronised mechanical reverse shuttle	5-11
5.1.2.2	Specific tightening torques, sealants and threadlock, adjustments of bearings	5-12
5.1.3	Layout of components	5-15
5.1.3.1	Positioning the reverse shuttle fork	5-15
5.1.4	Adjustments, bleeding and calibration	5-15
5.1.4.1	Adjusting the mechanical reverse shuttle lever control	5-15
5.1.4.2	Checking and adjusting the clearance at the input of the reverse shuttle shaft	5-16
5.1.4.3	Checking the shift forks	5-18
5.1.4.4	Checking the single-cone synchroniser	5-20
5.1.5	Disassembly/reassembly	5-22
5.1.5.1	Removing the mechanical reverse shuttle	5-22
5.1.5.2	Refitting the mechanical reverse shuttle	5-25
5.1.5.3	Disassembling the mechanical reverse shuttle	5-28
5.1.5.4	Reassembling the mechanical reverse shuttle	5-31
5.1.6	Service tools	5-36
5.1.6.1	Mechanical reverse shuttle	5-36
5.2	PowerShuttle	5-37
5.2.1	General	5-37
5.2.1.1	General	5-37
5.2.1.2	PowerShuttle operating principle	5-38
5.2.2	Layout of components	5-47
5.2.2.1	Layout of components - PowerShuttle	5-47
5.2.2.2	Specific tightening torques, sealants and threadlock, adjustments of bearings	5-49
5.2.3	Disassembly/reassembly	5-51
5.2.3.1	Removing the PowerShuttle	5-51
5.2.3.2	Refitting the PowerShuttle	5-55
5.2.3.3	Complete disassembly of the PowerShuttle	5-58
5.2.3.4	Complete reassembly of the PowerShuttle	5-69
5.2.3.5	Disassembly of the forward clutch system	5-79
5.2.3.6	Reassembly of the forward clutch system	5-84
5.2.3.7	Disassembly of the reverse clutch system	5-88
5.2.3.8	Reassembly of the reverse clutch system	5-95
5.2.4	Service tools	5-100
5.2.4.1	PowerShuttle	5-100
5.3	8x8 gearbox with dog clutch and mechanical reverse shuttle	5-101
5.3.1	General	5-101
5.3.1.1	General	5-101
5.3.1.2	Operating principle of the 8x8 synchronized gearbox	5-102
5.3.2	Layout of components	5-109
5.3.2.1	8-ratio control module	5-109
5.3.3.1	Location of components - Gearbox	5-111
5.3.3.2	Specific tightening torques, sealant and threadlock, adjustments of bearings	5-112
5.3.4	Adjustments, bleeding and calibration	5-117
5.3.4.1	Adjustment of the screw on the ratio selection module	5-117
5.3.4.2	Adjusting the High/Low lever control (cab version)	5-117
5.3.4.3	Checking the adjustment of the primary and secondary shafts	5-118
5.3.4.4	Checking the adjustment of the first driven gear of the secondary shaft	5-125
5.3.4.5	Checking the shift forks	5-130
5.3.5	Disassembly/reassembly	5-131

5.3.5.1	Removing and refitting the PTO shaft	5-131
5.3.5.2	Removing and refitting the ratio selection module	5-133
5.3.5.3	Disassembling the ratio selection module	5-135
5.3.5.4	Reassembling the ratio selection module	5-138
5.3.5.5	Removing the primary and secondary shafts	5-139
5.3.5.6	Refitting the primary and secondary shafts	5-142
5.3.5.7	Disassembling the primary shaft	5-145
5.3.5.8	Reassembling the primary shaft	5-148
5.3.5.9	Disassembling the secondary shaft	5-152
5.3.5.10	Reassembling the secondary shaft	5-155
5.3.5.11	Disassembling the hare/tortoise assembly	5-159
5.3.5.12	Reassembling the hare/tortoise assembly	5-163
5.3.6	Service tools	5-167
5.3.6.1	8x8 gearbox with dog clutch and mechanical reverse shuttle	5-167
5.4	12x12 synchronized gearbox with mechanical reverse shuttle	5-170
5.4.1	General	5-170
5.4.1.1	General	5-170
5.4.1.2	Operating principle of the 12x12 synchronized gearbox	5-171
5.4.1.3	Principle of operation of the single-cone synchronisers	5-180
5.4.1.4	Principle of operation of the double-cone synchronisers	5-182
5.4.2	Layout of components	5-183
5.4.2.1	12-ratio control module	5-183
5.4.3.1	Location of components - Gearbox	5-185
5.4.3.2	Specific tightening torques, sealant and threadlock, adjustments of bearings	5-186
5.4.3.3	Positioning of the forks	5-188
5.4.4	Adjustments, bleeding and calibration	5-191
5.4.4.1	Adjusting the High/Low lever control (cab version)	5-191
5.4.4.2	Adjustment of the screw on the ratio selection module	5-191
5.4.4.3	Checking the adjustment of the primary and secondary shafts	5-192
5.4.4.4	Checking the shift forks	5-197
5.4.4.5	Checking the single-cone synchroniser	5-198
5.4.4.6	Checking the double-cone synchroniser	5-202
5.4.5	Disassembly/reassembly	5-204
5.4.5.1	Removing and refitting the PTO shaft	5-204
5.4.5.2	Removing and refitting the ratio selection module	5-206
5.4.5.3	Disassembling the ratio selection module	5-208
5.4.5.4	Reassembling the ratio selection module	5-210
5.4.5.5	Removing the primary and secondary shafts	5-211
5.4.5.6	Refitting the primary and secondary shafts	5-214
5.4.5.7	Disassembling the primary shaft	5-218
5.4.5.8	Reassembling the primary shaft	5-222
5.4.5.9	Disassembling the secondary shaft	5-228
5.4.5.10	Reassembling the secondary shaft	5-232
5.4.5.11	Disassembling the hare/tortoise assembly	5-235
5.4.5.12	Reassembling the hare/tortoise assembly	5-239
5.4.6	Service tools	5-243
5.4.6.1	12x12 synchronized gearbox with mechanical reverse shuttle	5-243
5.5	12x12 synchronized gearbox with PowerShuttle	5-246
5.5.1	General	5-246
5.5.1.1	General	5-246
5.5.1.2	Operating principle of the 12x12 synchronized gearbox	5-247
5.5.1.3	Principle of operation of the single-cone synchronisers	5-256
5.5.1.4	Principle of operation of the double-cone synchronisers	5-258
5.5.2	Layout of components	5-259
5.5.2.1	12-ratio control module	5-259
5.5.3.1	Location of components - Gearbox	5-261

5.5.3.2	Specific tightening torques, sealant and threadlock, adjustments of bearings	5-262
5.5.3.3	Positioning of the forks	5-264
5.5.4	Adjustments, bleeding and calibration	5-267
5.5.4.1	Adjusting the High/Low lever control (cab version)	5-267
5.5.4.2	Adjustment of the screw on the ratio selection module	5-267
5.5.4.3	Checking the adjustment of the primary and secondary shafts	5-268
5.5.4.4	Checking the shift forks	5-273
5.5.4.5	Checking the single-cone synchroniser	5-274
5.5.4.6	Checking the double-cone synchroniser	5-278
5.5.5	Disassembly/reassembly	5-280
5.5.5.1	Removing and refitting the PTO shaft	5-280
5.5.5.2	Removing and refitting the ratio selection module	5-281
5.5.5.3	Disassembling the ratio selection module	5-283
5.5.5.4	Reassembling the ratio selection module	5-286
5.5.5.5	Removing the primary and secondary shafts	5-286
5.5.5.6	Refitting the primary and secondary shafts	5-290
5.5.5.7	Disassembling the primary shaft	5-294
5.5.5.8	Reassembling the primary shaft	5-298
5.5.5.9	Disassembling the secondary shaft	5-304
5.5.5.10	Reassembling the secondary shaft	5-308
5.5.5.11	Disassembling the hare/tortoise assembly	5-311
5.5.5.12	Reassembling the hare/tortoise assembly	5-315
5.5.6	Service tools	5-319
5.5.6.1	12x12 synchronized gearbox with PowerShuttle	5-319
5.6	Super creeper gears	5-322
5.6.1	General	5-322
5.6.1.1	General	5-322
5.6.1.2	Principles of operation	5-322
5.6.2	Layout of components	5-323
5.6.2.1	Layout of components	5-323
5.6.3	Adjustments, bleeding and calibrations	5-325
5.6.3.1	Adjusting the super-creeper speed control (cab version)	5-325
5.6.3.2	Shimming the tapered bearings	5-325
5.6.4	Disassembly/reassembly	5-327
5.6.4.1	Disassembly/reassembly	5-327
6	Rear Axle	6-1
6.1	GPA50/General	6-5
6.1.1	General	6-5
6.1.1.1	General	6-5
6.1.1.2	Principles of operation	6-7
6.1.1.3	Schematic diagrams	6-10
6.1.2	Electrical and hydraulics diagrams	6-10
6.1.2.1	Electrical diagrams	6-10
6.1.3	Layout of components	6-11
6.1.3.1	Layout of components	6-11
6.1.3.2	Fitting dimensions	6-12
6.1.4.1	Tightening torque and bearing preload	6-15
6.2	GPA50/Trumpet housings	6-17
6.2.1	General	6-17
6.2.1.1	General	6-17
6.2.1.2	Principles of operation	6-17
6.2.1.3	Operation of the trumpet housing epicyclic final drive	6-17
6.2.2	Electrical and hydraulics diagrams	6-18
6.2.2.1	Electrical diagrams	6-18
6.2.3	Layout of components	6-19

6.2.3.1	View of the assembly	6-19
6.2.3.2	Blown-up view of the trumpet housing	6-20
6.2.3.3	Blown-up view of the sun gear	6-21
6.2.4	Adjustments, bleeding and calibration	6-21
6.2.4.1	Shimming the planet gears	6-21
6.2.4.2	Shimming the tapered roller bearings of the axle shaft	6-23
6.2.5	Disassembly/reassembly	6-25
6.2.5.1	Removing/refitting and disassembling/reassembling the planet carrier	6-25
6.2.5.2	Removing/refitting and disassembling/reassembling the taper roller bearings and the axle shaft seals	6-28
6.2.5.3	Replacing a stud on the flanged axle shaft	6-34
6.2.5.4	Removing and refitting the trumpet housing assembly	6-35
6.2.6	Service tools	6-37
6.2.6.1	Trumpet housings	6-37
6.3	GPA50/Crown wheel and pinion	6-38
6.3.1	General	6-38
6.3.1.1	General	6-38
6.3.1.2	Principles of operation	6-40
6.3.1.3	Electronic part	6-43
6.3.1.4	Logic of engagement of the differential	6-45
6.3.1.5	Mechanical part of the differential	6-46
6.3.1.6	Hydraulic part of the differential	6-46
6.3.2	Electrical and hydraulics diagrams	6-47
6.3.2.1	Electrical diagrams	6-47
6.3.3	Layout of components	6-48
6.3.3.1	Pinion and rear differential mechanism - Cross-section view	6-48
6.3.4	Adjustments, bleeding and calibration	6-51
6.3.4.1	Adjusting the pinion taper distance in the center housing	6-51
6.3.4.2	Adjusting the preload of the tapered bearings of the pinion	6-53
6.3.4.3	Adjusting and checking the backlash between the crown wheel and the pinion	6-56
6.3.4.4	Procedure for shimming the preload of the tapered bearings of the differential	6-59
6.3.5	Disassembly/reassembly	6-61
6.3.5.1	Specifications	6-61
6.3.5.2	Removing and refitting the right-hand support and the mobile dog clutch for the rear differential unit/crown wheel assembly	6-62
6.3.5.3	Removing and refitting the rear differential unit/crown wheel assembly	6-67
6.3.5.4	Removing and refitting the ring gear	6-70
6.3.5.5	Removing and refitting the planet gears and sun gears	6-73
6.3.5.6	Removing and refitting the pinion	6-77
6.3.6	Service tools	6-83
6.3.6.1	Crown wheel and pinion	6-83
6.4	GPA50/Mechanical tractor braking	6-85
6.4.1	General	6-85
6.4.1.1	General	6-85
6.4.1.2	Principles of operation	6-85
6.4.2	Electrical and hydraulics diagrams	6-87
6.4.2.1	Electrical diagrams	6-87
6.4.3	Layout of components	6-88
6.4.3.1	Overview of the main brake system	6-88
6.4.3.2	View of hand brake system assembly	6-89
6.4.3.3	Exploded view of main brake system	6-89
6.4.4	Adjustments, bleeding and calibration	6-90
6.4.4.1	Adjusting brake linkages	6-90
6.4.4.2	Adjusting the brake pedal sensors	6-92
6.4.4.3	Adjusting the hand brake on main brake linkages	6-92
6.4.5	Disassembly/reassembly	6-93

6.4.5.1	Removing and refitting the discs and intermediate plates of a brake mechanism	6-93
6.5	GPA50/Hydraulic tractor braking	6-99
6.5.1	General	6-99
6.5.1.1	General	6-99
6.5.1.2	Principles of operation	6-101
6.5.2	Electrical and hydraulics diagrams	6-104
6.5.2.1	Electrical diagrams	6-104
6.5.3	Layout of components	6-105
6.5.3.1	View of main brake system assembly	6-105
6.5.3.2	View of hand brake system assembly	6-106
6.5.3.3	Exploded view of main brake system	6-107
6.5.3.4	View of the master cylinders	6-109
6.5.4	Adjustments, bleeding and calibration	6-109
6.5.4.1	Adjusting the main brakes	6-109
6.5.4.2	Adjusting the brake sensors on the master cylinders (version without cab)	6-111
6.5.4.3	Adjusting the master cylinder sensors (cab version)	6-111
6.5.4.4	Bleeding the main brake system	6-112
6.5.4.5	Adjusting the hand brake	6-113
6.5.5	Disassembly/reassembly	6-114
6.5.5.1	Removing/refitting a hydraulic unit	6-114
6.5.5.2	Removing and refitting the disks and intermediate plates of a brake mechanism	6-119
6.5.6	Service tools	6-123
6.5.6.1	Hydraulic tractor braking	6-123
6.6	GPA50/Hydraulic trailer braking	6-124
6.6.1	General	6-124
6.6.1.1	General	6-124
6.6.1.2	Principles of operation	6-125
6.6.2	Electrical and hydraulics diagrams	6-128
6.6.2.1	Electrical diagrams	6-128
6.6.3	Layout of components	6-129
6.6.3.1	View of the assembly	6-129
6.6.3.2	Blown-up view	6-131
6.6.4	Tests and diagnostics	6-132
6.6.4.1	Checking the trailer brake valve	6-132
6.6.5	Adjustments, bleeding and calibration	6-135
6.6.5.1	Bleeding the trailer brake circuit	6-135
6.6.6	Disassembly/reassembly	6-136
6.6.6.1	Removing and refitting the brake valve	6-136
6.6.6.2	Disassembling/reassembling the brake valve	6-137
6.7	GPA50/Linkage and hitch	6-139
6.7.1	General	6-139
6.7.1.1	General	6-139
6.7.1.2	Principles of operation	6-140
6.7.1.3	Overall operation	6-142
6.7.2	Layout of components	6-151
6.7.2.1	View of the assembly	6-151
6.7.2.2	Blown-up view of the brake system	6-153
6.7.2.3	Overview of the linkage valve (57 l/min)	6-154
6.7.2.4	Blown-up view of the draft sensor	6-156
6.7.3	Disassembly/reassembly	6-157
6.7.3.1	Removing/refitting the single arm	6-157
6.7.3.2	Removing/refitting the linkage valve	6-160
6.7.3.3	Removing/refitting angular sensor	6-162
6.7.3.4	Removing/refitting the draft sensor	6-164

6.7.4	Service tools	6-165
6.7.4.1	Linkage and hitch	6-165
6.8	GPA50/Wheels and hubs	6-166
6.8.1	General	6-166
6.8.1.1	General	6-166
6.8.2	Layout of components	6-166
6.8.2.1	Layout of components	6-166
6.8.3	Adjustments, bleeding and calibration	6-167
6.8.3.1	Tightening torque	6-167
6.8.3.2	Track width adjustment	6-171
6.8.4	Disassembly/reassembly	6-172
6.8.4.1	Disassembly/reassembly	6-172
7	Power take-off	7-1
7.1	General	7-3
7.1.1	Overall operation	7-3
7.1.1.1	PTO operating principle	7-3
7.1.2	Electrical part	7-3
7.1.2.1	Electronic part	7-3
7.1.2.2	Management of the PTO clutch solenoid valve	7-4
7.1.2.3	Safety part	7-6
7.1.3	Mechanical part	7-8
7.1.3.1	Mechanical part	7-8
7.1.4	Hydraulic part	7-8
7.1.4.1	Hydraulic part	7-8
7.2	Clutch	7-11
7.2.1	General	7-11
7.2.1.1	General	7-11
7.2.1.2	Principles of operation	7-11
7.2.1.3	Gerotor module	7-13
7.2.2	Layout of components	7-14
7.2.2.1	View of the assembly	7-14
7.2.3	Disassembly/reassembly	7-15
7.2.3.1	Disassembling/reassembling the PTO clutch	7-15
7.2.3.2	Disassembling/reassembling the Gerotor module	7-19
7.3	One-speed gearbox	7-23
7.3.1	General	7-23
7.3.1.1	General	7-23
7.3.1.2	Principles of operation	7-23
7.3.2	Layout of components	7-25
7.3.2.1	View of the assembly	7-25
7.3.3	Adjustments, bleeding and calibration	7-26
7.3.3.1	Shimming the tapered roller bearings of the primary shaft	7-26
7.3.3.2	Shimming the tapered roller bearings of the secondary shaft	7-27
7.3.4	Disassembly/reassembly	7-28
7.3.4.1	Disassembling the PTO unit	7-28
7.3.4.2	Refitting the PTO unit	7-31
7.3.5	Service tools	7-34
7.3.5.1	One-speed gearbox	7-34
7.4	Two-speed gearbox	7-35
7.4.1	General	7-35
7.4.1.1	General	7-35
7.4.1.2	Principles of operation	7-35
7.4.2	Layout of components	7-39
7.4.2.1	View of 2-speed power take-off unit assembly	7-39
7.4.2.2	View of power take-off control assembly	7-41
7.4.3	Adjustments, bleeding and calibration	7-41

7.4.3.1	Adjusting the power take-off control (cab version)	7-41
7.4.3.2	Shimming the tapered roller bearings of the primary shaft	7-42
7.4.3.3	Shimming the tapered roller bearings of the secondary shaft	7-44
7.4.4	Disassembly/reassembly	7-45
7.4.4.1	Removing the PTO unit	7-45
7.4.4.2	Disassembling the PTO unit	7-46
7.4.4.3	Removing the PTO brake	7-51
7.4.4.4	Refitting the PTO brake	7-53
7.4.4.5	Refitting the PTO unit	7-54
7.4.4.6	Refitting the power take-off unit	7-58
7.4.5	Service tools	7-61
7.4.5.1	Two-speed gearbox	7-61
7.5	GSPTO	7-63
7.5.1	General	7-63
7.5.1.1	General	7-63
7.5.1.2	Principles of operation	7-63
7.5.2	Layout of components	7-65
7.5.2.1	View of the GSPTO assembly	7-65
7.5.2.2	View of the GSPTO control assembly (cab version)	7-66
7.5.3	Adjustments, bleeding and calibration	7-67
7.5.3.1	Adjusting the GSPTO control (cab version)	7-67
7.5.4	Disassembly/reassembly	7-68
8	Front axle	8-1
8.1	Overall operation	8-3
8.1.1	Electronic part	8-3
8.1.2	Logic of engagement of the 4WD front axle	8-4
8.1.3	Mechanical part	8-5
8.1.4	Hydraulic part of the 4WD front axle	8-6
8.2	GPA50 P144A 4WD clutch/General	8-7
8.2.1	General	8-7
8.2.1.1	General	8-7
8.2.1.2	Principles of operation	8-7
8.2.2	Layout of components	8-9
8.2.2.1	Layout of components	8-9
8.2.2.2	View of the assembly	8-9
8.2.3	Adjustments, bleeding and calibration	8-10
8.2.3.1	Specifications	8-10
8.2.4	Disassembly/reassembly	8-11
8.2.4.1	Removing the clutch	8-11
8.2.4.2	Disassembling the drive shaft	8-13
8.2.4.3	Refitting the clutch	8-14
8.2.5	Service tools	8-17
8.2.5.1	4-wheel drive clutch	8-17
8.3	Two-wheel drive front axle	8-19
8.3.1	General	8-19
8.3.1.1	General	8-19
8.3.2	Layout of components	8-20
8.3.2.1	View of the assembly	8-20
8.3.2.2	Exploded view	8-22
8.3.2.3	Tightening torque and Loctite	8-23
8.3.3	Adjustments, bleeding and calibrations	8-23
8.3.3.1	General	8-23
8.3.3.2	Track width adjustment	8-24
8.3.3.3	Wheel alignment	8-29
8.3.4	Disassembly/reassembly	8-30
8.3.4.1	Removing the front axle	8-30

8.3.4.2	Refitting the front axle	8-31
8.3.4.3	Removing the arm	8-31
8.3.4.4	Disassembling the arm	8-34
8.3.4.5	Reassembling the arm	8-37
8.3.4.6	Refitting the arm	8-39
8.3.5	Service tools	8-39
8.3.5.1	Two-wheel drive front axle	8-39
8.4	DANA 4-wheel drive front axle	8-40
8.4.1	Workshop Service Manuals	8-40
8.5	Carraro 4-wheel drive front axle	8-41
8.5.1	Workshop Service Manuals	8-41
8.6	Steering unit	8-42
8.6.1	General	8-42
8.6.1.1	General	8-42
8.6.2	Layout of components	8-43
8.6.2.1	View of the assembly	8-43
8.6.2.2	Overview of the steering gear bracket	8-44
8.6.3	Test and diagnostic	8-44
8.6.3.1	General	8-44
8.6.3.2	Checking the adjustment pressure of the main limiter	8-45
8.6.3.3	Quick check for steering system leakage	8-45
8.6.4	Disassembly/reassembly	8-46
8.6.4.1	Removing and refitting the bracket and steering gear	8-46
9	Hydraulics	9-1
9.1	Open center	9-3
9.1.1	General	9-3
9.1.1.1	Description of the hydraulic system	9-3
9.1.1.2	Specifications	9-5
9.1.2	Layout of components	9-6
9.1.2.1	View of the assembly	9-6
9.1.2.2	Right-hand hydraulic cover plate	9-7
9.1.2.3	Clutch control	9-7
9.1.2.4	Brake control	9-8
9.1.2.5	Valves	9-9
9.1.3	Electrical and hydraulics diagrams	9-11
9.1.3.1	Hydraulics diagram - With PowerShuttle and hydraulic brakes	9-11
9.1.3.2	Hydraulics diagram - Without PowerShuttle and with hydraulic brakes	9-12
9.1.3.3	Hydraulics diagram - Without PowerShuttle and mechanical brakes	9-14
9.2	Open Center/Right-hand cover plate	9-17
9.2.1	General	9-17
9.2.1.1	General	9-17
9.2.2	Layout of components	9-18
9.2.2.1	View of the right-hand hydraulic cover plate	9-18
9.2.2.2	View of the cover plate ports	9-20
9.2.2.3	Blown-up view	9-21
9.2.2.4	Tightening torques	9-23
9.2.3	Disassembly/reassembly	9-23
9.2.3.1	Removing/refitting the right-hand cover plate	9-23
9.3	Open Center/Hydraulic pump	9-28
9.3.1	General	9-28
9.3.1.1	General	9-28
9.3.1.2	Principles of operation	9-28
9.3.2	Layout of components	9-29
9.3.2.1	View of the assembly	9-29
9.3.3	Tests and diagnostics	9-30
9.3.3.1	General	9-30

9.3.3.2	Checking the equipment pump flow rate	9-30
9.3.3.3	Checking the steering pump flow rate	9-32
9.3.4	Disassembly/reassembly	9-33
9.3.4.1	Removing and refitting the hydraulic pumps (right-hand cover plate)	9-33
9.3.5	Service tools	9-35
9.4	Open Center/Pressure relief valve	9-36
9.4.1	General	9-36
9.4.1.1	General	9-36
9.4.1.2	Principles of operation	9-36
9.4.2	Layout of components	9-37
9.4.2.1	View of the assembly	9-37
9.4.3	Tests and diagnostics	9-38
9.4.3.1	General	9-38
9.4.3.2	Checking the maximum pressure of the high-pressure hydraulic system	9-39
9.4.4	Disassembly/reassembly	9-39
9.4.4.1	Disassembling/reassembling the pressure relief valve	9-39
9.4.5	Service tools	9-40
9.5	Open Center/21-bar valve	9-41
9.5.1	General	9-41
9.5.1.1	General	9-41
9.5.1.2	Principles of operation	9-41
9.5.2	Layout of components	9-42
9.5.2.1	View of the assembly	9-42
9.5.3	Tests and diagnostics	9-42
9.5.3.1	Checking the adjustment of the 21-bar valve	9-42
9.5.3.2	Checking for leaks at clutches and slave devices	9-43
9.5.3.3	Check for clutch and slave device load losses	9-44
9.5.4	Disassembly/reassembly	9-46
9.5.4.1	Removing and refitting the 21 bar valve	9-46
9.5.5	Service tools	9-47
9.6	Open Center/Spool valve	9-48
9.6.1	General	9-48
9.6.1.1	General	9-48
9.6.1.2	Available spool valves	9-48
9.6.1.3	Flow divider	9-50
9.6.1.4	Principles of operation	9-50
9.6.2	Layout of components	9-51
9.6.2.1	View of the assembly	9-51
9.6.3	Tests and diagnostics	9-51
9.6.3.1	General	9-51
9.6.3.2	Checking the flow divider	9-52
9.6.3.3	Checking the Kick-out pressure	9-53
9.6.4	Disassembly/reassembly	9-53
9.6.4.1	Removing and refitting the auxiliary spool valves	9-53
10	Electricity	10-1
10.1	Electrical system	10-3
10.1.1	General	10-3
10.2	Alternator	10-5
10.2.1	Tests and diagnostics	10-5
10.2.1.1	Alternator connections	10-5
10.2.1.2	Preliminary checks	10-5
10.2.1.3	Check the alternator wiring	10-5
10.2.1.4	Check the load current and regulated voltage	10-6
10.2.1.5	Check the maximum output of the alternator	10-6
10.2.1.6	Looking for a voltage drop in the insulated circuit	10-6
10.2.1.7	Looking for a voltage drop in the earth circuit	10-6

10.2.1.8	General	10-7
10.2.1.9	Checking the brushes, springs and slip rings	10-8
10.2.2	Disassembly/reassembly	10-8
10.2.2.1	Removing the alternator	10-8
10.2.2.2	Refitting the alternator	10-14
10.3	Starter	10-16
10.3.1	General	10-16
10.3.1.1	Principles of operation	10-16
10.3.2	Tests and diagnostics	10-17
10.3.2.1	Test procedure	10-17
10.3.3	Disassembly/reassembly	10-18
10.3.3.1	Removing/refitting of the starter	10-18
10.4	Battery	10-21
10.4.1	General	10-21
10.4.1.1	Description and use	10-21
10.4.1.2	Maintenance	10-21
10.4.2	Tests and diagnostics	10-22
10.4.2.1	Test procedure	10-22
10.4.3	Disassembly/reassembly	10-23
10.4.3.1	Removing/refitting the battery	10-23
11	Electronics	11-1
11.1	Error codes	11-5
11.1.1	Error codes: general	11-5
11.1.1.1	Description of error code format	11-5
11.1.2	Error codes: instrument panel	11-6
11.1.2.1	Error code 0.X.55	11-6
11.1.2.2	Error code 0.X.70	11-6
11.1.2.3	Error code 0.X.71	11-6
11.1.2.4	Error code 0.X.72	11-7
11.1.2.5	Error code 0.X.73	11-7
11.1.2.6	Error code 0.X.74	11-7
11.1.2.7	Error code 0.X.75	11-8
11.1.3	Error codes: transmission	11-8
11.1.3.1	Error code 4.X.03	11-8
11.1.3.2	Error code 4.X.04	11-8
11.1.3.3	Error code 4.X.09	11-8
11.1.3.4	Error code 4.X.10	11-9
11.1.3.5	Error code 4.X.11	11-9
11.1.3.6	Error code 4.X.13	11-9
11.1.3.7	Error code 4.X.14	11-9
11.1.3.8	Error code 4.X.15	11-10
11.1.3.9	Error code 4.X.16	11-10
11.1.3.10	Error code 4.X.17	11-10
11.1.3.11	Error code 4.X.40	11-10
11.1.3.12	Error code 4.X.55	11-10
11.1.3.13	Error code 4.X.85	11-11
11.1.3.14	Error code 4.X.90	11-11
11.1.3.15	Error code 4.X.91	11-11
11.1.3.16	Error code 4.X.92	11-11
11.1.3.17	Error code 4.X.0A	11-12
11.1.3.18	Error code 4.X.0B	11-12
11.1.3.19	Error code 4.X.0C	11-12
11.1.3.20	Error code 4.X.0D	11-12
11.1.3.21	Error code 4.X.0E	11-13
11.1.3.22	Error code 4.X.0F	11-13
11.1.3.23	Error code 4.X.2C	11-13

11.1.3.24	Error code 4.X.A2	11-13
11.1.3.25	Error code 4.X.A7	11-13
11.1.3.26	Error code 4.X.C0	11-14
11.1.3.27	Error code 4.X.C1	11-14
11.1.3.28	Error code 4.X.C2	11-14
11.1.3.29	Error code 4.X.C3	11-14
11.1.3.30	Error code 4.X.ED	11-14
11.1.3.31	Error code 4.X.FD	11-15
11.1.3.32	Error code 4.X.FE	11-15
11.1.3.33	Error code 4.X.FF	11-15
11.1.4	Front axle and differential lock error codes	11-15
11.1.4.1	Error code 5.X.33	11-15
11.1.4.2	Error code 5.X.53	11-16
11.1.5	Live PTO	11-16
11.1.5.1	Error code 6.X.04	11-16
11.1.5.2	Error code 6.X.06	11-16
11.1.5.3	Error code 6.X.07	11-16
11.1.5.4	Error code 6.X.08	11-17
11.1.5.5	Error code 6.X.09	11-17
11.1.5.6	Error code 6.X.1E	11-17
11.1.5.7	Error code 6.X.4A	11-17
11.1.5.8	Error code 6.X.4B	11-17
11.1.5.9	Error code 6.X.4C	11-18
11.1.5.10	Error code 6.X.4D	11-18
11.1.5.11	Error code 6.X.4E	11-18
11.1.5.12	Error code 6.X.E2	11-18
11.1.5.13	Error code 6.X.E7	11-19
11.1.6	Rear linkage	11-19
11.1.6.1	Error code 8.X.12	11-19
11.1.6.2	Error code 8.X.16	11-19
11.1.6.3	Error code 8.X.18	11-19
11.1.6.4	Error code 8.X.22	11-20
11.1.6.5	Error code 8.X.23	11-20
11.1.6.6	Error code 8.X.27	11-20
11.1.6.7	Error code 8.X.28	11-20
11.1.6.8	Error code 8.X.29	11-20
11.1.6.9	Error code 8.X.32	11-21
11.1.6.10	Error code 8.X.51	11-21
11.1.6.11	Error code 8.X.60	11-21
11.1.6.12	Error code 8.X.61	11-21
11.1.6.13	Error code 8.X.70	11-22
11.1.6.14	Error code 8.X.1A	11-22
11.1.6.15	Error code 8.X.1B	11-22
11.1.6.16	Error code 8.X.2B	11-22
11.1.6.17	Error code 8.X.A0	11-22
11.1.6.18	Error code 8.X.A1	11-23
11.1.6.19	Error code 8.X.B4	11-23
11.1.6.20	Error code 8.X.B6	11-23
11.2	Component files	11-24
11.2.1	X5 - 4-wheel drive solenoid valve — description	11-24
11.2.2	X5 - 4-wheel drive solenoid valve — test	11-24
11.2.3	X6 - Differential lock solenoid valve — description	11-25
11.2.4	X6 - Differential lock solenoid valve — test	11-26
11.2.5	X7 - Rear PTO solenoid valve — description	11-26
11.2.6	X7 - Rear PTO solenoid valve — test	11-27
11.2.7	X19 - Transmission hydraulic oil temperature sensor — description	11-28
11.2.8	X19 - Transmission hydraulic oil temperature sensor — test	11-29
11.2.9	X20 - Transmission filter blockage sensor — description	11-30

11.2.10	X20 - Transmission filter blockage sensor — test	11-31
11.2.11	X27 - Rear linkage solenoid valve — description	11-32
11.2.12	X27 - Rear linkage solenoid valve — test	11-33
11.2.13	X28 - Solenoid valve for rear linkage lifting/lowering selection — description	11-34
11.2.14	X28 - Solenoid valve for rear linkage lifting/lowering selection — test	11-35
11.2.15	X30 - Rear linkage position sensor — description	11-36
11.2.16	X30 - Rear linkage position sensor — test	11-37
11.2.17	X32 - Top link draft sensor — description	11-38
11.2.18	X32 - Top link draft sensor — test	11-39
11.2.19	X55 - Instrument panel — description	11-40
11.2.20	X56 - PowerShuttle lever — description	11-42
11.2.21	X56 - PowerShuttle lever — test	11-43
11.2.22	X58 - Windscreen wiper and direction indicator control unit — description	11-46
11.2.23	X66 - Left-hand brake pedal sensor — description	11-47
11.2.24	X66 - Left-hand brake pedal sensor — test	11-48
11.2.25	X67 - Right-hand brake pedal sensor — description	11-49
11.2.26	X67 - Right-hand brake pedal sensor — test	11-50
11.2.27	X68 - Clutch pedal sensor — description	11-52
11.2.28	X68 - Clutch pedal sensor — test	11-54
11.2.29	X71 - Throttle pedal sensor — description	11-58
11.2.30	X71 - Throttle pedal sensor — test	11-59
11.2.31	X97 - Linkage lifting/lowering switch on left-hand fender — description	11-60
11.2.32	X97 - Linkage lifting/lowering switch on left-hand fender — test	11-61
11.2.33	X128 - Rear PTO engagement switch — description	11-61
11.2.34	X136 - Differential lock switch — description	11-63
11.2.35	X137 - 4-wheel drive switch — description	11-64
11.2.36	X138 - Hazard warning lights indicator light and switch — description	11-65
11.2.37	X152 - Start switch — description	11-66
11.2.38	X177 - Linkage controller — description	11-67
11.2.39	X183 - Diagnostics connector (tractor CAN/engine auxiliary CAN) - description	11-69
11.2.40	X197 - Diesel fuel gage — description	11-70
11.2.41	X302 - Switch for preselected engine speed A — description	11-71
11.2.42	X363 - Rear linkage lifting/lowering/quick soil engagement switch — description	11-72
11.2.43	X363 - Rear linkage lifting/lowering/quick soil engagement switch — test	11-73
11.2.44	X470 - Operator presence in seat switch — description	11-74
11.2.45	X470 - Operator presence in seat switch — test	11-75
11.2.46	X481 - Engine speed sensor — description	11-76
11.2.47	X481 - Engine speed sensor — test	11-77
11.2.48	X482 - Theoretical forward speed sensor — description	11-78
11.2.49	X482 - Theoretical forward speed sensor — test	11-79
11.2.50	X483 - Intermediate speed sensor — description	11-79
11.2.51	X483 - Intermediate speed sensor — test	11-80
11.2.52	X493 - Lubrication switch — description	11-81
11.2.53	X493 - Lubrication switch — test	11-82
11.2.54	X498 - PTO brake solenoid valve — description	11-82
11.2.55	X498 - PTO brake solenoid valve — test	11-83
11.2.56	X556 - Forward solenoid valve — description	11-84
11.2.57	X556 - Forward solenoid valve — test	11-85
11.2.58	X557 - Reverse solenoid valve — description	11-85
11.2.59	X557 - Reverse solenoid valve — test	11-86
11.2.60	X594 - AgCommand™ unit — description	11-87
11.2.61	X618 - Parking brake sensor — description	11-88
11.2.62	X652 - Hazard warning light unit — description	11-88
11.2.63	X740 - Rear work lights switch — description	11-90
11.2.64	X741 - Front work lights switch — description	11-91
11.2.65	X742 - Rotary beacon switch — description	11-92
11.2.66	X743 - UP/DOWN navigation switch — description	11-93

11.2.67	X744 - +/- navigation switch — description	11-94
11.2.68	X746 - Safety start switch — description	11-94
11.2.69	X747 - PowerShuttle response potentiometer — description	11-96
11.2.70	X747 - PowerShuttle response potentiometer — test	11-97
11.2.71	X750 - Rear-linkage intermix potentiometer — description	11-99
11.2.72	X750 - Rear-linkage intermix potentiometer — test	11-101
11.2.73	X751 - Rear-linkage height/depth adjustment potentiometer — description	11-102
11.2.74	X751 - Rear-linkage height/depth adjustment potentiometer — test	11-104
11.2.75	X771 - Transmission controller — description	11-105
11.2.76	X776 - Rear PTO end-fitting speed sensor — description	11-107
11.2.77	X776 - Rear PTO end-fitting speed sensor — test	11-108
11.2.78	X897 - Rear-linkage raised position adjustment potentiometer — description	11-109
11.2.79	X897 - Rear-linkage raised position adjustment potentiometer — test	11-111
11.2.80	X898 - Rear-linkage lowering speed adjustment potentiometer — description	11-112
11.2.81	X898 - Rear-linkage lowering speed adjustment potentiometer — test	11-113
11.2.82	X906 - Quick declutching switch — description	11-114
11.2.83	X906 - Quick declutching switch — test	11-115
11.2.84	X934 - Rear-linkage active transport control button	11-116
11.3	Setting parameters	11-117
11.3.1	Label code description	11-117
11.3.2	Configuring the label codes using EDT	11-118
11.3.3	Configuring the label codes using the instrument panel	11-118
11.3.4	Setting the table of constants parameters	11-121
11.3.5	Setting the engine and maintenance hours parameters	11-121
11.3.6	Clearing an Autotronic 7	11-121
11.3.7	Navigation shared by the different parameters	11-122
11.3.8	Obtaining an authorisation code	11-123
11.3.9	Creating an authorisation code as factory product support	11-123
11.4	Diagnostic files	11-127
11.4.1	Diagnostic file: program - parameters	11-127
11.4.2	Diagnostic file: program - parameters - calibrations	11-127
11.4.3	Diagnostic file: component	11-127
11.4.4	Diagnostic file: fuses - program - parameters - calibrations	11-127
11.4.5	Diagnostic file: fuses - component - harness	11-127
11.4.6	Diagnostic file: fuses - calibrations - component - controller power supply - harness	11-127
11.4.7	Diagnostic file: fuses - component - controller power supply - harness	11-128
11.4.8	Diagnostic file: fuses - program - parameters - CAN - component - harness	11-128
11.4.9	Diagnostic file: fuses - CAN - harness - component	11-128
11.4.10	Diagnostic file: Error code 8.X.50 and 8.X.51	11-128
11.4.11	Diagnostic file: Error code 0.X.41	11-129
11.4.12	Diagnostic file: Error code 0.X.42	11-129
11.4.13	Diagnostic file: Error code 0.X.45	11-129
11.5	Generic procedures	11-130
11.5.1	List of generic procedures	11-130
11.5.2	Checking the insulation of a harness	11-130
11.5.3	Checking the continuity of a harness	11-130
11.5.4	Checking the CAN network	11-132
11.5.5	Checking a harness	11-134
11.5.6	Measuring a voltage	11-134
11.5.7	Measuring the resistance of a component	11-135
11.5.8	Measuring current	11-135
11.5.9	Hook-on ammeter procedure	11-135
11.5.10	Ammeter procedure	11-136
12	Operator environment	12-1
12.1	Platform operator's seat	12-3

12.1.1	General	12-3
12.1.1.1	General	12-3
12.1.2	Layout of components	12-6
12.1.2.1	View of the ROPS	12-6
12.1.2.2	FOPS roof	12-7
12.1.3	Disassembly/reassembly	12-7
12.1.3.1	Removing and refitting the safety cab	12-7
12.2	Cab operator's seat	12-9
12.2.1	General	12-9
12.2.1.1	General	12-9
12.2.2	Layout of components	12-9
12.2.2.1	Tightening torque and application of Loctite	12-9
12.2.3	Adjustments, bleeding and calibrations	12-11
12.2.3.1	Adjusting the foot throttle pedal	12-11
12.2.4	Disassembly/reassembly	12-11
12.2.4.1	Removing the cab	12-11
12.2.4.2	Refitting the cab	12-16
12.3	Seat	12-21
12.3.1	General	12-21
12.3.1.1	General	12-21
12.3.2	Layout of components	12-23
12.3.2.1	Exploded view	12-23
12.3.3	Disassembly/reassembly	12-24
12.3.3.1	Removing the seat	12-24
12.3.3.2	Reassembly	12-27
12.4	Standard air conditioning	12-28
12.4.1	General	12-28
12.4.1.1	General	12-28
12.4.1.2	Technical specifications	12-28
12.4.1.3	Principles of operation	12-31
12.4.1.4	Schematic diagram of the air conditioning	12-33
12.4.1.5	Layout of components	12-35
12.4.2	Tests and diagnostics	12-36
12.4.2.1	General	12-36
12.4.2.2	Air conditioning system faults	12-37
12.4.2.3	Sealing test on the air conditioning system.	12-40
12.4.3	Adjustments, bleeding and calibrations	12-42
12.4.3.1	Safety instructions	12-42
12.4.3.2	General maintenance	12-42
12.4.3.3	Adjusting the clutch air gap	12-43
12.4.3.4	Draining the air conditioning system	12-44
12.4.3.5	Drafting the system	12-45
12.4.3.6	Filling the system with oil and adding a tracer	12-45
12.4.3.7	Filling the system with refrigerant	12-46
12.4.3.8	Checking the sealing	12-46
13	Service tools	13-1
13.1	General	13-3
13.1.1	General	13-3
13.2	Engine	13-4
13.2.1	AGCO Power engine	13-4
13.2.2	Simpson engine	13-6
13.3	Clutch	13-10
13.3.1	Mechanical clutch	13-10
13.4	Gearbox	13-11
13.4.1	Mechanical reverse shuttle	13-11
13.4.2	8x8 gearbox with dog clutch and mechanical reverse shuttle	13-12

13.5 Rear Axle	13-15
13.5.1 Trumpet housings	13-15
13.5.2 Crown wheel and pinion	13-15
13.5.3 Hydraulic tractor braking	13-17
13.5.4 Linkage and hitch	13-18
13.6 Power take-off	13-19
13.6.1 One-speed gearbox	13-19
13.6.2 Two-speed gearbox	13-19
13.7 Front axle	13-21
13.7.1 Two-wheel drive front axle	13-21
13.7.2 4-wheel drive clutch	13-21

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com