
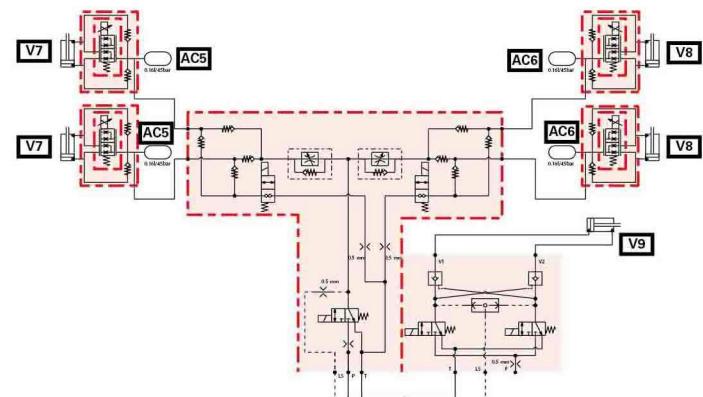


**MASSEY FERGUSON**

# **Technician Service Book - series tractors MF 7700**

Schémas électriques et hydrauliques

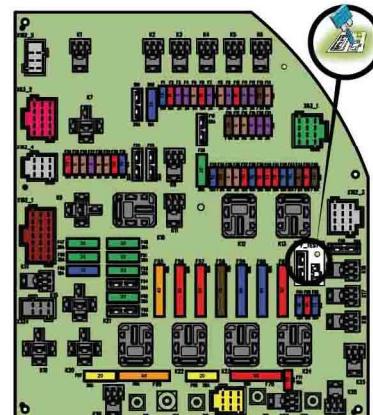

**Beauvais**

**AGCO S.A.S. - 41 avenue Blaise Pascal - 60000  
Beauvais - France - RC B562 104 539**

**© AGCO 2017**

**April 2017  
ACT001168C  
English**

# Technician Service Book - series tractors MF 7700

<b>1 General</b>	1-1
<b>1.1 General specifications</b>	1-3
1.1.1 General specifications for MF 7714, MF 7715, MF 7716 and models MF 7718	1-3
1.1.1.1 Models MF 7700 Dyna-4	1-3
1.1.1.2 Models MF 7700 Dyna-6	1-11
1.1.1.3 MF 7700 Dyna-VT models	1-20
1.1.2 General specifications for MF 7719, MF 7720, MF 7722, MF 7724 and models MF 7726	1-28
1.1.2.1 MF 7700 Dyna-6 models	1-28
1.1.2.2 MF 7700 Dyna-VT models	1-39
<b>1.2 Forward speeds</b>	1-50
1.2.1 Forward speeds for MF 7714, MF 7715, MF 7716 and models MF 7718	1-50
1.2.1.1 Forward speed at maximum speed with Dyna-4 40 kph transmission and 20.8R38 tires	1-50
1.2.1.2 Forward speed at maximum speed with Dyna-6 40 kph transmission and 20.8R38 tires	1-51
1.2.1.3 Forward speed at maximum speed with Dyna-6 50 kph transmission and 20.8R38 tires	1-53
1.2.1.4 Forward speed for all models with Dyna-VT transmission	1-54
1.2.2 Forward speeds for MF 7719, MF 7720, MF 7722, MF 7724 and models MF 7726	1-55
1.2.2.1 Forward speed at maximum speed with Dyna-6 40 kph transmission: and 20.8R42 tires	1-55
1.2.2.2 Forward speed at maximum speed with Dyna-6 50 kph transmission: and 20.8R42 tires	1-57
1.2.2.3 Forward speed with Dyna-6 transmission, 40 kph and 50 kph with creeper speed option and 20.8R42 tires	1-59
1.2.2.4 Forward speed for all models with Dyna-VT transmission	1-60
<b>1.3 Dimensions and weights</b>	1-61
1.3.1 Dimensions and weights for MF 7714, MF 7715, MF 7716 and models MF 7718	1-61
1.3.1.1 Dimensions and weights	1-61
1.3.2 Dimensions and weights for MF 7719, MF 7720, MF 7722, MF 7724 and models MF 7726	1-64
1.3.2.1 Dimensions and weights	1-64
<b>1.4 Attachment points</b>	1-75
1.4.1 Attachment points for MF 7714, MF 7715, MF 7716 and models MF 7718	1-75
1.4.1.1 Attachment points: Dyna-4/Dyna-6 models without front linkage	1-75
1.4.1.2 Attachment points: Dyna-4/Dyna-6 models with front linkage	1-76
1.4.1.3 Attachment points: Dyna-VT models without front linkage	1-78
1.4.1.4 Attachment points: Dyna-VT models with front linkage	1-79
1.4.2 Attachment points for MF 7719, MF 7720, MF 7722, MF 7724 and models MF 7726	1-81
1.4.2.1 Attachment points: Dyna-6 models without front linkage	1-81
1.4.2.2 Attachment points: Dyna-6 models with 4 t front linkage (Imperial: 4.4 US ton)	1-82
1.4.2.3 Attachment points: Dyna-VT models without front linkage	1-84
1.4.2.4 Attachment points: Dyna-VT models with 4 t front linkage (Imperial: 4.4 US ton)	1-85
<b>1.5 Capacities</b>	1-87

1.5.1 Capacities for MF 7714, MF 7715, MF 7716 and models MF 7718 . . . . .	1-87
1.5.1.1 Capacities . . . . .	1-87
1.5.2 Capacities for MF 7719, MF 7720, MF 7722, MF 7724 and models MF 7726 . . . . .	1-88
1.5.2.1 Capacities for models with a Tier 3/Stage IIIA engine . . . . .	1-88
1.5.2.2 Capacities for models with a Tier 4F/Stage IV SCR Technology engine . .	1-89
1.5.3 Conversion table . . . . .	1-91
<b>1.6 Tightening torques, retaining compounds and sealing products . . . . .</b>	<b>1-94</b>
1.6.1 Retaining compounds and sealing products . . . . .	1-94
1.6.2 Tightening torques for screws and nuts . . . . .	1-95
1.6.3 Tightening torques for hydraulic unions . . . . .	1-99
<b>2 Error codes . . . . .</b>	<b>2-1</b>
<b>2.1 Error codes . . . . .</b>	<b>2-3</b>
2.1.1 General table of faults . . . . .	2-3
2.1.2 Indicator light panel . . . . .	2-6
2.1.3 Indication of faults . . . . .	2-13
2.1.4 Description of error code format . . . . .	2-16
2.1.5 Instrument panel error codes Dyna-VT . . . . .	2-17
2.1.6 Instrument panel error codes Dyna-4/Dyna-6 . . . . .	2-18
2.1.7 AGCO Power Tier 3/Stage IIIA engine and Tier 4F/Stage IV SCR Technology engine error codes . . . . .	2-19
2.1.8 Dyna-VT transmission error codes . . . . .	2-35
2.1.9 Transmission error codes Dyna-4/Dyna-6 . . . . .	2-38
2.1.10 ParkLock error codes . . . . .	2-40
2.1.11 ParkLock error codes . . . . .	2-41
2.1.12 Front axle error codes Dyna-VT . . . . .	2-42
2.1.13 Front axle error codes for Dyna-4/Dyna-6 . . . . .	2-42
2.1.14 Rear power take-off error codes Dyna-VT . . . . .	2-43
2.1.15 Power take-off error codes Dyna-4/Dyna-6 . . . . .	2-45
2.1.16 Error codes for the high-pressure braking . . . . .	2-45
2.1.17 Rear linkage error codes . . . . .	2-46
2.1.18 Front power lift error codes . . . . .	2-47
2.1.19 Armrest error codes . . . . .	2-47
2.1.20 Hydraulic valve error codes . . . . .	2-49
2.1.21 Air conditioning error codes . . . . .	2-50
2.1.22 Error codes of the keypad in the pillar . . . . .	2-52
2.1.23 Suspended cab error codes . . . . .	2-52
<b>3 Fuse box . . . . .</b>	<b>3-1</b>
<b>3.1 Fuse box . . . . .</b>	<b>3-3</b>
3.1.1 Description of the main fuse box . . . . .	3-3
3.1.2 Description of the secondary fuse box (depending on model) . . . . .	3-21
3.1.3 Description of the secondary fuse box (depending on model) . . . . .	3-26
3.1.4 Battery isolator . . . . .	3-30
<b>4 Electrical diagrams . . . . .</b>	<b>4-1</b>
<b>4.1 Electrical diagrams . . . . .</b>	<b>4-7</b>
4.1.1 Identification of electrical diagrams . . . . .	4-7
4.1.2 Identification of electrical connectors from X1 to X500 . . . . .	4-9
4.1.3 Identification of electrical connectors from X501 to X1000 . . . . .	4-21
4.1.4 Identification table for cable colors . . . . .	4-30
4.1.5 Electrical diagrams . . . . .	4-33
4.1.5.1 EFD00000_12 - Battery 12 V power supply points . . . . .	4-33
4.1.5.2 EFD00000_13 - Battery earth points . . . . .	4-34
4.1.5.3 EFD00100_17 - 4-wheel drive Dyna-VT . . . . .	4-36
4.1.5.4 EFD00100_18 - 4-wheel drive Dyna-6 . . . . .	4-37
4.1.5.5 EFD00100_19 - 4-wheel drive Dyna-4 . . . . .	4-37

4.1.5.6 EFD00101_17 - Differential lock Dyna-VT . . . . .	4-38
4.1.5.7 EFD00101_18 - Differential lock Dyna-6 . . . . .	4-39
4.1.5.8 EFD00101_19 - Differential lock Dyna-4 . . . . .	4-40
4.1.5.9 EFD00106_28 - rear power take-off Dyna-VT . . . . .	4-41
4.1.5.10 EFD00106_29 - GPA40 mechanical-control rear power take-off Dyna-6 . . . . .	4-42
4.1.5.11 EFD00106_30 - GPA40 two-speed electrohydraulic-control rear power take-off Dyna-6 . . . . .	4-43
4.1.5.12 EFD00106_31 - GPA40 three-speed electrohydraulic-control rear power take-off Dyna-6 . . . . .	4-44
4.1.5.13 EFD00106_32 - GPA20 mechanical-control rear power take-off Dyna-6 . . . . .	4-45
4.1.5.14 EFD00106_33 - GPA20 electrohydraulic-control rear power take-off Dyna-6 . . . . .	4-46
4.1.5.15 EFD00106_34 - GPA20 mechanical-control rear power take-off Dyna-4 . . . . .	4-47
4.1.5.16 EFD00106_35 - GPA20 electrohydraulic-control rear power take-off Dyna-4 . . . . .	4-48
4.1.5.17 EFD00107_11 - front power take-off Dyna-VT . . . . .	4-49
4.1.5.18 EFD00107_12 - front power take-off Dyna-6 . . . . .	4-50
4.1.5.19 EFD00107_13 - front power take-off Dyna-4 . . . . .	4-51
4.1.5.20 EFD00111_31 - transmission Dyna-VT_1/2 . . . . .	4-52
4.1.5.21 EFD00111_31 - transmission Dyna-VT_2/2 . . . . .	4-53
4.1.5.22 EFD00111_32 - GTA1540 transmission Dyna-6_1/4 . . . . .	4-54
4.1.5.23 EFD00111_32 - GTA1540 transmission Dyna-6_2/4 . . . . .	4-55
4.1.5.24 EFD00111_32 - GTA1540 transmission Dyna-6_3/4 . . . . .	4-56
4.1.5.25 EFD00111_32 - GTA1540 transmission Dyna-6_4/4 . . . . .	4-57
4.1.5.26 EFD00111_33 - GTA2520 transmission Dyna-6 Load Sensing_1/4 . . . . .	4-58
4.1.5.27 EFD00111_33 - GTA2520 transmission Dyna-6 Load Sensing_2/4 . . . . .	4-59
4.1.5.28 EFD00111_33 - GTA2520 transmission Dyna-6 Load Sensing_3/4 . . . . .	4-60
4.1.5.29 EFD00111_33 - GTA2520 transmission Dyna-6 Load Sensing_4/4 . . . . .	4-61
4.1.5.30 EFD00111_34 - GTA2520 Dyna-6 Open Center transmission_1/4 . . . . .	4-62
4.1.5.31 EFD00111_34 - GTA2520 Dyna-6 Open Center transmission_2/4 . . . . .	4-63
4.1.5.32 EFD00111_34 - GTA2520 Dyna-6 Open Center transmission_3/4 . . . . .	4-64
4.1.5.33 EFD00111_34 - GTA2520 Dyna-6 Open Center transmission_4/4 . . . . .	4-65
4.1.5.34 EFD00111_35 - GTA2520 transmission Dyna-4 Load Sensing_1/2 . . . . .	4-66
4.1.5.35 EFD00111_35 - GTA2520 transmission Dyna-4 Load Sensing_2/2 . . . . .	4-67
4.1.5.36 EFD00111_36 - GTA2520 Dyna-4 Open Center transmission_1/2 . . . . .	4-68
4.1.5.37 EFD00111_36 - GTA2520 Dyna-4 Open Center transmission_2/2 . . . . .	4-69
4.1.5.38 EFD00113_7 - Cigarette lighter . . . . .	4-70
4.1.5.39 EFD00114_30 - Radio . . . . .	4-71
4.1.5.40 EFD00116_12 - Suspended cab . . . . .	4-72
4.1.5.41 EFD00117_28 - Additional heater . . . . .	4-73
4.1.5.42 EFD00117_39 - Automatic air conditioning . . . . .	4-74
4.1.5.43 EFD00117_40 - Manual air conditioning for standard roof . . . . .	4-75
4.1.5.44 EFD00117_41 - Manual air conditioning for high-visibility roof . . . . .	4-76
4.1.5.45 EFD00118_9 - DOT Matrix . . . . .	4-77
4.1.5.46 EFD00119_10 - Rear windscreen wiper . . . . .	4-78
4.1.5.47 EFD00120_12 - Front windscreen wiper . . . . .	4-79
4.1.5.48 EFD00121_9 - parking brake Dyna-VT . . . . .	4-80
4.1.5.49 EFD00121_10 - parking brake Dyna-6 . . . . .	4-81
4.1.5.50 EFD00121_11 - parking brake Dyna-4 . . . . .	4-82
4.1.5.51 EFD00122_8 - fuel gage Dyna-VT . . . . .	4-83
4.1.5.52 EFD00122_9 - Dyna-4/ fuel gageDyna-6 . . . . .	4-84
4.1.5.53 EFD00123 - C3000 . . . . .	4-85
4.1.5.54 EFD00123_24 - Datatronic CCD . . . . .	4-86
4.1.5.55 EFD00123_25 - Isobus . . . . .	4-87
4.1.5.56 EFD00123_30 - Auto-Guide™ . . . . .	4-88
4.1.5.57 EFD00124_10 - ParkLock Dyna-VT . . . . .	4-89
4.1.5.58 EFD00124_11 - Dyna-4/ ParkLockDyna-6 . . . . .	4-90
4.1.5.59 EFD00125_10 - Cab light . . . . .	4-91

4.1.5.60 EFD00126_11 - Extreme cold weather heating with automatic air conditioning . . . . .	4-92
4.1.5.61 EFD00126_12 - Extreme cold weather heating with manual air conditioning for tractors with standard roof . . . . .	4-93
4.1.5.62 EFD00126_13 - Extreme cold weather heating with manual air conditioning for tractors with high-visibility roof . . . . .	4-94
4.1.5.63 EFD00127_8 - Left-hand pillar 12 V socket . . . . .	4-95
4.1.5.64 EFD00128_17 - EAME/ISO cab power socket . . . . .	4-96
4.1.5.65 EFD00128_18 - NA/SAE cab power socket . . . . .	4-97
4.1.5.66 EFD00128_20 - EAME/ISO cab power socket_1/2 . . . . .	4-98
4.1.5.67 EFD00128_20 - EAME/ISO cab power socket_2/2 . . . . .	4-99
4.1.5.68 EFD00128_21 - NA/SAE cab power socket_1/2 . . . . .	4-100
4.1.5.69 EFD00128_21 - NA/SAE cab power socket_2/2 . . . . .	4-101
4.1.5.70 EFD00129_12 - Diagnostics connector_1/2 . . . . .	4-102
4.1.5.71 EFD00129_12 - Diagnostics connector_2/2 . . . . .	4-103
4.1.5.72 EFD00129_13 - Diagnostics connector_1/2 with cab harnesses ACW039162 and ACW039167 . . . . .	4-105
4.1.5.73 EFD00129_13 - Diagnostics connector_2/2 with cab harnesses ACW039162 and ACW039167 . . . . .	4-105
4.1.5.74 EFD00130_5 - radar Dyna-VT . . . . .	4-107
4.1.5.75 EFD00130_6 - Dyna-6 and radar Dyna-4 . . . . .	4-107
4.1.5.76 EFD00131_34 - CAN network Dyna-VT (tractor)_1/5 with Tier 4F/Stage IV SCR Technology engine and cab harness 4990243 . . . . .	4-108
4.1.5.77 EFD00131_34 - CAN network Dyna-VT (hitch)_2/5 with Tier 4F/Stage IV SCR Technology engine and cab harness 4990243 . . . . .	4-109
4.1.5.78 EFD00131_34 - CAN network Dyna-VT (engine)_3/5 with Tier 4F/Stage IV SCR Technology engine and cab harness 4990243 . . . . .	4-110
4.1.5.79 EFD00131_34 - CAN network Dyna-VT (isobus)_4/5 with Tier 4F/Stage IV SCR Technology engine and cab harness 4990243 . . . . .	4-111
4.1.5.80 EFD00131_34 - CAN network Dyna-VT (AGCO Power)_5/5 with Tier 4F/Stage IV SCR Technology engine and cab harness 4990243 . . . . .	4-112
4.1.5.81 EFD00131_35 - CAN network Dyna-6 (tractor)_1/7 with Tier 4F/Stage IV SCR Technology engine and cab harnesses ACW005780-ACW005784-4392642 . . . . .	4-113
4.1.5.82 EFD00131_35 - CAN network Dyna-6 (engine)_2/7 with Tier 4F/Stage IV SCR Technology engine and cab harnesses ACW005780-ACW005784-4392642 . . . . .	4-114
4.1.5.83 EFD00131_35 - CAN network Dyna-6 (hitch)_3/7 with Tier 4F/Stage IV SCR Technology engine and cab harnesses ACW005780-ACW005784-4392642 . . . . .	4-115
4.1.5.84 EFD00131_35 - CAN network Dyna-6 (isobus)_4/7 with Tier 4F/Stage IV SCR Technology engine and cab harnesses ACW005780-ACW005784-4392642 . . . . .	4-116
4.1.5.85 EFD00131_35 - CAN network Dyna-6 (tractor)_5/7 with Tier 4F/Stage IV SCR Technology engine and cab harnesses ACW005780-ACW005784-4392642 . . . . .	4-117
4.1.5.86 EFD00131_35 - CAN network Dyna-6 (engine)_6/7 with Tier 4F/Stage IV SCR Technology engine and cab harnesses ACW005780-ACW005784-4392642 . . . . .	4-118
4.1.5.87 EFD00131_35 - CAN network Dyna-6 (AGCO Power)_7/7 with Tier 4F/Stage IV SCR Technology engine and cab harnesses ACW005780-ACW005784-4392642 . . . . .	4-119
4.1.5.88 EFD00131_36 - CAN network Dyna-4 (tractor)_1/3 with Tier 4F/Stage IV SCR Technology engine and cab harnesses ACW017847-ACW022303-ACW021492-4391826 . . . . .	4-120
4.1.5.89 EFD00131_36 - CAN network Dyna-4 (engine)_2/3 with Tier 4F/Stage IV SCR Technology engine and cab harnesses ACW017847-ACW022303-ACW021492-4391826 . . . . .	4-121
4.1.5.90 EFD00131_36 - CAN network Dyna-4 AGCO Power_3/3 with Tier 4F/Stage IV SCR Technology engine and cab harnesses ACW017847-ACW022303-ACW021492-4391826 . . . . .	4-122
4.1.5.91 EFD00131_37 - CAN network Dyna-VT (tractor)_1/5 with Tier 3/Stage IIIA engine . . . . .	4-123

4.1.5.92 EFD00131_37 - CAN network Dyna-VT (hitch)_2/5 with Tier 3/Stage IIIA engine . . . . .	4-124
4.1.5.93 EFD00131_37 - CAN network Dyna-VT (engine)_3/5 with Tier 3/Stage IIIA engine . . . . .	4-125
4.1.5.94 EFD00131_37 - CAN network Dyna-VT (isobus)_4/5 with Tier 3/Stage IIIA engine . . . . .	4-126
4.1.5.95 EFD00131_37 - CAN network Dyna-VT (AGCO Power)_5/5 with Tier 3/Stage IIIA engine . . . . .	4-127
4.1.5.96 EFD00131_38 - CAN network Dyna-6 (tractor)_1/7 with Tier 3/Stage IIIA engine . . . . .	4-128
4.1.5.97 EFD00131_38 - CAN network Dyna-6 (engine)_2/7 with Tier 3/Stage IIIA engine . . . . .	4-129
4.1.5.98 EFD00131_38 - CAN network Dyna-6 (hitch)_3/7 with Tier 3/Stage IIIA engine . . . . .	4-130
4.1.5.99 EFD00131_38 - CAN network Dyna-6 (isobus)_4/7 with Tier 3/Stage IIIA engine . . . . .	4-131
4.1.5.100 EFD00131_38 - CAN network Dyna-6 (tractor)_5/7 with Tier 3/Stage IIIA engine . . . . .	4-132
4.1.5.101 EFD00131_38 - CAN network Dyna-6 (engine)_6/7 with Tier 3/Stage IIIA engine . . . . .	4-133
4.1.5.102 EFD00131_38 - CAN network Dyna-6 (AGCO Power)_7/7 with Tier 3/Stage IIIA engine . . . . .	4-134
4.1.5.103 EFD00131_39 - CAN network Dyna-6 (tractor)_1/7 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039167 . . . . .	4-135
4.1.5.104 EFD00131_39 - CAN network Dyna-6 (engine)_2/7 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039167 . . . . .	4-136
4.1.5.105 EFD00131_39 - CAN network Dyna-6 (hitch)_3/7 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039167 . . . . .	4-137
4.1.5.106 EFD00131_39 - CAN network Dyna-6 (isobus)_4/7 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039167 . . . . .	4-138
4.1.5.107 EFD00131_39 - CAN network Dyna-6 (tractor)_5/7 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039167 . . . . .	4-139
4.1.5.108 EFD00131_39 - CAN network Dyna-6 (engine)_6/7 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039167 . . . . .	4-140
4.1.5.109 EFD00131_39 - CAN network Dyna-6 AGCO Power_7/7 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039167 . . . . .	4-141
4.1.5.110 EFD00131_40 - CAN network Dyna-VT (tractor)_1/5 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039162 . . . . .	4-142
4.1.5.111 EFD00131_40 - CAN network Dyna-VT (hitch)_2/5 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039162 . . . . .	4-143
4.1.5.112 EFD00131_40 - CAN network Dyna-VT (engine)_3/5 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039162 . . . . .	4-144
4.1.5.113 EFD00131_40 - CAN network Dyna-VT (isobus)_4/5 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039162 . . . . .	4-145
4.1.5.114 EFD00131_40 - CAN network Dyna-VT AGCO Power_5/5 with Tier 4F/Stage IV SCR Technology engine and cab harness ACW039162 . . . . .	4-146
4.1.5.115 EFD00132_7 - Electric rear-view mirrors . . . . .	4-147
4.1.5.116 EFD00133_7 - Pneumatic seat . . . . .	4-148
4.1.5.117 EFD00135_11 - Ventilation for tractors with standard roof . . . . .	4-149
4.1.5.118 EFD00135_12 - Ventilation for tractors with high-visibility roof . . . . .	4-150
4.1.5.119 EFD00136_59 - EAME direction indicators and hazard warning lights - standard roof . . . . .	4-151
4.1.5.120 EFD00136_60 - NA direction indicators and hazard warning lights . . . . .	4-152
4.1.5.121 EFD00136_61 - EAME direction indicators and hazard warning lights - high-visibility roof . . . . .	4-153
4.1.5.122 EFD00137_23 - Number plate lighting (except Italy) . . . . .	4-154
4.1.5.123 EFD00137_24 - Italian number plate lighting . . . . .	4-155
4.1.5.124 EFD00138_35 - NA side lights . . . . .	4-156

4.1.5.125 EFD00138_42 - EAME side lights . . . . .	4-157
4.1.5.126 EFD00139_8 - Reversing light Dyna-VT . . . . .	4-158
4.1.5.127 EFD00139_9 - Reversing light Dyna-6 . . . . .	4-159
4.1.5.128 EFD00139_12 - Reversing light Dyna-4 . . . . .	4-160
4.1.5.129 EFD00140_48 - High beam lamps and low beam lamps on grille and hand rails . . . . .	4-161
4.1.5.130 EFD00140_49 - High beam lamps and low beam lamps on hand rails . . . . .	4-162
4.1.5.131 EFD00140_50 - High beam lamps and low beam lamps on grille . . . . .	4-163
4.1.5.132 EFD00140_51 - High beam lamps and low beam lamps on grille . . . . .	4-164
4.1.5.133 EFD00141_95 - EAME work lights . . . . .	4-165
4.1.5.134 EFD00141_96 - NA work lights . . . . .	4-166
4.1.5.135 EFD00141_97 - Work lights . . . . .	4-167
4.1.5.136 EFD00142_12 - Brake lights Dyna-VT . . . . .	4-168
4.1.5.137 EFD00142_13 - Brake lights Dyna-6 . . . . .	4-169
4.1.5.138 EFD00142_14 - Brake lights Dyna-4 . . . . .	4-170
4.1.5.139 EFD00143_27 - Rotary beacon . . . . .	4-171
4.1.5.140 EFD00144_8 - Control module . . . . .	4-172
4.1.5.141 EFD00145_13 - NA trailer connector . . . . .	4-173
4.1.5.142 EFD00145_14 - EAME trailer connector . . . . .	4-174
4.1.5.143 EFD00146_9 - Automatic air conditioning back-lighting . . . . .	4-175
4.1.5.144 EFD00146_10 - Manual air conditioning back-lighting . . . . .	4-176
4.1.5.145 EFD00148_13 - Audible alarm . . . . .	4-177
4.1.5.146 EFD00149_16 - Battery charge + start-up Tier 4F/Stage IV SCR Technology engine . . . . .	4-178
4.1.5.147 EFD00149_18 - Battery charge + start-up Tier 3/Stage IIIA engine . . . . .	4-179
4.1.5.148 EFD00150_10 - Air filter vacuum sensor . . . . .	4-180
4.1.5.149 EFD00151_26 - EEM unit power supply AGCO Power (44/66/74 AWF engine) . . . . .	4-181
4.1.5.150 EFD00151_27 - AGCO Power engine electronic injection for Efficient and tractor versions Exclusive (44/66/74 AWF engine) . . . . .	4-182
4.1.5.151 EFD00151_28 - AGCO Power engine electronic injection for tractor versions Essential (44/66/74 AWF engine) . . . . .	4-183
4.1.5.152 EFD00151_30 - EEM unit power supply AGCO Power (66/74 CW-3 engine) . . . . .	4-184
4.1.5.153 EFD00151_31 - AGCO Power engine electronic injection for Efficient and tractor versions Exclusive (66/74 CW-3 engine) . . . . .	4-185
4.1.5.154 EFD00151_32 - AGCO Power engine electronic injection for tractor versions Essential (66/74 CW-3 engine) . . . . .	4-186
4.1.5.155 EFD00152_17 - DANA suspended front axle (for MF 7700 models) . . . . .	4-187
4.1.5.156 EFD00153_19 - Preheating power supply AGCO Power (66/74 AWF engine) . . . . .	4-188
4.1.5.157 EFD00153_20 - Preheating power supply AGCO Power (66/74 CW-3 and 49AWF engine) . . . . .	4-189
4.1.5.158 EFD00154_6 - Fuel preheater . . . . .	4-190
4.1.5.159 EFD00157_6 - Vistronic Tier 4F/Stage IV SCR Technology engine . . . . .	4-191
4.1.5.160 EFD00157_7 - Vistronic Tier 3/Stage IIIA engine . . . . .	4-192
4.1.5.161 EFD00159_18 - Hydraulic spool valves Dyna-VT . . . . .	4-193
4.1.5.162 EFD00159_19 - Hydraulic spool valves Dyna-6 . . . . .	4-194
4.1.5.163 EFD00160_29 - Rear linkage and Dual Control Dyna-VT . . . . .	4-195
4.1.5.164 EFD00160_30 - GPA20 and GPA40 Dual Control and rear linkage Dyna-6_1/2 . . . . .	4-196
4.1.5.165 EFD00160_30 - GPA20 and GPA40 Dual Control and rear linkage Dyna-6_2/2 . . . . .	4-197
4.1.5.166 EFD00160_31 - Dyna-6 Open Center GPA20 Dual Control and rear linkage . . . . .	4-198
4.1.5.167 EFD00160_32 - Dyna-4 Load Sensing GPA20 Dual Control and rear linkage . . . . .	4-199

4.1.5.168 EFD00160_33 - Dyna-4 Open Center GPA20 Dual Control and rear linkage . . . . .	4-200
4.1.5.169 EFD00161_13 - Front linkage . . . . .	4-201
4.1.5.170 EFD00162_11 - Dual Control linkage and trailed implements (TIC) Dyna-VT . . . . .	4-202
4.1.5.171 EFD00162_12 - Dual Control linkage and trailed implements (TIC) Dyna-6 . . . . .	4-203
4.1.5.172 EFD00169_18 - Controller power supply Dyna-VT_1/5 . . . . .	4-204
4.1.5.173 EFD00169_18 - Controller power supply Dyna-VT_2/5 . . . . .	4-205
4.1.5.174 EFD00169_18 - Controller power supply Dyna-VT_3/5 . . . . .	4-206
4.1.5.175 EFD00169_18 - Controller power supply Dyna-VT_4/5 . . . . .	4-207
4.1.5.176 EFD00169_18 - Controller power supply Dyna-VT_5/5 . . . . .	4-208
4.1.5.177 EFD00169_19 - Controller power supply Dyna-6 - Transmission . . . . .	4-209
4.1.5.178 EFD00169_19 - Controller power supply Dyna-6 - linkage . . . . .	4-210
4.1.5.179 EFD00169_19 - Controller power supply Dyna-6 - suspended front axle (TECU) . . . . .	4-211
4.1.5.180 EFD00169_19 - Controller power supply Dyna-6 - Instrument panel . . . . .	4-212
4.1.5.181 EFD00169_19 - Controller power supply Dyna-6 - Suspended cab . . . . .	4-213
4.1.5.182 EFD00169_20 - Controller power supply Dyna-4_1/4 . . . . .	4-214
4.1.5.183 EFD00169_20 - Controller power supply Dyna-4_2/4 . . . . .	4-215
4.1.5.184 EFD00169_20 - Controller power supply Dyna-4_3/4 . . . . .	4-216
4.1.5.185 EFD00169_20 - Controller power supply Dyna-4_4/4 . . . . .	4-217
4.1.5.186 EFD00170_3 - High-pressure braking . . . . .	4-218
4.1.5.187 EFD00172_6 - Front accessory connection socket_1/2 . . . . .	4-219
4.1.5.188 EFD00172_6 - Front accessory connection socket_2/2 . . . . .	4-220
4.1.5.189 EFD00173_7 - Water in fuel sensor of the Tier 4F/Stage IV SCR Technology engine . . . . .	4-221
4.1.5.190 EFD00173_8 - Water in fuel sensor of the Tier 3/Stage IIIA engine . . . . .	4-222
4.1.5.191 EFD00174_12 - air brake Dyna-VT_1/2 . . . . .	4-223
4.1.5.192 EFD00174_12 - air brake Dyna-VT_2/2 . . . . .	4-224
4.1.5.193 EFD00174_13 - Dyna-6 GPA40 air brake_1/2 . . . . .	4-225
4.1.5.194 EFD00174_13 - Dyna-6 GPA40 air brake_2/2 . . . . .	4-226
4.1.5.195 EFD00174_14 - GPA20 and GPA50 air brake Dyna-6 . . . . .	4-227
4.1.5.196 EFD00174_15 - GPA20 and GPA50 air brake Dyna-4 . . . . .	4-228
4.1.5.197 EFD00175 - Tier3/Stage IIIA AGCO Power engine_1/3 . . . . .	4-229
4.1.5.198 EFD00175 - Tier3/Stage IIIA AGCO Power engine_2/3 . . . . .	4-230
4.1.5.199 EFD00175 - Tier3/Stage IIIA AGCO Power engine_3/3 . . . . .	4-231
4.1.5.200 EFD00175 - Tier4f/Stage IV AGCO Power engine_1/3 . . . . .	4-232
4.1.5.201 EFD00175 - Tier4f/Stage IV AGCO Power engine_2/3 . . . . .	4-233
4.1.5.202 EFD00175 - Tier4f/Stage IV AGCO Power engine_3/3 . . . . .	4-234
4.1.5.203 EFD00175_9 - SCR Technology . . . . .	4-235
4.1.5.204 EFD00176 - LoaderALO . . . . .	4-236
4.1.5.205 EFD00176_14 - front set Dyna-6 . . . . .	4-237
4.1.5.206 EFD00176_15 - ALO loader Dyna-6 . . . . .	4-238
4.1.5.207 EFD00176_16 - front set Dyna-VT . . . . .	4-239
4.1.5.208 EFD00176_17 - ALO mechanical loader Dyna-4 . . . . .	4-240
4.1.5.209 EFD00178_5 - Steering SpeedSteer . . . . .	4-241
4.1.5.210 EFD00183_2 - Implement attachment without Isobus . . . . .	4-242
4.1.5.211 EFD00184_3 - AgCommand™ . . . . .	4-243
<b>5 Harnesses . . . . .</b>	<b>5-1</b>
<b>5.1 Harnesses . . . . .</b>	<b>5-7</b>
5.1.1 Identification of harnesses . . . . .	5-7
5.1.2 Identification table for cable colors . . . . .	5-10
5.1.3 Harnesses . . . . .	5-13
5.1.3.1 FAI200 - Engine harness Tier 4 Final/Stage IV - 4387304_1/4 . . . . .	5-13
5.1.3.2 FAI200 - Engine harness Tier 4 Final/Stage IV - 4387304_2/4 . . . . .	5-14
5.1.3.3 FAI200 - Engine harness Tier 4 Final/Stage IV - 4387304_3/4 . . . . .	5-15

5.1.3.4 FAI200 - Engine harness Tier 4 Final/Stage IV - 4387304_4/4 . . . . .	5-16
5.1.3.5 FAI200 - Engine harness - 4392052_1/2 . . . . .	5-17
5.1.3.6 FAI200 - Engine harness - 4392052_2/2 . . . . .	5-18
5.1.3.7 FAI200 - Engine harness Tier 4 Final/Stage IV - ACW028619_1/4 . . . . .	5-19
5.1.3.8 FAI200 - Engine harness Tier 4 Final/Stage IV - ACW028619_2/4 . . . . .	5-20
5.1.3.9 FAI200 - Engine harness Tier 4 Final/Stage IV - ACW028619_3/4 . . . . .	5-21
5.1.3.10 FAI200 - Engine harness Tier 4 Final/Stage IV - ACW028619_4/4 . . . . .	5-22
5.1.3.11 FAI200 - Engine harness Tier 3/Stage IIIA - ACW030920_1/3 . . . . .	5-23
5.1.3.12 FAI200 - Engine harness Tier 3/Stage IIIA - ACW030920_2/3 . . . . .	5-24
5.1.3.13 FAI200 - Engine harness Tier 3/Stage IIIA - ACW030920_3/3 . . . . .	5-25
5.1.3.14 FAI200 - Engine harness cab - ACW0349940_1/2 . . . . .	5-26
5.1.3.15 FAI200 - Engine harness cab - ACW0349940_2/2 . . . . .	5-27
5.1.3.16 FAI201 - Front headlights harness - 4388041_1/2 . . . . .	5-28
5.1.3.17 FAI201 - Front headlights harness - 4388041_2/2 . . . . .	5-29
5.1.3.18 FAI203 - Transmission harness Dyna-4-Dyna-6 GBA2520 - 4390259-1/3	5-30
5.1.3.19 FAI203 - Transmission harness Dyna-4-Dyna-6 GBA2520 - 4390259-2/3	5-31
5.1.3.20 FAI203 - Transmission harness Dyna-4-Dyna-6 GBA2520 - 4390259-3/3	5-32
5.1.3.21 FAI203 - Transmission harness Dyna-6 GTA1540 - ACW016911_1/3 . . .	5-33
5.1.3.22 FAI203 - Transmission harness Dyna-6 GTA1540 - ACW016911_2/3 . . .	5-34
5.1.3.23 FAI203 - Transmission harness Dyna-6 GTA1540 - ACW016911_3/3 . . .	5-35
5.1.3.24 FAI203 - Transmission harness Dyna-VT - ACW016910_1/3 . . . . .	5-36
5.1.3.25 FAI203 - Transmission harness Dyna-VT - ACW016910_2/3 . . . . .	5-37
5.1.3.26 FAI203 - Transmission harness Dyna-VT - ACW016910_3/3 . . . . .	5-38
5.1.3.27 FAI205 - Electrohydraulic valves harness - 4292090 . . . . .	5-39
5.1.3.28 FAI205 - Electrohydraulic valves harness - 4292091 . . . . .	5-40
5.1.3.29 FAI205 - Electrohydraulic valves harness - 4292093 . . . . .	5-41
5.1.3.30 FAI205 - Electrohydraulic valves harness - 4387694 . . . . .	5-42
5.1.3.31 FAI208 - Linkage with Dual Control and TIC harness - 4387797_1/2 . . .	5-43
5.1.3.32 FAI208 - Linkage with Dual Control and TIC harness - 4387797_2/2 . . .	5-44
5.1.3.33 FAI210 - Cab transmission harness Dyna-VT short console - 4390243_1/9 . . . . .	5-45
5.1.3.34 FAI210 - Cab transmission harness Dyna-VT short console - 4390243_2/9 . . . . .	5-46
5.1.3.35 FAI210 - Cab transmission harness Dyna-VT short console - 4390243_3/9 . . . . .	5-47
5.1.3.36 FAI210 - Cab transmission harness Dyna-VT short console - 4390243_4/9 . . . . .	5-48
5.1.3.37 FAI210 - Cab transmission harness Dyna-VT short console - 4390243_5/9 . . . . .	5-49
5.1.3.38 FAI210 - Cab transmission harness Dyna-VT short console - 4390243_6/9 . . . . .	5-50
5.1.3.39 FAI210 - Cab transmission harness Dyna-VT short console - 4390243_7/9 . . . . .	5-51
5.1.3.40 FAI210 - Cab transmission harness Dyna-VT short console - 4390243_8/9 . . . . .	5-52
5.1.3.41 FAI210 - Cab transmission harness Dyna-VT short console - 4390243_9/9 . . . . .	5-53
5.1.3.42 FAI210 - Cab transmission harness Dyna-VT short console - ACW039162_1/9 . . . . .	5-54
5.1.3.43 FAI210 - Cab transmission harness Dyna-VT short console - ACW039162_2/9 . . . . .	5-55
5.1.3.44 FAI210 - Cab transmission harness Dyna-VT short console - ACW039162_3/9 . . . . .	5-56
5.1.3.45 FAI210 - Cab transmission harness Dyna-VT short console - ACW039162_4/9 . . . . .	5-57
5.1.3.46 FAI210 - Cab transmission harness Dyna-VT short console - ACW039162_5/9 . . . . .	5-58

5.1.3.47 FAI210 - Cab transmission harness Dyna-VT short console - ACW039162_6/9 . . . . .	5-59
5.1.3.48 FAI210 - Cab transmission harness Dyna-VT short console - ACW039162_7/9 . . . . .	5-60
5.1.3.49 FAI210 - Cab transmission harness Dyna-VT short console - ACW039162_8/9 . . . . .	5-61
5.1.3.50 FAI210 - Cab transmission harness Dyna-VT short console - ACW039162_9/9 . . . . .	5-62
5.1.3.51 FAI210 - Cab transmission harness Dyna-6 short console - ACW005780_1/8 . . . . .	5-63
5.1.3.52 FAI210 - Cab transmission harness Dyna-6 short console - ACW005780_2/8 . . . . .	5-64
5.1.3.53 FAI210 - Cab transmission harness Dyna-6 short console - ACW005780_3/8 . . . . .	5-65
5.1.3.54 FAI210 - Cab transmission harness Dyna-6 short console - ACW005780_4/8 . . . . .	5-66
5.1.3.55 FAI210 - Cab transmission harness Dyna-6 short console - ACW005780_5/8 . . . . .	5-67
5.1.3.56 FAI210 - Cab transmission harness Dyna-6 short console - ACW005780_6/8 . . . . .	5-68
5.1.3.57 FAI210 - Cab transmission harness Dyna-6 short console - ACW005780_7/8 . . . . .	5-69
5.1.3.58 FAI210 - Cab transmission harness Dyna-6 short console - ACW005780_8/8 . . . . .	5-70
5.1.3.59 FAI210 - Cab transmission harness Dyna-6 short console - ACW039167_1/9 . . . . .	5-71
5.1.3.60 FAI210 - Cab transmission harness Dyna-6 short console - ACW039167_2/9 . . . . .	5-72
5.1.3.61 FAI210 - Cab transmission harness Dyna-6 short console - ACW039167_3/9 . . . . .	5-73
5.1.3.62 FAI210 - Cab transmission harness Dyna-6 short console - ACW039167_4/9 . . . . .	5-74
5.1.3.63 FAI210 - Cab transmission harness Dyna-6 short console - ACW039167_5/9 . . . . .	5-75
5.1.3.64 FAI210 - Cab transmission harness Dyna-6 short console - ACW039167_6/9 . . . . .	5-76
5.1.3.65 FAI210 - Cab transmission harness Dyna-6 short console - ACW039167_7/9 . . . . .	5-77
5.1.3.66 FAI210 - Cab transmission harness Dyna-6 short console - ACW039167_8/9 . . . . .	5-78
5.1.3.67 FAI210 - Cab transmission harness Dyna-6 short console - ACW039167_9/9 . . . . .	5-79
5.1.3.68 FAI210 - Cab transmission harness Dyna-4 long console - ACW017847_1/7 . . . . .	5-80
5.1.3.69 FAI210 - Cab transmission harness Dyna-4 long console - ACW017847_2/7 . . . . .	5-81
5.1.3.70 FAI210 - Cab transmission harness Dyna-4 long console - ACW017847_3/7 . . . . .	5-82
5.1.3.71 FAI210 - Cab transmission harness Dyna-4 long console - ACW017847_4/7 . . . . .	5-83
5.1.3.72 FAI210 - Cab transmission harness Dyna-4 long console - ACW017847_5/7 . . . . .	5-84
5.1.3.73 FAI210 - Cab transmission harness Dyna-4 long console - ACW017847_6/7 . . . . .	5-85
5.1.3.74 FAI210 - Cab transmission harness Dyna-4 long console - ACW017847_7/7 . . . . .	5-86
5.1.3.75 FAI210 - Cab transmission harness Dyna-4 municipal - 4391826_1/8 . . . . .	5-87
5.1.3.76 FAI210 - Cab transmission harness Dyna-4 municipal - 4391826_2/8 . . . . .	5-88

5.1.3.77	FAI210 - Cab transmission harness Dyna-4 municipal - 4391826_3/8 . . .	5-89
5.1.3.78	FAI210 - Cab transmission harness Dyna-4 municipal - 4391826_4/8 . . .	5-90
5.1.3.79	FAI210 - Cab transmission harness Dyna-4 municipal - 4391826_5/8 . . .	5-91
5.1.3.80	FAI210 - Cab transmission harness Dyna-4 municipal - 4391826_6/8 . . .	5-92
5.1.3.81	FAI210 - Cab transmission harness Dyna-4 municipal - 4391826_7/8 . . .	5-93
5.1.3.82	FAI210 - Cab transmission harness Dyna-4 municipal - 4391826_8/8 . . .	5-94
5.1.3.83	FAI210 - Cab transmission harness Dyna-6 municipal - 4392642_1/9 . . .	5-95
5.1.3.84	FAI210 - Cab transmission harness Dyna-6 municipal - 4392642_2/9 . . .	5-96
5.1.3.85	FAI210 - Cab transmission harness Dyna-6 municipal - 4392642_3/9 . . .	5-97
5.1.3.86	FAI210 - Cab transmission harness Dyna-6 municipal - 4392642_4/9 . . .	5-98
5.1.3.87	FAI210 - Cab transmission harness Dyna-6 municipal - 4392642_5/9 . . .	5-99
5.1.3.88	FAI210 - Cab transmission harness Dyna-6 municipal - 4392642_6/9 . . .	5-100
5.1.3.89	FAI210 - Cab transmission harness Dyna-6 municipal - 4392642_7/9 . . .	5-101
5.1.3.90	FAI210 - Cab transmission harness Dyna-6 municipal - 4392642_8/9 . . .	5-102
5.1.3.91	FAI210 - Cab transmission harness Dyna-6 municipal - 4392642_9/9 . . .	5-103
5.1.3.92	FAI210 - Cab transmission harness Dyna-6 long console - ACW005784_1/8 . . .	5-104
5.1.3.93	FAI210 - Cab transmission harness Dyna-6 long console - ACW005784_2/8 . . .	5-105
5.1.3.94	FAI210 - Cab transmission harness Dyna-6 long console - ACW005784_3/8 . . .	5-106
5.1.3.95	FAI210 - Cab transmission harness Dyna-6 long console - ACW005784_4/8 . . .	5-107
5.1.3.96	FAI210 - Cab transmission harness Dyna-6 long console - ACW005784_5/8 . . .	5-108
5.1.3.97	FAI210 - Cab transmission harness Dyna-6 long console - ACW005784_6/8 . . .	5-109
5.1.3.98	FAI210 - Cab transmission harness Dyna-6 long console - ACW005784_7/8 . . .	5-110
5.1.3.99	FAI210 - Cab transmission harness Dyna-6 long console - ACW005784_8/8 . . .	5-111
5.1.3.100	FAI212 - Lighting harness Municipal cab - 4380685_1/3 . . .	5-112
5.1.3.101	FAI212 - Lighting harness Municipal cab - 4380685_2/3 . . .	5-113
5.1.3.102	FAI212 - Lighting harness Municipal cab - 4380685_3/3 . . .	5-114
5.1.3.103	FAI212 - Lighting harness EAME - 4389032_1/3 . . .	5-115
5.1.3.104	FAI212 - Lighting harness EAME - 4389032_2/3 . . .	5-116
5.1.3.105	FAI212 - Lighting harness EAME - 4389032_3/3 . . .	5-117
5.1.3.106	FAI212 - Lighting harness EAME - ACW039170_1/3 . . .	5-118
5.1.3.107	FAI212 - Lighting harness EAME - ACW039170_2/3 . . .	5-119
5.1.3.108	FAI212 - Lighting harness EAME - ACW039170_3/3 . . .	5-120
5.1.3.109	FAI212 - Lighting harness NA - 4389034_1/3 . . .	5-121
5.1.3.110	FAI212 - Lighting harness NA - 4389034_2/3 . . .	5-122
5.1.3.111	FAI212 - Lighting harness NA - 4389034_3/3 . . .	5-123
5.1.3.112	FAI212 - Lighting harness NA - ACW039182_1/3 . . .	5-124
5.1.3.113	FAI212 - Lighting harness NA - ACW039182_2/3 . . .	5-125
5.1.3.114	FAI212 - Lighting harness NA - ACW039182_3/3 . . .	5-126
5.1.3.115	FAI219 - Cab interior power socket harness - 4290574_1/2 . . .	5-127
5.1.3.116	FAI219 - Cab interior power socket harness - 4290574_2/2 . . .	5-128
5.1.3.117	FAI219 - Cab interior power socket harness - 4290575_1/2 . . .	5-129
5.1.3.118	FAI219 - Cab interior power socket harness - 4290575_2/2 . . .	5-130
5.1.3.119	FAI223 - Roof harness - 4353057_1/3 . . .	5-131
5.1.3.120	FAI223 - Roof harness - 4353057_2/3 . . .	5-132
5.1.3.121	FAI223 - Roof harness - 4353057_3/3 . . .	5-133
5.1.3.122	FAI223 - Roof harness_High visibility - 4375395_1/3 . . .	5-134
5.1.3.123	FAI223 - Roof harness_High visibility_4375395_2/3 . . .	5-135
5.1.3.124	FAI223 - Roof harness_High visibility_4375395_3/3 . . .	5-136
5.1.3.125	FAI223 - Roof harness_High-visibility_municipal_cab_4381001_1/3 . . .	5-137
5.1.3.126	FAI223 - Roof harness_High-visibility_municipal_cab_4381001_2/3 . . .	5-138

5.1.3.127	FAI223 - Roof harness_High-visibility_municipal_cab_4381001_3/3 . . .	5-139
5.1.3.128	FAI223 - Roof harness_standard_municipal_cab_ACW001936_1/3 . . .	5-140
5.1.3.129	FAI223 - Roof harness_standard_municipal_cab_ACW001936_2/3 . . .	5-141
5.1.3.130	FAI223 - Roof harness_standard_municipal_cab_ACW001936_3/3 . . .	5-142
5.1.3.131	FAI224 - Hand rail lighting harness - 4390262_1/2 . . . . .	5-143
5.1.3.132	FAI224 - Hand rail lighting harness - 4390262_2/2 . . . . .	5-144
5.1.3.133	FAI225 - Electric rear-view mirror harness 4352622_1/2 . . . . .	5-145
5.1.3.134	FAI225 - Electric rear-view mirror harness 4352622_2/2 . . . . .	5-146
5.1.3.135	FAI227 - Automatic air conditioning harness - roof - 4352621_1/3 . . .	5-147
5.1.3.136	FAI227 - Automatic air conditioning harness - roof - 4352621_2/3 . . .	5-148
5.1.3.137	FAI227 - Automatic air conditioning harness - roof - 4352621_3/3 . . .	5-149
5.1.3.138	FAI228 - Number plate lighting harness - 4353107_1/2 . . . . .	5-150
5.1.3.139	FAI228 - Number plate lighting harness - 4353107_2/2 . . . . .	5-151
5.1.3.140	FAI228 - Number plate lighting harness - 4357222_1/2 . . . . .	5-152
5.1.3.141	FAI228 - Number plate lighting harness - 4357222_2/2 . . . . .	5-153
5.1.3.142	FAI231 - Transmission harness - ParkLock Dyna-6 - 4353255_1/2 . . .	5-154
5.1.3.143	FAI231 - Transmission harness - ParkLock Dyna-6 - 4353255_2/2 . . .	5-155
5.1.3.144	FAI231 - Transmission harness - ParkLock Dyna-VT - 4390010_1/2 . .	5-156
5.1.3.145	FAI231 - Transmission harness - ParkLock Dyna-VT - 4390010_2/2 . .	5-157
5.1.3.146	FAI245 - Left-hand linkage external controls harness - 4348463_1/2 . .	5-158
5.1.3.147	FAI245 - Left-hand linkage external controls harness - 4348463_2/2 . .	5-159
5.1.3.148	FAI253 - Hand rail harness - 4390260_1/2 . . . . .	5-160
5.1.3.149	FAI253 - Hand rail harness - 4390260_2/2 . . . . .	5-161
5.1.3.150	FAI260 - Cooling unit harness - 4350584_1/2 . . . . .	5-162
5.1.3.151	FAI260 - Cooling unit harness - 4350584_2/2 . . . . .	5-163
5.1.3.152	FAI261 - Isobus harness - 4353130_1/2 . . . . .	5-164
5.1.3.153	FAI261 - Isobus harness - 4353130_2/2 . . . . .	5-165
5.1.3.154	FAI262 - Auto-Guide™ engine harness - 4296810_1/2 . . . . .	5-166
5.1.3.155	FAI262 - Auto-Guide™ engine harness - 4296810_2/2 . . . . .	5-167
5.1.3.156	FAI263 - Auto-Guide™ cab adapter harness - 4353936_1/2 . . . . .	5-168
5.1.3.157	FAI263 - Auto-Guide™ cab adapter harness - 4353936_2/2 . . . . .	5-169
5.1.3.158	FAI265 - Pneumatic braking harness Dyna-6 - ACW016913_1/2 . . .	5-170
5.1.3.159	FAI265 - Pneumatic braking harness Dyna-6 - ACW016913_2/2 . . .	5-171
5.1.3.160	FAI265 - Pneumatic braking harness Dyna-VT - ACW016912_1/2 . . .	5-172
5.1.3.161	FAI265 - Pneumatic braking harness Dyna-VT - ACW016912_2/2 . . .	5-173
5.1.3.162	FAI265 - Pneumatic braking harness Dyna-6- ACW034317_1/2 . . .	5-174
5.1.3.163	FAI265 - Pneumatic braking harness Dyna-6- ACW034317_2/2 . . .	5-175
5.1.3.164	FAI268 - Front function harness EAME - 4387691_1/3 . . . . .	5-176
5.1.3.165	FAI268 - Front function harness EAME - 4387691_2/3 . . . . .	5-177
5.1.3.166	FAI268 - Front function harness EAME - 4387691_3/3 . . . . .	5-178
5.1.3.167	FAI268 - Front function harness - 4387692_1/2 . . . . .	5-179
5.1.3.168	FAI268 - Front function harness - 4387692_2/2 . . . . .	5-180
5.1.3.169	FAI268 - Front function harness - 4387693_1/2 . . . . .	5-181
5.1.3.170	FAI268 - Front function harness - 4387693_2/2 . . . . .	5-182
5.1.3.171	FAI268 - Front function harness - ACW104554_1/2 . . . . .	5-183
5.1.3.172	FAI268 - Front function harness - ACW104554_2/2 . . . . .	5-184
5.1.3.173	FAI268 - Front function harness - ACW104555_1/2 . . . . .	5-185
5.1.3.174	FAI268 - Front function harness - ACW104555_2/2 . . . . .	5-186
5.1.3.175	FAI272 - Suspended cab harness Dyna-6 - ACW039185_1/2 . . . .	5-187
5.1.3.176	FAI272 - Suspended cab harness Dyna-6 - ACW039185_2/2 . . . .	5-188
5.1.3.177	FAI272 - Suspended cab harness Dyna-VT - ACW060395_1/2 . . . .	5-189
5.1.3.178	FAI272 - Suspended cab harness Dyna-VT - ACW060395_2/2 . . . .	5-190
5.1.3.179	FAI279 - Adapter harness - 4376780_1/2 . . . . .	5-191
5.1.3.180	FAI279 - Adapter harness - 4376780_2/2 . . . . .	5-192
5.1.3.181	FAI283 - TopDock harness - 4377536_1/2 . . . . .	5-193
5.1.3.182	FAI283 - TopDock harness - 4377536_2/2 . . . . .	5-194
5.1.3.183	FAI287 - ALO loader harness - 4378879_1/2 . . . . .	5-195
5.1.3.184	FAI287 - ALO loader harness - 4378879_2/2 . . . . .	5-196

5.1.3.185	FAI289 - Virtual terminal harness - 4353638_1/2 . . . . .	5-197
5.1.3.186	FAI289 - Virtual terminal harness - 4353638_2/2 . . . . .	5-198
5.1.3.187	FAI290 - Non-Isobus implement connector harness - 4296266_1/2 . .	5-199
5.1.3.188	FAI290 - Non-Isobus implement connector harness - 4296266_2/2 . .	5-200
5.1.3.189	FAI290 - Non-Isobus implement connector harness- 1/2 . . . . .	5-201
5.1.3.190	FAI290 - Non-Isobus implement connector harness- 2/2 . . . . .	5-202
5.1.3.191	FAI292 - NA indicator harness - 4355519_1/2 . . . . .	5-203
5.1.3.192	FAI292 - NA indicator harness - 4355519_2/2 . . . . .	5-204
5.1.3.193	FAI292 - NA indicator harness - 4350987 . . . . .	5-205
5.1.3.194	FAI293 - EAME indicator harness - 4355520_1/2 . . . . .	5-206
5.1.3.195	FAI293 - EAME indicator harness - 4355520_2/2 . . . . .	5-207
5.1.3.196	FAI293 - EAME indicator harness - 4350988 . . . . .	5-208
5.1.3.197	FAI294 - Additional heater harness - 4299327_1/2 . . . . .	5-209
5.1.3.198	FAI294 - Additional heater harness - 4299327_2/2 . . . . .	5-210
5.1.3.199	FAI299 - Battery isolator harness - 4387426_1/2 . . . . .	5-211
5.1.3.200	FAI299 - Battery isolator harness - 4387426_2/2 . . . . .	5-212
5.1.3.201	FAI299 - Battery isolator harness - ACW028832_1/2 . . . . .	5-213
5.1.3.202	FAI299 - Battery isolator harness - ACW028832_2/2 . . . . .	5-214
5.1.3.203	FAI300 - Air conditioning shunt harness - 4353106 . . . . .	5-215
5.1.3.204	FAI306 - Topcon harness - 4376705_1/2 . . . . .	5-216
5.1.3.205	FAI306 - Topcon harness - 4376705_2/2 . . . . .	5-217
5.1.3.206	FAI307 - Datatronic 4 harness - 4390934_1/2 . . . . .	5-218
5.1.3.207	FAI307 - Datatronic 4 harness - 4390934_2/2 . . . . .	5-219
5.1.3.208	FAI310 - Battery/battery isolator negative cable harness - 4389477 . .	5-220
5.1.3.209	FAI311 - Battery/starter positive cable harness - ACW024867 . . . . .	5-221
5.1.3.210	FAI312 - Cab/starter negative cable harness - ACW024869 . . . . .	5-222
5.1.3.211	FAI313 - Cab/battery isolator negative cable harness - 4389475 . . . . .	5-223
5.1.3.212	FAI314 - Alternator harness - 4388664_1/2 . . . . .	5-224
5.1.3.213	FAI314 - Alternator harness - 4388664_2/2 . . . . .	5-225
5.1.3.214	FAI314 - Alternator harness- 4390365_1/2 . . . . .	5-226
5.1.3.215	FAI314 - Alternator harness- 4390365_2/2 . . . . .	5-227
5.1.3.216	FAI314 - Alternator harness- 4390055_1/2 . . . . .	5-228
5.1.3.217	FAI314 - Alternator harness- 4390055_2/2 . . . . .	5-229
5.1.3.218	FAI314 - Alternator harness (right-hand) - ACW031995_1/2 . . . . .	5-230
5.1.3.219	FAI314 - Alternator harness (right-hand) - ACW031995_2/2 . . . . .	5-231
5.1.3.220	FAI317 - Vistronic harness - 4392053_1/2 . . . . .	5-232
5.1.3.221	FAI317 - Vistronic harness - 4392053_2/2 . . . . .	5-233
5.1.3.222	FAI321 - GSPTO harness - ACW008066_1/2 . . . . .	5-234
5.1.3.223	FAI321 - GSPTO harness - ACW008066_2/2 . . . . .	5-235
5.1.3.224	FAI323 - Hydraulic safety harness Load Sensing - 4355616_1/2 . .	5-236
5.1.3.225	FAI323 - Hydraulic safety harness Load Sensing - 4355616_2/2 . .	5-237
5.1.3.226	FAI324 - Open Center hydraulic safety harness - 4355617_1/2 . .	5-238
5.1.3.227	FAI324 - Open Center hydraulic safety harness - 4355617_2/2 . .	5-239
5.1.3.228	FAI325 - Power take-off electric selector harness 2 speeds - 4388702_1/2 . . . . .	5-240
5.1.3.229	FAI325 - Power take-off electric selector harness 2 speeds - 4388702_2/2 . . . . .	5-241
5.1.3.230	FAI325 - Power take-off electric selector harness 3 speeds - 4388703_1/2 . . . . .	5-242
5.1.3.231	FAI325 - Power take-off electric selector harness 3 speeds - 4388703_2/2 . . . . .	5-243
5.1.3.232	FAI340 - Battery/fuse box positive cable harness - 4347791_1/2 . .	5-244
5.1.3.233	FAI340 - Battery/fuse box positive cable harness - 4347791_2/2 . .	5-245
5.1.3.234	FAI340 - Battery/fuse box positive cable harness - ACW029172 . .	5-246
5.1.3.235	FAI354 - External loader harness - 4374651_1/2 . . . . .	5-247
5.1.3.236	FAI354 - External loader harness - 4374651_2/2 . . . . .	5-248
5.1.3.237	FAI354 - External loader harness - 4378794_1/2 . . . . .	5-249
5.1.3.238	FAI354 - External loader harness - 4378794_2/2 . . . . .	5-250

5.1.3.239 FAI355 - Harness for the left-hand alternator and for the grid heater - 4387305_1/2 . . . . .	5-251
5.1.3.240 FAI355 - Harness for the left-hand alternator and for the grid heater - 4387305_2/2 . . . . .	5-252
5.1.3.241 FAI355 - Harness for the left-hand alternator and for the grid heater - ACW031997_1/2 . . . . .	5-253
5.1.3.242 FAI355 - Harness for the left-hand alternator and for the grid heater - ACW031997_2/2 . . . . .	5-254
5.1.3.243 FAI355 - Harness for the left-hand alternator and for the grid heater - ACW031999 . . . . .	5-255
5.1.3.244 FAI360 - TopDock harness - 4377537-1/2 . . . . .	5-256
5.1.3.245 FAI360 - TopDock harness - 4377537-2/2 . . . . .	5-257
5.1.3.246 FAI361 - Adapter harness for wheel angle sensor - 4392928 . . . . .	5-258
5.1.3.247 FAI364 - Adapter harness for suspended front axle position sensor - 4391131-1/2 . . . . .	5-259
5.1.3.248 FAI364 - Adapter harness for suspended front axle position sensor - 4391131-2/2 . . . . .	5-260

## **6 Hydraulics diagrams . . . . .** 6-1

### **6.1 Hydraulics diagrams . . . . .** 6-3

6.1.1 Hydraulics diagrams . . . . .	6-5
6.1.1.1 HFD01021 – Auxiliary hydraulics diagram with all options -ML140 . . . . .	6-5
6.1.1.2 HFD01021 – Auxiliary hydraulics diagram with all options - ML180 . . . . .	6-6
6.1.1.3 HFD01022 - Standard auxiliary hydraulics diagram ML180/ML140 . . . . .	6-7
6.1.1.4 HFD01027 - Auxiliary hydraulics diagram with all options, GTA1540 . . . . .	6-8
6.1.1.5 HFD01028 - Standard auxiliary hydraulics diagram, GTA1540 . . . . .	6-9
6.1.1.6 HFD01031 - Hydraulics diagram with all options, GTA2520 Open Center 57 L/min . . . . .	6-10
6.1.1.7 HFD01032 - Standard hydraulics diagram, GTA2520 Open Center 57 L/min . . . . .	6-11
6.1.1.8 HFD01033 - Hydraulics diagram with all options, GTA2520 Open Center 100 L/min . . . . .	6-12
6.1.1.9 HFD01034 - Standard hydraulics diagram, GTA2520 Open Center 100 L/min . . . . .	6-13
6.1.1.10 HFD01046 - Hydraulics diagram with all options, GTA2520 Load Sensing . . . . .	6-14
6.1.1.11 HFD01047 - Standard hydraulics diagram, GTA2520 Load Sensing . . . . .	6-15
6.1.1.12 HFD02009 - ML180/ML140 Auto-Guide™/SpeedSteer steering system hydraulics diagram . . . . .	6-16
6.1.1.13 HFD02010 – ML140/ML180 standard steering system hydraulics diagram . . . . .	6-17
6.1.1.14 HFD03039 - Hydraulics diagram: ML180 brake system with trailer brake and ParkLock . . . . .	6-18
6.1.1.15 HFD03040 - Hydraulics diagram: ML180/ML140 brake system with trailer air brake . . . . .	6-19
6.1.1.16 HFD03041 - Hydraulics diagram: ML180/ML140 brake system without trailer brake . . . . .	6-20
6.1.1.17 HFD03042 - Hydraulics diagram: GTA1540 high-pressure braking with Auto-Guide™ steering and pneumatic trailer brake . . . . .	6-21
6.1.1.18 HFD03043 - Hydraulics diagram: GTA1540 high pressure braking with trailer brake . . . . .	6-22
6.1.1.19 HFD03044 - Hydraulics diagram: GTA1540 assisted braking with Auto-Guide™ steering and pneumatic trailer brake . . . . .	6-23
6.1.1.20 HFD03045 - Hydraulics diagram: GTA1540 assisted braking with trailer brake . . . . .	6-24
6.1.1.21 HFD03046 - GTA1540 high-pressure braking with Auto-Guide™ steering hydraulics diagram . . . . .	6-25
6.1.1.22 HFD03047 - Hydraulics diagram: GTA1540 high pressure braking . . . . .	6-26

6.1.1.23 HFD03048 - Hydraulics diagram: GTA1540 assisted braking with Auto-Guide™ . . . . .	6-27
6.1.1.24 HFD03049 - Hydraulics diagram: GTA1540 assisted braking . . . . .	6-28
6.1.1.25 HFD03050 - Hydraulics diagram: GTA1540 ParkLock . . . . .	6-29
6.1.1.26 HFD03051 - Hydraulics diagram: GTA2520 Open Center 57 L/min assisted braking with front axle suspension and trailer brake . . . . .	6-30
6.1.1.27 HFD03052 - Hydraulics diagram: GTA2520 Open Center 57 L/min assisted braking . . . . .	6-31
6.1.1.28 HFD03053 - Hydraulics diagram: GTA2520 Open Center 57 L/min high pressure braking with trailer brake and front axle suspension . . . . .	6-32
6.1.1.29 HFD03054 - Hydraulics diagram: GTA2520 Open Center 57 L/min high pressure braking with front axle suspension . . . . .	6-33
6.1.1.30 HFD03055 - Hydraulics diagram: GTA2520 Open Center 100 L/min assisted braking with trailer brake and front axle suspension . . . . .	6-34
6.1.1.31 HFD03056 - Hydraulics diagram: GTA2520 Open Center 100 L/min assisted braking . . . . .	6-35
6.1.1.32 HFD03057 - Hydraulics diagram: GTA2520 Open Center 100 L/min high pressure braking with trailer brake and front axle suspension . . . . .	6-36
6.1.1.33 HFD03058 - Hydraulics diagram: GTA2520 Open Center 100 L/min high pressure braking with front axle suspension . . . . .	6-37
6.1.1.34 HFD03059 - Hydraulics diagram: GTA2520 Load Sensing high-pressure braking with pneumatic trailer brake and Auto-Guide™ steering . . . . .	6-38
6.1.1.35 HFD03060 - Hydraulics diagram: GTA2520 Load Sensing high pressure braking with trailer air brake . . . . .	6-39
6.1.1.36 HFD03061 - Hydraulics diagram: GTA2520 Load Sensing assisted braking with pneumatic trailer brake and Auto-Guide™ steering . . . . .	6-40
6.1.1.37 HFD03062 - Hydraulics diagram: GTA2520 Load Sensing assisted braking with trailer air brake . . . . .	6-41
6.1.1.38 HFD03063 - Hydraulics diagram: GTA2520 Load Sensing high-pressure braking and Auto-Guide™ steering . . . . .	6-42
6.1.1.39 HFD03064 - Hydraulics diagram: GTA2520 Load Sensing high pressure braking . . . . .	6-43
6.1.1.40 HFD03065 - Hydraulics diagram: GTA2520 Load Sensing assisted braking and Auto-Guide™ steering . . . . .	6-44
6.1.1.41 HFD03066 - Hydraulics diagram: GTA2520 Load Sensing assisted braking . . . . .	6-45
6.1.1.42 HFD04004 – ML140/ML180 rear linkage hydraulics diagram . . . . .	6-46
6.1.1.43 HFD04006 – GTA1540 rear linkage hydraulics diagram . . . . .	6-47
6.1.1.44 HFD05004 – ML140/ML180 front linkage hydraulics diagram . . . . .	6-48
6.1.1.45 HFD05006 - Hydraulics diagram: GTA1540 front linkage with spool valves . . . . .	6-49
6.1.1.46 HFD05007 – GTA1540 front linkage hydraulics diagram . . . . .	6-50
6.1.1.47 HFD05008 - Hydraulics diagram: GTA2520 Load Sensing front linkage and front spool valves with front set . . . . .	6-51
6.1.1.48 HFD05009 - Hydraulics diagram: GTA2520 Load Sensing front linkage without front set . . . . .	6-52
6.1.1.49 HFD06006 - Hydraulics diagram: ML180/ML140 auxiliary electrohydraulic spool valves . . . . .	6-53
6.1.1.50 HFD06008 - Hydraulics diagram: GTA1540 auxiliary mechanical spool valves . . . . .	6-54
6.1.1.51 HFD06009 - Hydraulics diagram: ML180/ML140 auxiliary electrohydraulic and mechanical spool valves . . . . .	6-55
6.1.1.52 HFD06010 - Hydraulics diagram: GTA1540 auxiliary electrohydraulic and mechanical spool valves . . . . .	6-56
6.1.1.53 HFD06011 - GTA1540 auxiliary electrohydraulic spool valves . . . . .	6-57
6.1.1.54 HFD06012 - Hydraulics diagram: GTA2520 Load Sensing rear spool valves, four mechanical and Power Beyond . . . . .	6-58

6.1.1.55 HFD06013 - Hydraulics diagram: GTA2520 Load Sensing rear spool valves, two mechanical and two electrohydraulic . . . . .	6-59
6.1.1.56 HFD06014 - Hydraulics diagram: GTA2520 Load Sensing rear spool valves, four electrohydraulic and Power Beyond . . . . .	6-60
6.1.1.57 HFD07004 – ML140/ML180 auto-hitch hydraulics diagram . . . . .	6-61
6.1.1.58 HFD07006 – GTA1540 auto-hitch hydraulics diagram . . . . .	6-62
6.1.1.59 HFD08004 - Hydraulics diagram: ML180 suspended front axle . . . . .	6-63
6.1.1.60 HFD08006 - Hydraulics diagram: GTA1540 suspended front axle . . . . .	6-64
6.1.1.61 HFD10000_1 – ALO loader hydraulics diagram . . . . .	6-65
6.1.1.62 HFD10009 - Hydraulics diagram: ML140/ML180 tractor with loader . . . . .	6-66
6.1.1.63 HFD10013 - Hydraulics diagram: GTA1540 tractor with loader . . . . .	6-67
6.1.1.64 HFD10014 - Hydraulics diagram: GTA2520 Load Sensing loader with front set . . . . .	6-68
6.1.1.65 HFD10015 - Hydraulics diagram: GTA2520 Load Sensing loader without front set . . . . .	6-69
6.1.1.66 Transmission hydraulics diagram . . . . .	6-70
<b>7 Pneumatic diagrams . . . . .</b>	<b>7-1</b>
<b>7.1 Pneumatic diagrams . . . . .</b>	<b>7-3</b>
7.1.1 Pneumatic diagrams . . . . .	7-5
7.1.1.1 PFD01015 - GPA40/ML140/ML180 pneumatic trailer braking . . . . .	7-5
7.1.1.2 PFD01016 - GPA20 pneumatic trailer braking . . . . .	7-6
<b>8 Adjustments, bleeding and calibrations . . . . .</b>	<b>8-1</b>
<b>8.1 Bleeding . . . . .</b>	<b>8-3</b>
8.1.1 Bleeding: Dyna-VT - Assisted brake master cylinders . . . . .	8-3
8.1.1.1 Charge connector . . . . .	8-3
8.1.1.2 Pressure connector . . . . .	8-3
8.1.1.3 Bleed screw locations . . . . .	8-3
8.1.1.4 Procedure for bleeding the assisted braking system . . . . .	8-4
8.1.2 Bleeding: Dyna-4/Dyna-6 - Assisted brake master cylinders . . . . .	8-6
8.1.2.1 Charge connector . . . . .	8-6
8.1.2.2 Pressure connector - Load Sensing system . . . . .	8-6
8.1.2.3 Pressure connector - Open Center system . . . . .	8-7
8.1.2.4 Bleed screw locations . . . . .	8-7
8.1.2.5 Procedure for bleeding the assisted braking system . . . . .	8-8
8.1.3 Bleeding: Dyna-4/Dyna-6 - High-pressure braking . . . . .	8-10
8.1.3.1 Bleed screw locations . . . . .	8-10
8.1.3.2 Procedure for bleeding the high-pressure braking system . . . . .	8-12
<b>8.2 Calibrations . . . . .</b>	<b>8-14</b>
8.2.1 Calibration of the clutch pedal sensor . . . . .	8-14
8.2.2 Calibration of the throttle pedal sensor . . . . .	8-14
8.2.3 Calibrating the rear linkage . . . . .	8-15
8.2.4 Calibration of the front linkage position sensor . . . . .	8-17
8.2.5 Calibrate the suspended front axle . . . . .	8-18
8.2.6 Calibrating the automatic disengagement of the differential and 4-wheel drive . . . . .	8-19
8.2.7 Calibration of the forward-travel lever . . . . .	8-21
8.2.8 Forward speed calibration . . . . .	8-23
8.2.9 Front power take-off calibration for Dyna-4/Dyna-6 . . . . .	8-24
8.2.10 Calibration of the Dyna-4 and Dyna-6 PowerShuttle transmission . . . . .	8-25
8.2.11 Calibrating the power sensor on the Dyna-6 transmission . . . . .	8-28
8.2.12 Dyna-VT transmission calibrations: Introduction and access to calibration using the instrument panel . . . . .	8-29
8.2.13 Calibration of the high/low speed ranges (Hare/Tortoise) for Dyna-VT . . . . .	8-30
8.2.14 Dyna-VT transmission calibration . . . . .	8-31
8.2.15 Calibration of the Dyna-VT coupler function . . . . .	8-32
8.2.16 Rear power take-off calibration for Dyna-VT . . . . .	8-33

8.2.17 Front power take-off calibration for Dyna-VT . . . . .	8-34
8.2.18 Dyna-VT transmission calibration error code . . . . .	8-35
8.2.19 Calibrations to be carried out using the diagnostic tool . . . . .	8-38
8.2.19.1 Calibrating the forward travel lever on the armrest . . . . .	8-38
8.2.19.2 Calibration of the FingerTIP controls on the armrest . . . . .	8-40
8.2.19.3 Calibration of the FingerTIPs on the console . . . . .	8-43
8.2.19.4 Joystick calibration . . . . .	8-47
8.2.19.5 Calibrating the forward travel lever on the armrest . . . . .	8-49
8.2.19.6 Calibrating the hand throttle. . . . .	8-52
8.2.19.7 Calibrating the depth control thumb wheel . . . . .	8-54

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**