


**Workshop Service Manual**

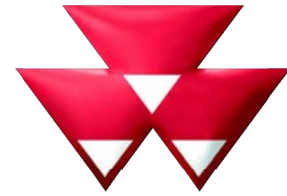

**MASSEY FERGUSON**

# **MF 5700 SL series tractors**



**Beauvais**  
**AGCO S.A.S. - 41 avenue Blaise Pascal - 60000**  
**Beauvais - France - RC B562 104 539**  
**© AGCO 2016**

**January 2016**  
**ACT0021460**  
**English**

# MF 5700 SL series tractors

<b>1 Introduction</b>	<b>1-1</b>
<b>1.1 MF 5700 SL - General</b>	<b>1-3</b>
1.1.1 Using the manual	1-3
1.1.2 General specifications	1-3
1.1.2.1 MF 5700 SL models	1-3
1.1.3 Forward speeds	1-12
1.1.3.1 Forward speed at 2200 rpm for models MF 5710 SL, MF 5711 SL, MF 5712 SL, MF 5713 SL and 16.9R34 tires	1-12
1.1.3.2 Forward speed at 2200 rpm for models MF 5710 SL, MF 5711 SL, MF 5712 SL, MF 5713 SL and 18.4R38 tires	1-13
1.1.4 Dimensions and weights	1-15
1.1.4.1 Dimensions and weights	1-15
1.1.5 Attachment points	1-18
1.1.5.1 Attachment points	1-18
1.1.6 Capacities	1-20
1.1.6.1 Capacities	1-20
1.1.7 Tightening torques, retaining compounds and sealing products	1-20
1.1.7.1 Retaining compounds and sealing products	1-20
1.1.7.2 Tightening torques for screws and nuts	1-21
1.1.7.3 Tightening torques for hydraulic unions	1-25
1.1.8 Units of measurement	1-28
1.1.8.1 Conversion table	1-28
<b>1.2 MF 5700 SL - Adjustments, bleeding and calibrations</b>	<b>1-31</b>
1.2.1 Bleeding	1-31
1.2.1.1 Bleeding the main brake system	1-31
1.2.1.2 Bleeding the trailer brake system	1-33
1.2.2 Calibrations	1-33
1.2.2.1 Calibration of the clutch pedal sensor	1-33
1.2.2.2 Calibration of the throttle pedal sensor	1-34
1.2.2.3 Calibrating the rear linkage	1-35
1.2.2.4 Calibrate the suspended front axle.	1-36
1.2.2.5 Calibrating the automatic disengagement of the differential and 4-wheel drive	1-37
1.2.2.6 Calibration of the forward-travel lever	1-40
1.2.2.7 Forward speed calibration	1-42
1.2.2.8 Calibration of the Dyna-4 and Dyna-6 PowerShuttle transmission	1-43
1.2.2.9 Calibration of electrohydraulic block	1-46
1.2.2.10 Calibrations to be carried out using the diagnostic tool	1-47
<b>2 Separation of assemblies</b>	<b>2-1</b>
<b>2.1 Front linkage</b>	<b>2-3</b>
2.1.1 Removing and refitting the front linkage	2-3
<b>2.2 Front axle</b>	<b>2-7</b>
2.2.1 Removing/refitting the fixed front axle	2-7
2.2.2 Removing and refitting the front axle and front suspension assembly	2-10
2.2.2.1 Preliminary steps	2-11
2.2.2.2 Removal	2-11
2.2.2.3 Refitting	2-13
2.2.2.4 Final steps	2-13
<b>2.3 Cooling unit</b>	<b>2-15</b>
2.3.1 Removing - Refitting the cooling unit	2-15

2.3.1.1 Reassembly . . . . .	2-18
<b>2.4 Front frame</b> . . . . .	<b>2-19</b>
2.4.1 Removing and refitting the front frame . . . . .	2-19
2.4.1.1 Reassembly . . . . .	2-25
<b>2.5 Engine cover</b> . . . . .	<b>2-26</b>
2.5.1 Removing/refitting the engine cover . . . . .	2-26
2.5.1.1 Refitting . . . . .	2-28
<b>2.6 Engine</b> . . . . .	<b>2-29</b>
2.6.1 Removal . . . . .	2-29
2.6.2 Refitting . . . . .	2-34
<b>2.7 Gearbox</b> . . . . .	<b>2-35</b>
2.7.1 Removing/refitting the gearbox . . . . .	2-35
2.7.1.1 Refitting the gearbox . . . . .	2-39
<b>2.8 Cab</b> . . . . .	<b>2-40</b>
2.8.1 Removing and refitting the cab (4-cylinder engine) . . . . .	2-40
2.8.1.1 Removal . . . . .	2-40
2.8.1.2 Refitting . . . . .	2-45
<b>2.9 Rear axle</b> . . . . .	<b>2-46</b>
2.9.1 Removing the rear axle . . . . .	2-46
2.9.1.1 Reassembly . . . . .	2-52
<b>2.10 Rear power take-off (PTO)</b> . . . . .	<b>2-53</b>
2.10.1 Removing/refitting the GPA50 rear power take-off . . . . .	2-53
2.10.1.1 Reassembly . . . . .	2-56
<b>3 Engine</b> . . . . .	<b>3-1</b>
<b>3.1 Tier 4F/Stage IV SCR Technology engine 4 cylinders</b> . . . . .	<b>3-3</b>
3.1.1 General . . . . .	3-3
3.1.1.1 Notice to the technician . . . . .	3-3
3.1.1.2 Safety instructions . . . . .	3-3
3.1.1.3 Description of engine types . . . . .	3-4
3.1.1.4 Location of the engine serial number . . . . .	3-4
3.1.1.5 Lifting the engine . . . . .	3-5
3.1.2 Principles of operation . . . . .	3-6
3.1.2.1 General operating diagram . . . . .	3-6
3.1.2.2 Mechanical part . . . . .	3-7
3.1.2.3 Exhaust and intake system . . . . .	3-9
3.1.2.4 Cooling system . . . . .	3-11
3.1.2.5 Lubrication system . . . . .	3-12
3.1.2.6 Fuel system . . . . .	3-13
3.1.2.7 Electric control circuit . . . . .	3-14
3.1.2.8 CCV (Closed Crankcase Ventilation) system . . . . .	3-15
3.1.3 Layout of components . . . . .	3-16
3.1.3.1 Layout of components in the engine environment . . . . .	3-16
3.1.4 Tests and diagnostics . . . . .	3-17
3.1.4.1 Measuring the engine oil pressure . . . . .	3-17
3.1.5 Adjustments, bleeding and calibrations . . . . .	3-19
3.1.5.1 Adjustments . . . . .	3-19
3.1.5.2 Bleeding . . . . .	3-19
3.1.6 Disassembly/reassembly . . . . .	3-20
3.1.6.1 AGCO Power Workshop Service Manual . . . . .	3-20
3.1.7 Service tools . . . . .	3-20
3.1.7.1 General . . . . .	3-20
3.1.7.2 Cylinder block tools . . . . .	3-21
3.1.7.3 Timing gear and flywheel housing tools . . . . .	3-22
3.1.7.4 Cylinder head and valve mechanism tools . . . . .	3-23
3.1.7.5 Crank mechanism tools . . . . .	3-24

3.1.7.6	Coolant pump tools . . . . .	3-25
3.1.7.7	Engine control system tools . . . . .	3-26
3.1.7.8	Maintenance and troubleshooting tools . . . . .	3-26
<b>3.2</b>	<b>SCR Technology 3rd generation . . . . .</b>	<b>3-28</b>
3.2.1	General . . . . .	3-28
3.2.1.1	Notice to the technician . . . . .	3-28
3.2.1.2	Safety instructions for DEF or AdBlue <sup>TM</sup> . Identification of hazards . . . . .	3-29
3.2.1.3	Abbreviations or terms used . . . . .	3-32
3.2.2	Principles of operation . . . . .	3-32
3.2.2.1	Principles of operation . . . . .	3-32
3.2.2.2	Layout of the SCR Technology system . . . . .	3-36
3.2.3	Schematic diagrams . . . . .	3-37
3.2.3.1	Simplified diagram of the SCR Technology system . . . . .	3-37
3.2.3.2	Detailed diagram of the SCR Technology system . . . . .	3-39
3.2.4	Layout of components . . . . .	3-40
3.2.4.1	Description of SCR Technology system components . . . . .	3-40
3.2.5	Disassembly/reassembly . . . . .	3-42
3.2.5.1	Removing the module . . . . .	3-42
3.2.5.2	Refitting the module . . . . .	3-43
3.2.5.3	Removing the injector . . . . .	3-44
3.2.5.4	Refitting the injector . . . . .	3-45
3.2.5.5	Removing the solenoid valve for the DEF or AdBlue <sup>TM</sup> cooling system . . . . .	3-45
3.2.5.6	Refitting the solenoid valve for the DEF or AdBlue <sup>TM</sup> cooling system . . . . .	3-46
3.2.5.7	Removing the DEF or AdBlue <sup>TM</sup> tank . . . . .	3-46
3.2.5.8	Refitting the DEF or AdBlue <sup>TM</sup> reservoir . . . . .	3-47
3.2.5.9	Removing the DEF or AdBlue <sup>TM</sup> gage . . . . .	3-48
3.2.5.10	Removing the catalyzer . . . . .	3-48
3.2.5.11	Refitting the catalyzer . . . . .	3-51
3.2.6	Service tools . . . . .	3-51
3.2.6.1	General . . . . .	3-51
3.2.6.2	3rd generation SCR engine - Service tools . . . . .	3-51
<b>4</b>	<b>Clutch . . . . .</b>	<b>4-1</b>
<b>4.1</b>	<b>Chapter not used for this model . . . . .</b>	<b>4-3</b>
<b>5</b>	<b>Gearbox . . . . .</b>	<b>5-1</b>
<b>5.1</b>	<b>GBA25/General . . . . .</b>	<b>5-5</b>
5.1.1	General . . . . .	5-5
5.1.2	Principles of operation . . . . .	5-8
5.1.2.1	Construction and description . . . . .	5-8
5.1.2.2	Kinematics of the Dyna-4 GBA25 gearbox . . . . .	5-13
5.1.2.3	Kinematics of the Dyna-6 GBA25 gearbox . . . . .	5-16
5.1.2.4	Synchronisers . . . . .	5-19
5.1.2.5	Main gearbox robotic control . . . . .	5-21
5.1.3	Layout of components . . . . .	5-23
5.1.3.1	View of Dyna-4 GBA25 gearbox assembly . . . . .	5-23
5.1.3.2	View of Dyna-4 GBA25 gearbox assembly . . . . .	5-25
5.1.3.3	View of Dyna-6 GBA25 gearbox assembly . . . . .	5-27
5.1.3.4	View of Dyna-6 GBA25 gearbox assembly . . . . .	5-29
5.1.3.5	Dyna-4 GBA25 gearbox specifications . . . . .	5-31
5.1.3.6	Dyna-6 GBA25 gearbox specifications . . . . .	5-32
5.1.3.7	GBA25 gearbox specifications . . . . .	5-33
5.1.4	Disassembly/reassembly . . . . .	5-35
5.1.4.1	Dyna-4 GBA25 gearbox disassembly . . . . .	5-35
5.1.4.2	Dyna-6 GBA25 gearbox disassembly . . . . .	5-42
5.1.4.3	Synchronizers . . . . .	5-48
<b>5.2</b>	<b>GBA25/PowerShuttle . . . . .</b>	<b>5-51</b>

5.2.1	General . . . . .	5-51
5.2.2	Principles of operation . . . . .	5-51
5.2.3	Layout of components . . . . .	5-55
5.2.3.1	View of the GBA25 PowerShuttle assembly . . . . .	5-55
5.2.3.2	Blown-up view of the GBA25 PowerShuttle . . . . .	5-57
5.2.4	Disassembly/reassembly . . . . .	5-59
5.2.4.1	Dyna-4 transmission . . . . .	5-59
5.2.4.2	Dyna-6 transmission . . . . .	5-63
5.2.4.3	Disassembling the PowerShuttle . . . . .	5-67
5.2.4.4	Reassembling the PowerShuttle . . . . .	5-69
5.2.4.5	Final steps . . . . .	5-70
5.2.5	Service tools . . . . .	5-71
5.2.5.1	General . . . . .	5-71
5.2.5.2	PowerShuttle - Service tools . . . . .	5-71
<b>5.3</b>	<b>GBA25/Dyna-4 PowerShift module . . . . .</b>	<b>5-72</b>
5.3.1	Dyna-4 General information . . . . .	5-72
5.3.2	Dyna-4 Operating principle . . . . .	5-72
5.3.2.1	Kinematics . . . . .	5-73
5.3.3	Layout of components . . . . .	5-79
5.3.3.1	View of Dyna-4 assembly . . . . .	5-79
5.3.3.2	Dyna-4 blown-up view . . . . .	5-81
5.3.4	Removing/refitting Dyna-4 . . . . .	5-83
5.3.4.1	Preliminary steps . . . . .	5-83
5.3.4.2	Removing the Dynashift module . . . . .	5-84
5.3.4.3	Refitting the Dynashift module . . . . .	5-85
5.3.4.4	Disassembling the Dynashift module . . . . .	5-86
5.3.4.5	Reassembling the Dynashift module . . . . .	5-90
5.3.4.6	Disassembling the planet gears . . . . .	5-94
5.3.4.7	Reassembling the planet gears . . . . .	5-95
5.3.4.8	Final steps . . . . .	5-96
5.3.5	Service tools . . . . .	5-97
5.3.5.1	General . . . . .	5-97
5.3.5.2	Powershift module - Service tools . . . . .	5-97
<b>5.4</b>	<b>GBA25/Dyna-6 PowerShift module . . . . .</b>	<b>5-98</b>
5.4.1	Dyna-6 - General information . . . . .	5-98
5.4.2	Dyna-6 Operating principle . . . . .	5-98
5.4.2.1	Kinematics . . . . .	5-100
5.4.3	Layout of components . . . . .	5-109
5.4.3.1	View of Dyna-6 assembly . . . . .	5-109
5.4.3.2	Dyna-6 blown-up view . . . . .	5-111
5.4.4	Removing/refitting Dyna-6 . . . . .	5-113
5.4.4.1	Preliminary steps . . . . .	5-113
5.4.4.2	Removing the Powershift module . . . . .	5-114
5.4.4.3	Refitting the Powershift module . . . . .	5-115
5.4.4.4	Disassembling the Dynashift module . . . . .	5-116
5.4.4.5	Reassembling the Dynashift module . . . . .	5-119
5.4.4.6	Disassembling the multiplier module . . . . .	5-123
5.4.4.7	Reassembling the multiplier module . . . . .	5-124
5.4.4.8	Disassembling the planet gears . . . . .	5-126
5.4.4.9	Reassembling the planet gears . . . . .	5-126
5.4.4.10	Final steps . . . . .	5-127
5.4.5	Service tools . . . . .	5-128
5.4.5.1	General . . . . .	5-128
5.4.5.2	Powershift module - Service tools . . . . .	5-128
<b>5.5</b>	<b>GBA25/Robotic mechanical gearbox . . . . .</b>	<b>5-130</b>
5.5.1	General . . . . .	5-130
5.5.2	Principles of operation . . . . .	5-130

5.5.2.1	Description and kinematics of ratios . . . . .	5-131
5.5.3	Layout of components . . . . .	5-135
5.5.3.1	View of the primary and secondary shaft assembly . . . . .	5-135
5.5.3.2	View of the reverse layshaft and synchroniser control assembly . . . . .	5-138
5.5.3.3	Blown-up view of the robotic mechanical gearbox . . . . .	5-140
5.5.4	Disassembly/reassembly . . . . .	5-143
5.5.4.1	Preliminary steps . . . . .	5-143
5.5.4.2	Removing the primary and secondary shafts . . . . .	5-143
5.5.4.3	Refitting the primary and secondary shafts . . . . .	5-146
5.5.4.4	Disassembling the primary and secondary shafts . . . . .	5-148
5.5.4.5	Reassembling the primary and secondary shafts . . . . .	5-151
5.5.4.6	Shimming the primary and secondary shafts in the housing . . . . .	5-155
5.5.4.7	Adjusting the selector rails and forks . . . . .	5-156
5.5.4.8	Adjusting the interlock mechanism . . . . .	5-161
5.5.4.9	Final steps . . . . .	5-162
5.5.5	Service tools . . . . .	5-163
5.5.5.1	General . . . . .	5-163
5.5.5.2	Robotic mechanical gearbox - Service tools . . . . .	5-163
<b>5.6</b>	<b>GBA25/Super creeper gears . . . . .</b>	<b>5-164</b>
5.6.1	General . . . . .	5-164
5.6.2	Principles of operation . . . . .	5-165
5.6.3	Schematic diagrams . . . . .	5-167
5.6.4	Layout of components . . . . .	5-168
5.6.4.1	View of the assembly . . . . .	5-168
5.6.4.2	Blown-up view . . . . .	5-170
5.6.5	Adjustments, bleeding and calibrations . . . . .	5-171
5.6.5.1	Shimming the tapered roller bearings of the layshaft . . . . .	5-171
5.6.6	Disassembly/reassembly . . . . .	5-177
5.6.6.1	Preliminary steps . . . . .	5-177
5.6.6.2	Disassembly . . . . .	5-178
5.6.6.3	Reassembly . . . . .	5-181
5.6.6.4	Final steps . . . . .	5-185
5.6.7	Service tools . . . . .	5-185
5.6.7.1	General . . . . .	5-185
5.6.7.2	Super creeper gears - Service tools . . . . .	5-185
<b>6</b>	<b>Rear axle . . . . .</b>	<b>6-1</b>
<b>6.1</b>	<b>GPA50/General . . . . .</b>	<b>6-5</b>
6.1.1	General . . . . .	6-5
6.1.2	Principles of operation . . . . .	6-7
6.1.3	Schematic diagrams . . . . .	6-11
6.1.3.1	Main kinematics of the GPA50 rear axle . . . . .	6-11
6.1.3.2	Kinematics of the two-speed PTO . . . . .	6-12
6.1.3.3	Kinematics of the three-speed PTO . . . . .	6-13
6.1.3.4	Kinematics of the super creeper gear mechanism – final drive . . . . .	6-15
6.1.3.5	Kinematics of the super creeper gear mechanism – direct drive . . . . .	6-16
6.1.4	Center housing with two-speed or three-speed PTO . . . . .	6-17
6.1.4.1	View of the center housing with two-speed PTO . . . . .	6-17
6.1.4.2	View of the center housing with three-speed PTO . . . . .	6-18
6.1.4.3	View of the center housing with GSPTO . . . . .	6-19
6.1.4.4	Exploded view of GPA50 center housing . . . . .	6-20
6.1.4.5	2-speed PTO . . . . .	6-21
6.1.4.6	3-speed PTO . . . . .	6-22
6.1.5	Center housing with creeper gear mechanism . . . . .	6-24
6.1.5.1	Super creeper gears (option) (ratio 1:13.68) . . . . .	6-24
6.1.5.2	Super creeper gears (option) (ratio 1:1) . . . . .	6-26
6.1.6	Disassembly/reassembly . . . . .	6-28
6.1.6.1	Specifications . . . . .	6-28

<b>6.2 GPA50/GPA52 trumpet housings</b> .....	6-31
6.2.1 General .....	6-31
6.2.2 Principles of operation .....	6-32
6.2.3 Layout of components .....	6-33
6.2.3.1 View of the assembly .....	6-33
6.2.3.2 View of the GLA52 trumpet housing .....	6-35
6.2.4 Adjustments, bleeding and calibrations .....	6-37
6.2.4.1 Shimming the planet gears .....	6-37
6.2.4.2 Shimming the tapered roller bearings of the axle shaft .....	6-40
6.2.5 Disassembly/reassembly .....	6-46
6.2.5.1 Specifications .....	6-46
6.2.5.2 Removing and refitting the trumpet housing assembly .....	6-48
6.2.5.3 Removing/refitting and disassembling/reassembling the planet carrier . . .	6-51
6.2.5.4 Replacing tapered roller bearings and seals .....	6-56
6.2.5.5 Replacing a stud on the flanged axle shaft .....	6-59
6.2.6 Service tools .....	6-59
6.2.6.1 General .....	6-59
6.2.6.2 GPA50/Final drives - Service tools .....	6-60
<b>6.3 GPA50/GPA54 trumpet housings</b> .....	6-61
6.3.1 General .....	6-61
6.3.2 Principles of operation .....	6-62
6.3.3 Layout of components .....	6-65
6.3.3.1 View of the assembly .....	6-65
6.3.3.2 View of GPA54 trumpet housing .....	6-67
6.3.4 Adjustments, bleeding and calibrations .....	6-69
6.3.4.1 Shimming the planet gears .....	6-69
6.3.4.2 Shimming the tapered roller bearings of the axle shaft .....	6-72
6.3.5 Disassembly/reassembly .....	6-77
6.3.5.1 Specifications .....	6-77
6.3.5.2 Removing the trumpet housing assembly .....	6-79
6.3.5.3 Removing the final drive ring gear .....	6-82
6.3.5.4 Removing/refitting and disassembling/reassembling the planet carrier . . .	6-84
6.3.5.5 Disassembly .....	6-90
6.3.5.6 Replacing a stud on the flanged axle shaft .....	6-93
6.3.6 Service tools .....	6-93
6.3.6.1 General .....	6-93
6.3.6.2 GPA50/Final drives - Service tools .....	6-94
<b>6.4 GPA50/Rear crown wheel and pinion 9x40 and 10x42</b> .....	6-95
6.4.1 General .....	6-95
6.4.2 Principles of operation .....	6-97
6.4.3 Layout of components .....	6-100
6.4.3.1 Pinion and rear differential mechanism - Cross-section view .....	6-100
6.4.3.2 Pinion and rear differential mechanism - Blown-up view .....	6-102
6.4.3.3 Rear differential mechanism and its lock - Cross-section view .....	6-104
6.4.4 Adjustments, bleeding and calibrations .....	6-105
6.4.4.1 Adjusting the position of the pinion in the center housing (taper distance)	6-105
6.4.4.2 Shimming the pinion tapered roller bearings .....	6-107
6.4.4.3 Shimming the rear differential unit/ring gear assembly tapered roller bearings .....	6-117
6.4.4.4 Adjusting and checking the backlash between the ring gear and the pinion .....	6-124
6.4.5 Disassembly/reassembly .....	6-128
6.4.5.1 Specifications .....	6-128
6.4.5.2 Preliminary step .....	6-130
6.4.5.3 Removing and refitting the rear differential unit/crown wheel assembly .	6-135
6.4.5.4 Removing and refitting the rear differential lock .....	6-141
6.4.5.5 Removing and refitting the crown wheel .....	6-145

6.4.5.6	Removing and refitting the planet gears and sun gears . . . . .	6-149
6.4.5.7	Removing and refitting the pinion . . . . .	6-151
6.4.5.8	Replacing the left-hand lubrication sleeve lip seal . . . . .	6-165
6.4.6	Service tools . . . . .	6-168
6.4.6.1	General . . . . .	6-168
6.4.6.2	GPA50/Rear crown wheel and pinion 9x40 and 10x42 - Service tools . . .	6-169
<b>6.5</b>	<b>GPA50/Rear crown wheel and pinion 10x47</b> . . . . .	<b>6-173</b>
6.5.1	GPA50 general information . . . . .	6-173
6.5.2	Principles of operation . . . . .	6-175
6.5.3	Layout of components . . . . .	6-178
6.5.3.1	Pinion and rear differential mechanism - GPA50 cross-section view . . .	6-178
6.5.3.2	Pinion and rear differential mechanism - Blown-up view . . . . .	6-180
6.5.3.3	Rear differential mechanism and its lock - Cross-section view . . . . .	6-182
6.5.4	Adjustments, bleeding and calibrations . . . . .	6-183
6.5.4.1	Adjusting the position of the pinion in the center housing (taper distance)	6-183
6.5.4.2	Shimming the pinion tapered roller bearings . . . . .	6-185
6.5.4.3	Shimming the rear differential unit/ring gear assembly tapered roller bearings . . . . .	6-195
6.5.4.4	Adjusting and checking the backlash between the ring gear and the pinion . . . . .	6-202
6.5.5	Disassembly/reassembly . . . . .	6-206
6.5.5.1	Specifications . . . . .	6-206
6.5.5.2	Preliminary step . . . . .	6-208
6.5.5.3	Removing and refitting the rear differential unit/crown wheel assembly .	6-213
6.5.5.4	Removing and refitting the rear differential lock . . . . .	6-219
6.5.5.5	Removing and refitting the crown wheel . . . . .	6-223
6.5.5.6	Removing and refitting the planet gears and sun gears . . . . .	6-227
6.5.5.7	Removing and refitting the pinion . . . . .	6-229
6.5.5.8	Replacing the left-hand lubrication sleeve lip seal . . . . .	6-243
6.5.6	Service tools . . . . .	6-246
6.5.6.1	General . . . . .	6-246
6.5.6.2	GPA50 rear crown wheel and pinion 10x47 - Service tools . . . . .	6-247
<b>6.6</b>	<b>GPA50/Tractor braking</b> . . . . .	<b>6-251</b>
6.6.1	General . . . . .	6-251
6.6.2	Principles of operation . . . . .	6-253
6.6.3	Layout of components . . . . .	6-254
6.6.3.1	Overview of the main brake system . . . . .	6-254
6.6.3.2	Blown-up view of the main brake system . . . . .	6-256
6.6.3.3	Location of the hand brake control components . . . . .	6-258
6.6.4	Adjustments, bleeding and calibrations . . . . .	6-259
6.6.4.1	Adjusting the main brakes . . . . .	6-259
6.6.4.2	Adjusting the hand brake . . . . .	6-264
6.6.4.3	Bleeding the main brake system . . . . .	6-264
6.6.5	Disassembly/reassembly . . . . .	6-266
6.6.5.1	Removing and refitting the disks, the intermediate plates and a brake mechanism . . . . .	6-266
6.6.5.2	Removal . . . . .	6-272
6.6.6	Service tools . . . . .	6-283
6.6.6.1	General . . . . .	6-283
6.6.6.2	GPA50/Tractor braking – Service tools . . . . .	6-284
<b>6.7</b>	<b>Pneumatic trailer braking</b> . . . . .	<b>6-285</b>
6.7.1	General . . . . .	6-285
6.7.1.1	Principles of operation . . . . .	6-285
6.7.1.2	Schematic diagram . . . . .	6-287
6.7.2	Layout of components . . . . .	6-290
6.7.3	Test and diagnostics . . . . .	6-290
6.7.3.1	Pneumatic system test . . . . .	6-290



6.7.3.2	Sealing test on the pneumatic system . . . . .	6-292
6.7.4	Adjustments, bleeding and calibrations . . . . .	6-292
6.7.4.1	Adjusting the hand brake rod . . . . .	6-292
6.7.4.2	Adjusting the pressure relief valve . . . . .	6-293
6.7.5	Service tools . . . . .	6-295
6.7.5.1	General . . . . .	6-295
6.7.5.2	Pneumatic trailer brake — Service tools . . . . .	6-296
<b>6.8</b>	<b>GPA50/Linkage and hitch . . . . .</b>	<b>6-298</b>
6.8.1	General . . . . .	6-298
6.8.2	General information about the linkage angular sensor . . . . .	6-300
6.8.3	Layout of the linkage components . . . . .	6-301
6.8.3.1	View of the assembly . . . . .	6-301
6.8.3.2	Blown-up view . . . . .	6-301
6.8.4	Layout of the hitch mechanism components . . . . .	6-302
6.8.4.1	View of the assembly . . . . .	6-302
6.8.4.2	Exploded view of hitch . . . . .	6-303
6.8.5	Disassembly/reassembly . . . . .	6-303
6.8.5.1	Preliminary steps . . . . .	6-303
6.8.5.2	Removing/refitting a draft sensor (bottom link) . . . . .	6-310
6.8.5.3	Removing/refitting the draft sensor (top link) . . . . .	6-312
6.8.5.4	Removing/refitting the linkage angular sensor . . . . .	6-316
6.8.6	Service tools . . . . .	6-320
6.8.6.1	General . . . . .	6-320
6.8.6.2	GPA50/Linkage and hitch - Service tools . . . . .	6-321
<b>6.9</b>	<b>GPA50/Auto-hitch . . . . .</b>	<b>6-322</b>
6.9.1	Auto-hitch general features . . . . .	6-322
6.9.2	Layout of components . . . . .	6-323
6.9.2.1	View of the assembly . . . . .	6-323
6.9.2.2	Blown-up view of the auto-hitch . . . . .	6-324
6.9.3	Adjustments, bleeding and calibrations . . . . .	6-324
6.9.3.1	Adjusting the auto-hitch tie-rods . . . . .	6-324
6.9.3.2	Adjusting the control . . . . .	6-326
6.9.4	Disassembly/reassembly . . . . .	6-327
6.9.4.1	Refitting the auto-hitch . . . . .	6-327
<b>6.10</b>	<b>GPA50/Wheels and hubs . . . . .</b>	<b>6-328</b>
6.10.1	General . . . . .	6-328
6.10.2	Layout of components . . . . .	6-330
6.10.2.1	Layout of wheel and hub components . . . . .	6-330
6.10.2.2	Exploded view of a steel front wheel and its hub . . . . .	6-331
6.10.2.3	Blown-up view of a steel rear wheel and its hub . . . . .	6-332
6.10.3	Disassembly/reassembly . . . . .	6-333
6.10.3.1	Tightening torques . . . . .	6-333
6.10.3.2	Removing/refitting a rear wheel on a flanged shaft . . . . .	6-334
6.10.3.3	Replacing a rear wheel stud on a flanged shaft . . . . .	6-336
<b>7</b>	<b>Power take-off . . . . .</b>	<b>7-1</b>
<b>7.1</b>	<b>GPA50/Rear PTO clutch . . . . .</b>	<b>7-3</b>
7.1.1	General . . . . .	7-3
7.1.1.1	General . . . . .	7-3
7.1.1.2	Principles of operation . . . . .	7-3
7.1.2	Layout of components . . . . .	7-6
7.1.2.1	View of the assembly . . . . .	7-6
7.1.2.2	Blown-up view . . . . .	7-7
7.1.2.3	Gerotor lubrication pump composition . . . . .	7-9
7.1.2.4	Rear power take-off clutch composition . . . . .	7-10
7.1.2.5	Identification of channels and ports . . . . .	7-12
7.1.3	Disassembly/reassembly . . . . .	7-14

7.1.3.1	Specifications - Tightening torques . . . . .	7-14
7.1.3.2	Removing/refitting the clutch assembly/gerotor lubrication pump body . . . . .	7-14
7.1.3.3	Separation and assembly of the clutch assembly/gerotor lubrication pump body . . . . .	7-18
7.1.3.4	Disassembling/reassembling the clutch . . . . .	7-20
7.1.3.5	Disassembling/reassembling the gerotor lubrication pump . . . . .	7-25
7.1.4	Service tools . . . . .	7-28
7.1.4.1	General . . . . .	7-28
7.1.4.2	GPA50/Rear PTO clutch - Service tools . . . . .	7-28
<b>7.2</b>	<b>GPA50/Rear PTO with two electrohydraulic speeds . . . . .</b>	<b>7-29</b>
7.2.1	General . . . . .	7-29
7.2.1.1	General . . . . .	7-29
7.2.1.2	Principles of operation . . . . .	7-30
7.2.2	Layout of components . . . . .	7-32
7.2.2.1	View of the assembly . . . . .	7-32
7.2.2.2	Blown-up view . . . . .	7-35
7.2.2.3	Identification of ports . . . . .	7-38
7.2.2.4	Kinematics . . . . .	7-39
7.2.3	Adjustments, bleeding and calibrations . . . . .	7-41
7.2.3.1	Shimming shafts of the rear PTO with two electrohydraulic speeds . . . . .	7-41
7.2.4	Disassembly/reassembly . . . . .	7-43
7.2.4.1	Specifications . . . . .	7-43
7.2.4.2	Removing/refitting and disassembling/reassembling the rear power take-off with two electrohydraulic speeds . . . . .	7-45
7.2.5	Service tools . . . . .	7-67
7.2.5.1	General . . . . .	7-67
7.2.5.2	GPA50/Rear PTO with two electrohydraulic speeds - Service tools . . . . .	7-67
<b>7.3</b>	<b>GPA50/Rear PTO with three electrohydraulic speeds . . . . .</b>	<b>7-70</b>
7.3.1	General . . . . .	7-70
7.3.1.1	General . . . . .	7-70
7.3.1.2	Principles of operation . . . . .	7-71
7.3.2	Layout of components . . . . .	7-73
7.3.2.1	Layout of components . . . . .	7-73
7.3.2.2	View of the assembly . . . . .	7-74
7.3.2.3	Blown-up view . . . . .	7-76
7.3.2.4	Identification of ports . . . . .	7-77
7.3.2.5	Kinematics . . . . .	7-79
7.3.3	Adjustments, bleeding and calibrations . . . . .	7-82
7.3.3.1	Preparation for shaft shimming . . . . .	7-82
7.3.3.2	Shimming the drive shaft . . . . .	7-84
7.3.3.3	Shimming the output shaft . . . . .	7-85
7.3.3.4	Reassembly . . . . .	7-86
7.3.4	Disassembly/reassembly . . . . .	7-86
7.3.4.1	Specifications . . . . .	7-86
7.3.4.2	Removing/refitting and disassembling/reassembling the rear PTO with three electrohydraulic speeds . . . . .	7-88
7.3.5	Service tools . . . . .	7-108
7.3.5.1	General . . . . .	7-108
7.3.5.2	GPA50/Rear PTO with three electrohydraulic speeds - Service tools . . . . .	7-108
<b>7.4</b>	<b>GPA50/GSPTO . . . . .</b>	<b>7-110</b>
7.4.1	General . . . . .	7-110
7.4.1.1	General . . . . .	7-110
7.4.1.2	Principles of operation . . . . .	7-110
7.4.2	Layout of components . . . . .	7-112
7.4.2.1	Layout of components . . . . .	7-112
7.4.2.2	View of the assembly . . . . .	7-113
7.4.2.3	Blown-up view . . . . .	7-114

7.4.2.4	Identification of ports . . . . .	7-116
7.4.2.5	Kinematics . . . . .	7-118
7.4.3	Adjustments, bleeding and calibrations . . . . .	7-119
7.4.3.1	Shimming the GSPTO gears . . . . .	7-119
7.4.4	Disassembly/reassembly . . . . .	7-120
7.4.4.1	Specifications . . . . .	7-120
7.4.4.2	Removing/refitting the rear block with the GSPTO . . . . .	7-120
7.4.4.3	Disassembling/reassembling the GSPTO control . . . . .	7-122
<b>7.5</b>	<b>Zuidberg front power take-off . . . . .</b>	<b>7-125</b>
7.5.1	General . . . . .	7-125
7.5.2	Principles of operation . . . . .	7-126
7.5.2.1	Mechanical . . . . .	7-126
7.5.2.2	Hydraulics . . . . .	7-127
7.5.2.3	Hydraulics diagram . . . . .	7-128
7.5.3	Layout of components . . . . .	7-129
7.5.3.1	Exploded view of the unit . . . . .	7-129
7.5.3.2	Exploded view of the hydraulic pump and the clutch . . . . .	7-130
7.5.3.3	Exploded view of drive shaft . . . . .	7-131
7.5.4	Tests and diagnostics . . . . .	7-132
7.5.4.1	Electrical tests . . . . .	7-132
7.5.4.2	Hydraulic tests . . . . .	7-133
7.5.5	Disassembly/reassembly . . . . .	7-133
7.5.5.1	Disassembly . . . . .	7-133
7.5.5.2	Reassembly . . . . .	7-137
<b>8</b>	<b>Front axle . . . . .</b>	<b>8-1</b>
<b>8.1</b>	<b>LODI 140 front axle . . . . .</b>	<b>8-3</b>
8.1.1	General . . . . .	8-3
8.1.2	Layout of components . . . . .	8-4
8.1.2.1	View of the assembly . . . . .	8-4
8.1.2.2	Exploded view . . . . .	8-5
8.1.3	Adjustments, bleeding and calibrations . . . . .	8-6
8.1.3.1	Adjustments/General . . . . .	8-6
8.1.3.2	Track width adjustment . . . . .	8-7
8.1.3.3	Wheel alignment . . . . .	8-9
8.1.4	Disassembly/reassembly . . . . .	8-10
8.1.4.1	Tightening torques . . . . .	8-10
<b>8.2</b>	<b>DANA 730 front axle . . . . .</b>	<b>8-11</b>
8.2.1	General . . . . .	8-11
8.2.1.1	DANA General . . . . .	8-11
8.2.1.2	View of DANA 730 axle assembly . . . . .	8-11
8.2.1.3	DANA front axle - dimensions - specifications - identification . . . . .	8-12
8.2.1.4	Topping up and checking oil levels . . . . .	8-14
8.2.2	Principles of operation . . . . .	8-15
8.2.3	Layout of components . . . . .	8-16
8.2.3.1	Layout of front axle components . . . . .	8-16
8.2.4	Tests and diagnostics . . . . .	8-17
8.2.4.1	Troubleshooting . . . . .	8-17
8.2.5	Disassembly/reassembly . . . . .	8-19
8.2.5.1	Tightening torques . . . . .	8-19
8.2.5.2	DANA Workshop Service Manuals . . . . .	8-20
<b>8.3</b>	<b>Front suspension for DANA 730 axle . . . . .</b>	<b>8-21</b>
8.3.1	General . . . . .	8-21
8.3.1.1	General information - front suspension . . . . .	8-21
8.3.2	Principles of operation . . . . .	8-21
8.3.3	Layout of components . . . . .	8-25
8.3.3.1	Layout of hydraulic components for the front suspension . . . . .	8-25

8.3.3.2	Layout of mechanical components for the front suspension . . . . .	8-26
8.3.3.3	Layout of components for the suspension control unit . . . . .	8-27
8.3.4	Disassembly/reassembly . . . . .	8-27
8.3.4.1	Removing and refitting the front axle and front suspension assembly . . . . .	8-27
8.3.4.2	Removing and refitting the front suspension assembly . . . . .	8-31
8.3.4.3	Removing and refitting the suspension rams . . . . .	8-32
8.3.4.4	Disassembling/reassembling the control unit . . . . .	8-36
8.3.4.5	Removing/refitting the accumulators . . . . .	8-39
<b>8.4</b>	<b>GPA50/4-wheel drive clutch . . . . .</b>	<b>8-42</b>
8.4.1	General . . . . .	8-42
8.4.1.1	General . . . . .	8-42
8.4.1.2	Principles of operation . . . . .	8-43
8.4.2	Layout of components . . . . .	8-45
8.4.2.1	Layout of components . . . . .	8-45
8.4.2.2	View of the assembly . . . . .	8-46
8.4.2.3	Overview of 4WD clutch mechanism . . . . .	8-48
8.4.2.4	Identification of channels and ports . . . . .	8-49
8.4.3	Adjustments, bleeding and calibrations . . . . .	8-52
8.4.3.1	Specifications . . . . .	8-52
8.4.3.2	Shimming the 4-wheel drive clutch . . . . .	8-53
8.4.4	Disassembly/reassembly . . . . .	8-54
8.4.4.1	Removing/refitting the 4-wheel drive clutch assembly . . . . .	8-54
8.4.4.2	Disassembling/reassembling the 4-wheel drive clutch assembly . . . . .	8-63
8.4.4.3	Extracting/fitting the rear ball bearing and the hydraulic ring . . . . .	8-69
8.4.5	Service tools . . . . .	8-71
8.4.5.1	General . . . . .	8-71
8.4.5.2	GPA50/Clutch - Service tools . . . . .	8-71
<b>8.5</b>	<b>Steering unit/Open Center . . . . .</b>	<b>8-73</b>
8.5.1	General . . . . .	8-73
8.5.2	Principles of operation . . . . .	8-73
8.5.3	Layout of components . . . . .	8-77
8.5.3.1	Cross-section view . . . . .	8-77
8.5.3.2	Blown-up view . . . . .	8-79
8.5.3.3	Identification of channels . . . . .	8-81
8.5.3.4	View of the assembly . . . . .	8-82
8.5.4	Disassembly/reassembly . . . . .	8-82
8.5.4.1	Removing/refitting the steering spool valve . . . . .	8-82
8.5.4.2	Disassembling/reassembling the steering spool valve . . . . .	8-84
<b>8.6</b>	<b>Steering unit/Closed Center . . . . .</b>	<b>8-91</b>
8.6.1	General . . . . .	8-91
8.6.2	Hydraulic operating principle . . . . .	8-92
8.6.3	Electrohydraulic operating principle . . . . .	8-93
8.6.4	Layout of components . . . . .	8-96
8.6.4.1	View of the assembly . . . . .	8-97
8.6.4.2	Blown-up view . . . . .	8-99
8.6.5	Disassembly/reassembly . . . . .	8-100
8.6.5.1	Removing/refitting the steering spool valve . . . . .	8-100
8.6.5.2	Disassembling/reassembling the steering spool valve . . . . .	8-102
<b>9</b>	<b>Hydraulics . . . . .</b>	<b>9-1</b>
<b>9.1</b>	<b>GPA50/Open Center . . . . .</b>	<b>9-5</b>
9.1.1	General . . . . .	9-5
9.1.2	Principles of operation . . . . .	9-5
9.1.2.1	Low-pressure system, low flow rate . . . . .	9-5
9.1.2.2	High-pressure system, high flow rate . . . . .	9-6
9.1.3	Layout of components . . . . .	9-7
9.1.3.1	Layout of components of the low pressure low flow rate system . . . . .	9-7

9.1.3.2	Layout of components of the high pressure high flow rate system . . . . .	9-8
9.1.3.3	Open Center lubrication system . . . . .	9-9
9.1.4	Hydraulic tests . . . . .	9-11
9.1.4.1	General . . . . .	9-11
9.1.4.2	High flow rate system . . . . .	9-12
9.1.4.3	Low flow rate system . . . . .	9-13
9.1.4.4	Lubrication system . . . . .	9-16
9.1.5	Service tools . . . . .	9-17
9.1.5.1	General . . . . .	9-17
9.1.5.2	Hydraulic test – Service tools . . . . .	9-17
<b>9.2</b>	<b>GPA50/Open Center/Right-hand cover plate . . . . .</b>	<b>9-24</b>
9.2.1	General . . . . .	9-24
9.2.2	Thermostatic valve . . . . .	9-24
9.2.3	Layout of components . . . . .	9-27
9.2.3.1	View of external assembly . . . . .	9-27
9.2.3.2	View of internal assembly . . . . .	9-28
9.2.3.3	Blown-up view . . . . .	9-29
9.2.3.4	Identification of channels . . . . .	9-31
9.2.4	Removing/refitting the cover plate . . . . .	9-32
9.2.5	Disassembly/Reassembly: . . . . .	9-34
9.2.5.1	Disassembling/reassembling the high pressure valve . . . . .	9-34
9.2.5.2	Disassembling/reassembling the 21-bar valve . . . . .	9-35
9.2.5.3	Disassembling/reassembling the lubrication valve . . . . .	9-37
9.2.5.4	Disassembling/reassembling the brake lubrication valve . . . . .	9-38
9.2.5.5	Disassembling/reassembling the thermostatic valve . . . . .	9-39
9.2.5.6	Disassembling/reassembling the cooling bypass . . . . .	9-40
9.2.5.7	Removing/refitting the pump . . . . .	9-41
<b>9.3</b>	<b>GPA50/100 l/min Open Center . . . . .</b>	<b>9-43</b>
9.3.1	General . . . . .	9-43
9.3.2	Principles of operation . . . . .	9-43
9.3.2.1	Low-pressure system, low flow rate . . . . .	9-43
9.3.2.2	High-pressure system, high flow rate . . . . .	9-44
9.3.3	Layout of components . . . . .	9-47
9.3.3.1	Layout of components of the low pressure low flow rate system . . . . .	9-47
9.3.3.2	Layout of components of the high pressure high flow rate system . . . . .	9-48
9.3.4	Tests and diagnostics . . . . .	9-49
9.3.4.1	General . . . . .	9-49
9.3.4.2	High flow rate system . . . . .	9-50
9.3.4.3	Low flow rate system . . . . .	9-54
9.3.4.4	Lubrication system . . . . .	9-57
9.3.5	Service tools . . . . .	9-58
9.3.5.1	General . . . . .	9-58
9.3.5.2	Hydraulic test – Service tools . . . . .	9-58
<b>9.4</b>	<b>GPA50/100 l/min Open Center/Right-hand cover plate . . . . .</b>	<b>9-65</b>
9.4.1	General . . . . .	9-65
9.4.2	Thermostatic valve . . . . .	9-65
9.4.3	Layout of components . . . . .	9-68
9.4.3.1	View of external assembly . . . . .	9-68
9.4.3.2	View of internal assembly . . . . .	9-69
9.4.3.3	Blown-up view . . . . .	9-70
9.4.3.4	Identification of channels . . . . .	9-72
9.4.4	Removing/refitting the cover plate . . . . .	9-73
9.4.5	Disassembly/reassembly . . . . .	9-75
9.4.5.1	Disassembling/reassembling the high pressure valve . . . . .	9-75
9.4.5.2	Disassembling/reassembling the 21-bar valve . . . . .	9-76
9.4.5.3	Disassembling/reassembling the lubrication valve . . . . .	9-78
9.4.5.4	Disassembling/reassembling the brake lubrication valve . . . . .	9-79

9.4.5.5	Disassembling/reassembling the thermostatic valve . . . . .	9-80
9.4.5.6	Disassembling/reassembling the cooling bypass . . . . .	9-81
9.4.5.7	Removing/refitting the pump . . . . .	9-82
<b>9.5</b>	<b>GPA50/100 I/min Open Center/Left-hand cover plate . . . . .</b>	<b>9-84</b>
9.5.1	General . . . . .	9-84
9.5.2	Layout of components . . . . .	9-85
9.5.2.1	View of external assembly . . . . .	9-85
9.5.2.2	View of internal assembly . . . . .	9-86
9.5.2.3	Blown-up view . . . . .	9-87
9.5.2.4	Identification of channels . . . . .	9-88
9.5.3	Removing/refitting the cover plate . . . . .	9-89
9.5.4	Disassembly/reassembly . . . . .	9-91
9.5.4.1	Disassembling/reassembling the high pressure valve . . . . .	9-91
9.5.4.2	Removing/refitting the pump . . . . .	9-92
<b>9.6</b>	<b>GPA50/Closed Center . . . . .</b>	<b>9-93</b>
9.6.1	General . . . . .	9-93
9.6.2	Principles of operation . . . . .	9-93
9.6.3	Layout of components . . . . .	9-95
9.6.3.1	Layout of components . . . . .	9-95
9.6.3.2	Closed Center lubrication circuit . . . . .	9-97
9.6.4	Tests and diagnostics . . . . .	9-99
9.6.4.1	General . . . . .	9-99
9.6.4.2	High flow rate system . . . . .	9-100
9.6.4.3	Low flow rate system . . . . .	9-105
9.6.4.4	Lubrication system . . . . .	9-108
9.6.5	Service tools . . . . .	9-108
9.6.5.1	General . . . . .	9-108
9.6.5.2	Hydraulic test – Service tools . . . . .	9-109
<b>9.7</b>	<b>GPA50/Closed Center/Right-hand cover plate . . . . .</b>	<b>9-115</b>
9.7.1	General . . . . .	9-115
9.7.2	Principles of operation . . . . .	9-116
9.7.3	Filtration and cooling . . . . .	9-119
9.7.4	Priority block . . . . .	9-121
9.7.5	Layout of components . . . . .	9-126
9.7.5.1	View of the assembly . . . . .	9-126
9.7.5.2	Exploded view of the hydraulic cover plate . . . . .	9-127
9.7.5.3	Exploded view of the single priority block . . . . .	9-128
9.7.5.4	Exploded view of the double priority block . . . . .	9-129
9.7.5.5	Identification of channels . . . . .	9-130
9.7.6	Disassembly/reassembly . . . . .	9-131
9.7.6.1	Removing/refitting the cover plate . . . . .	9-131
9.7.6.2	Disassembling/reassembling the right-hand cover plate and charge pump . . . . .	9-134
9.7.6.3	Replacing the charge pump seals . . . . .	9-137
<b>9.8</b>	<b>GPA50/Closed Center/Left-hand cover plate . . . . .</b>	<b>9-140</b>
9.8.1	General . . . . .	9-140
9.8.2	Principles of operation . . . . .	9-141
9.8.3	Layout of components . . . . .	9-144
9.8.3.1	View of the assembly . . . . .	9-144
9.8.3.2	Blown-up view . . . . .	9-145
9.8.4	Disassembly/reassembly . . . . .	9-145
9.8.4.1	Removing/refitting the cover plate . . . . .	9-145
9.8.4.2	Disassembling/reassembling the cover plate and the variable displacement pump . . . . .	9-147
<b>9.9</b>	<b>GPA50 Open Center/Spool valves . . . . .</b>	<b>9-150</b>
9.9.1	General . . . . .	9-150
9.9.2	Principles of operation . . . . .	9-150
9.9.3	Layout of components . . . . .	9-156

9.9.3.1	Blown-up view . . . . .	9-156
9.9.3.2	Identification of channels . . . . .	9-158
9.9.4	Disassembly/reassembly . . . . .	9-159
9.9.4.1	Removing/refitting the spool valves . . . . .	9-159
9.9.4.2	Fitting the control cables . . . . .	9-160
<b>9.10</b>	<b>GPA50 Open Center/Rear linkage . . . . .</b>	<b>9-166</b>
9.10.1	General . . . . .	9-166
9.10.2	Principles of operation . . . . .	9-166
9.10.3	Layout of components . . . . .	9-169
9.10.3.1	Blown-up view . . . . .	9-169
9.10.3.2	Identification of channels . . . . .	9-170
9.10.4	Tests and diagnostics . . . . .	9-170
9.10.4.1	Diagnostics . . . . .	9-170
9.10.5	Disassembly/reassembly . . . . .	9-171
9.10.5.1	Removing/refitting the linkage spool valve . . . . .	9-171
<b>9.11</b>	<b>GPA50 Open Center/Front linkage . . . . .</b>	<b>9-172</b>
9.11.1	General . . . . .	9-172
9.11.2	Principles of operation . . . . .	9-172
9.11.3	Layout of components . . . . .	9-175
9.11.3.1	Front linkage . . . . .	9-175
9.11.4	Adjustments, bleeding and calibrations . . . . .	9-175
9.11.4.1	Setting the accumulator . . . . .	9-175
<b>9.12</b>	<b>GPA50 Open Center/Mid-mounted . . . . .</b>	<b>9-176</b>
9.12.1	General . . . . .	9-176
9.12.2	Principles of operation . . . . .	9-176
9.12.3	Layout of components . . . . .	9-179
9.12.3.1	Identification of channels . . . . .	9-179
9.12.4	Adjustments, bleeding and calibrations . . . . .	9-179
9.12.4.1	Setting the accumulator . . . . .	9-179
9.12.5	Removing/refitting the Mid Mounted unit . . . . .	9-180
9.12.5.1	Removal . . . . .	9-180
9.12.5.2	Refitting . . . . .	9-182
9.12.5.3	Final steps . . . . .	9-182
<b>9.13</b>	<b>GPA50 Closed Center/Spool valves . . . . .</b>	<b>9-183</b>
9.13.1	General . . . . .	9-183
9.13.2	Layout of components and identification of ports . . . . .	9-184
9.13.3	Layout of components . . . . .	9-187
9.13.3.1	Exploded view of the control valve block . . . . .	9-187
9.13.3.2	Identification of channels . . . . .	9-188
9.13.4	Disassembly/reassembly . . . . .	9-189
9.13.4.1	Removing/refitting the spool valves . . . . .	9-189
<b>9.14</b>	<b>GPA50 Closed Center/Rear linkage . . . . .</b>	<b>9-192</b>
9.14.1	General . . . . .	9-192
9.14.2	Principles of operation . . . . .	9-192
9.14.3	Layout of components . . . . .	9-193
9.14.3.1	Identification of channels . . . . .	9-193
9.14.4	Disassembly/reassembly . . . . .	9-194
9.14.4.1	Removing/refitting the linkage spool valve . . . . .	9-194
<b>9.15</b>	<b>GPA50 Closed Center/Front linkage . . . . .</b>	<b>9-196</b>
9.15.1	Layout of components . . . . .	9-196
9.15.1.1	Front linkage . . . . .	9-196
9.15.2	Adjustments, bleeding and calibrations . . . . .	9-196
9.15.2.1	Setting the accumulator . . . . .	9-196
<b>9.16</b>	<b>GPA50 Closed Center/Mid-mounted . . . . .</b>	<b>9-198</b>
9.16.1	General . . . . .	9-198
9.16.2	Principles of operation . . . . .	9-198
9.16.3	Layout of components . . . . .	9-201

9.16.3.1 Identification of channels . . . . .	9-201
9.16.4 Adjustments, bleeding and calibrations . . . . .	9-201
9.16.4.1 Setting the accumulator . . . . .	9-201
9.16.5 Removing/refitting the Mid Mounted unit . . . . .	9-202
9.16.5.1 Removal . . . . .	9-202
9.16.5.2 Refitting . . . . .	9-204
9.16.5.3 Final steps . . . . .	9-204
<b>9.17 GPA50/Brake master cylinders . . . . .</b>	<b>9-206</b>
9.17.1 General . . . . .	9-206
9.17.2 Principles of operation . . . . .	9-207
9.17.3 Layout of components . . . . .	9-210
9.17.3.1 Blown-up view . . . . .	9-210
9.17.3.2 Identification of Open Center system channels . . . . .	9-211
9.17.3.3 Identification of Closed Center system channels . . . . .	9-212
9.17.4 Adjustments, bleeding and calibrations . . . . .	9-212
9.17.4.1 Bleeding the main brake system . . . . .	9-212
9.17.4.2 Bleeding the trailer brake system . . . . .	9-214
9.17.4.3 Adjusting brake pedals . . . . .	9-215
9.17.5 Service tools . . . . .	9-216
9.17.5.1 General . . . . .	9-216
9.17.5.2 GPA50/Hydraulic braking – Service tools . . . . .	9-216
<b>9.18 Open Center/Hydraulic trailer braking . . . . .</b>	<b>9-217</b>
9.18.1 General . . . . .	9-217
9.18.2 Principles of operation . . . . .	9-218
9.18.3 Layout of components . . . . .	9-221
9.18.3.1 Blown-up view . . . . .	9-221
9.18.3.2 Identification of channels . . . . .	9-222
9.18.4 Adjustments, bleeding and calibrations . . . . .	9-223
9.18.4.1 Bleeding the main brake system . . . . .	9-223
9.18.4.2 Bleeding the trailer brake system . . . . .	9-225
9.18.5 Service tools . . . . .	9-225
9.18.5.1 General . . . . .	9-225
9.18.5.2 GPA50/Hydraulic braking – Service tools . . . . .	9-226
<b>9.19 Closed Center/Hydraulic trailer braking . . . . .</b>	<b>9-227</b>
9.19.1 General . . . . .	9-227
9.19.2 Principles of operation . . . . .	9-228
9.19.3 Schematic diagram . . . . .	9-230
9.19.4 Adjustments, bleeding and calibrations . . . . .	9-231
9.19.4.1 Bleeding the main brake system . . . . .	9-231
9.19.4.2 Bleeding the trailer brake system . . . . .	9-233
9.19.5 Service tools . . . . .	9-233
9.19.5.1 General . . . . .	9-233
9.19.5.2 GPA50/Hydraulic braking – Service tools . . . . .	9-234
<b>10 Electricity . . . . .</b>	<b>10-1</b>
<b>10.1 Diagnostic procedure . . . . .</b>	<b>10-3</b>
10.1.1 List of generic procedures . . . . .	10-3
10.1.2 Checking the insulation of a harness . . . . .	10-3
10.1.3 Checking the continuity of a harness . . . . .	10-3
10.1.4 Checking the CAN network . . . . .	10-5
10.1.5 Checking a harness . . . . .	10-7
10.1.6 Measuring a voltage . . . . .	10-7
10.1.7 Measuring the resistance of a component . . . . .	10-8
10.1.8 Measuring current . . . . .	10-8
10.1.9 Hook-on ammeter procedure . . . . .	10-8
10.1.10 Ammeter procedure . . . . .	10-9
<b>10.2 Electrical circuit . . . . .</b>	<b>10-10</b>



10.2.1	General	10-10
10.2.1.1	General	10-10
10.2.1.2	Principles of operation	10-10
10.2.1.3	Electricity - color code	10-11
10.2.1.4	Schematic diagram of the electrical circuit	10-12
10.2.2	Lighting - Layout of components	10-13
<b>10.3</b>	<b>Cab fuse box</b>	<b>10-15</b>
10.3.1	General	10-15
10.3.1.1	General	10-15
10.3.1.2	Principles of operation	10-15
10.3.2	Layout of components	10-16
10.3.2.1	Fuse box - Connectors	10-16
10.3.3	Disassembly/reassembly	10-17
10.3.3.1	Removing and refitting the fuse box	10-17
<b>10.4</b>	<b>Fuse box on battery</b>	<b>10-18</b>
10.4.1	Layout of components	10-18
10.4.1.1	Description of the secondary fuse box (depending on model)	10-18
10.4.2	Disassembly/reassembly	10-20
10.4.2.1	Removing/refitting the secondary fuse box	10-20
<b>10.5</b>	<b>Alternator</b>	<b>10-22</b>
10.5.1	Alternator - Layout of components	10-22
10.5.2	Tests and diagnostics	10-22
10.5.2.1	Alternator - test procedure	10-22
10.5.3	Disassembly/reassembly	10-24
10.5.3.1	Removing and refitting the drive belts	10-24
10.5.3.2	Removing and refitting the alternators	10-25
10.5.4	Service tools	10-26
10.5.4.1	General	10-26
10.5.4.2	Belt - Service tools	10-26
<b>10.6</b>	<b>Starter</b>	<b>10-27</b>
10.6.1	General	10-27
10.6.1.1	General	10-27
10.6.1.2	Principles of operation	10-27
10.6.1.3	Schematic diagram	10-28
10.6.2	Starter - Layout of components	10-29
10.6.3	Tests and diagnostics	10-30
10.6.3.1	Starter diagnostics	10-30
10.6.4	Disassembly/reassembly	10-30
10.6.4.1	Removing/refitting the starter	10-30
<b>10.7</b>	<b>Circuit breaker</b>	<b>10-32</b>
10.7.1	General	10-32
10.7.1.1	Battery isolator	10-32
10.7.1.2	Principles of operation	10-33
10.7.2	Layout of components	10-35
<b>10.8</b>	<b>Triflash triangle</b>	<b>10-36</b>
10.8.1	Disassembly/reassembly	10-36
10.8.1.1	Triflash on standard roof	10-36
10.8.1.2	Triflash on high-visibility roof	10-39
<b>11</b>	<b>Electronics</b>	<b>11-1</b>
<b>11.1</b>	<b>Diagnostic tool</b>	<b>11-3</b>
11.1.1	Diagnostic tool	11-3
<b>11.2</b>	<b>Telemetry</b>	<b>11-4</b>
11.2.1	General	11-4
11.2.1.1	General	11-4
11.2.1.2	Principles of operation	11-4

11.2.1.3 Schematic diagram . . . . .	11-6
11.2.2 Telemetry error codes . . . . .	11-6
11.2.3 Layout of components . . . . .	11-8
11.2.4 Programming and setting parameters . . . . .	11-8
11.2.5 Disassembly/reassembly . . . . .	11-9
11.2.5.1 Access to the AGCOMMAND aerial . . . . .	11-9
11.2.5.2 Disassembling the AM50 AGCOMMAND unit . . . . .	11-10
<b>12 Cab . . . . .</b>	<b>12-1</b>
<b>12.1 Standard air conditioning . . . . .</b>	<b>12-3</b>
12.1.1 General . . . . .	12-3
12.1.1.1 General . . . . .	12-3
12.1.1.2 Principles of operation . . . . .	12-3
12.1.1.3 Technical specifications . . . . .	12-4
12.1.1.4 Schematic diagram of the air conditioning . . . . .	12-7
12.1.1.5 Air conditioning hydraulics diagram . . . . .	12-10
12.1.2 Layout of components . . . . .	12-11
12.1.2.1 Diagram of the air conditioning compressor . . . . .	12-11
12.1.2.2 Layout of components . . . . .	12-12
12.1.3 Tests and diagnostics . . . . .	12-13
12.1.3.1 Air conditioning tests - General . . . . .	12-13
12.1.3.2 Air conditioning tests - Air conditioning unit breakdown . . . . .	12-14
12.1.3.3 Air conditioning tests - Cleaning the system . . . . .	12-15
12.1.4 Adjustments, bleeding and calibrations . . . . .	12-16
12.1.4.1 Safety instructions . . . . .	12-16
12.1.4.2 General maintenance . . . . .	12-17
12.1.4.3 Adjusting the clutch air gap . . . . .	12-17
12.1.4.4 Draining the system and checking for leaks . . . . .	12-18
12.1.4.5 Filling the unit (engine stopped) . . . . .	12-20
12.1.4.6 Checking pressures . . . . .	12-21
12.1.5 Disassembly/reassembly . . . . .	12-23
12.1.5.1 Removing and refitting the roof trim . . . . .	12-23
12.1.5.2 Removing and refitting the drive belts . . . . .	12-25
12.1.5.3 Air conditioning - Replacing the dryer . . . . .	12-26
12.1.6 Service tools . . . . .	12-28
12.1.6.1 General . . . . .	12-28
12.1.6.2 Belt - Service tools . . . . .	12-29
<b>12.2 Self-regulating air conditioning . . . . .</b>	<b>12-30</b>
12.2.1 General . . . . .	12-30
12.2.1.1 General . . . . .	12-30
12.2.1.2 Using the air conditioning system . . . . .	12-30
12.2.1.3 Fan control . . . . .	12-31
12.2.1.4 Activating the compressor . . . . .	12-31
12.2.1.5 Defrosting . . . . .	12-31
12.2.1.6 Recirculation . . . . .	12-31
12.2.1.7 Special conditions . . . . .	12-32
12.2.2 Layout of components . . . . .	12-33
12.2.2.1 Diagram of the air conditioning compressor . . . . .	12-33
12.2.2.2 Layout of components . . . . .	12-34
12.2.2.3 Self-regulating air conditioning - Layout of components . . . . .	12-35
12.2.3 Tests and diagnostics . . . . .	12-36
12.2.3.1 Air conditioning tests - General . . . . .	12-36
12.2.3.2 Air conditioning tests - Air conditioning unit breakdown . . . . .	12-36
12.2.3.3 Air conditioning tests - Cleaning the system . . . . .	12-38
12.2.4 Adjustments, bleeding and calibrations . . . . .	12-38
12.2.4.1 Safety instructions . . . . .	12-38
12.2.4.2 General maintenance . . . . .	12-39
12.2.4.3 Adjusting the clutch air gap . . . . .	12-40

12.2.4.4	Draining the system and checking for leaks . . . . .	12-41
12.2.4.5	Filling the unit (engine stopped) . . . . .	12-42
12.2.4.6	Checking pressures . . . . .	12-43
12.2.5	Disassembly/reassembly . . . . .	12-45
12.2.5.1	Removing and refitting the roof trim . . . . .	12-45
12.2.5.2	Removing and refitting the drive belts . . . . .	12-47
12.2.5.3	Air conditioning - Replacing the dryer . . . . .	12-48
12.2.6	Service tools . . . . .	12-50
12.2.6.1	General . . . . .	12-50
12.2.6.2	Belt - Service tools . . . . .	12-51
<b>12.3</b>	<b>Cab suspension . . . . .</b>	<b>12-52</b>
12.3.1	General . . . . .	12-52
12.3.2	Layout of components . . . . .	12-54
12.3.2.1	Layout of components . . . . .	12-54
12.3.2.2	Blown-up view . . . . .	12-55
12.3.3	Disassembly/reassembly . . . . .	12-56
12.3.3.1	Tightening torques . . . . .	12-56
<b>13</b>	<b>Accessories . . . . .</b>	<b>13-1</b>
<b>13.1</b>	<b>accessories kits . . . . .</b>	<b>13-3</b>
13.1.1	Accessories kits - Engine . . . . .	13-3
13.1.2	Accessories kits - Rear axle . . . . .	13-3
13.1.3	Accessories kits - Power take-off . . . . .	13-3
13.1.4	Accessories kits - Hydraulics . . . . .	13-4
13.1.5	Accessories kits - Electronics . . . . .	13-4
13.1.6	Accessories kits - Cab . . . . .	13-4
<b>14</b>	<b>Service tools . . . . .</b>	<b>14-1</b>
<b>14.1</b>	<b>General . . . . .</b>	<b>14-3</b>
14.1.1	General . . . . .	14-3
<b>14.2</b>	<b>Separation of assemblies . . . . .</b>	<b>14-4</b>
14.2.1	Separation of assemblies - Service tools . . . . .	14-4
<b>14.3</b>	<b>Engine . . . . .</b>	<b>14-5</b>
14.3.1	AGCO Power engine - Service tools . . . . .	14-5
14.3.1.1	Cylinder block tools . . . . .	14-5
14.3.1.2	Timing gear and flywheel housing tools . . . . .	14-6
14.3.1.3	Cylinder head and valve mechanism tools . . . . .	14-7
14.3.1.4	Crank mechanism tools . . . . .	14-8
14.3.1.5	Coolant pump tools . . . . .	14-9
14.3.1.6	Engine control system tools . . . . .	14-10
14.3.1.7	Maintenance and troubleshooting tools . . . . .	14-10
14.3.2	3rd generation SCR engine - Service tools . . . . .	14-11
<b>14.4</b>	<b>Gearbox . . . . .</b>	<b>14-12</b>
14.4.1	Robotic mechanical gearbox - Service tools . . . . .	14-12
14.4.2	Powershift module - Service tools . . . . .	14-13
14.4.3	PowerShuttle - Service tools . . . . .	14-14
14.4.4	Super creeper gears - Service tools . . . . .	14-14
<b>14.5</b>	<b>Rear axle . . . . .</b>	<b>14-15</b>
14.5.1	GPA50/Final drives - Service tools . . . . .	14-15
14.5.2	GPA50/Rear crown wheel and pinion 9x40 and 10x42 - Service tools . . . . .	14-15
14.5.3	GPA50 rear crown wheel and pinion 10x47 - Service tools . . . . .	14-19
14.5.4	GPA50/Linkage and hitch - Service tools . . . . .	14-22
14.5.5	GPA50/Tractor braking - Service tools . . . . .	14-23
14.5.6	Pneumatic trailer brake - Service tools . . . . .	14-24
<b>14.6</b>	<b>Power take-off . . . . .</b>	<b>14-26</b>
14.6.1	GPA50/Rear PTO clutch - Service tools . . . . .	14-26

---

14.6.2	GPA50/Rear PTO with two electrohydraulic speeds - Service tools . . . . .	14-27
14.6.3	GPA50/Rear PTO with three electrohydraulic speeds - Service tools . . . . .	14-29
<b>14.7</b>	<b>Front axle</b> . . . . .	<b>14-31</b>
14.7.1	GPA50/Clutch - Service tools . . . . .	14-31
14.7.2	Front axle - Service tools . . . . .	14-31
14.7.3	DANA 730 - Service tools . . . . .	14-33
<b>14.8</b>	<b>Hydraulics</b> . . . . .	<b>14-34</b>
14.8.1	Hydraulic test – Service tools . . . . .	14-34
14.8.2	Tractor braking - Service tools . . . . .	14-40
<b>14.9</b>	<b>Electricity</b> . . . . .	<b>14-41</b>
14.9.1	Belt - Service tools . . . . .	14-41
<b>14.10</b>	<b>Electronics</b> . . . . .	<b>14-42</b>
14.10.1	Harness - Service tools . . . . .	14-42

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)