

Operator's Manual



9300 DynaFlex™ Draper Header

9325

9330

9335

9340

9345

9350

9300 DynaFlex™ Draper Header

1	Safety	7
1.1	Introduction	9
1.1.1	Safety symbol	9
1.1.2	Safety messages	9
1.1.3	Information messages	9
1.1.4	Safety signs	9
1.1.5	A word to the operator	10
1.1.6	This manual	11
1.2	Operation	12
1.2.1	General information	12
1.2.2	Prepare for operation	13
1.2.3	Personal protective equipment	14
1.2.4	Seat instructions	14
1.2.5	Shield and guards	15
1.2.6	Exhaust warning	15
1.2.7	Flying debris	16
1.2.8	Handrails	16
1.2.9	Agricultural chemicals	16
1.3	Travel on public roads	17
1.4	Maintenance	19
1.4.1	General maintenance information	19
1.4.2	Fire prevention and first aid	20
1.4.3	High pressure leaks	21
1.4.4	Accumulator safety	22
1.4.5	Tire safety	22
1.4.6	Replacement parts	23
1.5	Cylinder stops	24
1.5.1	Engage the stop for the reel lift cylinder	24
1.5.2	Disengage the stop for the reel lift cylinder	24
1.5.3	Engage the center reel stop	24
1.5.4	Disengage the center reel stop	25
1.5.5	Header lift cylinder stop	26
1.6	Shields	27
1.6.1	Draper drive shields	27
1.6.2	Auger shaft shield	27
1.6.3	End shields	27
1.6.4	Reel drive shield	28
1.6.5	Top covers	29
1.7	Safety and informational signs	30
1.7.1	Operators manual	32
1.7.2	Warning - Hydraulic fluid pressure	32
1.7.3	Warning - Entanglement hazard	33
1.7.4	Warning - Crushing hazard	33
1.7.5	Warning - Crushing hazard	33
1.7.6	Reflector yellow	33
1.7.7	Reflector red	34
1.7.8	Reflector orange	34
1.7.9	Informational decals	34
2	Introduction	39
2.1	Introduction	41

2.1.1	Units of measurement	41
2.1.2	Replacement parts	41
2.1.3	Intended use	41
2.1.4	Recommended header/combine usage	41
2.1.5	Proper disposal of waste	41
2.2	Machine identification	42
2.2.1	Serial number plate	42
2.2.2	Serial number description	42
3	Operation	45
3.1	Checklists	47
3.1.1	Daily checklist	47
3.1.2	Before each season checklist	47
3.1.3	End of season checklist	47
3.2	Set up the combine	48
3.2.1	Configure a header	48
3.2.2	Required kits to install the header on the combines	48
3.2.3	Break in the header	49
3.2.4	Check draper belt	49
3.2.5	Parking stands	50
3.3	Set up the IDEAL combine	51
3.3.1	Configure a header	51
3.4	Connect header to IDEAL combine	53
3.4.1	Attach header to the combine	53
3.4.2	Remove header from the combine	54
3.5	Install the header	57
3.6	Remove the header	60
3.7	Reel	62
3.7.1	Reel position	62
3.7.2	Reel speed	65
3.7.3	Reel speed sensors	65
3.8	Tine pitch	66
3.8.1	Adjust the tine pitch	66
3.9	Header control sensors	67
3.9.1	Drag rod sensors	67
3.9.2	Cutterbar sensors	67
3.10	Header pitch	69
3.10.1	Adjust header pitch - IDEAL combines	69
3.10.2	Adjust header pitch - 2009 and later axial combines	69
3.10.3	Adjust header pitch - 2003 to 2008 axial combines	70
3.11	Cutterbar	72
3.11.1	Recommended cutterbar flex pressure	72
3.11.2	Adjust the cutterbar flex pressure - IDEAL	72
3.11.3	Adjust cutterbar flex pressure - 2009 and later axial combines	72
3.11.4	Adjust cutterbar flex pressure - 2003 to 2008 axial combines	73
3.11.5	Lock and unlock the cutterbar	74
3.12	Sickle storage	75
3.13	Header extremity lights	76
3.14	Flighting filler	77
3.15	Header transport kit	78
3.15.1	Put the header transport into field position	78
3.15.2	Position from field to transport	84
3.15.3	Connect the header transport to the hitch	84
4	Maintenance	85

4.1	Lubrication and maintenance	87
4.1.1	Lubrication details	87
4.1.2	Gear box oil level	91
4.2	Sealed chain	93
4.2.1	Lubricate and clean the sealed chain	93
4.2.2	Maintain roller chains	93
4.2.3	Roller chain don'ts	93
4.2.4	Adjust the roller chain	94
4.3	Drive belts	95
4.3.1	Maintain drive belts	95
4.3.2	Adjust main drive belt tension	95
4.3.3	Adjust the center draper drive belt tension	96
4.3.4	Adjust auger drive belt tension	97
4.3.5	Adjust variable speed belt	97
4.4	Draper maintenance	98
4.4.1	Draper care	98
4.4.2	Adjust left and right draper tension	98
4.4.3	Remove the draper	99
4.4.4	Adjust the draper roller scraper	99
4.4.5	Adjust flotation spring for the center deck	100
4.5	Reel	101
4.5.1	Replace the reel tines	101
4.5.2	Adjust the minimum reel lift height	101
4.5.3	Synchronize the reel lift arms	102
4.6	Cutterbar	104
4.6.1	Remove sickle	104
4.6.2	Inspect the sickle	107
4.6.3	Install the sickle	109
4.6.4	Adjust the hold-down pressure for the standard sickle	117
4.6.5	Adjust the sickle register	118
4.6.6	Replace the standard sickle sections	118
4.6.7	Replace the SCH sickle sections	125
4.6.8	Guards, wear plates, knife back rollers for SCH, and hold-downs.	133
4.6.9	Set the sickle time	146
4.6.10	Replace the shear bolt for the sickle drive	146
4.7	Sensor adjustment and calibration	148
4.7.1	Calibrate the automatic header height control (AHHC)	148
4.7.2	Calibrate the header sensor	148
4.7.3	Adjust reel speed sensors	148
4.7.4	Adjust drag rod sensors	148
4.7.5	Adjust and measure cutterbar sensors	150
4.7.6	Verify cutterbar sensor adjustment	152
4.8	Torque the transport wheel	154
4.9	Hydraulics	155
4.9.1	Bleed reel lift cylinders	155
4.9.2	Bleed cutterbar flotation cylinders	155
4.9.3	Bleed header pitch cylinders	155
5	Troubleshooting	157
5.1	Cutterbar	159
5.2	Reel	161
5.3	Draper	162
6	Specifications	165
6.1	Dimensions and weights	167
6.1.1	Header depth	167

6.1.2	Header width	168
6.1.3	Weights	168
6.2	Pick up reel	169
6.3	Reel drive	170
6.4	Reel height control	171
6.5	Cutterbar	172
6.6	Sickle	173
6.7	Header tilt	174
6.8	Drapers	175
6.8.1	Side drapers	175
6.8.2	Center drapers	175
6.9	Center conveyor	176
6.10	General lubrication	177
6.11	Wheels	178
6.12	Header transport	179
6.13	Bolt torque values	180
6.14	Conversion table	182
7	Accessories	185
7.1	Reel divider	187
7.2	Divider rod	188
7.3	Center crop deflector	189
7.4	Stabilizer wheels	190
8	Assembly	191
8.1	Header assembly	193
8.1.1	Remove the shipping stand	193
8.1.2	Set the reel lift cylinders	195
8.1.3	Set the reel	196
8.1.4	Remove the bracket and wire	198
8.1.5	Install the left hand and right hand draper	199
8.1.6	Install the center draper	201
8.2	Pre-delivery checklist	203
8.3	Delivery checklist	204
9	Index	205

1 Safety

1.1	Introduction	9
1.1.1	Safety symbol	9
1.1.2	Safety messages	9
1.1.3	Information messages	9
1.1.4	Safety signs	9
1.1.5	A word to the operator	10
1.1.6	This manual	11
1.2	Operation	12
1.2.1	General information	12
1.2.2	Prepare for operation	13
1.2.3	Personal protective equipment	14
1.2.4	Seat instructions	14
1.2.5	Shield and guards	15
1.2.6	Exhaust warning	15
1.2.7	Flying debris	16
1.2.8	Handrails	16
1.2.9	Agricultural chemicals	16
1.3	Travel on public roads	17
1.4	Maintenance	19
1.4.1	General maintenance information	19
1.4.2	Fire prevention and first aid	20
1.4.3	High pressure leaks	21
1.4.4	Accumulator safety	22
1.4.5	Tire safety	22
1.4.6	Replacement parts	23
1.5	Cylinder stops	24
1.5.1	Engage the stop for the reel lift cylinder	24
1.5.2	Disengage the stop for the reel lift cylinder	24
1.5.3	Engage the center reel stop	24
1.5.4	Disengage the center reel stop	25
1.5.5	Header lift cylinder stop	26
1.6	Shields	27
1.6.1	Draper drive shields	27
1.6.2	Auger shaft shield	27
1.6.3	End shields	27
1.6.4	Reel drive shield	28
1.6.5	Top covers	29
1.7	Safety and informational signs	30
1.7.1	Operators manual	32
1.7.2	Warning - Hydraulic fluid pressure	32
1.7.3	Warning - Entanglement hazard	33
1.7.4	Warning - Crushing hazard	33
1.7.5	Warning - Crushing hazard	33
1.7.6	Reflector yellow	33
1.7.7	Reflector red	34
1.7.8	Reflector orange	34
1.7.9	Informational decals	34

1.1 Introduction

1.1.1 Safety symbol

The safety symbol tells you about a potentially hazardous area!

Look for the safety symbol in this manual and on the machine. The safety symbols tell you that there is important safety instructions in the manual.

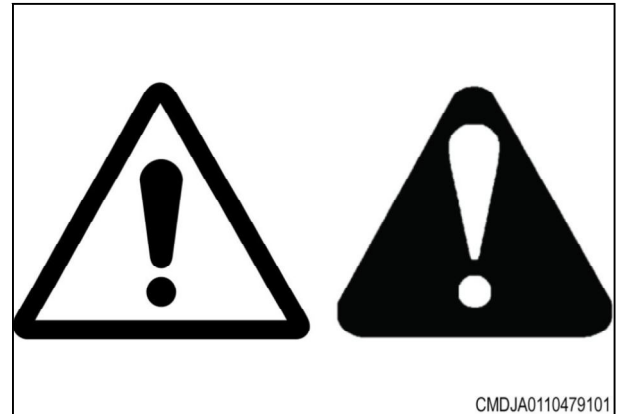 


Fig. 1

1.1.2 Safety messages

The words DANGER, WARNING or CAUTION are used with the safety symbol. Learn these safety messages and obey the recommended precautions and safety instructions.



DANGER:
If you do not obey the recommended precautions and safety instructions, **DEATH OR INJURY will occur.**



WARNING:
If you do not obey the recommended precautions and safety instructions, **DEATH OR INJURY can occur.**



CAUTION:
If you do not obey the recommended precautions and safety instructions, **INJURY can possibly occur.**



Fig. 2

1.1.3 Information messages

The words important and note are not related to personal safety, and are used to give information about the operation and servicing of the machine.

IMPORTANT: Identifies special instructions or procedures which, if not followed, can cause damage to the machine, the process, or the area around the machine.

NOTE: Information to make procedures easier.

1.1.4 Safety signs



WARNING:
Do not remove the safety signs. Replace safety signs that you cannot read, are damaged, or are missing.

Clean the machine surface with a weak soap and water solution before you replace the safety signs. Replacement safety signs are available from your dealer.

1. Safety

Always make sure that safety signs are in the correct locations and that you can read the safety signs. Illustrations of safety sign locations are in this section.

Keep the safety signs clean. If necessary, use a weak soap and water solution.

1.1.5 A word to the operator

It is your responsibility to read and understand the safety section in this manual and the manual for all implements before you operate this machine. You are responsible for your safety. Good safety procedures prevent injury to you and the persons around you.

Make the information in the safety section of this manual a part of your safety procedure. This safety section is written only for this type of machine. Safety is your responsibility. You can prevent injury and death.

This safety section gives basic safety examples that can occur during the operation and maintenance of your machine. This safety section is not a replacement for safety instruction in other sections of this manual.

Injury or death can occur if the safety instruction is not obeyed.

Learn how to operate the machine and how to use the controls correctly.

Do not operate the machine if you do not know how to operate the machine. Do not let persons operate the machine that do not know how to operate the machine.

Follow all safety instructions in the manuals and on the safety signs on the machine, the implements, and the attachments.

Use only approved attachments and implements.

Make sure that your machine has the correct equipment that is necessary by the local regulations.

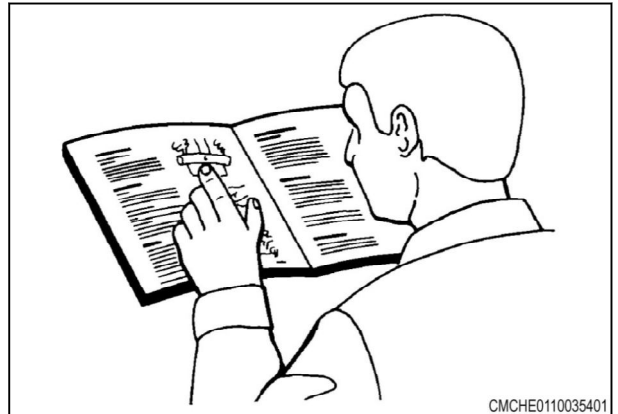 


Fig. 3



WARNING:

Do not use alcohol or drugs that can have an effect on alertness or coordination. If you use prescription or 'over the counter' drugs, get medical advice about the safe operation of machines.



CAUTION:

If attachments or implements used with this machine have a different operator manual, see that operator manual for other important safety instructions.

**CAUTION:**

See the engine operation and maintenance manual for other important safety instructions.

**CAUTION:**

See the combine operator manual for other important safety instructions.

1.1.6 This manual

This manual covers general safety instructions for this machine. Keep this manual with the machine.

Right and left, as used in this manual, are given as if you are in the operator seat.

The photos, illustrations, and data used in this manual were up to date when published, but in-line production changes can make your machine have small differences. The manufacturer reserves the right to redesign and change the machine as necessary without notification.

**WARNING:**

In some of the illustrations and photos used in this manual, shields or guards are removed. Operate the machine only with all shields and guards in the correct installed positions. If the removal of shields or guards is necessary to make a repair, they must be installed before operation.

1.2 Operation

1.2.1 General information

When parking, park the machine on a solid level surface and lower the header to the ground. Put all controls in neutral and apply the park brake. Stop the engine and take the key with you.



WARNING:
Do not leave the machine unattended with the header raised. Lower the header fully before leaving the machine. A sudden loss of hydraulic pressure can cause the header to drop without warning.

Make sure the machine is in the proper operating condition according to the Operator Manual.

Always operate the machine with the control console turned on.

Do not dismount from moving machinery.

Stay off slopes too steep for operation.

Be aware of the size of the machine and have enough space available to allow for operation.

Use extra care and reduce speed when operating on hillsides or near ditches or embankments especially with a full grain tank to avoid rollover. Travel speed must be such that complete control and machine stability is maintained at all times. Shift to a lower gear before descending a steep hill.

Regulate ground speed to field conditions, and maintain control at all times.

Do not dismount from moving machinery.

Avoid contact with electrical power lines. Always put the grain tank unloader tube in the transport position and lower radio aerial before moving the machine near electrical wires. Contact with electrical power lines can cause electrical shock, resulting in very serious injury or death.

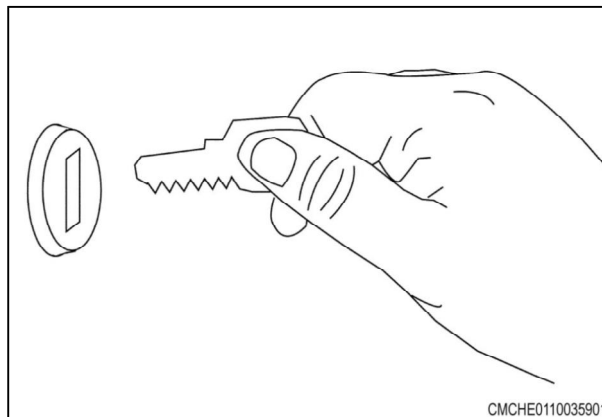 


Fig. 4

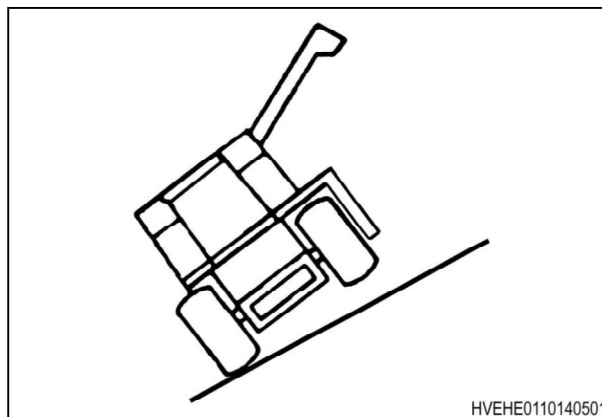 


Fig. 5

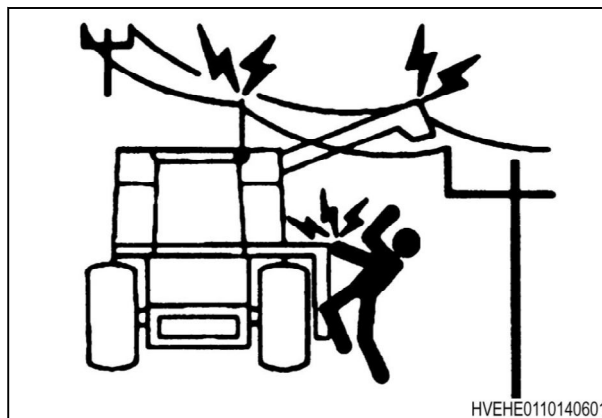 


Fig. 6

Never permit anyone on any part of the machine or attachments except in the operator's seat and the instructional seat when the engine is running.

Do not get on or off the machine while the machine is moving.



Fig. 7

Always stop the engine, shift the transmission to neutral, set park brake and remove the start key before leaving the operator's station or before permitting anyone to inspect, clean, lubricate, adjust or repair any part of the machine or attachments unless specifically instructed otherwise in this manual. Never leave machine unattended while the engine is operating.



Fig. 8

1.2.2 Prepare for operation

Read and understand the operating instructions and precautions in this manual before you operate or perform service on the machine.

Make sure that you know and understand the positions and operations of all controls. Make sure that all controls are in neutral and the parking brake is applied before you start the machine.

Make sure that all persons are a sufficient distance from your area of work before you start or operate the machine. Do checks on the controls and learn all controls in an area clear of persons and objects before you start work with the machine. Know the dimensions of the machine and have sufficient space available for operation. Do not operate the machine at high speeds around persons, buildings, other equipment, etc.

Always use correct procedures when you do tasks around and operate the machine. Do not let children or persons who do not know how to operate the machine operate the machine. Keep other persons away from your area of work. Do not let other persons ride on the machine.

Make sure that the machine is in the good mechanical condition. Make sure that the machine has the correct equipment as necessary by local regulations.

All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this equipment before you start.

1.2.3 Personal protective equipment

Put on all personal protective equipment (PPE) and protective clothes that are supplied to you or that are necessary for the conditions and by applicable laws. PPE includes equipment to prevent injury to your eyes, lungs, ears, head, hands and feet.

Always keep hands, feet, hair, and your clothes away from parts that move. Do not put on loose clothing, jewelry, watches, or other items that can tangle in parts that move. Tie up long hair that can also tangle in moving parts.

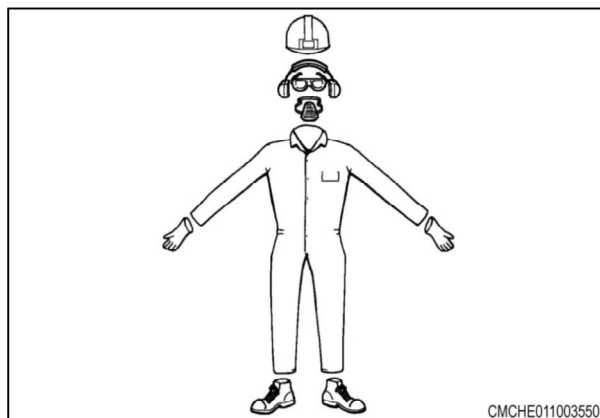 


Fig. 9

1.2.4 Seat instructions

Put on the seat belt before you operate the machine. Always sit in the seat and have the seat belt on while you operate the machine. Replace the seat belts when they become worn or broken.

Do not use a seat belt loosely. Make sure that there is some tension on the seat belt. Do not wear the seat belt in a twisted condition or pinched between the structural parts of the seat.

Put on the seat belt if the instructional seat is used. Use the instructional seat only to train new operators or to find a problem. The instructional seat is only for short periods of use.

Do not let children use the instructional seat or be in the cab. Do not let other persons use the instructional seat or be in the cab.

Drive the machine at slower speed and on level ground when the instructional seat is used. Do not start, stop, or turn quickly when the instructional seat is used. Do not drive on highways or public roads when the instructional seat is used.

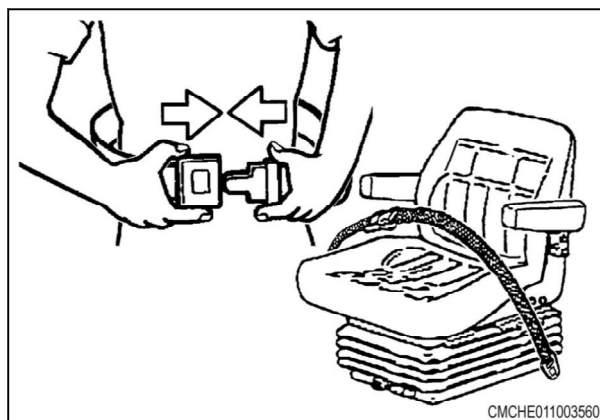 


Fig. 10

1.2.5 Shield and guards



WARNING: Entanglement hazard.
Belts and components that rotate.

Severe personal injury or death can occur.

Do not open, remove, or put your hand behind shields if the engine is running. Stop the machine before doing service to the machine.

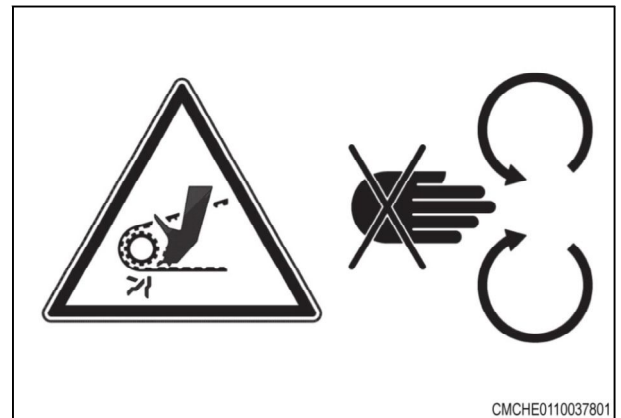 


Fig. 11

All shields and guards must be in the correct position and in good condition. Keep away from the components that rotate.



DANGER: Entanglement hazard.
Rotating components.

Severe personal injury or death can occur.

Do not make adjustments or repairs to components while they are moving. Stop the machine before doing service to the machine.

Do not operate the machine with the drive shaft shields open or removed.

Keep away from the components that turn.

Make sure guards that turn are free.



Fig. 12

1.2.6 Exhaust warning



WARNING: Inhalation hazard. Exhaust gases.

Death or serious illness can occur.

Do not operate the engine in a closed building unless the exhaust is ventilated to the outside.

Do not tamper with or modify the exhaust system with unapproved extensions.

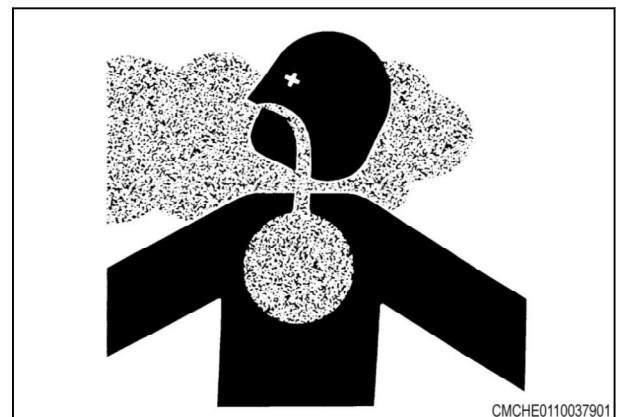 


Fig. 13

1.2.7 Flying debris



WARNING:
Be careful when you operate along the side of a road or structures. Rocks and other materials can be thrown from the machine during operation and can cause injury.

Stay away from the machine during operation. Some materials can be thrown from the machine during operation and cause injury.

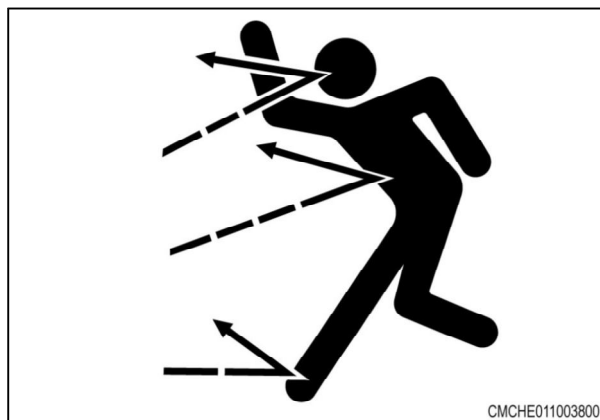 


Fig. 14

1.2.8 Handrails



WARNING: Falling hazard.
Personal injury or death can occur.
Use appropriate safety precautions when working off the ground.

Point your body in the direction of the ladder and use the handrails when you are on the machine ladders. Always keep three points of contact with the ladder.



Fig. 15

1.2.9 Agricultural chemicals

Agricultural chemicals are very dangerous. Incorrect procedures with fertilizer, fungicides, herbicides, insecticides and pesticides can cause injuries to plants, animals, soil and other persons property.

Always read and follow all manufacturers instructions before you open chemical containers.

Read and follow instructions each time you use a chemical.

Use the same precautions when you do adjustments, do servicing, clean or store the machine as used when you put chemicals into the hoppers or tanks.

Tell all persons who are near chemicals of the possible dangerous results and the safety precautions that are necessary.

Stay upwind and away from smoke from a chemical fire.

Keep or discard all chemicals that are not used as specified by the chemical manufacturer.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com