## MX100, MX110, MX120 and MX135 Tractors

## Service Manual Don 7-65907

## **Table of Contents**

## Binder 1 Contains Tabs 1 to 6 Binder 2 Contains Tabs 7 to 10

	Section	Pub. No.
1	GENERAL Loctite Product Chart Safety Rules, General Information and Torque Specifications	8-98902 8-86531 7-39021 7-73502
2	ENGINE NOTE: For Service and Overhaul procedures refer to your Engine Service	ice Manual.
3	FUEL SYSTEM Fuel Tank Removal and Servicing	7-73330
4	ELECTRICALElectrical Troubleshooting and Schematics.4001Instrument Cluster Programming.4002Battery Servicing and Testing.4004Alternator.4008	7-73650 7-71332 7-73211 7-68501
5	STEERINGHow It Works5Steering Column and Steering Hand Pump5001Danfoss Steering Hand Pump5002Eaton Steering Hand Pump5002Rexroth Steering Hand Pump50022WD Front Axle5003	7-72230 7-72241 7-73341 7-73351 7-73960 7-73220
6	TRANSMISSIONHow It Works6Separating the Tractor (Between Engine and Speed Transmission)6002Separating the Tractor (Between Speed and Range Transmission)6003Transmission Input Drive Shaft and Torque Dampener6004Servicing the Synchromesh Speed Transmission6005Servicing the Powershift Transmission6006Servicing the Range Transmission6007Powershift Valve6009Shuttle Valve6010Synchronizer Creep Transmission6011	7-72260 7-66060 7-66070 7-66080 7-66090 7-66100 7-66111 7-66131 7-66141 7-66150

NOTE: Information contained in this Manual may cover features that are not available in all markets worldwide.

CASE CORPORATION 700 State Street Racine, WI 53404 U.S.A.



continued ....

	Differential and Differential Lock	6012	7-66161
	MFD Drive Shaft	6014	7-66170
	MFD Output Shaft and Bearing	6015	7-67821
	MFD Clutch		7-66180
	Rear Axles and Planetaries		7-66190
	PTO - Reversible and Shiftable	6019	7-66201
	MFD Axle		7-66210
	Independent Front Suspension Axle	6022	7-73530
	PTO Front Drive Shaft and Hydraulic Pump Drive Gear		
	up to Transmission Serial Number JKA118657	6023	7-66221
	PTO Front Drive Shaft and Hydraulic Pump Drive Gear		
	from Transmission Serial Number JKA118658	6023	7-72710
7	BRAKES		
	How It Works		7-72380
	Parking Brake		7-66240
	Service Brakes		7-66251
	Hydraulic Trailer Brake Valve	7004	7-67711
8	HYDRAULICS		
	How it Works		7-72320
	How to Read Hydraulic Schematics		8-94372
	Hydraulic Troubleshooting and Schematic		7-73630
	Hydraulic Pump		7-73230
	Charge Pump/Transfer Pump		7-66290
	Hydraulic Valves		7-66331
	Front Hitch		7-73240
	Remote Valves		7-73250
	Hydraulic Schematic Poster		7-67150
9	CHASSIS AND MOUNTED EQUIPMENT		
	Pedal, Lever Adjustments		7-66351
	Air Conditioner Troubleshooting (Visual and Operating)		7-85050
	Air Conditioner Gauges and Testing	9003	7-85060
	Air Conditioner System Service	0004	7.0507
	(Refrigerant Recovery, System Evacuation and Recharging)		7-85070
	Air Conditioner System Components Service		7-85080
	Cab Removal and Tilting the Cab Roof		7-73260
	Platform and ROPS Removal		7-73270
	Cab Mountings	9008	7-73300
10	CONTROLLER SYSTEMS		
	Hitch/MFD/Differential Lock Controller Calibration, Error Codes		
	and Schematics up to PIN JJE956905 (Europe) or		
	PIN JJA96840 (North America)	10002	7-73290
	Hitch/MFD/Differential Lock Controller Calibration, Error Codes		
	and Schematics from PIN JJE956906 (Europe) or	10000	7 707 11
	PIN JJA96841 (North America)	10002	7-73542
	Independent Front Suspension Axle	40000	7 7000
	Calibration, Error Codes, Troubleshooting and Schematics	10003	7-73900
	PTO/FNR Controller and Powershift	10000	7 7000
	Configuration, Error Codes and Schematics	10006	7-73281
	Programming the PTO/FNR Controller and Hitch/MED/Differential Lock Controller	10010	7-74001
	LINEARING LIVERUPE PROBLEM CONTROL CON	1111111	

Don 7-65917 Issued 10-00

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com