

## *Combine Range*

*DELTA 9280  
+ Auto Level  
+ Rotor Feeder*



- 0 Introduction - Specifications**
- 1 Cutting table**
- 2 Reel**
- 3 Main crop elevator**
- 4 Threshing unit**
- 5 Rotor unit**
- 6 Shaker shoe - Fanning mill**
- 7 Elevators**
- 8 Engine**
- 9 Unloading auger - Grain tank**
- 10 Drive unit**
- 11 Transmissions**
- 12 Undercarriage**
- 13 Cab**
- 14 Hydraulics**
- 15 Electrical system**
- 16 Straw chopper**
- 17 General assembly instructions**
- 18 Miscellaneous data**

# Contents

---

# Contents

<b>0: Introduction - Specifications</b> .....	<b>1</b>
0.1 Using the manual .....	3
0.2 General specifications .....	4
0.2.1 Tyre pressure .....	9
0.3 Dimensions and weight .....	11
0.4 Safety precautions .....	14
0.4.1 Safety in the workshop .....	14
0.4.2 Safety - a word to the mechanic .....	14
0.4.3 Safety - danger, warning and caution .....	14
0.4.4 Safety decals .....	14
0.4.5 General .....	14
0.4.6 Personal safety .....	14
0.4.7 Considerations with regard to equipment .....	15
0.4.8 General considerations .....	16
0.4.9 Operational considerations .....	16
0.4.10 Maintenance techniques .....	17
0.5 Practical advice .....	18
0.6 Start-up instructions .....	21
0.6.1 General .....	21
0.6.2 Pre-delivery checks .....	21
0.6.3 Instruction of combine operator .....	22
0.7 Conversion tables .....	25
0.7.1 Conventional units of measurement .....	25
0.8 Locking and sealing agents .....	27
0.9 Wheel nut torques .....	28
0.9.1 Wheels .....	28
0.9.2 Bolts with metric threads .....	29
0.9.3 Nuts with metric threads .....	30
<b>1: Cutting table</b> .....	<b>31</b>
1.1 General .....	33
1.2 Knife drive - wobble box .....	34
1.2.1 Removal .....	34
1.2.2 Assembly .....	35
1.2.3 Reconditioning the wobble box .....	36
1.2.4 Positioning the double fingers, knife and crop lifters .....	42
1.3 Table auger .....	43
1.3.1 Removal .....	43
1.3.2 Assembly .....	43
1.3.3 Replacing the shaft on the right-hand side .....	44
1.3.4 Replacing the shaft on the left-hand side .....	45
1.3.5 Replacing the crankshaft .....	45
1.3.6 Replacing the feathering fingers, bearings and bushes .....	46
1.3.7 Adjusting the table auger and feathering fingers .....	47
1.4 Table body .....	48
1.4.1 Adjusting the cut-off strips .....	48
1.4.2 Adjusting and positioning the ground sensor - PowerFlow .....	49
1.5 Slip clutch and chain drive .....	51
1.5.1 Removal .....	51
1.5.2 Assembly .....	51
1.5.3 Replacing the bearings and sprockets .....	52
1.6 Countershaft .....	53
1.6.1 Removal .....	53
1.6.2 Assembly .....	54
1.7 PowerFlow table .....	55
1.7.1 Removal, belts .....	56
1.7.2 Assembly, belts .....	58
1.7.3 Replacing the front rollers and bearings, scraper adjustment .....	60

# Contents

---

1.7.4	Replacing the rear rollers and bearings, scraper adjustment . . . . .	62
1.7.5	Replacing and aligning the bearing housing, rear rollers . . . . .	62
1.7.6	Belt tensioning and running-in . . . . .	64
<b>2:</b>	<b>Reel . . . . .</b>	<b>67</b>
2.1	<b>Reel . . . . .</b>	<b>69</b>
2.1.1	Removal . . . . .	69
2.1.2	Assembly . . . . .	70
2.1.3	Replacing the reel tine bar and plastic bearings . . . . .	71
2.1.4	Replacing the guide rollers, eccentric, guide ring and bearings . . . . .	72
2.1.5	Replacing the reel plates . . . . .	73
2.1.6	Replacing the reel tube, bearings . . . . .	73
2.2	<b>Oil motor and chain drive . . . . .</b>	<b>74</b>
2.2.1	Replacing the oil motor . . . . .	74
2.2.2	Replacing the flow divider . . . . .	75
2.3	<b>Hydraulic cylinders . . . . .</b>	<b>78</b>
2.3.1	Replacing the cylinder – reel up/down . . . . .	78
2.3.2	Replacing the cylinder – reel forward/back . . . . .	79
2.3.3	Reconditioning the hydraulic cylinders . . . . .	79
<b>3:</b>	<b>Main crop elevator . . . . .</b>	<b>85</b>
3.1	<b>General . . . . .</b>	<b>87</b>
3.2	<b>Main crop elevator . . . . .</b>	<b>88</b>
3.2.1	Removal . . . . .	88
3.2.2	Assembly . . . . .	89
3.2.3	Bearing block on machine frame . . . . .	90
3.2.4	Replacing the lifting ram . . . . .	90
3.2.5	Reconditioning the hydraulic cylinder . . . . .	91
3.2.6	Replacing the cutting height preset sensor . . . . .	92
3.3	<b>Crop elevator chain . . . . .</b>	<b>93</b>
3.3.1	Removal . . . . .	93
3.3.2	Assembly . . . . .	93
3.3.3	Replacing the slats . . . . .	94
3.3.4	Replacing the slide rails in the crop elevator . . . . .	94
3.3.5	Replacing the intermediate plate . . . . .	94
3.4	<b>Elevator chain top shaft . . . . .</b>	<b>95</b>
3.4.1	Removal . . . . .	95
3.4.2	Assembly . . . . .	95
3.4.3	Replacing the bearings . . . . .	96
3.4.4	Replacing the sprockets . . . . .	97
3.4.5	Replacing the shaft protection tube . . . . .	98
3.5	<b>Elevator chain front shaft . . . . .</b>	<b>99</b>
3.5.1	Removal . . . . .	99
3.5.2	Assembly . . . . .	99
3.5.3	Replacing the shaft, bearings and plate wheels . . . . .	100
3.6	<b>Elevator countershaft . . . . .</b>	<b>101</b>
3.6.1	Removal . . . . .	101
3.6.2	Assembly . . . . .	102
3.6.3	Replacing the bearings and sprockets . . . . .	102
3.7	<b>Table clutch and chain drive . . . . .</b>	<b>103</b>
3.7.1	Removal . . . . .	103
3.7.2	Assembly . . . . .	103
3.7.3	Reconditioning the clutch . . . . .	103
3.8	<b>Adapter . . . . .</b>	<b>104</b>
3.8.1	Removal . . . . .	104
3.8.2	Assembly . . . . .	105
3.8.3	Replacing the cylinder/connecting rod . . . . .	105
3.8.4	Reconditioning the hydraulic cylinder . . . . .	106
3.8.5	Replacing the angle sensor . . . . .	107

3.9	Hydraulic reversing	108
3.9.1	Removal	108
3.9.2	Assembly	108
<b>4:</b>	<b>Threshing unit</b>	<b>109</b>
4.1	General	111
4.2	Stone trap	112
4.2.1	Removal	112
4.2.2	Assembly	112
4.3	Concave	113
4.3.1	Removal	113
4.3.2	Assembly	113
4.3.3	Adjusting the concave laterally	114
4.3.4	Concave setting - initial setting	114
4.3.5	Replacing the actuator	115
4.3.6	Replacing the lead-in plate	115
4.3.7	Replacing the shaft for concave setting	116
4.4	Threshing cylinder	117
4.4.1	Removal	117
4.4.2	Assembly	118
4.4.3	Replacing the bearings	119
4.4.4	Replacing the rasp bars and backing bars	120
4.4.5	Replacing the shaft and cylinder spiders	120
4.5	Cylinder variator – table clutch	121
4.5.1	Removal, hydraulic variator	121
4.5.2	Assembly, hydraulic variator	121
4.5.3	Reconditioning the hydraulic variator pulley	122
4.5.4	Removal, mechanical variator	124
4.5.5	Assembly, mechanical variator	124
4.5.6	Reconditioning the mechanical variator pulley	125
4.5.7	Removal, magnetic clutch	126
4.5.8	Assembly, magnetic clutch	127
4.5.9	Reconditioning the magnetic clutch	128
4.6	Bracket for counter drive	130
4.6.1	Removal	130
4.6.2	Assembly and alignment	130
4.7	Rear beater	131
4.7.1	Removal	131
4.7.2	Assembly	132
4.7.3	Replacing the bearings	133
4.8	Rear beater concave	134
4.8.1	Removal	134
4.8.2	Assembly	134
4.9	Rotor Feeder	135
4.9.1	Removal	135
4.9.2	Assembly	136
4.9.3	Replacing the bearings	137
4.9.4	Service access to Rotor Feeder	138
4.10	Rotor Feeder concave	138
4.10.1	Removal	138
4.10.2	Assembly	138
<b>5:</b>	<b>Rotor unit</b>	<b>139</b>
5.1	General	141
5.2	Rotor variator	142
5.2.1	Removal, hydraulic variator	142
5.2.2	Assembly, hydraulic variator	142
5.2.3	Reconditioning the hydraulic variator pulley	143
5.2.4	Removal, mechanical variator	144

# Contents

---

5.2.5	Assembly, mechanical variator	144
5.2.6	Reconditioning the mechanical variator pulley	144
5.2.7	Replacing and reconditioning the magnetic clutch	145
<b>5.3</b>	<b>Shaft for mechanical variator</b>	<b>147</b>
5.3.1	Removal	147
5.3.2	Assembly	147
<b>5.4</b>	<b>Right-angle gear</b>	<b>148</b>
5.4.1	Removal	148
5.4.2	Assembly	149
<b>5.5</b>	<b>Rotor</b>	<b>150</b>
5.5.1	Removal	150
5.5.2	Assembly	151
5.5.3	Replacing the front bearing	151
<b>5.6</b>	<b>Rotor cage</b>	<b>152</b>
5.6.1	Removal	152
5.6.2	Assembly	154
5.6.3	Replacing grate sections	154
<b>6:</b>	<b>Shaker shoe - Fanning mill</b>	<b>155</b>
<b>6.1</b>	<b>General</b>	<b>157</b>
<b>6.2</b>	<b>Fanning Mill</b>	<b>158</b>
6.2.1	Removal	158
6.2.2	Assembly	159
6.2.3	Replacing the fan blades	160
6.2.4	Replacing the fanning mill deflector plates	160
6.2.5	Replacing the seals	160
<b>6.3</b>	<b>Main grain pan frame</b>	<b>161</b>
6.3.1	Removal	161
6.3.2	Assembly	162
6.3.3	Replacing the swivel arm and bearings	162
6.3.4	Replacing the seals	163
<b>6.4</b>	<b>Second grain pan</b>	<b>164</b>
6.4.1	Removal	164
6.4.2	Assembly	164
6.4.3	Replacing the swivel arm and bearings	165
6.4.4	Adjusting second grain pan	166
<b>6.5</b>	<b>Top shaker shoe</b>	<b>168</b>
6.5.1	Removal	168
6.5.2	Assembly	169
6.5.3	Replacing the swivel arm and bearings	170
6.5.4	Replacing the seals	170
6.5.5	Replacing and calibrating the actuator - sieves	171
<b>6.6</b>	<b>Bottom shaker shoe</b>	<b>172</b>
6.6.1	Removal	172
6.6.2	Assembly	173
6.6.3	Replacing the swivel arm and bearings	173
6.6.4	Replacing the seals	174
6.6.5	Electric sieve setting – initial setting	174
<b>6.7</b>	<b>Bottom augers</b>	<b>175</b>
6.7.1	Removal	175
6.7.2	Assembly	175
<b>6.8</b>	<b>Eccentric drive</b>	<b>176</b>
6.8.1	Removal	176
6.8.2	Assembly	177
6.8.3	Adjusting the connecting rod / aligning the shaker shoes	178
6.8.4	Replacing the connecting rod bearing	179
6.8.5	Replacing the bearings and eccentric shaft	180
<b>6.9</b>	<b>Transmissions</b>	<b>181</b>
6.9.1	Replacing and reconditioning the fanning mill variator	181

6.9.2	Adjusting the fanning mill variator . . . . .	182
6.9.3	Replacing and reconditioning the counter drive. . . . .	183
<b>7:</b>	<b>Elevators . . . . .</b>	<b>185</b>
7.1	Tank filling elevator . . . . .	186
7.1.1	Removal . . . . .	186
7.1.2	Assembly . . . . .	187
7.1.3	Replacing the top shaft, bearings and sprockets . . . . .	188
7.1.4	Replacing the bottom sprocket . . . . .	188
7.1.5	Replacing the elevator chain . . . . .	189
7.1.6	Moisture sensor . . . . .	189
7.1.7	Yieldmeter sensor . . . . .	190
7.2	Returns elevator . . . . .	191
7.2.1	Removal . . . . .	191
7.2.2	Assembly . . . . .	191
7.2.3	Replacing the top shaft, bearings and sprockets . . . . .	192
7.2.4	Replacing the bottom sprocket . . . . .	192
7.2.5	Replacing the elevator chain . . . . .	192
7.2.6	Returns volume sensor . . . . .	192
7.3	Returns thresher . . . . .	193
7.3.1	Removal . . . . .	193
7.3.2	Assembly . . . . .	193
7.3.3	Replacing the sprockets. . . . .	193
7.3.4	Replacing the threshing cylinder . . . . .	193
7.3.5	Reconditioning the right-angle gear . . . . .	194
7.4	Tank filling auger . . . . .	196
7.4.1	Removal . . . . .	196
7.4.2	Assembly . . . . .	196
7.4.3	Replacing the top bearing . . . . .	196
7.4.4	Reconditioning the right-angle gear . . . . .	197
7.5	Transmission . . . . .	198
7.5.1	Replacing the shaft, bearings and sprockets . . . . .	198
<b>8:</b>	<b>Engine . . . . .</b>	<b>199</b>
8.1	General . . . . .	201
8.2	Replacing the engine . . . . .	202
8.2.1	Removing the engine assembly. . . . .	202
8.2.2	Fitting the engine assembly. . . . .	205
<b>9:</b>	<b>Unloading auger - Grain tank . . . . .</b>	<b>207</b>
9.1	Unloading auger - horizontal . . . . .	209
9.1.1	Removal . . . . .	209
9.1.2	Assembly . . . . .	209
9.2	Unloading auger - vertical . . . . .	210
9.2.1	Removal . . . . .	210
9.2.2	Assembly . . . . .	210
9.2.3	Reconditioning the right-angle gear . . . . .	211
9.3	Unloading tube - horizontal . . . . .	212
9.3.1	Removal . . . . .	212
9.3.2	Assembly . . . . .	212
9.4	Unloading tube - vertical . . . . .	213
9.4.1	Removal . . . . .	213
9.4.2	Assembly . . . . .	213
9.4.3	Replacing the swivel bearing . . . . .	214
9.4.4	Replacing the hydraulic cylinder . . . . .	215
9.4.5	Reconditioning the hydraulic cylinder . . . . .	216
9.5	Unloading tube elbow . . . . .	217
9.5.1	Removal . . . . .	217
9.5.2	Assembly . . . . .	217



# Contents

---

9.5.3	Reconditioning the right-angle gear	217
<b>9.6</b>	<b>Bottom auger and cover plate</b>	<b>219</b>
9.6.1	Removal	219
9.6.2	Assembly	219
9.6.3	Replacing the bearings, safety clutch	220
<b>9.7</b>	<b>Transmission</b>	<b>221</b>
9.7.1	Replacing the unloading auger shaft, bearings	221
9.7.2	Replacing and reconditioning the magnetic clutch	221
<b>9.8</b>	<b>Grain tank covers</b>	<b>224</b>
9.8.1	Removal	224
9.8.2	Assembly	224
<b>10:</b>	<b>Drive unit</b>	<b>225</b>
<b>10.1</b>	<b>Radiator - Intercooler</b>	<b>227</b>
10.1.1	Removal	227
10.1.2	Assembly	227
<b>10.2</b>	<b>Oil cooler</b>	<b>228</b>
10.2.1	Removal	228
10.2.2	Assembly	228
<b>10.3</b>	<b>Condenser – air conditioning</b>	<b>229</b>
10.3.1	Removal	229
10.3.2	Assembly	229
<b>10.4</b>	<b>Rotary screen</b>	<b>230</b>
10.4.1	Removal	230
10.4.2	Assembly	231
10.4.3	Adjusting the rotary screen and cleaning blade	232
10.4.4	Replacing the drive shaft and clutch	233
<b>10.5</b>	<b>Dust aspirator</b>	<b>236</b>
10.5.1	Removal	236
10.5.2	Assembly	236
<b>10.6</b>	<b>Hydrostatic pump</b>	<b>237</b>
10.6.1	Removal	237
10.6.2	Assembly	239
10.6.3	Tensioning device	240
<b>10.7</b>	<b>Auxiliary hydraulic pump</b>	<b>241</b>
10.7.1	Removal	241
10.7.2	Assembly	241
<b>10.8</b>	<b>Hydraulic pump - Maxi Spreader</b>	<b>242</b>
10.8.1	Removal	242
10.8.2	Assembly	242
<b>10.9</b>	<b>Hydraulic oil tank</b>	<b>243</b>
10.9.1	Removal	243
10.9.2	Assembly	243
<b>10.10</b>	<b>Fuel tank</b>	<b>244</b>
10.10.1	Removal	244
10.10.2	Assembly	244
10.10.3	Tank gauge	244
<b>10.11</b>	<b>AdBlue tank</b>	<b>245</b>
10.11.1	Removal	245
10.11.2	Assembly	245
10.11.3	Supply module	245
10.11.4	Dosing module	246
10.11.5	Tank sensor	246
<b>10.12</b>	<b>Compressor – air conditioning</b>	<b>247</b>
10.12.1	Removal	247
10.12.2	Assembly	247
<b>10.13</b>	<b>Power take-off</b>	<b>248</b>
10.13.1	Removal	248
10.13.2	Assembly	248

10.13.3	Replacing the swivel bearing . . . . .	248
10.13.4	Replacing the output shaft/bearings . . . . .	249
<b>11:</b>	<b>Transmissions . . . . .</b>	<b>251</b>
11.1	General . . . . .	253
11.2	Countershaft . . . . .	254
11.2.1	Removal . . . . .	254
11.2.2	Assembly . . . . .	255
11.2.3	Replacing the bearings . . . . .	256
11.2.4	Reconditioning the safety clutch . . . . .	256
11.3	Replacing the belts, right-hand side . . . . .	257
11.3.1	Rear beater - counter drive, cylinder variator . . . . .	257
11.3.2	Counter drive, variator - threshing cylinder . . . . .	258
11.3.3	Rear beater - rotary separator . . . . .	259
11.3.4	Fanning mill - fanning mill variator . . . . .	260
11.3.5	Rear beater - fanning mill variator . . . . .	260
11.3.6	Unloading auger shaft - unloading auger . . . . .	261
11.3.7	Unloading auger shaft - rotary screen clutch . . . . .	262
11.3.8	Unloading auger shaft - dust aspirator . . . . .	263
11.3.9	Countershaft - counter drive, elevators . . . . .	264
11.3.10	Rotor countershaft - right-angle gear . . . . .	264
11.4	Replacing the chains, right-hand side . . . . .	265
11.4.1	Counter drive, elevators - returns elevator . . . . .	265
11.4.2	Counter drive, elevators - tank filling elevator . . . . .	265
11.4.3	Counter drive, elevators - tank filling auger . . . . .	265
11.4.4	Returns elevator - returns thresher . . . . .	266
11.4.5	Reel drive . . . . .	266
11.5	Replacing the belts, left-hand side . . . . .	267
11.5.1	Countershaft - rear beater . . . . .	267
11.5.2	Countershaft - counter drive, straw chopper . . . . .	267
11.5.3	Counter drive - straw chopper . . . . .	268
11.5.4	Engine - countershaft . . . . .	269
11.5.5	Rear beater - countershaft, shaker shoe drive . . . . .	270
11.5.6	Countershaft, shaker shoe drive - eccentric shaft . . . . .	271
11.5.7	Engine - rotor countershaft . . . . .	271
11.5.8	Rear beater - elevator chain top shaft . . . . .	272
11.5.9	Engine - unloading auger shaft . . . . .	272
11.5.10	Engine - hydrostatic pump . . . . .	273
11.5.11	PTO shaft - table countershaft . . . . .	274
11.5.12	Table countershaft - knife drive . . . . .	275
11.5.13	Countershaft - hydraulic pump, chaff spreader . . . . .	275
11.6	Replacing the chains, left-hand side . . . . .	276
11.6.1	Table countershaft - table auger . . . . .	276
11.6.2	Elevator chain top shaft - elevator countershaft . . . . .	276
11.6.3	Table auger - belt rollers (PowerFlow) . . . . .	277
11.6.4	Hydraulic motor, reversing - elevator countershaft . . . . .	278
11.6.5	Bottom auger - unloading auger . . . . .	279
<b>12:</b>	<b>Undercarriage . . . . .</b>	<b>281</b>
12.1	Auto Level final drive bracket . . . . .	283
12.1.1	Removal . . . . .	283
12.1.2	Assembly . . . . .	284
12.1.3	Replacing the bushing . . . . .	286
12.1.4	Replacing the hydraulic cylinder . . . . .	287
12.1.5	Reconditioning the hydraulic cylinder . . . . .	288
12.1.6	Adjusting the Auto Level potentiometer . . . . .	289
12.2	Final drives . . . . .	290
12.2.1	Removal . . . . .	290
12.2.2	Assembly . . . . .	290
12.2.3	Reconditioning the final drives . . . . .	292

# Contents

---

<b>12.3</b>	<b>Gearbox</b> .....	<b>295</b>
12.3.1	Removal .....	295
12.3.2	Assembly .....	296
12.3.3	Replacing the shifter cylinders and sensor .....	297
12.3.4	Adjusting the shifter cylinders and sensor .....	298
12.3.5	Replacing the lubrication pump .....	302
12.3.6	Replacing the shifter forks .....	303
12.3.7	Reconditioning the differential .....	304
12.3.8	Reconditioning the gearbox .....	308
<b>12.4</b>	<b>Hydrostatic motor</b> .....	<b>311</b>
12.4.1	Removal .....	311
12.4.2	Assembly .....	311
<b>12.5</b>	<b>Brakes</b> .....	<b>312</b>
12.5.1	Replacing the brake blocks .....	312
12.5.2	Replacing the brake discs .....	313
12.5.3	Bleeding the brakes .....	315
12.5.4	Brake pedals and main cylinder .....	316
12.5.5	Replacing the handbrake shoes .....	319
12.5.6	Adjustment of hydraulic hand brake .....	320
<b>12.6</b>	<b>Rear axle</b> .....	<b>321</b>
12.6.1	General .....	321
12.6.2	Removal .....	321
12.6.3	Assembly .....	321
12.6.4	Replacing the king pins and bushings .....	322
12.6.5	Replacing the steering cylinder .....	323
12.6.6	Reconditioning the hydraulic cylinder .....	323
12.6.7	Adjusting the toe-in and steering deflection .....	324
<b>13:</b>	<b>Cab</b> .....	<b>327</b>
<b>13.1</b>	<b>Multi-function lever and control panel</b> .....	<b>328</b>
13.1.1	Control panel .....	328
13.1.2	Armrest .....	329
13.1.3	Multi-function lever .....	330
<b>13.2</b>	<b>Replacing the windscreen</b> .....	<b>332</b>
<b>13.3</b>	<b>Control panel in roof</b> .....	<b>333</b>
<b>13.4</b>	<b>Roof</b> .....	<b>334</b>
13.4.1	Outer roof .....	334
13.4.2	Inspection doors .....	334
13.4.3	Replacing the windscreen wiper .....	335
13.4.4	Replacing the blower .....	335
13.4.5	Replacing the heating element/tap .....	336
13.4.6	Replacing evaporator .....	336
<b>13.5</b>	<b>Troubleshooting – Climate control</b> .....	<b>337</b>
13.5.1	Climate control faults in general .....	337
13.5.2	ECS – Electronic control unit .....	337
13.5.3	Troubleshooting table .....	338
<b>14:</b>	<b>Hydraulics</b> .....	<b>341</b>
<b>14.1</b>	<b>General</b> .....	<b>343</b>
14.1.1	Emptying and filling the hydrostatic system .....	346
14.1.2	Running in and bleeding the hydrostatic system .....	348
14.1.3	Running in and bleeding the auxiliary hydraulics .....	348
<b>14.2</b>	<b>Hydrostatic system</b> .....	<b>351</b>
14.2.1	Hydraulic pump .....	351
14.2.2	Oil motor .....	351
14.2.3	Oil cooler .....	351
14.2.4	Hydraulic oil filter .....	353
<b>14.3</b>	<b>Gearshift</b> .....	<b>355</b>
14.3.1	Hydraulic cylinders - gearshift .....	355

14.3.2	Hydraulic valves - gearshift	355
<b>14.4</b>	<b>Hand brake</b>	<b>357</b>
14.4.1	Hydraulic valve - hand brake	357
14.4.2	Hydraulic cylinder - hand brake	357
<b>14.5</b>	<b>Auxiliary hydraulics</b>	<b>359</b>
14.5.1	Hydraulic pump	359
14.5.2	Hydraulic oil tank and return oil filter	359
14.5.3	Oil cooler	359
14.5.4	Hydraulic valve - main valve	361
<b>14.6</b>	<b>Cutting table</b>	<b>363</b>
14.6.1	Hydraulic cylinders - table up/down	363
14.6.2	Pressure accumulators - cutting table	363
14.6.3	Hydraulic valve - table up/down (standard machine)	363
14.6.4	Hydraulic valve - table up/down (Auto Level machine)	365
14.6.5	Hydraulic cylinder - table levelling	367
14.6.6	Pressure accumulators - levelling	367
14.6.7	Hydraulic valve - levelling	367
<b>14.7</b>	<b>Auto Level</b>	<b>369</b>
14.7.1	Hydraulic cylinders - machine levelling	369
14.7.2	Hydraulic valve - machine up/down/levelling	371
<b>14.8</b>	<b>Reel</b>	<b>373</b>
14.8.1	Hydraulic cylinders - reel up/down	373
14.8.2	Hydraulic valve - reel up/down	373
14.8.3	Hydraulic cylinders - reel fore/aft	375
14.8.4	Hydraulic valve - reel fore/aft	375
14.8.5	Oil motor	377
14.8.6	Flow divider	377
14.8.7	Rape auger	377
<b>14.9</b>	<b>Steering</b>	<b>379</b>
14.9.1	Hydraulic cylinders - steering	379
14.9.2	Orbitrol steering valve	379
<b>14.10</b>	<b>Cylinder variator</b>	<b>381</b>
14.10.1	Cylinder variator	381
14.10.2	Hydraulic valve - cylinder variator	381
<b>14.11</b>	<b>Rotor variator</b>	<b>383</b>
14.11.1	Rotor variator	383
14.11.2	Hydraulic valve - rotor variator	383
<b>14.12</b>	<b>Unloading auger</b>	<b>385</b>
14.12.1	Hydraulic cylinder - unloading auger	385
14.12.2	Hydraulic valve - unloading auger	385
<b>14.13</b>	<b>Reversing</b>	<b>387</b>
14.13.1	Oil motor	387
14.13.2	Hydraulic valve - reversing	387
<b>14.14</b>	<b>Chaff spreader</b>	<b>389</b>
14.14.1	Hydraulic pump	389
14.14.2	Oil motors	389
<b>14.15</b>	<b>Maxi Spreader</b>	<b>391</b>
14.15.1	Hydraulic pump	391
14.15.2	Solenoid valves	391
14.15.3	Hydraulic motor	392
<b>14.16</b>	<b>Troubleshooting - hydrostatic transmission</b>	<b>393</b>
14.16.1	Hydrostatic transmission faults in general	393
14.16.2	Pump and motor specifications	393
14.16.3	Functional diagram, HPV pump - HMF motor	395
14.16.4	Connecting test equipment	397
14.16.5	Troubleshooting table	398
14.16.6	Checking the charge pump	399
14.16.7	Checking the high pressure valves	399
14.16.8	Checking the high pressure valve	400

# Contents

---

14.16.9	Checking the servo control	400
14.16.10	Checking the hydraulic pump	401
14.16.11	Checking the hydraulic motor	402
<b>15:</b>	<b>Electrical system</b>	<b>403</b>
15.1	General	405
15.2	Description of DATAVISION	406
15.3	Electric box	407
15.3.1	Replacing the terminal	407
15.3.2	Replacing the job computers	407
15.4	Calibrations	410
15.4.1	Speed calibration	410
15.4.2	Calibrating the concave	411
15.4.3	Shaft alarm calibration	411
15.4.4	Calibrating the electrical sieves	411
15.4.5	Calibrating the electrical straw deflectors	412
15.4.6	Calibrating the Auto Level combine	413
15.4.7	Table calibration	413
15.5	Diagrams overview	415
15.6	Wiring diagrams	418
15.7	Diagrams - computer input/output	431
15.8	Connectors	434
15.9	W-connecting points	439
15.10	Components	440
15.11	Key to symbols	509
15.12	Wiring overview	510
<b>16:</b>	<b>Straw chopper</b>	<b>555</b>
16.1	General	556
16.1.1	Replacing and calibrating the electric actuator – straw deflectors	556
<b>17:</b>	<b>General assembly instructions</b>	<b>557</b>
17.1	Fitting gib-head keys	559
17.2	Fitting tightening pins	560
17.3	Fitting hydraulic pipes and screw connections	561
17.4	Fitting a flanged bearing with locking collar	563
17.5	Fitting sliding bushings	564
17.6	Removing the revolution sensor	565
17.7	Fitting tightening rings	566
<b>18:</b>	<b>Miscellaneous data</b>	<b>567</b>
18.1	General	569
18.2	Speeds - adjustment values	570
18.3	Maintenance	571
18.3.1	Lubrication chart	571
18.3.2	Lubrication points, left-hand machine side	578
18.3.3	Lubrication points, right-hand machine side	592
18.3.4	Recommended lubricants	606
18.3.5	Gear	607
18.3.6	Air Conditioning	609

# 0. Introduction - Specifications

---

## 0. Introduction - Specifications

### Contents

<b>0.1</b>	<b>Using the manual</b> .....	<b>3</b>
<b>0.2</b>	<b>General specifications</b> .....	<b>4</b>
<b>0.3</b>	<b>Dimensions and weight</b> .....	<b>11</b>
<b>0.4</b>	<b>Safety precautions</b> .....	<b>14</b>
0.4.1	Safety in the workshop .....	14
0.4.2	Safety - a word to the mechanic .....	14
0.4.3	Safety - danger, warning and caution .....	14
0.4.4	Safety decals .....	14
0.4.5	General .....	14
0.4.6	Personal safety .....	14
0.4.7	Considerations with regard to equipment .....	15
0.4.8	General considerations .....	16
0.4.9	Operational considerations .....	16
0.4.10	Maintenance techniques .....	17
<b>0.5</b>	<b>Practical advice</b> .....	<b>18</b>
<b>0.6</b>	<b>Start-up instructions</b> .....	<b>21</b>
0.6.1	General .....	21
0.6.2	Pre-delivery checks .....	21
0.6.3	Instruction of combine operator .....	22
<b>0.7</b>	<b>Conversion tables</b> .....	<b>25</b>
0.7.1	Conventional units of measurement .....	25
<b>0.8</b>	<b>Locking and sealing agents</b> .....	<b>27</b>
<b>0.9</b>	<b>Wheel nut torques</b> .....	<b>28</b>
0.9.1	Wheels .....	28
0.9.2	Bolts with metric threads .....	29
0.9.3	Nuts with metric threads .....	30

# 0. Introduction - Specifications

---

# 0. Introduction - Specifications

---

## 0.1 Using the manual

---

### *General*

All operations described in this manual relating to repairs and maintenance must only be carried out by trained service personnel. The purpose of the manual is to help dealers and workshops start up, service and repair AGCO's equipment as efficiently and effectively as possible. If the specified procedures are followed and the recommended special tools used where necessary, jobs can be completed within the time indicated in the "Repair Time Schedule" manual.

### *Pagination*

Example: "... as described in section 2.1.3 on page 71."

This manual is divided into chapters and sections. In the example the figures show:

First figure = Chapter

Second figure = Section

Third figure = Consecutive number in the section in question

71 = Page number in manual

The publication number and version appear at the bottom of the page.

### *Use*

To make it easier to look things up, there is a table of contents at the beginning of every chapter listing the various sections in the chapter.

### *Modifications*

Modified pages have the same section numbering as their predecessors: Only the page number and version number change.

The old pages must be destroyed.

### *Service tools*

In the case of jobs that require service tools, the number of the tool is specified at the point in the text where it is needed.

### *Repairs and replacing parts*

When replacing parts, it is very important to only ever use genuine AGCO spares.

Please pay particular attention to the following points when it comes to repairs and fitting spare parts or other equipment.

Fitting non-genuine spare parts may impair the safety of the machine.

In some countries it is against the law to fit parts that do not conform to the manufacturer's specifications. Torque wrenches must always be adjusted in accordance with the instructions given in the workshop manual. Fit locking devices where specified. If the locking device breaks when removed, fit a new one.

If non-genuine AGCO parts are fitted, the machine will no longer be covered by the right to complain, as the manufacturer provides a warranty on all AGCO components. AGCO dealers are under the obligation to supply genuine parts only.

### *Repair Time Schedule*

The "Repair Time Schedule" manual contains a table of standard time requirements for the commonest repairs on a combine. The manual's sections follow the layout of the spare parts catalogue.



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)