
OPERATOR'S MANUAL

FENDT

FENDT 8370 P

FENDT 8370 P AL

FENDT 8400 P

FENDT 8400 P AL



Operator's Manual for Fendt 8370 P / 8400 P Combine Series

1	General Information	11
1.1	Dear Customer	13
1.1.1	Appropriate Use	13
1.1.2	Changes and Improvements	13
1.1.3	Directives	13
1.1.4	Preface	14
1.1.5	EC Declaration of Conformity for Combine and Table	15
1.1.6	Product Identification	18
1.1.7	Sketch and parts identification	19
1.1.8	Disposal	20
2	Safety	23
2.1	Safety	25
2.1.1	General Safety Precautions	25
2.1.2	Attention - Warning Symbols	25
2.1.3	Safety Precautions	25
2.1.4	Road Transport	27
2.1.5	Warning/Instruction decals	28
2.1.6	CE Marking and Type Plate on the Combine	31
2.1.7	Placing of CE Markings and Type Plate	41
3	Operation, Controls and Cab	45
3.1	Before Start	47
3.1.1	Before Start	47
3.2	Operator Cab	49
3.2.1	Arrangement and Controls	49
3.2.2	Optional Extra	50
3.3	Safety Precautions - on the Move	51
3.3.1	Safety Precautions - on the Move	51
3.4	Starting and Stopping the Engine	52
3.4.1	Starting the engine	52
3.5	Drive Controls	55
3.5.1	Multifunction lever	55
3.5.2	Adjustable Armrest and Control Panel	56
3.5.3	Change of Gears	57
3.5.4	Reduced Engine Revolutions in Road Transport (Speed Matching System)	58
3.5.5	Steering column	58
3.5.6	Brakes	59
3.6	Seats	60
3.6.1	Adjustment of Operator Seat	60
3.6.2	Adjustment of air-suspended seat	60
3.6.3	EF declaration of conformity for the operator seat	61
3.6.4	Safety Switch in Operator Seat - (Operator Present Switch)	62
3.6.5	Instructor seat	63
3.7	Mirrors	64
3.7.1	Electrically adjustable rearview mirrors	64
3.8	Accessibility	65
3.8.1	Ladder for Cab	65
3.8.2	Ladder for engine compartment	66
3.8.3	Cleaning the windscreens	67
3.9	Emergency Situations	68
3.9.1	Emergency Exit	68

3.9.2	Fire Extinguisher	69
3.10	Light and Lamps	70
3.10.1	Lights	70
3.10.2	Main Light and Work Light	71
3.11	Climate Control	72
3.11.1	Maintenance and overview	72
3.11.2	Operation of Climate Control	73
3.12	Printer	75
3.12.1	Exchanging Paper and Ribbon in Printer	75
3.12.2	Inserting the Paper Roll	75
3.12.3	Fitting the Ribbon	76
3.13	Optional Extra	77
3.13.1	Four-wheel drive	77
3.13.2	Reversing camera	79
3.13.3	Auto-Guide	79
4	Operation, FIELDSTAR	81
4.1	Safety Precautions	83
4.1.1	Safety precautions, Operating FIELDSTAR	83
4.2	FIELDSTAR	84
4.2.1	FIELDSTAR in general	84
4.2.2	Operating FIELDSTAR on Terminal	85
4.2.3	Operating the Terminal by Remote Control in the Multi-Function Lever	86
4.2.4	Contrast and Brightness Control	87
4.2.5	Cleaning of terminal	87
4.2.6	Data card	88
4.2.7	FIELDSTAR Menu Structure	88
4.3	Harvest Menu	90
4.3.1	Reading	90
4.4	Main Menu	94
4.4.1	Main menu structure	94
4.5	Monitoring	96
4.5.1	Monitoring in general	96
4.5.2	Shaft Speeds	97
4.5.3	Engine Monitoring/Alarm	97
4.5.4	Engine Safety Alarm	97
4.5.5	Information	98
4.5.6	Shaft speeds	99
4.6	Harvesting Data	100
4.6.1	Standard data	100
4.6.2	Data Logging in General	101
4.6.3	Using Data Logging	102
4.6.4	Data logging setup	109
4.6.5	Using Markers	112
4.7	Operator's Manual	113
4.7.1	Harvest Settings	113
4.7.2	Routine Servicing	114
4.7.3	FIELDSTAR	114
4.8	Diagnostics	115
4.8.1	Trouble shooting in FIELDSTAR	115
4.9	Coding	121
4.9.1	Coding in general	121
4.9.2	Clock Adjustment	122
4.9.3	Language	122
4.9.4	Area measuring	122
4.9.5	Table Calibration	124
4.9.6	Returns Volume	125
4.9.7	Grain Loss Monitor	125
4.9.8	Shaft alarm calibration	125
4.9.9	Concave Calibration	126
4.9.10	Constant Flow	126
4.9.11	Wheel Track and Auto Level Combine	126

4.9.12	Coding of Electrical Straw Deflectors	127
4.9.13	Lead Time and Lag Time	129
4.9.14	Calibration of actuator for electrical sieves	130
4.10	Settings	131
4.10.1	Harvest Settings	131
4.10.2	Table Settings	134
4.10.3	Machine Settings	136
4.11	Returns Volume Monitor	139
4.11.1	Returns volume	139
4.11.2	Coding	139
4.12	Grain Loss Monitoring	141
4.12.1	Sensors	141
4.12.2	Adjustment of Grain Loss Sensors	141
4.13	Shaft Alarm Limits	143
4.13.1	Shaft alarm calibration	143
4.14	Yield Meter	144
4.14.1	Yield meter (Isotopic)	144
4.14.2	Micro-Trak Yield Meter	146
4.14.3	Yieldmeter Calibration	148
4.15	Moisture Meter	150
4.15.1	Limitations in the use of the moisture meter	150
4.15.2	Continuous Moisture Measuring	150
4.15.3	Measuring Principle	150
4.15.4	Using the Moisture Meter	151
4.15.5	Cleaning the Moisture Meter,	151
4.15.6	Calibration of moisture meter	152
4.16	Cutting Height Control	154
4.16.1	Adjustment and operation of cutting height control	154
4.16.2	Coding of table	157
4.17	Field Pressure Control	158
4.17.1	Adjustment and operation of field pressure control	158
4.18	Interaction between the Table Controls	160
4.18.1	Table controls, an outline	160
4.19	Auto Level Table	162
4.19.1	Principle of Auto Level table	162
4.19.2	Bleeding	163
4.19.3	Coding of Auto Level Table	164
4.19.4	Calibration of Table Angle	164
4.20	Operation of Auto Level Table	166
4.20.1	Operation of Auto Level Table	166
4.21	Ground sensors	168
4.21.1	Checking and Adjusting the Ground Sensors	168
4.22	Constant Flow	170
4.22.1	Constant Flow functional description	170
4.22.2	Start-up and Adjustment of Constant Flow	171
4.22.3	Constant Flow Engagement	173
5	Operation, Auto Level Combine	175
5.1	Safety Precautions	177
5.1.1	Safety precautions, Operation of Auto Level Combine	177
5.1.2	Safety System	177
5.2	Attachment of Auto Level Table	178
5.2.1	Attachment of table on Auto Level combine	178
5.3	Combinations	179
5.3.1	Automatically or manually	179
5.3.2	Selecting Combination	179
5.3.3	Combinations for Auto Level combine and Auto Level table	179
5.3.4	Priority of hydraulic functions	181
5.4	Auto Level	182
5.4.1	Auto Level combine	182
5.4.2	Manual Control of Auto Level Combine	182

5.5	Auto Level Combine/Table	183
5.5.1	Combine	183
5.5.2	Transport	184
5.5.3	Auto Level Table	185
5.6	Calibration	186
5.6.1	Calibration of Auto Level Combine	186
5.6.2	Errors during Calibration	187
5.7	Coding	188
5.7.1	Coding of Auto Level Table	188
5.7.2	Zero Cutting Height	188
5.8	Safety System	189
5.8.1	Safety System, Auto Level	189
5.8.2	Automatic Control of the Tilt Sensor Function	189
5.8.3	About the system	190
5.8.4	Hose Breach Protection for Auto Level Hydraulics	190
5.9	Troubleshooting	191
5.9.1	Trouble shooting in general	191
5.9.2	Machine Not Levelling Correctly	192
5.10	Servicing and User Tips	193
5.10.1	Retrofit of new FIELDSTAR Auto Level Job Computer and Sensors	193
5.10.2	Unintentional Use of Manual Keys in Automatic Mode	193
5.10.3	Diagnostics - Auto Level Combine Functions and Sensors	194
6	Engine	195
6.1	Safety Precautions	197
6.1.1	Safety Precautions, Engine	197
6.2	Engines	198
6.2.1	Engine Types	198
6.3	Air-intake	199
6.3.1	Filter system	199
6.4	Cooling System	200
6.4.1	Rotary Screen and Dust Aspirator	200
6.4.2	Coolers	201
6.4.3	Coolant	202
6.4.4	Checking the Fan Belt Tension	202
6.5	Fuel System	203
6.5.1	Fuel system	203
6.5.2	Filter change	204
6.6	Engine Oil/Change	205
6.6.1	Oil and Filter Change	205
6.7	Cleaning	206
6.7.1	Cleaning of engine compartment	206
6.8	EEM3 Engine Management	207
6.8.1	Electronic Engine Management	207
6.8.2	Engine Trouble Shooting (Self-Diagnosis)	208
6.8.3	EEM3 codes	209
7	Cutting Tables	215
7.1	Safety Precautions	217
7.1.1	Safety Precautions, Cutting Tables	217
7.2	Attachment/Removal of Table	218
7.2.1	Attachment of Table, Standard and Auto Level	218
7.2.2	Removal of Table	219
7.2.3	Supports	220
7.3	Table Trailer	221
7.3.1	Attachment of combine and trailer	221
7.3.2	Table Trailer Brakes	221
7.4	Reel	222
7.4.1	Reel Adjustment Up/Down, Fore/Aft	222
7.4.2	Bleeding	223
7.4.3	Reel Rotation	223
7.4.4	Reel tine bars	224

7.4.5	Adjustment of the Reel in the Table	224
7.5	Knife	225
7.5.1	Knife and Knife Drive	225
7.6	Feeding	226
7.6.1	Table auger	226
7.6.2	Cut-off strip and distribution strip	227
7.6.3	Replacement of Feathering Fingers	228
7.6.4	Auger Flight Extensions, 20-22-25-30' Tables	228
7.6.5	Reversing	229
7.7	Transmission	230
7.7.1	PowerFlow Table, Knife Drive and Table Auger	230
7.7.2	Slip Clutch for Table Auger	230
7.8	PowerFlow Table	231
7.8.1	PowerFlow belts	231
7.8.2	Inspection and Start-Up of PowerFlow Belts	231
7.8.3	Adjustment of belts	232
7.8.4	Scrapers, front	232
7.8.5	Scrapers, Rear, and Adjustment of Bearing Housings	233
7.8.6	Table bottom	233
7.8.7	Cleaning	234
7.9	Crop Lifters	235
7.9.1	Using Crop Lifters	235
7.10	Vertical Knives, Rape Auger and Straw Dividers	236
7.10.1	Vertical knife	236
7.10.2	Mounting of Vertical Knife	236
7.10.3	Rape auger	237
7.10.4	Folding torpedo dividers and bow dividers	237
7.10.5	Mounting of Straw Dividers	238
7.10.6	Adjustment of Torpedo Divider	238
7.11	Fixed Fingers	239
7.11.1	Fitting of fixed table auger fingers	239
7.11.2	Using Fixed Table Auger Fingers	239
7.11.3	High Table Sides	239
7.12	Main Crop Elevator	241
7.12.1	Elevator Chain	241
7.12.2	Transmission for Table	241
7.12.3	Stone Trap	242
7.12.4	Initial Adjustment of Cutting Height Indication	243
8	Operation of Table and Threshing Unit	245
8.1	Safety Precautions	247
8.1.1	Safety Precautions, Operation of Machine and Cutting Table	247
8.2	Operation of Table	249
8.2.1	Table Height and Table Automatic Control	249
8.2.2	Cutting height control	250
8.2.3	Field pressure control	251
8.2.4	Preset cutting height	252
8.2.5	Auto Level Table	252
8.2.6	Table Engagement - Emergency Stop	253
8.3	Threshing Unit Transmission	254
8.3.1	Threshing unit engagement	254
8.3.2	Cylinder Variator	255
8.3.3	Turning Tool for Cylinder	255
8.4	Concave Setting, Electrically Adjustable	256
8.4.1	Operation of Concave	256
8.4.2	Concave Setting	256
8.5	Threshing	258
8.5.1	Concave filler plates	258
8.5.2	Straw walkers	258
8.5.3	Rear beater curtain	259
8.6	Straw Chopper and Spreader Hood	260
8.6.1	Straw chopper	260

8.6.2	Adjustment of Spreader Hood	261
8.6.3	Counter knives and cross bar	262
8.6.4	Replacement of Knives	264
8.7	Fanning Mill and Sieves	265
8.7.1	Fanning mill	265
8.7.2	Shaker shoe	265
8.7.3	Shaker Shoe with Electrical Sieves	266
8.7.4	Manual Adjustment of Sieves	266
8.7.5	Cleaning of Sieves and Main Grain Pan	267
8.7.6	Cleaning the Sieves	268
8.7.7	Shaker Shoe Light	270
8.7.8	Special sieves	270
8.8	Internal Grain Transport	271
8.8.1	Auger Housing/Elevators	271
8.8.2	Returns thresher	271
8.8.3	Tank filling auger	272
8.8.4	Grain tank	273
8.8.5	Unloading auger	275
8.8.6	Unloading Auger Clutch	276
8.8.7	Unloading tube	277
8.9	Rotary Separator	278
8.9.1	Adjusting the revolutions	278
8.9.2	Concave setting	279
8.10	Straw Hood	280
8.10.1	Alarm switch for straw hood blocked	280
8.10.2	Light in straw hood	281
8.11	Chaff Spreader	282
8.11.1	Setting	282
8.12	Maxi Spreader	284
8.12.1	Adjustment and operation	284
8.12.2	Adjustment of sensors	285
8.13	Maize Threshing	286
8.13.1	Threshing of maize in general	286
8.13.2	Attachment of Maize Header	286
8.13.3	Area measuring	287
8.13.4	Main crop elevator	287
8.13.5	Concave/Initial Settings	288
8.13.6	Threshing cylinder	288
8.13.7	Rotary Separator	288
8.13.8	Shaker shoe	289
8.13.9	Straw walkers	289
8.13.10	Bottom auger cover plate	290
8.13.11	Scrapers	290
8.13.12	Rear beater curtain	290
8.13.13	Straw chopper	291
8.13.14	Maxi Spreader	291
8.14	Harvest Settings	292
8.14.1	Harvest charts and settings	292
8.15	Threshing	294
8.15.1	A guide to threshing	294
9	Transmissions	295
9.1	Safety Precautions	297
9.1.1	Safety Precautions, Transmissions	297
9.2	Adjustment of Transmissions	298
9.2.1	General	298
9.2.2	Threshing unit clutch	298
9.2.3	Hydrostatic transmission	299
9.3	Transmissions	300
9.3.1	Rear beater	300
9.3.2	Crop Elevator and Table	300
9.3.3	Straw chopper	301

9.3.4	Threshing cylinder	301
9.3.5	Unloading auger	302
9.3.6	Shaker Shoe and Chaff Spreader Counter Drive, and Straw Walker Drive	303
9.3.7	Filling and Returns System Countershaft	304
9.3.8	Returns Elevator and Returns Thresher	304
9.3.9	Tank Filling Elevator and Tank Filling Auger	305
9.3.10	Dust aspirator	305
9.3.11	Rotary screen	306
9.3.12	Fanning mill	307
9.3.13	Rotary Separator	307
9.3.14	Alternator and Fan	308
9.3.15	Climate control	308
9.4	Transmission Diagrams	309
9.4.1	Transmission Diagram, Left-Hand Side	309
9.4.2	Transmission Diagram, Right-Hand Side	311
10	Hydraulics	313
10.1	Safety Precautions	315
10.1.1	Safety Precautions, Hydraulic System	315
10.2	Hydraulic System	316
10.2.1	Hydraulic system, standard combine	316
10.2.2	Hydraulic System, Four-Wheel Drive	317
10.3	Oil Change	318
10.3.1	Draining and refilling hydraulic oil	318
10.4	Filter Change	319
10.4.1	Filter change in general	319
10.4.2	Return oil filter	319
10.4.3	Storage of Hydraulic System	320
10.5	Auxiliary Hydraulics	321
10.5.1	Auxiliary hydraulics in general	321
10.5.2	Functions and Auxiliary Hydraulics	321
10.5.3	Reel Adjustment Fore/Aft - Up/down	321
10.6	Hydraulics Diagrams	322
10.6.1	Hydraulics Diagram, Standard Combine	322
10.6.2	Hydraulics Diagram, Auto Level Combine	325
10.6.3	Hydraulics Diagram for Chaff Spreader	328
10.6.4	Hydraulics diagram for Maxi Spreader	329
11	Maintenance	331
11.1	Safety Precautions	333
11.1.1	Safety Precautions, Maintenance	333
11.2	Undercarriage	335
11.2.1	Undercarriage in general	335
11.2.2	Wheel nut torques	335
11.2.3	Tyre Pressure	335
11.3	Lubrication Intervals	337
11.3.1	Lubrication chart, time intervals	337
11.3.2	Lubrication chart, right- and left-hand side	340
11.3.3	Lubrication chart, main crop elevator and front axle	342
11.3.4	Lubrication points, left-hand machine side	343
11.3.5	Lubrication points, right-hand machine side	357
11.3.6	Lubricants and Operating Fluids	368
11.3.7	Preliminary Service Inspections	369
11.3.8	Maintenance Required	370
11.4	Oil Change, Gear	373
11.4.1	Gearbox	373
11.4.2	Final drives	373
11.4.3	Right-angle gear for returns thresher	374
11.5	Climate Control	375
11.5.1	Diagram for Climate Control System	375
11.5.2	Maintenance	375

11.6	Cleaning and Off-Season Storage	376
11.6.1	Cleaning	376
11.6.2	Off-season storage	377
11.6.3	Storage of Engine, Fuel System and Hydraulic System	378
11.6.4	Periodical Start-Up	378
11.6.5	Removal of Crop Elevator	379
11.6.6	Removal of Elevator Chains	379
11.6.7	After Off-Season Storage	379
11.7	Adjustment of Brakes	380
11.7.1	Adjustment of Foot Brakes, Disc Brakes	380
11.7.2	Adjustment of Parking Brake	380
12	Electrical System	381
12.1	Safety Precautions	383
12.1.1	Safety Precautions, Electric System	383
12.2	Electrical System	384
12.2.1	Charging system	384
12.2.2	Electric Boxes and Main Switch	385
12.2.3	External connectors 12V	386
12.3	Electro-Hydraulic System	388
12.3.1	Electro-Hydraulic System in general	388
12.4	Key to Signatures for Wiring Harness	389
12.4.1	Wire Codes	389
12.4.2	Component Codes	389
12.5	Overview, Electric Box and Cab	390
12.5.1	Position of Connectors in Electric Boxes	390
12.5.2	Fuses and Relays, Electric Box and Cab	391
12.6	Wiring Diagrams	393
12.6.1	Key to symbols	393
12.6.2	Diagrams overview	394
12.6.3	Fuse Values	394
12.6.4	Components	395
12.6.5	Electric diagrams	403
13	Specifications	415
13.1	Specifications	417
13.1.1	Dimensions and specifications	417

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com