

---

*OPERATOR'S MANUAL*

---

*FENDT*

*FENDT 8370 P*

*FENDT 8370 P AL*

*FENDT 8400 P*

*FENDT 8400 P AL*

---



# Operator's Manual for Fendt 8370 P / 8400 P Combine Series

<b>1</b>	<b>General Information</b>	11
1.1	<b>Dear Customer</b>	13
1.1.1	Appropriate Use	13
1.1.2	Changes and Improvements	13
1.1.3	Directives	13
1.1.4	Preface	14
1.1.5	EC Declaration of Conformity for Combine and Table	15
1.1.6	Product Identification	18
1.1.7	Sketch and parts identification	19
1.1.8	Disposal	20
<b>2</b>	<b>Safety</b>	23
2.1	<b>Safety</b>	25
2.1.1	General Safety Precautions	25
2.1.2	Attention - Warning Symbols	25
2.1.3	Safety Precautions	25
2.1.4	Road Transport	27
2.1.5	Warning/Instruction decals	28
2.1.6	CE Marking and Type Plate on the Combine	31
2.1.7	Position of CE Markings and Type Plate	40
<b>3</b>	<b>Operation, Controls and Cab</b>	45
3.1	<b>Before start</b>	47
3.1.1	Before start	47
3.2	<b>Operator cab</b>	49
3.2.1	Arrangement and Controls	49
3.2.2	Optional Extra	50
3.3	<b>Safety Precautions - on the Move</b>	51
3.3.1	Safety Precautions - on the Move	51
3.4	<b>Starting and Stopping the Engine</b>	52
3.4.1	Starting the Engine	52
3.5	<b>Drive Controls</b>	54
3.5.1	Multifunction lever	54
3.5.2	Adjustable armrest and control panel	55
3.5.3	Gearshift	56
3.5.4	Reduced engine revolutions in road transport (Speed Matching System)	57
3.5.5	Steering column	57
3.5.6	Brakes	58
3.6	<b>Seats</b>	59
3.6.1	Adjustment of Operator Seat	59
3.6.2	Adjustment of Air-Suspended Seat	59
3.6.3	EF declaration of conformity for the operator seat	60
3.6.4	Safety switch in operator seat - (Operator Present Switch)	61
3.6.5	Safety belt	62
3.6.6	Passenger seat	62
3.7	<b>Mirrors</b>	63
3.7.1	Electrically adjustable rearview mirrors	63
3.8	<b>Accessibility</b>	64
3.8.1	Ladder for Cab	64
3.8.2	Ladder for Engine Compartment	64
3.8.3	Cleaning the Windscreens	66

<b>3.9</b>	<b>Emergency situations</b>	67
3.9.1	Emergency Exit	67
3.9.2	Fire extinguisher	68
<b>3.10</b>	<b>Light and Lamps</b>	69
3.10.1	Lights	69
3.10.2	Main Light and Work Light	70
<b>3.11</b>	<b>Climate control</b>	71
3.11.1	Maintenance and overview	71
3.11.2	Operation of Climate Control	72
<b>3.12</b>	<b>Printer</b>	74
3.12.1	Exchanging Paper and Ribbon in Printer	74
3.12.2	Inserting the Paper Roll	74
3.12.3	Fitting the Ribbon	75
<b>3.13</b>	<b>Optional Extra</b>	76
3.13.1	Four-Wheel Drive	76
3.13.2	Reversing camera	77
3.13.3	Auto-Steering	78
<b>4</b>	<b>Operation, FIELDSTAR</b>	79
<b>4.1</b>	<b>Safety precautions</b>	81
4.1.1	Safety precautions, Operating FIELDSTAR	81
<b>4.2</b>	<b>FIELDSTAR</b>	82
4.2.1	FIELDSTAR, general description	82
4.2.2	Operating FIELDSTAR on Terminal	84
4.2.3	Operating the Terminal by Remote Control in the Multi-Function Lever	85
4.2.4	Contrast and Brightness Control	86
4.2.5	Cleaning of terminal	86
4.2.6	Data card	87
4.2.7	FIELDSTAR menu structure	87
<b>4.3</b>	<b>Harvest menu</b>	89
4.3.1	Instrument reading	89
<b>4.4</b>	<b>Main Menu</b>	93
4.4.1	Main Menu Structure	93
<b>4.5</b>	<b>Monitoring</b>	95
4.5.1	Monitoring in general	95
4.5.2	Shaft Speeds	96
4.5.3	Engine monitoring/alarm	96
4.5.4	Engine Safety Alarm	96
4.5.5	Information	97
4.5.6	Shaft speeds	98
<b>4.6</b>	<b>Harvesting Data</b>	99
4.6.1	Standard data	99
4.6.2	Data logging in general	100
4.6.3	Using Data Logging	101
4.6.4	Data logging setup	108
4.6.5	Using Markers	111
<b>4.7</b>	<b>Operator's Manual</b>	112
4.7.1	Harvest Settings	112
4.7.2	Routine servicing	113
4.7.3	FIELDSTAR	113
<b>4.8</b>	<b>Diagnostics</b>	114
4.8.1	Troubleshooting in FIELDSTAR	114
<b>4.9</b>	<b>Coding</b>	120
4.9.1	Coding in general	120
4.9.2	Clock Adjustment	121
4.9.3	Language	121
4.9.4	Area Measuring	121
4.9.5	Table Calibration	123
4.9.6	Returns Volume	124
4.9.7	Grain loss monitor	124
4.9.8	Shaft alarm calibration	124
4.9.9	Concave Calibration	124

4.9.10	Constant Flow	124
4.9.11	Wheel Track and Auto Level Combine	124
4.9.12	Coding of electrical straw deflectors	125
4.9.13	Lead Time and Lag Time	127
4.9.14	Calibration of actuator for electrical sieves	128
<b>4.10</b>	<b>Settings</b>	129
4.10.1	Harvest Settings	129
4.10.2	Table settings	132
4.10.3	Machine settings	134
<b>4.11</b>	<b>Returns Volume Monitor</b>	137
4.11.1	Returns volume	137
4.11.2	Coding	137
<b>4.12</b>	<b>Grain Loss Monitoring</b>	139
4.12.1	Sensors	139
4.12.2	Adjustment of Grain Loss Sensors	139
<b>4.13</b>	<b>Shaft Alarm Limits</b>	141
4.13.1	Shaft alarm calibration	141
<b>4.14</b>	<b>Yield meter</b>	142
4.14.1	Yield meter (isotopic)	142
4.14.2	Micro-Trak Yield Meter	144
4.14.3	Yield Meter Calibration	146
<b>4.15</b>	<b>Moisture meter</b>	148
4.15.1	Limitations in the use of the moisture meter	148
4.15.2	Continuous Moisture Measuring	148
4.15.3	Measuring Principle	148
4.15.4	Using the Moisture Meter	149
4.15.5	Cleaning the Moisture Meter	149
4.15.6	Calibration of moisture meter	150
<b>4.16</b>	<b>Cutting height control</b>	152
4.16.1	Adjustment and Operation of Cutting Height Control	152
4.16.2	Coding the Table	155
<b>4.17</b>	<b>Field pressure control</b>	156
4.17.1	Adjustment and operation of field pressure control	156
<b>4.18</b>	<b>Interaction between the Table Controls</b>	158
4.18.1	Table Controls, an outline	158
<b>4.19</b>	<b>Auto Level table</b>	160
4.19.1	Principle of Auto Level Table	160
4.19.2	Bleeding	161
4.19.3	Coding of Auto Level Table	162
4.19.4	Calibration of Table Angle	162
<b>4.20</b>	<b>Operation of Auto Level Table</b>	164
4.20.1	Using the Auto Level table	164
<b>4.21</b>	<b>Ground sensors</b>	166
4.21.1	Checking and Adjusting the Ground Sensors	166
<b>4.22</b>	<b>Constant Flow</b>	168
4.22.1	Constant Flow functional description	168
4.22.2	Start-up and Adjustment of Constant Flow	169
4.22.3	Constant Flow Engagement	171
<b>5</b>	<b>Operation, Auto Level Combine</b>	173
<b>5.1</b>	<b>Safety precautions</b>	175
5.1.1	Safety precautions, operation of Auto Level Combine	175
5.1.2	Safety System	175
<b>5.2</b>	<b>Attachment of Auto Level Table</b>	176
5.2.1	Attachment of table to Auto Level combine	176
<b>5.3</b>	<b>Combinations</b>	177
5.3.1	Automatic or Manual	177
5.3.2	Selecting Combination	177
5.3.3	Adjustment Combinations for Auto Level Combine and Auto Level Table	177
5.3.4	Priority of hydraulic functions	179
<b>5.4</b>	<b>Auto Level</b>	180
5.4.1	Auto Level Combine	180

5.4.2	Manual Control of Auto Level Combine	180
<b>5.5</b>	<b>Auto Level Combine/Table</b>	181
5.5.1	Combine	181
5.5.2	Transport	182
5.5.3	Auto Level Table	183
<b>5.6</b>	<b>Calibration</b>	184
5.6.1	Calibration of Auto Level Combine	184
5.6.2	Errors during Calibration	185
<b>5.7</b>	<b>Coding</b>	186
5.7.1	Coding of Auto Level Table	186
5.7.2	Zero Cutting Height	186
<b>5.8</b>	<b>Safety system</b>	187
5.8.1	Safety system, Auto Level	187
5.8.2	Automatic Control of the Tilt Sensor Function	187
5.8.3	About the System	188
5.8.4	Hose Breach Protection for Auto Level Hydraulics	188
<b>5.9</b>	<b>Troubleshooting</b>	189
5.9.1	Troubleshooting in General	189
5.9.2	Machine Not Levelling Correctly	190
<b>5.10</b>	<b>Servicing and User Tips</b>	192
5.10.1	Retrofit of new FIELDSTAR Auto Level Job Computer and Sensors	192
5.10.2	Unintentional Use of Manual Keys in Automatic Mode	192
5.10.3	Diagnostics - Auto Level Combine Functions and Sensors	193
<b>6</b>	<b>Engine</b>	195
<b>6.1</b>	<b>Safety precautions</b>	197
6.1.1	Safety Precautions, Engine	197
<b>6.2</b>	<b>Engines</b>	198
6.2.1	Engine types	198
<b>6.3</b>	<b>Air-Intake</b>	199
6.3.1	Filter System	199
<b>6.4</b>	<b>Cooling System</b>	200
6.4.1	Rotary Screen and Dust Aspirator	200
6.4.2	Coolers	200
6.4.3	Coolant	201
6.4.4	Checking the fan belt tension	201
6.4.5	Checking the water pump belt	202
<b>6.5</b>	<b>Fuel system</b>	203
6.5.1	Fuel and quality requirements	203
6.5.2	Fuel system	204
6.5.3	Filter change	205
6.5.4	Bleeding the fuel system	206
<b>6.6</b>	<b>SCR</b>	207
6.6.1	The SCR system in general	207
6.6.2	Components and functions	208
6.6.3	Filling and storing AdBlue	209
6.6.4	Filter change	210
6.6.5	SCR system failure	211
<b>6.7</b>	<b>Crankcase ventilation</b>	212
6.7.1	Closed crankcase ventilation	212
<b>6.8</b>	<b>Engine oil/change</b>	213
6.8.1	Oil and Filter Change	213
<b>6.9</b>	<b>Cleaning</b>	214
6.9.1	Cleaning of engine compartment	214
<b>6.10</b>	<b>EEM4 engine control</b>	215
6.10.1	Electronic Engine Management and Monitoring	215
6.10.2	Engine Trouble Shooting (Self-Diagnosis)	216
6.10.3	EEM4 Codes	218
<b>7</b>	<b>Cutting Tables</b>	231
<b>7.1</b>	<b>Safety precautions</b>	233
7.1.1	Safety Precautions, Cutting Tables	233

<b>7.2</b>	<b>Attachment/Removal of Table</b> .....	234
7.2.1	Attachment of Table, Standard and Auto Level. ....	234
7.2.2	Removal of Table .....	235
7.2.3	Supports .....	236
<b>7.3</b>	<b>Table trailer</b> .....	237
7.3.1	Attachment of combine and trailer .....	237
7.3.2	Table Trailer Brakes .....	237
<b>7.4</b>	<b>Reel</b> .....	238
7.4.1	Reel Adjustment Up/Down, Fore/Aft. ....	238
7.4.2	Bleeding .....	239
7.4.3	Reel Rotation. ....	239
7.4.4	Reel tine bars .....	240
7.4.5	Adjustment of the Reel in the Table .....	240
<b>7.5</b>	<b>Knife</b> .....	241
7.5.1	Knife and knife drive .....	241
<b>7.6</b>	<b>Feeding</b> .....	242
7.6.1	Table auger .....	242
7.6.2	Cut-off strip and distribution strip. ....	243
7.6.3	Replacement of Feathering Fingers .....	244
7.6.4	Auger Flight Extensions, 20-22-25-30' Tables .....	244
7.6.5	Reversing .....	245
<b>7.7</b>	<b>Transmission</b> .....	246
7.7.1	PowerFlow table, knife drive and table auger .....	246
7.7.2	Slip Clutch for Table Auger .....	246
<b>7.8</b>	<b>PowerFlow Table</b> .....	247
7.8.1	PowerFlow belts .....	247
7.8.2	Inspection and Start-Up of Powerflow Belts .....	247
7.8.3	Adjustment of belts .....	248
7.8.4	Scrapers, front .....	248
7.8.5	Scrapers, Rear, and Adjustment of Bearing Housings .....	249
7.8.6	Table Bottom .....	249
7.8.7	Cleaning .....	250
<b>7.9</b>	<b>Crop lifters</b> .....	251
7.9.1	Using Crop Lifters. ....	251
<b>7.10</b>	<b>Vertical Knives, Rape Auger and Straw Dividers</b> .....	252
7.10.1	Vertical knife .....	252
7.10.2	Mounting of Vertical Knife. ....	252
7.10.3	Rape auger .....	253
7.10.4	Folding torpedo dividers and bow dividers .....	253
7.10.5	Mounting of Straw Dividers .....	254
7.10.6	Adjustment of Torpedo Divider. ....	254
<b>7.11</b>	<b>Fixed Table Auger Fingers</b> .....	255
7.11.1	Fitting of fixed table auger fingers .....	255
7.11.2	Using Fixed Table Auger Fingers .....	255
7.11.3	High Table Sides. ....	255
<b>7.12</b>	<b>Main crop elevator</b> .....	257
7.12.1	Elevator Chain. ....	257
7.12.2	Transmission for Table .....	258
7.12.3	Stone Trap. ....	258
7.12.4	Initial Adjustment of Cutting Height Indication .....	259
<b>8</b>	<b>Operation of Table and Threshing Unit</b> .....	261
<b>8.1</b>	<b>Safety precautions</b> .....	263
8.1.1	Safety Precautions, Operation of Machine and Cutting Table .....	263
<b>8.2</b>	<b>Operation of Table</b> .....	265
8.2.1	Table Height and Table Automatic Control .....	265
8.2.2	Cutting Height Control. ....	266
8.2.3	Field Pressure Control .....	267
8.2.4	Preset cutting height .....	268
8.2.5	Auto Level table .....	268
8.2.6	Table Engagement - Emergency Stop .....	269

<b>8.3</b>	<b>Threshing Unit Transmission</b> .....	270
8.3.1	Threshing unit engagement .....	270
8.3.2	Cylinder Variator .....	271
8.3.3	Turning Tool for Cylinder .....	271
<b>8.4</b>	<b>Concave Setting, Electrically Adjustable</b> .....	272
8.4.1	Operation of Concave .....	272
8.4.2	Concave Setting .....	272
<b>8.5</b>	<b>Threshing</b> .....	274
8.5.1	Concave filler plates .....	274
8.5.2	Straw walkers .....	274
8.5.3	Rear beater curtain .....	275
<b>8.6</b>	<b>Straw Chopper and Spreader Hood</b> .....	276
8.6.1	Straw chopper .....	276
8.6.2	Adjustment of spreader hood .....	278
8.6.3	Counter Knives and Cross Bar .....	279
8.6.4	Replacement of Knives .....	281
<b>8.7</b>	<b>Fanning Mill and Sieves</b> .....	282
8.7.1	Fanning mill .....	282
8.7.2	Shaker shoe .....	282
8.7.3	Shaker Shoe with Electrical Sieves .....	283
8.7.4	Manual Adjustment of Sieves .....	283
8.7.5	Cleaning of Sieves and Main Grain Pan .....	284
8.7.6	Cleaning the Sieves .....	285
8.7.7	Shaker Shoe Light .....	287
8.7.8	Special sieves .....	287
<b>8.8</b>	<b>Internal Grain Transport</b> .....	288
8.8.1	Auger Housing/Elevators .....	288
8.8.2	Returns thresher .....	288
8.8.3	Tank filling auger .....	289
8.8.4	Grain tank .....	290
8.8.5	Unloading auger .....	292
8.8.6	Unloading Auger Clutch .....	293
8.8.7	Unloading tube .....	294
<b>8.9</b>	<b>Rotary Separator</b> .....	295
8.9.1	Adjusting the revolutions .....	295
8.9.2	Concave setting .....	296
<b>8.10</b>	<b>Straw hood</b> .....	297
8.10.1	Alarm switch for straw hood blocked .....	297
8.10.2	Light in straw hood .....	298
<b>8.11</b>	<b>Chaff spreader</b> .....	299
8.11.1	Setting .....	299
<b>8.12</b>	<b>Maxi Spreader</b> .....	301
8.12.1	Operation and Adjustment .....	301
8.12.2	Adjustment of Sensors .....	302
<b>8.13</b>	<b>Maize Threshing</b> .....	303
8.13.1	Maize threshing in general .....	303
8.13.2	Attachment of Maize Header .....	303
8.13.3	Area measuring .....	304
8.13.4	Main crop elevator .....	304
8.13.5	Concave/initial settings .....	305
8.13.6	Threshing cylinder .....	305
8.13.7	Rotary Separator .....	305
8.13.8	Shaker shoe .....	306
8.13.9	Straw walkers .....	306
8.13.10	Bottom auger cover plate .....	307
8.13.11	Scrapers .....	307
8.13.12	Rear beater curtain .....	307
8.13.13	Straw chopper .....	308
8.13.14	Maxi Spreader .....	308
<b>8.14</b>	<b>Harvest settings</b> .....	309
8.14.1	Harvest charts and settings .....	309

<b>8.15</b>	<b>Threshing</b> .....	311
8.15.1	Threshing directions .....	311
<b>9</b>	<b>Transmissions</b> .....	313
<b>9.1</b>	<b>Safety precautions</b> .....	315
9.1.1	Safety Precautions, Transmissions .....	315
<b>9.2</b>	<b>Adjustment of Transmissions</b> .....	316
9.2.1	General .....	316
9.2.2	Threshing unit clutch .....	316
9.2.3	Hydrostatic transmission .....	317
<b>9.3</b>	<b>Transmissions</b> .....	318
9.3.1	Rear beater .....	318
9.3.2	Table and crop elevator .....	318
9.3.3	Straw chopper .....	319
9.3.4	Threshing cylinder .....	320
9.3.5	Unloading auger .....	320
9.3.6	Shaker Shoe and Chaff Spreader Counter Drive, and Straw Walker Drive ...	321
9.3.7	Filling and Returns System Countershaft. ....	322
9.3.8	Returns Elevator and Returns Thresher .....	322
9.3.9	Tank Filling Elevator and Tank Filling Auger .....	323
9.3.10	Dust aspirator .....	323
9.3.11	Rotary screen .....	324
9.3.12	Fanning mill .....	325
9.3.13	Rotary Separator .....	325
9.3.14	Alternator and fan .....	326
9.3.15	Climate control .....	326
<b>9.4</b>	<b>Transmission Diagrams</b> .....	327
9.4.1	Transmission diagram, left-hand side .....	327
9.4.2	Transmission Diagram, Right-Hand Side .....	329
<b>10</b>	<b>Hydraulics</b> .....	331
<b>10.1</b>	<b>Safety precautions</b> .....	333
10.1.1	Safety Precautions, Hydraulic System .....	333
<b>10.2</b>	<b>Hydraulic System</b> .....	334
10.2.1	Hydraulic system, standard combine .....	334
10.2.2	Hydraulic System, Four-Wheel Drive .....	335
<b>10.3</b>	<b>Oil change</b> .....	336
10.3.1	Draining and refilling hydraulic oil .....	336
<b>10.4</b>	<b>Filter Change</b> .....	337
10.4.1	Filter change in general .....	337
10.4.2	Return Oil Filter .....	337
10.4.3	Storage of Hydraulic System .....	338
<b>10.5</b>	<b>Auxiliary Hydraulics</b> .....	339
10.5.1	Auxiliary hydraulics in general .....	339
10.5.2	Functions and Auxiliary Hydraulics .....	339
10.5.3	Reel adjustment fore/aft - up/down .....	339
<b>10.6</b>	<b>Hydraulic diagrams</b> .....	340
10.6.1	Hydraulics Diagram, Standard Combine .....	340
10.6.2	Hydraulics Diagram, Auto Level Combine .....	342
10.6.3	Hydraulics Diagram for Chaff Spreader .....	344
10.6.4	Hydraulics diagram for Maxi Spreader .....	345
<b>11</b>	<b>Maintenance</b> .....	347
<b>11.1</b>	<b>Safety precautions</b> .....	349
11.1.1	Safety Precautions, Maintenance .....	349
<b>11.2</b>	<b>Undercarriage</b> .....	351
11.2.1	Undercarriage in general .....	351
11.2.2	Wheel nut torques .....	351
11.2.3	Tyre pressure .....	351
<b>11.3</b>	<b>Lubrication Intervals</b> .....	353
11.3.1	Lubrication chart, time intervals .....	353
11.3.2	Lubrication chart, right- and left-hand side .....	356



11.3.3	Lubrication chart, main crop elevator and front axle	358
11.3.4	Lubrication points, left-hand machine side	359
11.3.5	Lubrication points, right-hand machine side	373
11.3.6	Lubricants and operating fluids	384
11.3.7	Preliminary service inspections	385
11.3.8	Maintenance required	386
<b>11.4</b>	<b>Gear Oil Change</b>	389
11.4.1	Gearbox	389
11.4.2	Final drives	389
11.4.3	Right-angle gear for returns thresher	390
<b>11.5</b>	<b>Climate control</b>	391
11.5.1	Diagram for Climate Control System	391
11.5.2	Maintenance	391
<b>11.6</b>	<b>Cleaning and Off-Season Storage</b>	392
11.6.1	Cleaning	392
11.6.2	Off-season storage	393
11.6.3	Storage of Engine, Fuel System, SCR System and Hydraulic System	394
11.6.4	Periodical Start-Up	394
11.6.5	Removal of Crop Elevator	395
11.6.6	Removal of Elevator Chains	395
11.6.7	After Off-Season Storage	395
<b>11.7</b>	<b>Adjustment of Brakes</b>	396
11.7.1	Adjustment of Foot Brakes, Disc Brakes	396
11.7.2	Adjustment of parking brake	396
<b>12</b>	<b>Electrical System</b>	397
<b>12.1</b>	<b>Safety precautions</b>	399
12.1.1	Safety Precautions, Electric System	399
<b>12.2</b>	<b>Electrical System</b>	400
12.2.1	Charging system	400
12.2.2	Electric Boxes and Main Switch	401
12.2.3	External connectors 12V	402
<b>12.3</b>	<b>Electro-Hydraulic System</b>	404
12.3.1	Electro-Hydraulic System in General	404
<b>12.4</b>	<b>Key to Signatures for Wiring Harness</b>	405
12.4.1	Wire Codes	405
12.4.2	Component Codes	405
<b>12.5</b>	<b>Overview, Electric Box and Cab</b>	406
12.5.1	Position of Connectors in Electric Boxes	406
12.5.2	Fuses and Relays, Electric Box and Cab	407
<b>12.6</b>	<b>Wiring diagrams</b>	409
12.6.1	Key to symbols	409
12.6.2	Diagrams overview	410
12.6.3	Fuse ratings	410
12.6.4	Components	411
12.6.5	Wiring diagrams	420
<b>13</b>	<b>Specifications</b>	433
<b>13.1</b>	<b>Specifications</b>	435
13.1.1	Dimensions and specifications	435

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)