

---

*OPERATOR'S MANUAL*

---

*FENDT*

---

*FENDT 9470x*

---

*FENDT 9470x AL*

---



# Operator's Manual for Fendt 9470x Combine Series

<b>1</b>	<b>General Information</b>	11
1.1	<b>Dear Customer</b>	13
1.1.1	Appropriate Use	13
1.1.2	Changes and Improvements	13
1.1.3	Directives	13
1.1.4	Preface	14
1.1.5	EC Declaration of Conformity for Combine and Table	15
1.1.6	Product Identification	18
1.1.7	Sectional Drawing and Parts Identification	19
1.1.8	Disposal	20
<b>2</b>	<b>Safety</b>	23
2.1	<b>Safety</b>	25
2.1.1	General Safety Precautions	25
2.1.2	Attention - Warning Symbols	25
2.1.3	Safety Precautions	25
2.1.4	Road Transport	27
2.1.5	Warning/Instruction decals	28
2.1.6	CE Marking and Type Plate on the Combine	31
2.1.7	Position of CE Markings and Type Plate	40
<b>3</b>	<b>Operation, Controls and Cab</b>	45
3.1	<b>Before Start</b>	47
3.1.1	Before Start	47
3.2	<b>Operator cab</b>	49
3.2.1	Arrangement and Controls	49
3.2.2	Optional Extra	50
3.3	<b>Safety Precautions - on the Move</b>	51
3.3.1	Safety Precautions - on the Move	51
3.4	<b>Starting and Stopping the Engine</b>	52
3.4.1	Starting the Engine	52
3.5	<b>Drive Controls</b>	54
3.5.1	Multifunction Lever	54
3.5.2	Adjustable Armrest and Control Panel	55
3.5.3	Gearshift	56
3.5.4	Reduced Engine Revolutions in Road Transport (Speed Matching System)	57
3.5.5	Steering column	57
3.5.6	Brakes	58
3.6	<b>Seats</b>	59
3.6.1	Adjustment of Operator Seat	59
3.6.2	Adjustment of Air-Suspended Seat	59
3.6.3	EF declaration of conformity for the operator seat	60
3.6.4	Safety Switch in Operator Seat - (Operator Present Switch)	61
3.6.5	Safety belt	62
3.6.6	Passenger seat	62
3.7	<b>Mirrors</b>	63
3.7.1	Electrically adjustable rearview mirrors	63
3.7.2	Dead angle mirror	63
3.8	<b>Accessibility</b>	64
3.8.1	Ladder for Cab	64
3.8.2	Ladder for Engine Compartment	64
3.8.3	Cleaning the Windscreens	66

<b>3.9</b>	<b>Emergency Situations</b> .....	67
3.9.1	Emergency Exit .....	67
3.9.2	Fire extinguisher .....	68
<b>3.10</b>	<b>Light and Lamps</b> .....	69
3.10.1	Lights .....	69
3.10.2	Main Light and Work Light .....	70
<b>3.11</b>	<b>Climate control</b> .....	71
3.11.1	Maintenance and overview .....	71
3.11.2	Operation of climate control .....	72
<b>3.12</b>	<b>Printer</b> .....	74
3.12.1	Exchanging Paper and Ribbon in Printer .....	74
3.12.2	Inserting the Paper Roll .....	74
3.12.3	Fitting the Ribbon .....	75
<b>3.13</b>	<b>Optional Extra</b> .....	76
3.13.1	Four-Wheel Drive .....	76
3.13.2	Reversing camera .....	77
3.13.3	Auto-Steering .....	78
<b>4</b>	<b>Operation, FIELDSTAR</b> .....	79
<b>4.1</b>	<b>Safety precautions</b> .....	81
4.1.1	Safety precautions, Operating FIELDSTAR .....	81
<b>4.2</b>	<b>FIELDSTAR</b> .....	82
4.2.1	FIELDSTAR, general description .....	82
4.2.2	Operating FIELDSTAR on Terminal .....	84
4.2.3	Operating the Terminal by Remote Control in the Multi-Function Lever .....	85
4.2.4	Contrast and Brightness Control .....	86
4.2.5	Cleaning of terminal .....	86
4.2.6	Data card .....	87
4.2.7	FIELDSTAR Menu Structure .....	87
<b>4.3</b>	<b>Harvest Menu</b> .....	89
4.3.1	Instrument Reading .....	89
<b>4.4</b>	<b>Main Menu</b> .....	93
4.4.1	Main Menu Structure .....	93
<b>4.5</b>	<b>Monitoring</b> .....	95
4.5.1	Monitoring in general .....	95
4.5.2	Shaft Speeds .....	97
4.5.3	Engine Monitoring/Alarm .....	97
4.5.4	Engine Safety Alarm .....	97
4.5.5	Information .....	98
4.5.6	Shaft Speeds .....	99
<b>4.6</b>	<b>Harvesting Data</b> .....	100
4.6.1	Standard data .....	100
4.6.2	Data logging in general .....	101
4.6.3	Using Data Logging .....	102
4.6.4	Data Logging Setup .....	109
4.6.5	Using Markers .....	112
<b>4.7</b>	<b>Operator's Manual</b> .....	113
4.7.1	Harvest Settings .....	113
4.7.2	Routine Servicing .....	114
4.7.3	FIELDSTAR .....	114
<b>4.8</b>	<b>Diagnostics</b> .....	115
4.8.1	Troubleshooting in FIELDSTAR .....	115
<b>4.9</b>	<b>Coding</b> .....	122
4.9.1	Coding in general .....	122
4.9.2	Clock Adjustment .....	123
4.9.3	Language .....	123
4.9.4	Area Measuring .....	123
4.9.5	Table Calibration .....	125
4.9.6	Returns Volume .....	126
4.9.7	Grain Loss Monitor .....	126
4.9.8	Shaft alarm calibration .....	126
4.9.9	Concave Calibration .....	126

4.9.10	Constant Flow	126
4.9.11	Wheel Track and Auto Level Combine	126
4.9.12	Coding of Electrical Straw Deflectors	127
4.9.13	Lead Time and Lag Time	129
4.9.14	Calibration of actuator for electrical sieves	130
<b>4.10</b>	<b>Settings</b>	131
4.10.1	Harvest Settings	131
4.10.2	Table Settings	135
4.10.3	Machine Settings	138
<b>4.11</b>	<b>Returns Volume Monitor</b>	141
4.11.1	Returns volume	141
4.11.2	Coding	141
<b>4.12</b>	<b>Grain Loss Monitoring</b>	143
4.12.1	Sensors	143
4.12.2	Adjustment of Grain Loss Sensors	143
<b>4.13</b>	<b>Shaft Alarm Limits</b>	145
4.13.1	Shaft Alarm Calibration	145
<b>4.14</b>	<b>Yield meter</b>	146
4.14.1	Yield Meter (Isotopic)	146
4.14.2	Micro-Trak Yield Meter	148
4.14.3	Yield Meter Calibration	150
<b>4.15</b>	<b>Moisture meter</b>	152
4.15.1	Limitations in the use of the moisture meter	152
4.15.2	Continuous Moisture Measuring	152
4.15.3	Measuring Principle	152
4.15.4	Using the Moisture Meter	153
4.15.5	Cleaning the Moisture Meter	153
4.15.6	Calibration of moisture meter	154
<b>4.16</b>	<b>Cutting height control</b>	156
4.16.1	Adjustment and Operation of Cutting Height Control	156
4.16.2	Coding the Table	159
<b>4.17</b>	<b>Field pressure control</b>	160
4.17.1	Adjustment and operation of field pressure control	160
<b>4.18</b>	<b>Interaction between the Table Controls</b>	162
4.18.1	Table Controls, an outline	162
<b>4.19</b>	<b>Auto Level Table</b>	164
4.19.1	Principle of Auto Level Table	164
4.19.2	Bleeding	165
4.19.3	Coding of Auto Level Table	166
4.19.4	Calibration of Table Angle	166
<b>4.20</b>	<b>Operation of Auto Level Table</b>	168
4.20.1	Using the Auto Level Table	168
<b>4.21</b>	<b>Ground sensors</b>	170
4.21.1	Checking and Adjusting the Ground Sensors	170
<b>4.22</b>	<b>Constant Flow</b>	172
4.22.1	Constant Flow functional description	172
4.22.2	Start-up and Adjustment of Constant Flow	173
4.22.3	Constant Flow Engagement	175
<b>5</b>	<b>Operation, Auto Level Combine</b>	177
<b>5.1</b>	<b>Safety precautions</b>	179
5.1.1	Safety precautions, operation of Auto Level Combine	179
5.1.2	Safety System	179
<b>5.2</b>	<b>Attachment of Auto Level Table</b>	180
5.2.1	Attachment of Table to Auto Level Combine	180
<b>5.3</b>	<b>Combinations</b>	181
5.3.1	Automatic or Manual	181
5.3.2	Selecting Combination	181
5.3.3	Adjustment Combinations for Auto Level Combine and Auto Level Table	181
5.3.4	Priority of hydraulic functions	183
<b>5.4</b>	<b>Auto Level</b>	184
5.4.1	Auto Level Combine	184

	5.4.2	Manual Control of Auto Level Combine	184
<b>5.5</b>		<b>Auto Level Combine/Table</b>	185
	5.5.1	Combine	185
	5.5.2	Transport	186
	5.5.3	Auto Level Table	187
<b>5.6</b>		<b>Calibration</b>	188
	5.6.1	Calibration of Auto Level Combine	188
	5.6.2	Errors during Calibration	189
<b>5.7</b>		<b>Coding</b>	190
	5.7.1	Coding of Auto Level Table	190
	5.7.2	Zero Cutting Height	190
<b>5.8</b>		<b>Safety System</b>	191
	5.8.1	Safety System, Auto Level	191
	5.8.2	Automatic Control of the Tilt Sensor Function	191
	5.8.3	About the System	192
	5.8.4	Hose Breach Protection for Auto Level Hydraulics	192
<b>5.9</b>		<b>Troubleshooting</b>	193
	5.9.1	Troubleshooting in General	193
	5.9.2	Machine Not Levelling Correctly	194
<b>5.10</b>		<b>Servicing and User Tips</b>	196
	5.10.1	Retrofit of new FIELDSTAR Auto Level Job Computer and Sensors	196
	5.10.2	Unintentional Use of Manual Keys in Automatic Mode	196
	5.10.3	Diagnostics - Auto Level Combine Functions and Sensors	197
<b>6</b>		<b>Engine</b>	199
<b>6.1</b>		<b>Safety precautions</b>	201
	6.1.1	Safety Precautions, Engine	201
<b>6.2</b>		<b>Engines</b>	202
	6.2.1	Engine Type	202
<b>6.3</b>		<b>Air-Intake</b>	203
	6.3.1	Filter System	203
<b>6.4</b>		<b>Cooling System</b>	204
	6.4.1	Rotary Screen and Dust Aspirator	204
	6.4.2	Coolers	205
	6.4.3	Coolant	206
	6.4.4	Checking the Fan Belt Tension	206
	6.4.5	Checking the water pump belt	207
<b>6.5</b>		<b>Fuel System</b>	208
	6.5.1	Fuel and quality requirements	208
	6.5.2	Fuel System	209
	6.5.3	Filter change	210
	6.5.4	Bleeding the fuel system	211
<b>6.6</b>		<b>SCR</b>	212
	6.6.1	The SCR system in general	212
	6.6.2	Components and functions	213
	6.6.3	Filling and storing AdBlue	214
	6.6.4	Filter change	215
	6.6.5	SCR system failure	216
<b>6.7</b>		<b>Crankcase ventilation</b>	217
	6.7.1	Closed crankcase ventilation	217
<b>6.8</b>		<b>Engine oil/change</b>	218
	6.8.1	Oil and Filter Change	218
<b>6.9</b>		<b>Cleaning</b>	219
	6.9.1	Cleaning of engine compartment	219
	6.9.2	Vibration damper	219
<b>6.10</b>		<b>EEM4 engine control</b>	220
	6.10.1	Electronic Engine Management and Monitoring	220
	6.10.2	Engine Trouble Shooting (Self-Diagnosis)	221
	6.10.3	EEM4 Codes	223

<b>7</b>	<b>Cutting Tables</b> .....	237
<b>7.1</b>	<b>Safety precautions</b> .....	239
7.1.1	Safety Precautions, Cutting Tables .....	239
<b>7.2</b>	<b>Attachment/Removal of Table</b> .....	240
7.2.1	Attachment of Table, Standard and Auto Level .....	240
7.2.2	Removal of Table .....	241
7.2.3	Supports .....	242
<b>7.3</b>	<b>Table trailer</b> .....	243
7.3.1	Attachment of combine and trailer .....	243
7.3.2	Table Trailer Brakes .....	243
<b>7.4</b>	<b>Reel</b> .....	244
7.4.1	Safety stop for reel .....	244
7.4.2	Reel Adjustment Up/Down, Fore/Aft .....	245
7.4.3	Bleeding .....	246
7.4.4	Reel Rotation .....	246
7.4.5	Reel tine bars .....	247
7.4.6	Adjustment of the Reel in the Table .....	247
<b>7.5</b>	<b>Knife</b> .....	248
7.5.1	Knife and knife drive .....	248
<b>7.6</b>	<b>Feeding</b> .....	249
7.6.1	Table auger .....	249
7.6.2	Cut-off strip and distribution strip .....	250
7.6.3	Replacement of Feathering Fingers .....	251
7.6.4	Auger Flight Extensions, 20-22-25-30' Tables .....	251
7.6.5	Reversing .....	252
<b>7.7</b>	<b>Transmission</b> .....	253
7.7.1	PowerFlow table, knife drive and table auger .....	253
7.7.2	Slip Clutch for Table Auger .....	253
<b>7.8</b>	<b>PowerFlow Table</b> .....	254
7.8.1	PowerFlow belts .....	254
7.8.2	Inspection and Start-Up of Powerflow Belts .....	254
7.8.3	Adjustment of belts .....	255
7.8.4	Scrapers, front .....	255
7.8.5	Scrapers, Rear, and Adjustment of Bearing Housings .....	256
7.8.6	Table Bottom .....	256
7.8.7	Cleaning .....	257
<b>7.9</b>	<b>Crop lifters</b> .....	258
7.9.1	Using Crop Lifters .....	258
<b>7.10</b>	<b>Vertical Knives, Rape Auger and Straw Dividers</b> .....	259
7.10.1	Vertical knife .....	259
7.10.2	Mounting of Vertical Knife .....	259
7.10.3	Rape auger .....	260
7.10.4	Folding torpedo dividers and bow dividers .....	260
7.10.5	Mounting of Straw Dividers .....	261
7.10.6	Adjustment of Torpedo Divider .....	261
<b>7.11</b>	<b>Fixed Table Auger Fingers</b> .....	262
7.11.1	Fitting of fixed table auger fingers .....	262
7.11.2	Using Fixed Table Auger Fingers .....	262
7.11.3	High Table Sides .....	262
<b>7.12</b>	<b>Main crop elevator</b> .....	264
7.12.1	Elevator Chain .....	264
7.12.2	Transmission for Table .....	265
7.12.3	Stone Trap .....	265
7.12.4	Initial Adjustment of Cutting Height Indication .....	266
<b>8</b>	<b>Operation of Table and Threshing Unit</b> .....	267
<b>8.1</b>	<b>Safety precautions</b> .....	269
8.1.1	Safety Precautions, Operation of Machine and Cutting Table .....	269
<b>8.2</b>	<b>Operation of Table</b> .....	271
8.2.1	Table Height and Table Automatic Control .....	271
8.2.2	Cutting Height Control .....	272
8.2.3	Field Pressure Control .....	273

8.2.4	Preset cutting height	274
8.2.5	Auto Level Table	274
8.2.6	Table Engagement - Emergency Stop	275
<b>8.3</b>	<b>Threshing Unit Transmission</b>	276
8.3.1	Threshing unit engagement	276
8.3.2	Cylinder Variator	277
8.3.3	Turning Tool for Cylinder	277
<b>8.4</b>	<b>Concave Setting, Electrically Adjustable</b>	278
8.4.1	Operation of Concave	278
8.4.2	Concave Setting	278
<b>8.5</b>	<b>Threshing</b>	281
8.5.1	Concave filler plates	281
8.5.2	Rotors	281
<b>8.6</b>	<b>Straw Chopper and Spreader Hood</b>	283
8.6.1	Straw chopper	283
8.6.2	Adjustment of Spreader Hood	284
8.6.3	Counter Knives and Cross Bar	285
8.6.4	Replacement of Knives	287
<b>8.7</b>	<b>Fanning Mill and Sieves</b>	288
8.7.1	Fanning mill	288
8.7.2	Shaker shoe	288
8.7.3	Shaker Shoe with Electrical Sieves	289
8.7.4	Manual Adjustment of Sieves	289
8.7.5	Cleaning of main grain pan and sieves	290
8.7.6	Cleaning of main grain pan	291
8.7.7	Cleaning the Sieves	292
8.7.8	Shaker Shoe Light	294
8.7.9	Special sieves	294
<b>8.8</b>	<b>Internal Grain Transport</b>	295
8.8.1	Auger Housing/Elevators	295
8.8.2	Returns thresher	295
8.8.3	Tank filling auger	296
8.8.4	Grain tank	297
8.8.5	Unloading auger	299
8.8.6	Unloading Auger Clutch	300
8.8.7	Unloading tube	301
<b>8.9</b>	<b>Rotor Feeder</b>	302
8.9.1	Adjustment of Rotor Feeder	302
8.9.2	Rotor Feeder Concave	303
8.9.3	Reversing	303
<b>8.10</b>	<b>Straw hood</b>	304
8.10.1	Light in straw hood	304
<b>8.11</b>	<b>Chaff spreader</b>	305
8.11.1	Setting	305
<b>8.12</b>	<b>Maxi Spreader</b>	307
8.12.1	Operation and Adjustment	307
8.12.2	Adjustment of Sensors	308
<b>8.13</b>	<b>Maize Threshing</b>	309
8.13.1	Maize Threshing in General	309
8.13.2	Attachment of Maize Header	309
8.13.3	Area measuring	310
8.13.4	Main crop elevator	310
8.13.5	Concave/Initial Settings	311
8.13.6	Threshing cylinder	311
8.13.7	Rotor Feeder	311
8.13.8	Shaker shoe	312
8.13.9	Rotors	312
8.13.10	Bottom auger cover plate	313
8.13.11	Scrapers	313
8.13.12	Straw chopper	313
8.13.13	Maxi Spreader	314

<b>8.14 Harvest settings</b> .....	315
8.14.1 Suggested harvest settings .....	315
8.14.2 Optimising the harvest settings .....	316
<b>9 Transmissions</b> .....	319
<b>9.1 Safety precautions</b> .....	321
9.1.1 Safety Precautions, Transmissions .....	321
<b>9.2 Adjustment of Transmissions</b> .....	322
9.2.1 General .....	322
9.2.2 Threshing unit clutch .....	322
9.2.3 Hydrostatic Transmission .....	323
<b>9.3 Transmissions</b> .....	324
9.3.1 Rear beater .....	324
9.3.2 Table and crop elevator .....	324
9.3.3 Straw chopper .....	325
9.3.4 Threshing cylinder .....	326
9.3.5 Unloading auger .....	326
9.3.6 Shaker shoe and chaff spreader counter drive .....	327
9.3.7 Countershaft for Rotors .....	327
9.3.8 Variator Belt for Rotors .....	328
9.3.9 Filling and Returns System Countershaft .....	328
9.3.10 Returns Elevator and Returns Thresher .....	329
9.3.11 Tank Filling Elevator and Tank Filling Auger .....	329
9.3.12 Dust aspirator .....	330
9.3.13 Rotary screen .....	331
9.3.14 Fanning mill .....	332
9.3.15 Rotor Feeder .....	332
9.3.16 Alternator and Fan .....	333
9.3.17 Climate control .....	333
<b>9.4 Transmission Diagrams</b> .....	334
9.4.1 Transmission diagram, left-hand side .....	334
9.4.2 Transmission Diagram, Right-Hand Side .....	336
<b>10 Hydraulics</b> .....	339
<b>10.1 Safety precautions</b> .....	341
10.1.1 Safety Precautions, Hydraulic System .....	341
<b>10.2 Hydraulic System</b> .....	342
10.2.1 Hydraulic system, standard combine .....	342
10.2.2 Hydraulic System, Four-Wheel Drive .....	343
<b>10.3 Oil change</b> .....	344
10.3.1 Draining and refilling hydraulic oil .....	344
<b>10.4 Filter Change</b> .....	345
10.4.1 Filter change in general .....	345
10.4.2 Return Oil Filter .....	345
10.4.3 Storage of Hydraulic System .....	346
<b>10.5 Auxiliary Hydraulics</b> .....	347
10.5.1 Auxiliary hydraulics in general .....	347
10.5.2 Functions and Auxiliary Hydraulics .....	347
10.5.3 Reel adjustment fore/aft - up/down .....	347
<b>10.6 Hydraulic diagrams</b> .....	348
10.6.1 Hydraulics Diagram, Standard Combine .....	348
10.6.2 Hydraulics Diagram, Auto Level Combine .....	350
10.6.3 Hydraulics Diagram for Chaff Spreader .....	352
10.6.4 Hydraulics diagram for Maxi Spreader .....	353
<b>11 Maintenance</b> .....	355
<b>11.1 Safety precautions</b> .....	357
11.1.1 Safety Precautions, Maintenance .....	357
<b>11.2 Undercarriage</b> .....	359
11.2.1 Undercarriage in general .....	359
11.2.2 Wheel Nut Torques .....	359
11.2.3 Tyre pressure .....	359



<b>11.3</b>	<b>Lubrication Intervals</b> .....	361
11.3.1	Lubrication chart, time intervals .....	361
11.3.2	Lubrication chart, right- and left-hand side .....	364
11.3.3	Lubrication chart, main crop elevator and front axle .....	366
11.3.4	Lubrication points, left-hand machine side .....	367
11.3.5	Lubrication points, right-hand machine side .....	382
11.3.6	Lubricants and operating fluids .....	396
<b>11.4</b>	<b>Maintenance Schedules</b> .....	398
11.4.1	Preliminary Service Inspections .....	398
11.4.2	Maintenance required .....	399
<b>11.5</b>	<b>Gear Oil Change</b> .....	402
11.5.1	Gearbox .....	402
11.5.2	Final drives .....	402
11.5.3	Right-angle gear for returns thresher .....	403
11.5.4	Right-Angle Gear for Rotors .....	403
<b>11.6</b>	<b>Climate control</b> .....	404
11.6.1	Diagram for Climate Control System .....	404
11.6.2	Maintenance .....	404
<b>11.7</b>	<b>Cleaning and Off-Season Storage</b> .....	405
11.7.1	Cleaning .....	405
11.7.2	Off-season Storage .....	406
11.7.3	Storage of Engine, Fuel System, SCR System and Hydraulic System .....	407
11.7.4	Periodical Start-Up .....	407
11.7.5	Removal of Crop Elevator .....	408
11.7.6	Removal of Elevator Chains .....	408
11.7.7	After Off-Season Storage .....	408
<b>11.8</b>	<b>Adjustment of Brakes</b> .....	409
11.8.1	Adjustment of Foot Brakes, Disc Brakes .....	409
11.8.2	Adjustment of Parking Brake .....	409
<b>12</b>	<b>Electrical System</b> .....	411
<b>12.1</b>	<b>Safety precautions</b> .....	413
12.1.1	Safety Precautions, Electric System .....	413
<b>12.2</b>	<b>Electrical System</b> .....	414
12.2.1	Charging system .....	414
12.2.2	Electric Boxes and Main Switch .....	415
12.2.3	External connectors 12V .....	416
<b>12.3</b>	<b>Electro-Hydraulic System</b> .....	418
12.3.1	Electro-Hydraulic System in General .....	418
<b>12.4</b>	<b>Key to Signatures for Wiring Harness</b> .....	419
12.4.1	Wire Codes .....	419
12.4.2	Component Codes .....	419
<b>12.5</b>	<b>Overview, Electric Box and Cab</b> .....	420
12.5.1	Position of Connectors in Electric Boxes .....	420
12.5.2	Fuses and Relays, Electric Box and Cab .....	421
<b>12.6</b>	<b>Wiring diagrams</b> .....	423
12.6.1	Key to symbols .....	423
12.6.2	Diagrams overview .....	424
12.6.3	Fuse Ratings .....	424
12.6.4	Components .....	425
12.6.5	Wiring diagrams .....	434
<b>13</b>	<b>Specifications</b> .....	447
<b>13.1</b>	<b>Specifications</b> .....	449
13.1.1	Dimensions and Specifications .....	449

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)