


# FORD

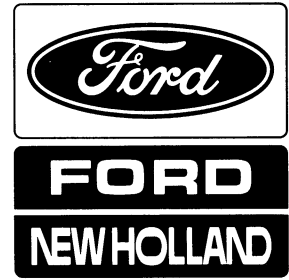

## Service Manual


---

### Tractor Series

600, 700, 800, 900, 501,  
601, 701, 801, 901, 1801,  
2000, and 4000

1954 – 1964

40060090

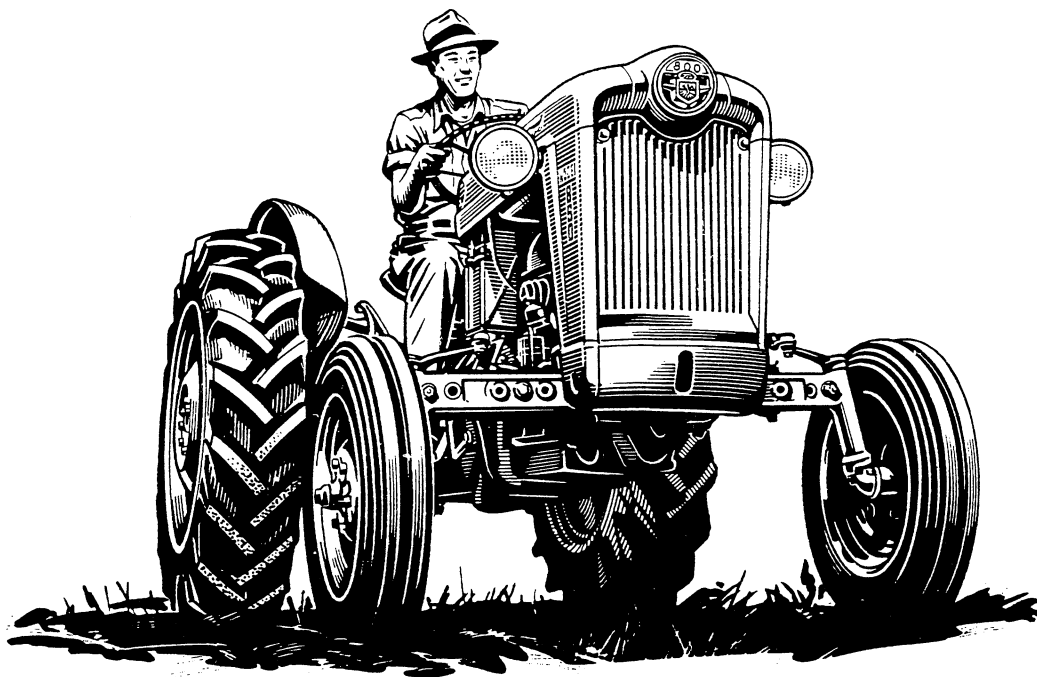

Reprinted

# TABLE OF CONTENTS

## Part ONE—POWER PLANT

### Chapter I—ENGINE

Section	Page	Section	Page
1 Engine Removal and Installation— Series 501 through 901 . . . . .	1	6 Main Bearings, Balancer, Flywheel, and Crankshaft	32
2 Engine Removal and Installation—Series 1801 . . . . .	8	7 Engine Governor and Timing Gear Cover . . . . .	39
3 Cylinder Head and Valves . . . . .	12	8 Camshaft and Camshaft Gear . . . . .	41
4 Oil Pan, Oil Pump, and Oil Filter . . . . .	20	9 Engine Tune-Up . . . . .	43
5 Connecting Rods, Bearings, Pistons, Rings, and Cylinder Block . . . . .	25	10 Trouble Shooting . . . . .	46
		11 Specifications . . . . .	52
		12 Special Tools . . . . .	57

### Chapter II—ELECTRICAL SYSTEM

Section	Page	Section	Page
1 Battery . . . . .	60	5 Manifold Heaters, Relay and Electrical Circuit—DIESEL . . . . .	75
2 Generator and Charging Circuit . . . . .	61	6 Trouble Shooting . . . . .	76
3 Starting Motor, Solenoid and Starting Circuit . . . . .	69	7 Specifications . . . . .	82
4 Lamps and Lighting Circuit . . . . .	73	8 Special Tools . . . . .	82

### Chapter III—IGNITION SYSTEM

Section	Page	Section	Page
1 Ignition Switch . . . . .	83	5 Trouble Shooting . . . . .	92
2 Spark Plugs and Ignition Wires . . . . .	84	6 Specifications . . . . .	95
3 Coil . . . . .	84	7 Special Tools . . . . .	96
4 Distributor . . . . .	85		

### Chapter IV—FUEL AND EXHAUST SYSTEM—GASOLINE

Section	Page	Section	Page
1 Air Cleaner . . . . .	97	5 Trouble Shooting . . . . .	107
2 Carburetor . . . . .	99	6 Specifications . . . . .	108
3 Fuel Tank, Sediment Bowl and Lines . . . . .	103	7 Special Tools . . . . .	108
4 Manifold, Muffler, and Exhaust Pipe . . . . .	104		

### Chapter V—FUEL AND EXHAUST SYSTEM—DIESEL

Section	Page	Section	Page
1 Air Cleaner . . . . .	109	7 Fuel Injection Pump . . . . .	118
2 Fuel Tank . . . . .	110	8 Manifold, Muffler, and Outlet Pipe . . . . .	120
3 Bleeding and Flushing the Fuel System . . . . .	110	9 Trouble Shooting . . . . .	122
4 Idle and High Speed Adjustments . . . . .	111	10 Specifications . . . . .	124
5 Fuel Filter . . . . .	112	11 Special Tools . . . . .	124
6 Fuel Injectors . . . . .	113		

## Chapter VI—FUEL AND EXHAUST SYSTEM—LP-GAS

Section	Page	Section	Page
1 Construction.....	125	7 Fuel Filter.....	139
2 Principles of Operation.....	128	8 Pressure Regulators and Vaporizer.....	140
3 Handling of LP-Gas.....	130	9 Trouble Shooting.....	148
4 Air Cleaner.....	131	10 Specifications.....	149
5 Carburetors.....	131	11 Special Tools.....	149
6 Fuel Tank, Valves and Lines.....	137		

## Chapter VII—COOLING SYSTEM

Section	Page	Section	Page
1 Care of the Cooling System.....	150	5 Fan and Generator Belt.....	155
2 Radiator, Hose, and Pressure Cap.....	151	6 Trouble Shooting.....	155
3 Water Pump.....	153	7 Specifications.....	157
4 Thermostat.....	154	8 Special Tools.....	157

# Part TWO—CLUTCH, TRANSMISSIONS, REAR AXLE, AND POWER TAKE-OFF

## Chapter I—CLUTCH

Section	Page	Section	Page
1 Single Clutch.....	158	5 Clutch Pedal Adjustment.....	165
2 Double Clutch.....	161	6 Trouble Shooting.....	166
3 Clutch Release Shaft Bushings.....	165	7 Specifications.....	166
4 Clutch Pedal Bushings.....	165	8 Special Tools.....	167

## Chapter II—TRANSMISSIONS

Section	Page	Section	Page
1 Removal and Installation.....	168	7 Description and Operation	
2 Cleaning and Inspection—		Select-O-Speed Transmission.....	197
All except Select-O-Speed.....	170	8 Maintenance and Adjustments.....	217
3 Four Speed Transmission.....	170	9 Transmission Overhaul.....	224
4 Five Speed Transmission.....	177	10 Trouble Shooting—Select-O-Speed Transmission.....	249
5 Sherman Step-Up and Step-Down Transmission.....	188	11 Specifications.....	254
6 Sherman Reversing Transmission.....	193	12 Special Tools.....	257

## Chapter III—REAR AXLE

Section	Page	Section	Page
1 General Purpose and Industrial Tractors.....	258	4 Specifications.....	272
2 Row Crop Tractors.....	266	5 Special Tools.....	272
3 Center Housing Replacement.....	270		

## Chapter IV—POWER TAKE-OFF

Section	Page	Section	Page
1 Power Take-Off.....	273	4 Specifications.....	281
2 Power Take-Off Conversion Assembly.....	277	5 Special Tools.....	281
3 Belt Pulley.....	278		

# Part THREE—STEERING, FRONT AXLE, BRAKES, WHEELS AND TIRES

## Chapter IA—POWER STEERING—GENERAL PURPOSE TRACTORS

Section	Page	Section	Page
1 Construction and Operation.....	282	5 Power Cylinder.....	299
2 Drag Link.....	287	6 Trouble Shooting.....	300
3 Power Steering Pump—Sleeve Type.....	288	7 Specifications.....	300
4 Control Valve and Steering Gear.....	292	8 Special Tools.....	300

## Chapter IB—POWER STEERING—ROW CROP TRACTORS

Section	Page	Section	Page
1 Construction and Operation.....	301	5 Power Cylinder and Control Valve Assembly.....	316
2 Drag Link.....	306	6 Trouble Shooting.....	322
3 Power Steering Pump—Rotor Type.....	307	7 Specifications.....	322
4 Steering Gear.....	310	8 Special Tools.....	322

## Chapter IC—POWER STEERING—INDUSTRIAL TRACTORS

Section	Page	Section	Page
1 Construction and Operation.....	323	5 Control Cable and Conduit Assembly.....	336
2 Power Steering Pump.....	327	6 Trouble Shooting.....	338
3 Power Cylinder and Valve End Assembly.....	329	7 Specifications.....	340
4 Actuator Housing.....	334	8 Special Tool.....	340

## Chapter II—FRONT AXLE

Section	Page	Section	Page
1 General Purpose Front Axle— Standard and Heavy Duty.....	341	5 Industrial Front Axle.....	355
2 Row Crop Front Axles.....	346	6 Specifications.....	360
3 Row Crop Pedestal.....	348	7 Trouble Shooting.....	361
4 Row Crop Wide Adjustable Front Axle.....	353	8 Special Tools.....	361

## Chapter III—BRAKES

Section	Page	Section	Page
1 Brake Adjustment.....	362	3 Brake Camshaft.....	366
2 Pedals, Shafts and Brake Rods.....	363	4 Brake Overhaul.....	366

## Chapter IV—WHEELS AND TIRES

Section	Page	Section	Page
1 Wheel Bearing.....	368	4 Tires.....	377
2 Wheel Spacing—Tread Width.....	368	5 Specifications.....	378
3 Wheel Weights.....	374	6 Special Tools.....	379

# Part FOUR—HYDRAULIC SYSTEM

## Chapter I—OPERATING PRINCIPLES

Section	Page
1 Operating Principles.....	381

**Chapter II—ADJUSTMENTS, COMPONENT PARTS, TROUBLE SHOOTING AND SPECIAL TOOLS**

<b>Section</b>	<b>Page</b>	<b>Section</b>	<b>Page</b>
1 Hydraulic Control Adjustment.....	387	6 Pump Relief Valve and Oil Tubes.....	408
2 Leveling Box.....	388	7 Trouble Shooting.....	409
3 Lift Cover.....	389	8 Specifications.....	414
4 Lift Cylinder.....	394	9 Special Tools.....	414
5 Hydraulic Pump and Manifold.....	396		

**Part FIVE—MAINTENANCE AND LUBRICATION**

<b>Section</b>	<b>Page</b>	<b>Section</b>	<b>Page</b>
1 Maintenance.....	415	2 Lubrication.....	415

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)