

15 Field Harvester

Service Manual

GSS1296

Reprinted

CASE III

CONTENTS

Introduction	6
Specifications	6-8
Blower Spout	
Removal and Disassembly	9
Inspection and Repair	9
Reassembly and Installation	9
Front Power Drive and Shields	
Removal	10
Disassembly, Inspection and Repair, and Reassembly	10
Installation	10
Rear Power Drive and Slip Clutch	
Removal and Disassembly	10
Inspection and Repair	11
Reassembly and Installation	11
Adjustment (Slip Clutch)	11,12
Tongue and Jackstand	
Removal	12,13
Inspection and Repair	13
Installation	13
PTO Gear Case 13	
Removal	14
Disassembly	14-16
Inspection and Repair	16
Reassembly	17,18
Installation	18
Reverse Gear Case and Slip Clutch	
Removal	18,19
Disassembly	19-23
Inspection and Repair	23
Reassembly	23-27
Installation	27

Upper Apron

Removal	28,29
Disassembly	30
Inspection and Repair	30,31
Reassembly	31
Installation	31,32
Adjustment	32

Conveyor

Removal and Disassembly	33-35
Inspection and Repair	35
Reassembly and Installation	35,36

Smooth Feed Roll and Shear Plate

Removal and Disassembly	36,37
Inspection and Repair	37
Reassembly and Installation	37,38

Transition and Cutter Head

Removal and Disassembly	38-40
Inspection and Repair	40,41
Reassembly and Installation	41-44

Main Frame, Axles and Wheels

Disassembly	44,45
Inspection and Repair	45
Reassembly	45

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com