EX60-2 EXCAVATOR

PARTS CATALOG

適用号機 Serial No. 30001~



FOREWORD

- © This parts catalog includes parts information for both standard and regional specification models.

Please refer to the identification note given in < > after the Group Name, or Part Name to distigush between standard and regional parts information as shown below:

Group Name (or Part Name) plus (STD) : for Standard Specification Model

Group Name (or Part Name) plus (N. EUROPE): for Northern European Specification models,

delivered to the Finland, Sweden and Norway

Group Name (or Part Name) plus no note : Applicable to all models

Example:

GAUGE PANEL (N. EUROPE)----This parts is for machines delivered to Finland, Sweden and Norway.

- This parts catalog contains the most recent information available at the time of printing, and the contents of the list are based on information in effect at that time and are subject to change without notice.
- © The references in the parts catalog of "LEFT", "RIGHT", "FRONT" and "REAR" are identified as follows.

The driver's seat is positioned "LEFT" side, and the opposite side is "RIGHT".

The front-end attachments is at the "FRONT". The counterweight is attached at the "REAR".

For the undercarriage, the travel motor is at the "REAR", and the opposite is "FRONT".

© For the engine parts, please refer to the parts catalog of NISSAN diesel engine BD30 issued separately.

1. HOW TO ORDER PARTS

When ordering parts, Please specify the following items as shown in the following example.

(1) Model of Machine(2) Machine Serial No.	(EXAMPLE) (EX60-2) (10K-30001)	}	Shown on NAME-PLATE provided on MAIN FRAME on the lower right side of CAB
(3) Part No.	(A810165)	1	Ordering Parts
(4) Part Name	(O-RING)	5	ordering rates
(5) Q'ty	(2)		Ordering Q'ty

(6) Purchaser's Name and Address

2. HOW TO USE THIS PARTS CATALOG

·ITEM Item No. shows the reference No. on the machine illustration.

PART NO. Part No. consists of a letter of the alphabet and numericals, or numericals only.

PART NAME Components of an assembly part are shown with "." marks and are shown on the line, or lines, below the assembly part. Also, if the component with "." mark consists of further components part, these further components are shown by the marks "..".

·Q'TY Q'ty shows the quantity used for one machine, however quantity of components shows the quantity for one assembly part.

SERVICE CODE Abbreviations in the column of service code have their own meaning as shown below.

- W: The part with this abbreviation shows that the part requires some work on it before installing in the machine.
- H: As the part with this abbreviation shows a precision part, please ask the authority for its repairing.
- D: The part with this abbreviation is a component of an assembly and is not available independently. The assembly part containing this part should be orderd.
- K: This means that the part is contained in the service parts kit.
- R: The part with this abbreviation shows that the quantity of the part is changed depending upon the machine, such as an adjusting shim etcetera.
- S: This part is specially provided as a service part, which was not provided in the machine before from shipping the factory.
- Z: The part with this abbreviation related to the ENGINE.
- OP: Optional parts
- OS: Over-sized parts
- US: Under-sized parts (NOTE: Part with abbreviation "OS" or "US" is described on the line below the standard-sized part.)
- #: The part with this mark is newly added on that page of the equipment.

SERIAL No. Applicable machine serial No. for the part is shown in this column.

Further, above this column, the applicable serial No. is shown for all parts described on that page.

Take this serial No. if the part is not mentioned its own applicable serial No. Take the serial No. which includes both of for the part and for all parts desclibed on the page if the part is mensioned its own applicable serial No. If the abbreviation "D" is described as headed letter instead of the serial No. it means the producted date of the machine in which the parts are used.

(EXSAMPLE: D94/01-....producted on January 1994 and after)


- If the abbreviation 'H' is described as headed letter, it means the serial No.
- of equipment such as PUMP, MOTOR, CONTROL VALVE and etcetera.
- If the abbreviation 'F' is described as headed letter, it means the Front No.
- of front-end attachments such as BUCKET, BOOM, ARM and etcetera.
- ICA shows the interchangeability between the original and the improved parts.

 Abbreviations used in this column are as follows.
 - I: Part No. in the column of 'Replaceable part' can be used instead of this part but not vice versa.
 - P: This must not be used for the machine. The part No. in the column 'Replaceable part' should be used instead.
 - T: Parts Nos. those in the column of "Replaceable part" can be used as an assembly instead of this part.
 - Y: This part and the part in the column of 'Replaceable part' are interchangeable with each other.

·REPLACEABLE PART


Interchangeable parts Nos. and their required quantity are shown in this column.

NOTE: If interchangeable improved parts are provided for the parts which you may order, the improved parts classified as "I", "P", "T" or "Y" may be supplied.

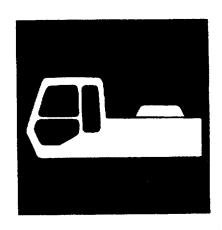

L 部 施 回 林 UPPERSTRUCTURE


フレーム Frame

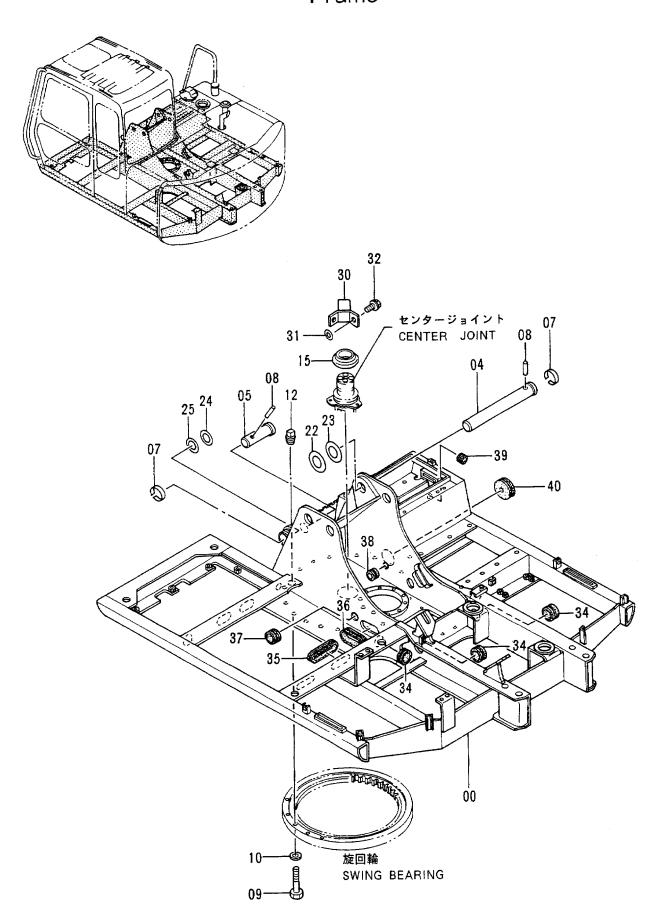


フレーム FRAME

						30001-		
一符号 ITEM	部品番号 PART NO.	部 品 名 PART NAME	or PART NAME	数量 Q'TY	サービス コード S.C	適用号機 SERIAL NO.	互換性 ICA	代替部品 REPLACEABLE PART 部品番号数量 PART NO. 0'TY
00	5003518	フレーム ; メイン	FRAME; MAIN	į 1	!		1	
04	3043504	ピン	PIN	1				
05	3055930	ピン	PIN	1				
07	4065688	リング	RING	2				
08	4065689	ピン	PIN	2				
09	J931685	木* ルト	BOLT	22			1	
10	J222016	ワツシヤ	WASHER	22				:
12	J75214	プ・ラグ	PLUG	1				ı
15	4195033	カバー	COVER	1				
22	4224058	ワツシヤ 2.0	WASHER 2.0	2	R			
23	4224057	ワツシヤ 1.0	WASHER 1.0	2	R			
24	4180196	スペ゚-サ 1.2	SPACER 1.2	2	R			}
25	4042135	スペ -サ 2.3	SPACER 2.3	1	R			i
30	8036895	ストツハ゜	STOPPER	1				
31	J222012	ワツシヤ	WASHER	2			<u> </u>	
32	J901220	ポ*ルト	BOLT	2		-32791		
32	J011230	☆ ルト;セムス	BOLT; SEMS	2		32792-		
34	4509404	ブ ツシング ;ラバ -	BUSHING; RUBBER	. 3		-		
35	4293794	ブ ツシング ;ラバー	BUSHING; RUBBER	1				
36	4293803	ブ ツシング ; ラバ ー	BUSHING; RUBBER	1	: 	ļ	ļ	·}
37	4201749	ブ ツシング ; ラバー	BUSHING; RUBBER	1				
38	4210661	ブ ツシング ;ラバ -	BUSHING; RUBBER	1				
39	94-2816	ブ ツシング ; ラバー	BUSHING; RUBBER	1		:		!
40	4293796	ブ ツシング ;ラバ ー	BUSHING; RUBBER	1				
	1	,						
			,	!				i
				i	i			i
					i			
			:	İ				


カウンタウェイト Counterweight

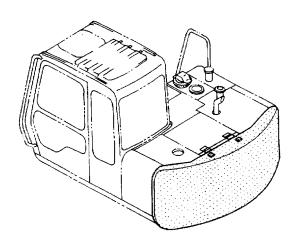

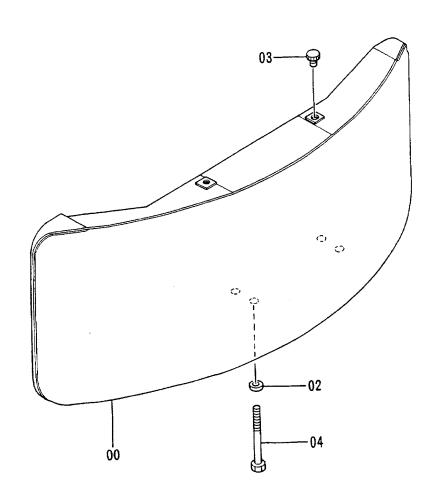

TEM PART NO. PART NAME CODE G'TY S.C SERIAL NO. 性 部品番号 数量						30001-	
00 6011826 ウエイト; カウンタ WEIGHT; COUNTER 1 -33019 Y 6014228 1 (スタンダ・トド ヨウ) (FOR STD.) 00 6014228 ウエイト; カウンタ WEIGHT; COUNTER 1 33020- (スタンダ・トド ヨウ) (FOR STD.) 00 6013056 ウエイト; カウンタ WEIGHT; COUNTER 1 -33019 Y 6014224 1 (アワコーボ・リヨウ) (FOR OFFSET BOOM) 00 6014224 ウエイト; カウンタ WEIGHT; COUNTER 1 33020- (アワコーボ・リヨウ) (FOR OFFSET BOOM) 00 601428 クワツシヤ WASHER 4 149678 キャツプ・ CAP 2				i or	数量 サービ Q'TY コート S.C	為用号機 SERIAL NO.	互 代 替 部 品 REPLACEABLE PART 性 部品番号 数量 ICA PART NO. Q'TY
(スタンダ・ード ヨウ) (FOR STD.) (フツコーボ・リヨウ) (FOR OFFSET BOOM) (フツコーボ・リヨウ) (FOR OFFSET BOOM) (フツコーボ・リヨウ) (FOR OFFSET BOOM) (フツコーボ・リヨウ) (FOR OFFSET BOOM) (スタンダ・ード ヨウ) (FOR OFFSET BOOM) (カンコーボ・リョウ) (FOR OFFSET BOOM) (カンコーボ・リョウ) (FOR OFFSET BOOM) (スタンダ・ード ヨウ) (FOR OFFSET BOOM) (スタンダ・ード ヨウ) (FOR OFFSET BOOM)	00	6011826	ウエイト; カウンタ	WEIGHT; COUNTER	1	-33019	
00 6014228 ウェイト; カウンタ WEIGHT; COUNTER 1 33020- (スタンタ・ート・ヨウ) (FOR STD.) 00 6013056 ウェイト; カウンタ WEIGHT; COUNTER 1 -33019 Y 6014224 1 (ソツコー木・リヨウ) (FOR OFFSET BOOM) 00 6014224 ウェイト; カウンタ WEIGHT; COUNTER 1 33020- (FOR OFFSET BOOM) 00 4126485 ワツシヤ WASHER 4 03 4149678 キャツプ CAP 2							
(スタンダ・ート・ヨウ) (FOR STD.) (00 6013056 ウェイト: カウンタ WEIGHT; COUNTER 1 -33019 Y 6014224 1 (ソツコー木・リヨウ) (FOR OFFSET BOOM) (00 6014224 ウェイト: カウンタ WEIGHT; COUNTER 1 33020- (ソツコー木・リヨウ) (FOR OFFSET BOOM) (2 4126485 フゾシヤ WASHER 4 (3 4149678 キャツプ CAP 2	00	6014228	§	1	1	33020-	
00 6013056 ウエイト: カウンタ WEIGHT; COUNTER 1 -33019 Y 6014224 1 , (ソツコーボ・リヨウ) (FOR OFFSET BOOM) 00 6014224 ウェイト; カウンタ WEIGHT; COUNTER 1 33020- (ソツコーボ・リヨウ) (FOR OFFSET BOOM) 02 4126485 ワツシヤ WASHER 4 03 4149678 キャツプ CAP 2				i			
(ソツコーボ・リヨウ) (FOR OFFSET BOOM) 00 6014224 ウェイト: カウンタ WEIGHT: COUNTER 1 33020- (ソツコーボ・リヨウ) (FOR OFFSET BOOM) 02 4126485 フゾシヤ WASHER 4 03 4149678 キャツプ CAP 2	00	6013056			1	-33019	Y 6014224 1
00 6014224 ウェイト; カウンタ WEIGHT; COUNTER 1 33020- (ソツコー末・リヨウ) (FOR OFFSET BOOM) 02 4126485 ワッシャ WASHER 4 03 4149678 キャップ CAP 2		+					
, (ソツコーボ・リヨウ) (FOR OFFSET BOOM) 02 4126485 ワツシヤ WASHER 4 03 4149678 キャツプ CAP 2	00	6014224			1	33020-	
02 4126485 ワツシヤ WASHER 4 03 4149678 キャップ CAP 2							
03 4149678 キャップ CAP 2		4126485			4		
							†
	•	0002.2.					
				1			
		: 					
				·	1		
						i	
				······			
				:	į į		
			:				
			!				
	• • • • • • • • • • • • • • • • • • • •						<u> </u>
		į					
		# :			:		
						i	
				1			
			1				
			i			!	
						!	
				•			


エ ン ジ ン Engine

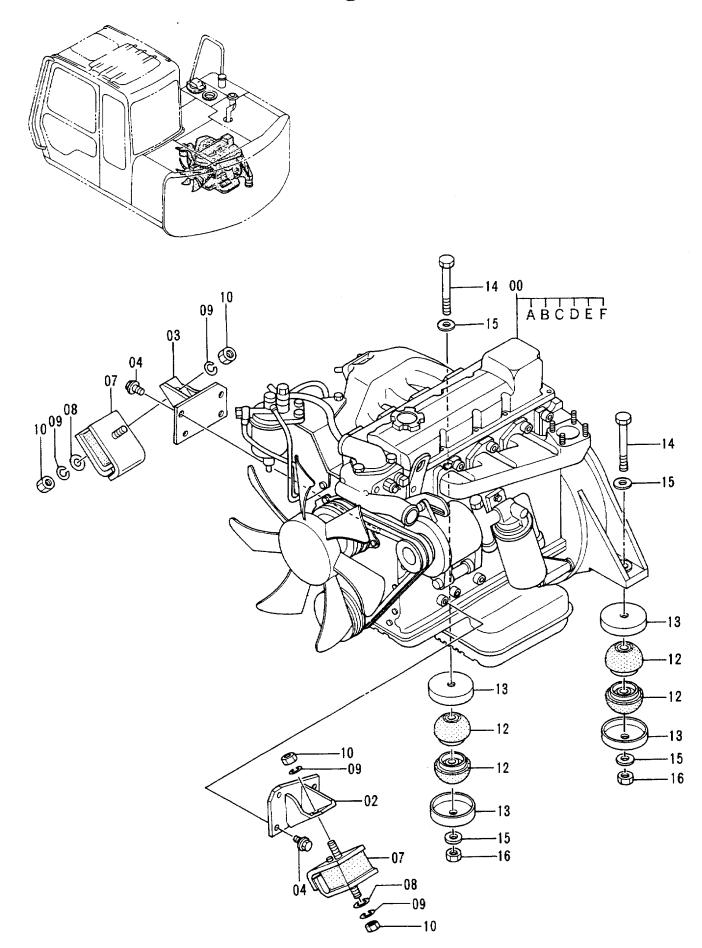

エンジ ン ENGINE

						30001-				
符号 ITEM	部品番号 PART NO.	部 品 名 PART NAME	or PART NAME CODE	数量 G'TY	サービス コード S.C	適用号機 SERIAL NO.	互換性 ICA	代替音 REPLACEA PART 部品番号 PART NO.	数量	
00	4267907	エンジ ン 〈STD〉	ENGINE (STD)	1	Z				i	
00	4337978	エンジン 〈N.EUROPE〉	ENGINE <n.europe></n.europe>	1	Z				!	
00A	4306790	•ペルト; ファン	·BELT; FAN	1	Z					
00B	4278859	・フイルタ;オイル	·FILTER; OIL	1	Z					
00C	4178829	・フイルタ;フユーエル	•FILTER; FUEL	1	Z					
00D	4170829	・スイツチ;プ レツシヤ	•SWITCH; PRES.	1	Z					
00E	4223444	センサ;サーモ	·SENSOR; THERMO	, 1	Z				i	
00F	4306939	・スイツチ;オーハ゜ーヒート	-SWITCH; OVERHEAT	1	#Z					
02	8049681	 プ [*] ラケツト	BRACKET	1	:			i		
03	8049680	ブ ラケツト	BRACKET	1						
04	J011025	ボルト; セムス	BOLT; SEMS	8						
07	4272585	5N° -	RUBBER	2						
08	4086894	77954	WASHER	2	:				i	
09	A590914	『ワツシヤ;スプ゜リング	WASHER; SPRING	4					;	
10	J950014	ナット	NUT	4					<u>. </u>	
12	4272586	ラハ゛ー	RUBBER	4						
13	4275140	ストツハ゜	STOPPER	4						
14	J931608	ボルト	BOLT	2			İ			
15	J222016	ワツシヤ	WASHER	4				1	i	
16	J951016	ナツト	NUT	2				: .t		
									A many	
				1						


ラジエータ Radiator

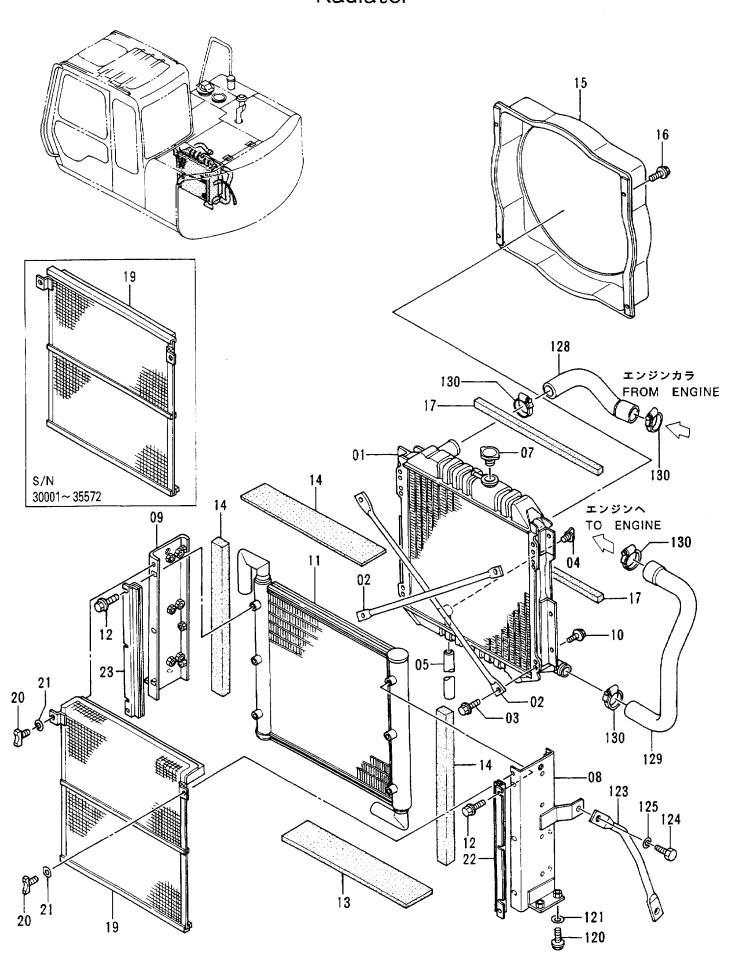

ラジ エータ RADIATOR

				30001-					
符号 ITEM	部品番号 PART NO.	部 品 名 PART NAME	or PART NAME	数量 サービス G'TY S.C		互 代替部品 REPLACEABLE PART 性部品番号数量 ICA PART NO. QTY			
01-24	4304201	ラジ エータ アツセン	RADIATOR ASS'Y	1		100			
01	4301306	• コア; ラシ゛エータ	·CORE; RADIATOR	1		į į			
02	4217605	· unh.	• RO D	2					
03	4217606	・ボルト;セムス	•BOLT; SEMS	. 4	i				
04	4206928	・プラグ;トレン	·PLUG; DRAIN	1					
05	4148706	· ホース	• HOSE	1					
07	4228160	・キヤツブ [°]	•CAP	1 1					
08	4301307	・ブラケット	• BRACKET	1 1	i				
09	4301308	・ブ ラ ケット	• BRACKET	1	i				
10	4206678	• ホ* ルト	•BOLT	6					
11	4301309	・クーラ;オイル	•COOLER;OIL	1					
12	4206678	•ボ ルト;セムス	· BOLT; SEMS	6					
13	4217599	・ハ゜ツキン	- PACKING	1	-35572				
14	4217598	・ハ゜ツキン	• PACKING	2					
15	4301310	・ガ゛イト゛; フアン	•GUIDE; FAN	1					
16	4206678	・ボルト;セムス	·BOLT; SEMS	4					
17	4217595	・パッキン	• PACKING	2	ŧ 4				
19	4301311	・ネツト	•NET	1	-35572	I 4333043 1			
19	4333043	・ネット	•NET	1 1 #	35573~	! !			
20	4206930	・ボ・ルト;ウイング	- BOLT; WING	2					
21	4206931	ワツシヤ	-WASHER	2		i i			
22	i 4301312	・ブ・ラケツト	- BRACKET	1					
23	4 30 1313	- ・ブ ラケツト	• BRACKET	1					
24	4301539	• ハ゜ツキン	PACKING	1	-35572				
120	J011230	ボ ルト;セムス	BOLT; SEMS	4	·				
121	J222012	ワツシヤ	WASHER	4					
123	4270964	ステー	STAY	1					
124	J901430	ホールト	BOLT	2					
125	A590914	ワッシャ;スプ リング	WASHER; SPRING	2	!				
128	2031142	ホース;ウオータ	HOSE; WATER	: 1					
129	2031911	ホース;ウオータ	HOSE; WATER	1					
130	4505385		CLAMP; HOSE	4					
					ļ				


リザーブタンク Reserve Tank

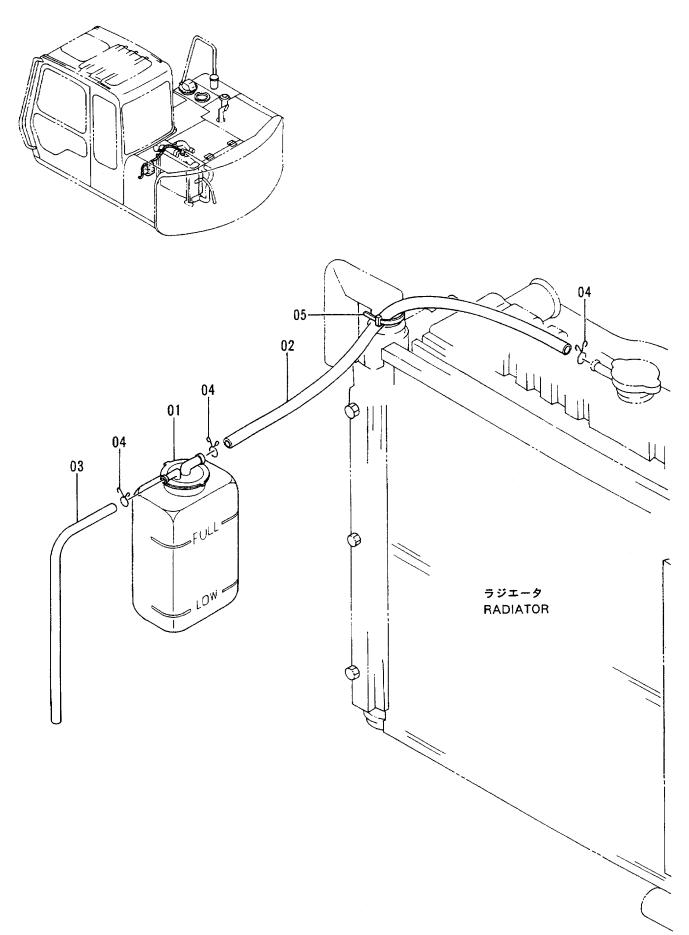

リザ ープ タンク RESERVE TANK

					30001-					
符号 ITEM	部品番号 PART NO.	部品名 PART NAME	or PART NAME CODE	数量 サー Q'TY S	ビス 適用号機 SERIAL NO.	中 代替部品 REPLACEABLE PART 性部品番号数量 ICAL PART NO. 'Q'TY				
01-04	4252071	タンク;ウオータ アツセン	TANK; WATER ASS'Y	1		, , ,				
01	4257080	タンク;ウオータ	•TANK; WATER	1						
02	4257081	・ホース;ウオータ	+HOSE; WATER	1	1					
03	4257082	・ホース;ヒ゛ニール	HOSE; VINYL	1	i.					
04	4257083	・クランプ。;ホース	·CLAMP; HOSE	3						
05	4055312	クリツプ゜;Λ゚ ンド	CLIP; BAND	1						
	:	:								
				3	:					
	!									
· · · · · · · · · · · · · · · · · · ·										
	!		ļ							
				:						
		*								
					·					
	!				! 					
		!	:							

エアクリーナ Air Cleaner

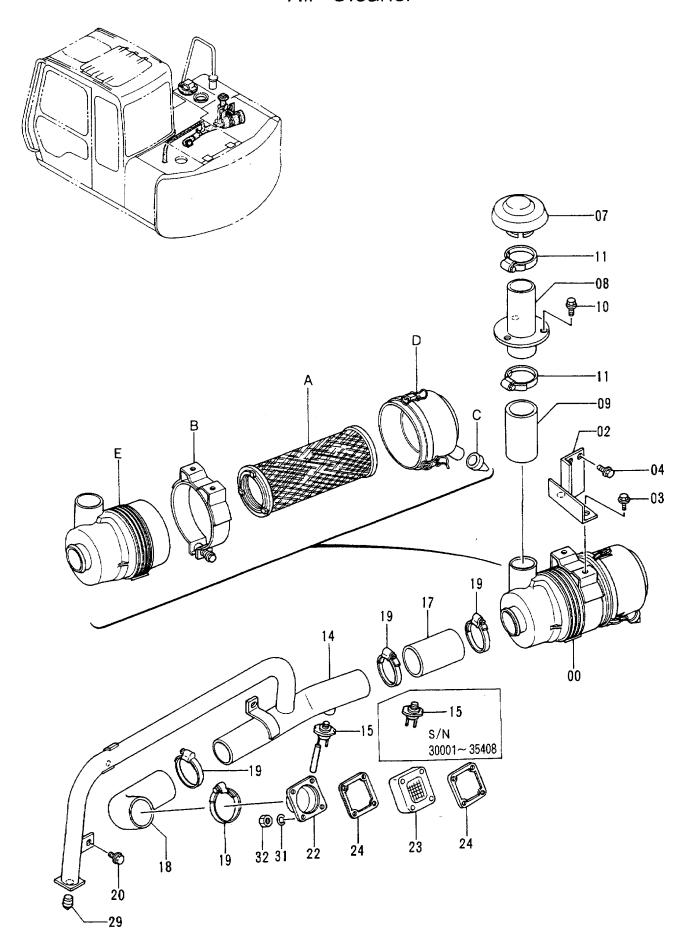


エア クリーナ AIR CLEANER

30001-

						30001-			
一符号 :TEM	部品番号 PART NO.	部 品 名 PART NAME	or PART NAME	数量 C'TY	サービス コード S.С	適用号機 SERIAL NO.	互換性	代 替 部 REPLACEA PART 部品番号	数量
					13.0		ICA	PART NO.	Q'TY
00	4272667	クリーナ;エア アツセン	CLEANER; AIR ASS'Y	1					
A00	4290940	・エレメント	• ELEMENT	!					ļ
00B	4276412	•ハ"ント"	• BAND						
00C	4208275	・バルブ	·VALVE	1					
0 0 D	4306937	•カ/* —	•COVER	1					T
00E	4306946	・ボディ	• BODY	1	1				,
02	8050983	ブ゛ラケツト	BRACKET	1	1				
03	J010816	ボ ルト;セムス	BOLT; SEMS	2				i	
04	J011025	ホ*ルト;セムス	BOLT; SEMS	2	İ.				
07	4154931	キャツプ	CAP]]					
80	9737182	パ イプ ;インレツト	PIPE; INLET	1					İ
09	4276414	ホース;ラハ゛ー	HOSE; RUBBER	; 1	:				;
10	J021025	ボ ルト;セムス	BOLT; SEMS	3				!	
11	4504491	クランプ ;ホース	CLAMP; HOSE	2					
14	7025648	「パ゚ イプ゜;インレツト	PIPE; INLET	1	-	25.400	.	4040004	ļ <u>.</u>
15	4221855	インシ゛ケータ	INDICATOR	1	"	-35408	1	4342334	. !
15	4342334	インジ ケータ 1	INDICATOR	1	#	35409-			1
17	4276414	ホース;ラハ゛ー	HOSE; RUBBER	1	!	1			1 .
18	4294563	ホース;ラハ゛ー	HOSE; RUBBER	1				•	
19	4504491	[・] クランプ。;ホース	CLAMP; HOSE	4					·····
20	J021025	ボ ルト;セムス	BOLT; SEMS	3					
22	9736328	_, ハ゜イプ゜	PIPE	'		i			i
23	4306940	ヒータ	HEATER	1	· Z				
24	4275173	カ゛スケツト	GASKET	2	Z				
29	94-2022	プ ラグ	PLUG	1					
31	A590908	「ワツシヤ;スプ゜リンク゛	WASHER; SPRING	4					
32	M500807	ナット	NUT	4		į			:
				ļ					1
				į					
									·
	1	i				•			İ
				i i					!
								I	
			:					1	
			i						
				į		•			
			1	İ	Ì			i	
	i		ļ						ļ
	1	1			ļ	1			

マ フ ラ ー Muffler

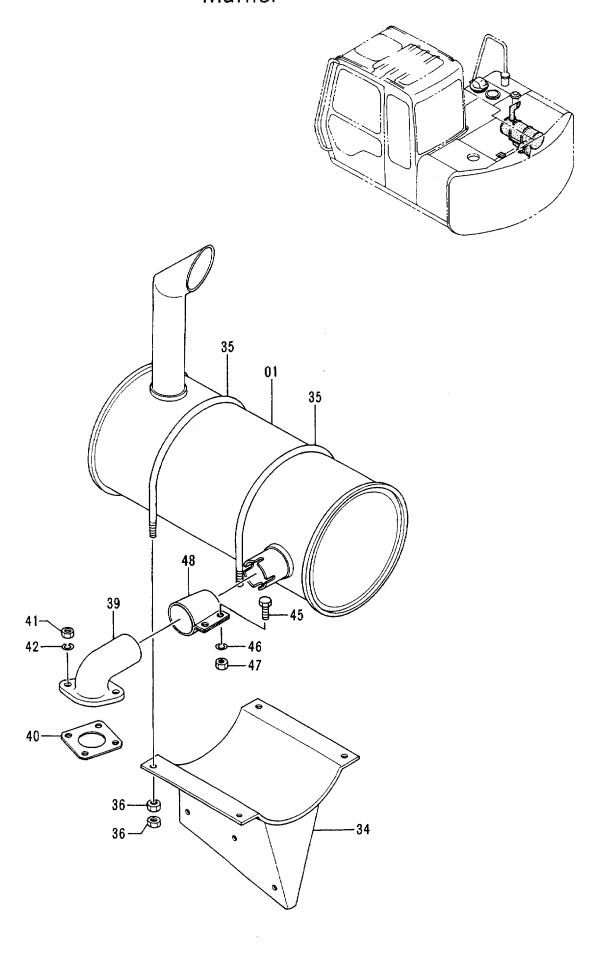


マフラー MUFFLER

30001-

						30001-				
符号 ITEM	部品番号 PART NO.	部品名 PART NAME	or PART NAME CODE	数量 +	ナービス コード S.С	適用号機 SERIAL NO.	互換性 (^	代替部 REPLACEA PART 部品番号 PART NO.	品 BLE 数量 Q'TY	
01	4268214	マフラー	MUFFLER	1			TICA	1711(7.110)		
34	8052031	プ ラケツト	BRACKET	1						
35	4252533	** ルト; U	BOLT;U	2						
36	J950010	ナット	NUT	. 8 j				į		
39	3054051	/ パ イプ	PIPE	1	!				[
40	4275171	カ゛スケツト	GASKET	1	Z					
41	4178755	ナット	NUT	2	z					
42	A590910	: ワツシヤ;スプリング	WASHER; SPRING	2	Z				:	
45	J901035	*** ルト	BOLT	2	İ			: 	ļ i	
46	A590910	ワツシヤ;スプ リング	WASHER; SPRING	2						
47	J950010	ナット	NUT	2						
48	4306008	クランプ	CLAMP	1	ļ				ļ	
		i							į	
							İ		İ	
*********									-	
		1		:	ļ			1		
								į	1	
								.i		
	! 	;					ļ	İ	İ	
		4								
				!						
	İ									
						; 				
					! !				!	
		 						İ	1	
	; !	!				j				
							t	·-		
				i	İ					
		! 		į					į	
						İ				
				-	1	·}·····	1			
		•								
		ı		ļ	į			1		
						<u> </u>			ļ	
					1			<u></u>		
	1									

燃料配管 Fuel Pipings

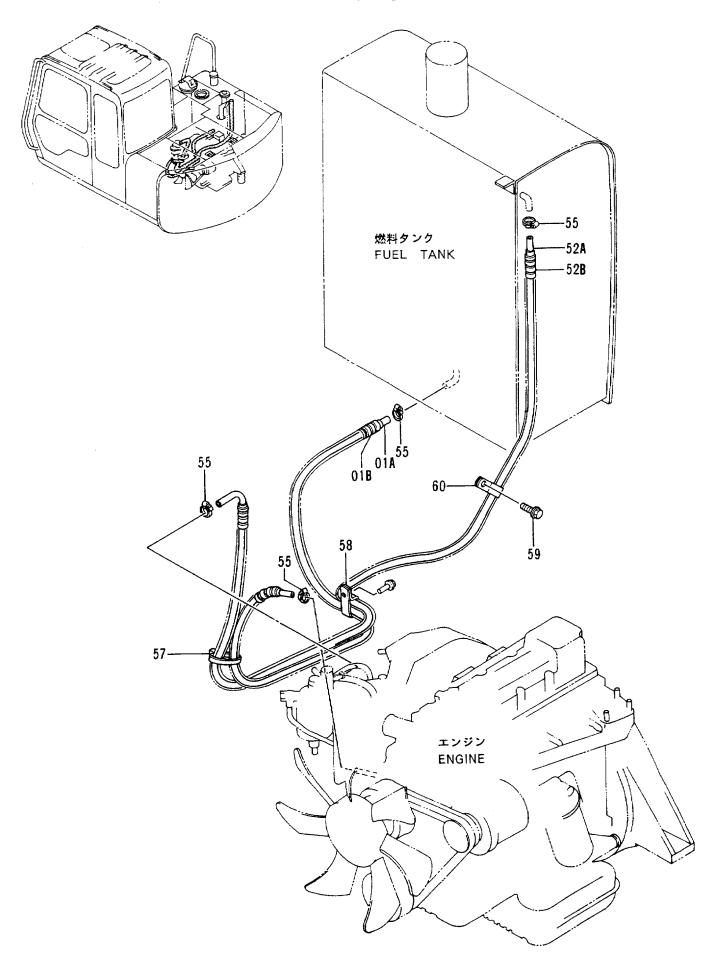

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com