

GENERAL MANUAL FOR MODEL JOHN DEERE 4900 SERIES L3030G4 / MULTAPPLIERS



**SAFETY GUIDELINES
INSTALLATION
OPERATION
MAINTENANCE
TROUBLESHOOTING
PARTS LIST**

Dealer Sticker

This unit may have been built with SPECIAL FEATURES. Provide SERIAL NUMBER when ordering parts.

SERIAL NO. _____

IMPORTANT: READ THE SAFETY GUIDELINES AND ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING

**HIGHWAY EQUIPMENT COMPANY - NEW LEADER DIVISION
1330 76TH AVE SW, CEDAR RAPIDS, IOWA 52404-7052
PH. (319) 363-8281 www.highwayequipment.com FAX (319) 632-3081**

TABLE OF CONTENTS

Warranty	4
Preface	5
Safety	6
Safety Decal Installation and Maintenance	8
Safety Decal Illustrations	9
General Description	17
Dimensions & Capacities	18
Installation Instructions	19
Pump Selection	19
General Installation Instructions	19
Mounting Spreader Body	19
Hydraulics	21
Controller	23
Electric Dump Valve Control	23
Lights	23
Spinner	24
Inverted V	24
Lubrication	25
Checking Installation	25
Material Divider Storage	25
MULTAPPLIER Installation	26
Hydraulics	28
Hillside Divider	28
Dual Conveyor Cover	29
MULTAPPLIER Removal	29
Initial Start-Up	30
Field Testing	31
General Operating Procedures	32
Lubrication and Maintenance	33
Hydraulic System	33
Conveyor Gear Case	33
Bin Sensor	34
Hydraulic Hose	34
#5 Conveyor Belt	36
#4 Conveyor Chain	41
Lubrication of Bearings	42
Clean Up	42
Fasteners	42
Lubricant and Hydraulic Oil Specifications	43
Lubrication and Maintenance Chart	44
Troubleshooting	45
Torque Chart	47
Instructions for Ordering Parts	48
Legend for Parts List Symbols	48



Please Give Part No., Description and Unit Serial No.

TABLE OF CONTENTS CONTINUED

Parts List

Removeable Endgate, Feedgate and Jack	50
Conveyor	52
Chain Shields	53
Conveyor Drive	54
Drive and Snubber Guard.....	55
Conveyor Idler	56
Encoder.....	57
Guard – Front Conveyor.....	58
Wiper Belt	59
Sight Window.....	60
Inverted V.....	61
Material Divider	62
Hillside Flow Divider	63
Spinner Guards & Shields	64
Spinner Guards & Shields	64
Bin Sensor	65
24” Hydraulic Fans.....	66
Spinner Sensor.....	68
Twin Spinner Hydraulics	69
Hydraulics	70
MULTAPPLIER Hydraulics	72
Gear Case	73
Conveyor Motor	74
Spinner Motor	75
Decals	76
Mounting	78
Lights.....	80
MULTAPPLIER.....	81
MULTAPPLIER Rear Feedgate.....	82
MULTAPPLIER Sealer & Front Feedgate.....	83
MULTAPPLIER Conveyor	84
MULTAPPLIER Chain Shields.....	85
MULTAPPLIER Conveyor Drive	86
MULTAPPLIER Conveyor Idler.....	87
MULTAPPLIER Encoder.....	87
MULTAPPLIER Rear Idler Zerks.....	89
MULTAPPLIER Conveyor Cover	90
MULTAPPLIER Hillside Flow Divider.....	91
MULTAPPLIER Front Wiper	92



Please Give Part No., Description and Unit Serial No.

**INSERT CURRENT
NEW LEADER WARRANTY**



Please Give Part No., Description and Unit Serial No.

**305250-C
Page Rev. A**

TAB SAFETY

PREFACE

PLEASE! ALWAYS THINK SAFETY FIRST!!

The purpose of this manual is to familiarize the person (or persons) using this unit with the information necessary to properly install, operate, and maintain this system. These instructions cannot replace the following: the fundamental knowledge that must be possessed by the installer or operator, the knowledge of a qualified person, or the clear thinking necessary to install and operate this equipment. Since the life of any machine depends largely upon the care it is given, we suggest that this manual be read thoroughly and referred to frequently. If for any reason you do not understand the instructions, please call your authorized dealer or our Cedar Rapids, Iowa, Product Support Department at (319) 363-8281.

It has been our experience that by following these installation instructions, and by observing the operation of the spreader, you will have sufficient understanding of the machine enabling you to troubleshoot and correct all normal problems that you may encounter. Again, we urge you to call your authorized dealer or our Cedar Rapids Product Support Department if you find the unit is not operating properly, or if you are having trouble with repairs, installation, or removal of this machine.

We urge you to protect your investment by using genuine HECO parts and our authorized dealers for all work other than routine care and adjustments.

Highway Equipment Company reserves the right to make alterations or modifications to this equipment at any time. The manufacturer shall not be obligated to make such changes to machines already in the field.

This Safety Section should be read thoroughly and referred to frequently.

ACCIDENTS HURT!!!

ACCIDENTS COST!!!

ACCIDENTS CAN BE AVOIDED!!!



Please Give Part No., Description and Unit Serial No.

**305250-C
Page Rev. A**

SAFETY



TAKE NOTE! THIS SAFETY ALERT SYMBOL FOUND THROUGHOUT THE OPERATION MANUAL IS USED TO CALL YOUR ATTENTION TO INSTRUCTIONS INVOLVING YOUR PERSONAL SAFETY AND THAT OF OTHERS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN INJURY OR DEATH.

In this manual and on the safety signs placed on the unit, the words “DANGER,” “WARNING,” “CAUTION,” and “IMPORTANT” are used to indicate the following:



DANGER

Indicates an imminently hazardous situation that, if not avoided, **WILL** result in death or serious injury. This signal word is to be limited to the most extreme situations typically for machine components that, for functional purposes, cannot be guarded.



WARNING

Indicates a potentially hazardous situation that, if not avoided, **COULD** result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.



CAUTION

Indicates a potentially hazardous situation that, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices.

IMPORTANT!

Is used for informational purposes in areas that may involve damage or deterioration to unit but generally would not involve the potential for personal injury.

The need for safety cannot be stressed strongly enough in this manual. At Highway Equipment Company, we urge you to make safety your top priority when operating any equipment. We firmly advise that anyone allowed to operate this machine be thoroughly trained and tested to prove they understand the fundamentals of safe operation.

The following guidelines are intended to cover general usage and to assist you in avoiding accidents. There will be times when you will run into situations that are not covered in this section. At those times the best standard to use is common sense. If, at any time, you have question concerning these guidelines, please call your authorized dealer or our factory at (319) 363-8281.



SAFETY

AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home, or on the highway, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason, most accidents can be prevented by recognizing the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment, there are many conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A CAREFUL OPERATOR IS THE BEST INSURANCE AGAINST AN ACCIDENT. THE COMPLETE OBSERVANCE OF ONE SIMPLE RULE WOULD PREVENT MANY THOUSAND SERIOUS INJURIES EACH YEAR. THAT RULE IS:

NEVER ATTEMPT TO CLEAN, OIL OR ADJUST A MACHINE WHILE IT IS IN MOTION.

NATIONAL SAFETY COUNCIL



CAUTION

If spreader is used to transport chemicals, check with your chemical supplier regarding DOT (Department of Transportation) requirements.



Please Give Part No., Description and Unit Serial No.

305250-C
Page Rev. A

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com