

1. MACHINE SPECIFICATIONS

1.1	GENERAL DIMENSIONS.....	1-2
1.1.1	CANOPY.....	1-2
1.1.2	CANOPY.....	1-4
1.1.3	CAB.....	1-6
1.1.4	CAB.....	1-8
1.2	SPECIFICATIONS AND PERFORMANCE.....	1-10
1.3	ENGINE SPECIFICATIONS.....	1-16
1.3.1	SPECIFICATIONS.....	1-16
1.3.2	ENGINE PERFORMANCE CURVE.....	1-17
1.3.3	SPECIFICATIONS.....	1-18
1.3.4	ENGINE PERFORMANCE CURVE.....	1-19
1.3.5	SPECIFICATIONS.....	1-20
1.3.6	ENGINE PERFORMANCE CURVE.....	1-21
1.3.7	SPECIFICATIONS.....	1-22
1.3.8	ENGINE PERFORMANCE CURVE.....	1-23
1.4	HYDRAULIC COMPONENTS.....	1-24
1.4.1	SPECIFICATIONS.....	1-24
1.4.2	SPECIFICATIONS.....	1-26
1.4.3	SPECIFICATIONS.....	1-28
1.4.4	SPECIFICATIONS.....	1-30
1.5	MACHINE & COMPONENTS WEIGHT.....	1-32
1.6	WORKING RANGES.....	1-39
1.6.1	CANOPY TYPE.....	1-39
1.6.2	CANOPY TYPE.....	1-40
1.6.3	CAB TYPE.....	1-41
1.6.4	CANOPY TYPE.....	1-42
1.6.5	CAB TYPE.....	1-43
1.6.6	CANOPY TYPE.....	1-44
1.6.7	CAB TYPE.....	1-45
1.6.8	CANOPY TYPE.....	1-46
1.6.9	CAB TYPE.....	1-47
1.6.10	CANOPY TYPE.....	1-48
1.6.11	CAB TYPE.....	1-49
1.6.12	CANOPY TYPE.....	1-50
1.6.13	CAB TYPE.....	1-51
1.7	LIFTING DIAGRAM.....	1-52
1.8	PERFORMANCE TABLE.....	1-64

2. MAINTENANCE

2.1	DESIGNATED OIL AND GREASE, AND FILTER ELEMENT.....	2-2
2.1.1	GREASE AND OIL LIST.....	2-2
2.1.2	GREASE AND OIL LIST.....	2-3
2.1.3	GREASE AND OIL LIST.....	2-4
2.1.4	FILTERS & ELEMENTS, AND BUCKET.....	2-5
2.1.5	FILTERS & ELEMENTS, AND BUCKET.....	2-6
2.1.6	FILTERS & ELEMENTS, AND BUCKET.....	2-7

2.1.7	FILTERS & ELEMENTS, AND BUCKET.....	2-8
2.2	MAINTENANCE STANDARDS AND TEST PROCEDURES.....	2-10
2.2.1	STANDARD VALUE TABLE.....	2-10
2.2.2	STANDARD VALUE TABLE.....	2-12
2.2.3	STANDARD VALUE TABLE.....	2-14
2.2.4	STANDARD VALUE TABLE.....	2-16
2.2.5	MEASURING ENGINE SPEED.....	2-18
2.2.6	MEASURING HYDRAULIC OIL PRESSURE.....	2-23
2.2.7	MEASURING TRAVEL PERFORMANCES (ALL MODELS).....	2-37
2.2.8	MEASURING SLEW PERFORMANCES (ALL MODELS).....	2-39
2.2.9	MEASURING ATTACHMENT OPERATING PERFORMANCES (ALL MODELS).....	2-41
2.2.10	MEASURING SLEW BEARING PERFORMANCES (ALL MODELS).....	2-43
2.2.11	MEASURING CRAWLER TENSION (ALL MODELS).....	2-44
2.3	ATTACHMENT MAINTENANCE STANDARD.....	2-46
2.3.1	CLEARANCE OF PIN AND BUSHING.....	2-46
2.3.2	CLEARANCE IN THRUST DIRECTION ON BOOM AND CYLINDER INSTALLATION SECTION.....	2-57
2.3.3	CLEARANCE IN THRUST DIRECTION ON ARM AND CYLINDER INSTALLATION SECTION.....	2-60
2.3.4	CLEARANCE IN THRUST DIRECTION ON THE DOZER AND CYLINDER INSTALLATION SECTION.....	2-65
2.3.5	CLEARANCE IN THRUST DIRECTION ON SWING BRACKET AND CYLINDER INSTALLATION SECTION.....	2-68
2.4	UNDERCARRIAGE.....	2-71
2.4.1	RUBBER CRAWLER.....	2-71
2.4.2	STEEL CRAWLER (SK17SR-3, CX17B, E18SR, SK15SR-3).....	2-72
2.4.3	STEEL CRAWLER (SK20SR-3 / SK27SR-3, CX27B, E27SR / SK30SR-3, CX31B, E30SR / SK35SR-3, CX36B, E35SR).....	2-73
2.4.4	STEEL CRAWLER (SK40SR-3 / SK50SR-3, CX50B, E50SR , SK55SR-3, CX55B).....	2-74
2.4.5	UPPER ROLLER (SK20SR-3 / SK27SR-3, CX27B, E27SR / SK30SR-3, CX31B, E30SR / SK35SR-3, CX36B, E35SR).....	2-75
2.4.6	UPPER ROLLER (SK40SR-3 / SK50SR-3, CX50B, E50SR , SK55SR-3, CX55B).....	2-76
2.4.7	LOWER ROLLER (SK17SR-3, CX17B, E18SR, SK15SR-3).....	2-77
2.4.8	LOWER ROLLER (SK20SR-3 / SK27SR-3, CX27B, E27SR / SK30SR-3, CX31B, E30SR / SK35SR-3, CX36B, E35SR).....	2-78
2.4.9	LOWER ROLLER (SK40SR-3 / SK50SR-3, CX50B, E50SR , SK55SR-3, CX55B).....	2-79
2.4.10	FRONT IDLER (SK17SR-3, CX17B, E18SR, SK15SR-3).....	2-80
2.4.11	FRONT IDLER (SK20SR-3 / SK27SR-3, CX27B, E27SR).....	2-81
2.4.12	FRONT IDLER (SK30SR-3, CX31B, E30SR / SK35SR-3, CX36B, E35SR).....	2-82
2.4.13	FRONT IDLER (SK40SR-3 / SK50SR-3, CX50B, E50SR , SK55SR-3, CX55B).....	2-83
2.4.14	IDLER ADJUSTER (SK17SR-3, CX17B, E18SR, SK15SR-3).....	2-84

2.4.15 IDLER ADJUSTER (SK20SR-3 / SK27SR-3, CX27B, E27SR).....	2-84
2.4.16 IDLER ADJUSTER (SK30SR-3, CX31B, E30SR / SK35SR-3, CX36B, E35SR).....	2-85
2.4.17 IDLER ADJUSTER (SK40SR-3 / SK50SR-3, CX50B, E50SR , SK55SR-3, CX55B)	2-85
2.4.18 SPROCKET	2-86

3. CIRCUIT DIAGRAM

3.1 HYDRAULIC CIRCUITS	3-2
3.1.1 STANDARD	3-2
3.1.2 STANDARD	3-4
3.1.3 STANDARD	3-6
3.1.4 STANDARD	3-12
3.1.5 STANDARD	3-14
3.1.6 STANDARD	3-16
3.1.7 STANDARD	3-18
3.1.8 STANDARD	3-20
3.1.9 STANDARD	3-22
3.1.10 STANDARD	3-24
3.1.11 STANDARD	3-26
3.1.12 STANDARD	3-28
3.2 ELECTRIC CIRCUIT DIAGRAM	3-30

4. ATTACHMENT DIMENSIONS

4.1 BOOM.....	4-2
4.1.1 BOOM DIMENSIONAL DRAWING.....	4-2
4.2 ARM.....	4-4
4.2.1 ARM DIMENSIONAL DRAWING.....	4-4
4.3 BUCKET	4-6
4.3.1 BUCKET DIMENSIONAL DRAWING	4-6
4.3.2 LUG SECTION DIMENSIONAL DRAWING	4-8
4.3.3 BOSS SECTION DIMENSIONAL DRAWING.....	4-9
4.4 DOZER.....	4-10
4.4.1 DOZER DIMENSIONAL DRAWING	4-10
4.4.2 DOZER DIMENSIONAL DRAWING	4-12
4.5 SWING	4-14
4.5.1 SWING BRACKET DIMENSIONAL DRAWING	4-14
4.6 CYLINDER	4-16
4.6.1 HYDRAULIC CYLINDER.....	4-16
4.7 SHAPE AND DIMENSIONS OF PIN	4-20
4.7.1 SHAPE OF PIN.....	4-21
4.7.2 DIMENSIONS OF PIN	4-23
4.8 SHAPE AND DIMENSIONS OF BUSHING.....	4-25
4.8.1 SHAPE OF BUSHING	4-26

4.8.2	DIMENSIONS OF BUSHING	4-28
5. DIFFERENTIAL MATERIAL		
5.1	TORQUE SPECIFICATIONS FOR CAPSCREWS & NUTS	5-2
5.1.1	Metric Coarse Thread Standard Tightening Torque Values. Make Certain to tighten all Capscrews & Nuts to proper torque values.	5-2
5.1.2	Metric Fine Thread Standard Tightening Torque values. Make certain to tighten all Capscrews & Nuts to proper torque values.	5-3
5.2	SCREW AND TOOL SIZES	5-4
5.2.1	Capscrew.....	5-4
5.2.2	Capscrew (Socket bolt)	5-4
5.3	TORQUE SPECIFICATIONS FOR JOINTS AND HOSES	5-4
5.3.1	JOINTS FOR PIPING (O-RING SEALING TYPE).....	5-4
5.3.2	HYDRAULIC HOSE (30° FLARE TYPE).....	5-4
5.4	TORQUE SPECIFICATIONS FOR SLEEVE TYPE TUBE FITTINGS	5-5
5.4.1	SLEEVE TYPE TUBE FITTINGS	5-5
5.4.2	PART NO.....	5-5
5.5	PLUGS	5-6
5.5.1	Plug for hydraulic pipe joint	5-6
5.5.2	Plug for hydraulic equipment	5-7
5.6	SPECIAL SPANNERS FOR TUBES	5-8
5.7	SPECIAL TOOLS	5-8
5.8	APPLICATION OF SCREW LOCKING AND SEALING COMPOUNDS.....	5-8
5.9	COUNTERWEIGHT LIFTING JIG	5-9
5.10	UPPER FRAME LIFTING JIG	5-13
5.11	REFERENTIAL TABLE	5-16
5.11.1	INTERNATIONAL UNIT	5-16
5.11.2	CONVERSION TABLE	5-17
5.12	INCLINE CONVERSION TABLE.....	5-19

Note

Typical model: Similar model

- SK17SR-3: CX17B, E18SR, SK15SR-3
- SK20SR-3
- SK27SR-3: CX27B, E27SR
- SK30SR-3: CX31B, E30SR
- SK35SR-3: CX36B, E35SR
- SK40SR-3
- SK50SR-3: CX50B, E50SR, SK55SR-3, CX55B

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com