

# Operator's Manual

**FENDT**

## Combines

### FENDT 5255 L - 6275 L

*FENDT 5255 L / 5255 L MCS - S/N => 555010206  
ZN205550x03010222*  
*FENDT 6275 L / 6275 L MCS - S/N => 565010372  
ZN205650x03010384*



#### Breganze

AGCO S.p.A. - Via F. Laverda, 15/17 - 36042  
BREGANZE (VI) – Italy.

FENDT is a worldwide brand of AGCO

© AGCO 2016

Original Operator's Manual

November 2016  
FENDT 5255L-6275L\_EN\_LA327307015  
EAME  
English

# Combines

<b>1 General Information</b>	15
<b>1.1 Information</b>	17
1.1.1 Introduction	17
1.1.2 Company policy	17
1.1.3 Optional equipment	17
1.1.4 Spare parts and accessories	18
1.1.5 Warranty	18
1.1.6 Lubricants	18
<b>1.2 Use</b>	20
1.2.1 Use of the combine	20
<b>1.3 Identification</b>	21
1.3.1 Combine identification	21
1.3.2 Engine Identification	22
1.3.3 Cutting table identification	23
1.3.4 Operator seat identification	23
1.3.5 Hydrostatic pump identification	24
1.3.6 Hydrostatic motor identification	24
1.3.7 Straw chopper identification (if fitted)	25
1.3.8 Chaff spreader identification (if fitted)	25
1.3.9 Trailer hitch identification (if fitted)	26
<b>1.4 Identification form</b>	27
1.4.1 Machine data	27
<b>1.5 Conformity</b>	28
1.5.1 EC Declaration of Conformity	28
<b>1.6 Information</b>	29
1.6.1 Ecology	29
1.6.2 Hydraulic systems: hoses	29
1.6.3 Scrapping and disposal	30
<b>1.7 Weight</b>	31
1.7.1 Weight distribution	31
<b>2 Safety</b>	33
<b>2.1 Warning symbols and safety instructions</b>	35
2.1.1 Warnings	35
<b>2.2 Information for road transport</b>	36
2.2.1 Road transport	36
<b>2.3 Information for operations</b>	39
2.3.1 Field Operations	39
<b>2.4 Information for maintenance</b>	43
2.4.1 Maintenance work	43
<b>2.5 Information on the engine</b>	47
2.5.1 Engine	47
<b>2.6 Safety and function decals</b>	51
2.6.1 Location of decals	51
2.6.2 Description of decals	54
<b>2.7 Work on the battery</b>	66
2.7.1 Battery	66
<b>2.8 Safety devices</b>	67
2.8.1 Emergency exit	67

2.8.2 Operator presence device . . . . .	68
2.8.2.1 Returning the machine to normal operation . . . . .	68
2.8.2.2 Operator presence device anomaly . . . . .	69
2.8.3 Safety belts . . . . .	70
2.8.4 Cutting table safety stops . . . . .	71
2.8.5 Safety guard for main crop elevator . . . . .	72
2.8.6 Sprags for wheels . . . . .	72
2.8.7 Audible alarm for reversing . . . . .	73
2.8.8 Reflectors for road transport . . . . .	74
2.8.9 Safety Guards . . . . .	75
2.8.10 Fall protection rails . . . . .	75
2.8.11 Safety devices for operations to be carried out in the upper part of the machine . . . . .	77
2.8.12 Straw Chopper (if fitted) . . . . .	78
2.8.13 Fire extinguisher . . . . .	78
<b>2.9 Trailer hitch . . . . .</b>	<b>79</b>
2.9.1 Automatic towing hooks . . . . .	79
2.9.2 CUNA and CE trailer hitches . . . . .	80
2.9.2.1 Procedure for attaching and removing . . . . .	81
2.9.2.2 Drawbar coupling . . . . .	82
2.9.3 ROCKINGER trailer hitch . . . . .	82
2.9.3.1 Removal . . . . .	82
2.9.3.2 Drawbar coupling . . . . .	83
2.9.4 Fixed trailer hitch (non-automatic - CUNA type) . . . . .	84
<b>2.10 Machine lifting . . . . .</b>	<b>85</b>
2.10.1 Attachment points . . . . .	85
<b>2.11 Towing . . . . .</b>	<b>86</b>
2.11.1 Towing the combine . . . . .	86
<b>2.12 Further information . . . . .</b>	<b>87</b>
2.12.1 Noise level in the cab . . . . .	87
2.12.2 Vibrations in the cab . . . . .	87
2.12.3 Statutory regulations . . . . .	87
2.12.4 Electromagnetic emissions . . . . .	88
<b>2.13 Notes . . . . .</b>	<b>89</b>
2.13.1 Notes for road transport . . . . .	89
<b>3 Operation . . . . .</b>	<b>91</b>
<b>3.1 Combine operation . . . . .</b>	<b>93</b>
3.1.1 Crop processing . . . . .	93
<b>3.2 Stage 1 . . . . .</b>	<b>94</b>
3.2.1 Feeding . . . . .	94
<b>3.3 Stage 2 . . . . .</b>	<b>95</b>
3.3.1 Threshing . . . . .	95
<b>3.4 Stage 3 . . . . .</b>	<b>96</b>
3.4.1 Separation . . . . .	96
<b>3.5 Stage 4 . . . . .</b>	<b>97</b>
3.5.1 Cleaning . . . . .	97
<b>3.6 Stage 5 . . . . .</b>	<b>98</b>
3.6.1 Grain storage and unloading . . . . .	98
<b>3.7 Transmission . . . . .</b>	<b>99</b>
3.7.1 Rear-wheel drive (4WD) . . . . .	99
<b>4 Controls and Instruments . . . . .</b>	<b>101</b>
<b>4.1 Steering column . . . . .</b>	<b>103</b>
4.1.1 Adjustments . . . . .	103
4.1.2 Ignition switch . . . . .	104

4.1.3	Direction indicators . . . . .	105
<b>4.2</b>	<b>Brakes</b> . . . . .	106
4.2.1	Brake pedals . . . . .	106
4.2.2	Service brakes . . . . .	106
4.2.3	Park brake . . . . .	107
<b>4.3</b>	<b>Multifunction lever</b> . . . . .	108
4.3.1	Main components . . . . .	108
4.3.2	Push buttons on the multifunction lever . . . . .	109
<b>4.4</b>	<b>Gear shift lever and reversing lever</b> . . . . .	111
4.4.1	General Information . . . . .	111
<b>4.5</b>	<b>Instrument panel</b> . . . . .	112
4.5.1	Components . . . . .	112
4.5.2	Armrest . . . . .	113
4.5.3	Throttle control . . . . .	113
4.5.4	Switch for threshing mechanism and straw chopper . . . . .	114
4.5.5	Switch for feed mechanism engagement . . . . .	114
4.5.6	Switch for four-wheel drive (optional) . . . . .	115
4.5.7	Miscellaneous push buttons . . . . .	115
4.5.8	Push button for road transport mode . . . . .	116
<b>4.6</b>	<b>Computer</b> . . . . .	117
4.6.1	Description . . . . .	117
4.6.1.1	Screen . . . . .	118
4.6.1.2	Push buttons and knob . . . . .	121
4.6.2	Main function controls . . . . .	122
4.6.2.1	Activated device checks . . . . .	125
4.6.2.2	Meaning of the symbols: . . . . .	125
4.6.3	Combine main menu . . . . .	126
4.6.3.1	Cells (4 and 5) of the Combine main menu . . . . .	127
4.6.4	Machine settings and performance control . . . . .	128
4.6.5	Setting straw chopper deflectors . . . . .	129
4.6.6	Monitoring performance and returns . . . . .	130
4.6.7	Header settings . . . . .	131
4.6.7.1	Header configuration . . . . .	132
4.6.7.2	Advanced header settings . . . . .	133
4.6.7.3	Header settings . . . . .	134
4.6.8	Reel . . . . .	136
4.6.9	Automatic controls . . . . .	137
4.6.10	Preset height . . . . .	138
4.6.11	Automatic height . . . . .	139
4.6.12	Field pressure . . . . .	141
4.6.13	Lateral floatation . . . . .	142
4.6.14	Automatic control combinations . . . . .	142
4.6.14.1	Pre-set height and Automatic height . . . . .	143
4.6.14.2	Pre-set height and Field pressure . . . . .	145
4.6.14.3	Pre-set height and Lateral floatation . . . . .	145
4.6.14.4	Pre-set height, Automatic height and Field pressure . . . . .	146
4.6.14.5	Pre-set height, Automatic height and Lateral floatation . . . . .	148
4.6.14.6	Pre-set height, Field pressure and Lateral floatation . . . . .	148
4.6.14.7	Pre-set height, Automatic height, Field pressure and Lateral floatation (recommended setting) . . . . .	149
4.6.14.8	Automatic height and Field pressure . . . . .	150
4.6.14.9	Automatic height and Lateral floatation . . . . .	152
4.6.14.10	Automatic height, Field pressure and Lateral floatation . . . . .	152
4.6.14.11	Field pressure and Lateral floatation . . . . .	153
4.6.15	Settings for harvesting specific crops . . . . .	154
4.6.16	Shafts and engine . . . . .	155
4.6.17	Maintenance & calibration . . . . .	156

4.6.17.1 Calibrations . . . . .	157
4.6.17.2 Information on the management system . . . . .	158
4.6.17.3 System setup . . . . .	159
4.6.18 Error codes . . . . .	162
4.6.19 Diagnostics . . . . .	164
4.6.20 Meters . . . . .	167
4.6.21 Display adjustment . . . . .	168
4.6.21.1 Night-time screen brightness . . . . .	169
4.6.21.2 Screen calibration . . . . .	170
4.6.21.3 Cleaning the screen . . . . .	171
<b>4.7 Cab . . . . .</b>	<b>172</b>
4.7.1 Main components . . . . .	172
4.7.2 Air conditioning . . . . .	173
4.7.2.1 Compressor . . . . .	173
4.7.2.2 Condenser . . . . .	174
4.7.2.3 Expansion valve – evaporator . . . . .	174
4.7.3 Pressurization and heating . . . . .	175
4.7.4 Cab controls . . . . .	177
4.7.4.1 Rear-view mirrors . . . . .	181
4.7.5 Cab seats . . . . .	182
4.7.6 Other cab components . . . . .	184
4.7.6.1 Refrigerator . . . . .	184
4.7.6.2 Document Pocket . . . . .	184
4.7.6.3 Sun visor . . . . .	185
4.7.6.4 Rear Cab Window . . . . .	186
4.7.6.5 Reading light . . . . .	186
4.7.6.6 Footrest . . . . .	187
4.7.6.7 Preparation for radio installation . . . . .	187
<b>4.8 Access to combine components . . . . .</b>	<b>188</b>
4.8.1 Access to the operator platform . . . . .	188
4.8.2 Access to and cleaning of the front windshield of the cab . . . . .	189
4.8.3 Cleaning the rear-view mirrors . . . . .	190
4.8.4 Cleaning the camera . . . . .	191
4.8.5 Access to the engine compartment . . . . .	191
4.8.6 Access to the grain tank . . . . .	192
4.8.7 Access to the inside of the grain tank . . . . .	193
<b>4.9 Engine . . . . .</b>	<b>194</b>
4.9.1 Starting the engine . . . . .	194
4.9.2 Useful advice . . . . .	195
4.9.3 Stopping the engine . . . . .	196
<b>4.10 Road transport . . . . .</b>	<b>197</b>
4.10.1 Operations to be carried out before transportation . . . . .	197
<b>4.11 Using the combine . . . . .</b>	<b>200</b>
4.11.1 Operations to be carried out before use . . . . .	200
<b>5 Field Operations . . . . .</b>	<b>201</b>
<b>5.1 General Information . . . . .</b>	<b>203</b>
5.1.1 Notes . . . . .	203
5.1.2 Before operating the machine in the field . . . . .	203
<b>5.2 Starting and Stopping the Combine . . . . .</b>	<b>205</b>
5.2.1 Procedure to follow . . . . .	205
<b>5.3 Cutting table . . . . .</b>	<b>207</b>
5.3.1 Attaching and removing the table . . . . .	207
5.3.2 Table lateral floatation . . . . .	211
<b>5.4 Main Crop Elevator . . . . .</b>	<b>212</b>
5.4.1 Adjustments . . . . .	212

5.4.1.1 Access to the main components . . . . .	214
5.4.1.2 P.F.R. — Finger feed roller . . . . .	215
5.4.2 Reverse drive system . . . . .	216
5.4.3 Stone trap . . . . .	217
5.4.3.1 Stone trap assembly removal/refitting . . . . .	218
<b>5.5 Cylinder Housing . . . . .</b>	<b>220</b>
5.5.1 Threshing drum . . . . .	220
5.5.1.1 Unblocking the cylinder . . . . .	221
5.5.2 Concave . . . . .	222
5.5.2.1 Concave filler plates (wheat concave) . . . . .	223
5.5.2.2 Parallelism between the cylinder and concave . . . . .	224
5.5.3 Sectional concave . . . . .	225
5.5.3.1 Concave filler plates . . . . .	226
5.5.3.2 Parallelism between the cylinder and concave . . . . .	227
5.5.4 Universal wheat/maize concave . . . . .	228
5.5.4.1 Basic settings - universal concave . . . . .	229
5.5.5 Spike-toothed Cylinder/Concave (for rice) . . . . .	230
5.5.6 Rear beater . . . . .	232
<b>5.6 Multi-Crop Separator (MCS) . . . . .</b>	<b>233</b>
5.6.1 Operational description . . . . .	233
5.6.2 Checking the concave position . . . . .	234
5.6.3 Disengaging the Multi Crop Separator concaves . . . . .	235
5.6.4 Multi Crop Separator speed . . . . .	236
<b>5.7 Straw walkers . . . . .</b>	<b>238</b>
5.7.1 Description and adjustments . . . . .	238
<b>5.8 Main Grain Pan . . . . .</b>	<b>240</b>
5.8.1 Description . . . . .	240
5.8.2 Checking the main grain pan . . . . .	241
5.8.3 Cleaning the main grain pan . . . . .	243
<b>5.9 Fanning Mill . . . . .</b>	<b>244</b>
5.9.1 Description and adjustments . . . . .	244
5.9.1.1 Fanning mill for threshing light seed crops . . . . .	246
<b>5.10 Top sieve . . . . .</b>	<b>247</b>
5.10.1 Adjustment . . . . .	247
<b>5.11 Bottom sieve . . . . .</b>	<b>251</b>
5.11.1 Adjustment . . . . .	251
<b>5.12 Tailings . . . . .</b>	<b>253</b>
5.12.1 Description and adjustments . . . . .	253
<b>5.13 Grain tank . . . . .</b>	<b>255</b>
5.13.1 Description . . . . .	255
5.13.1.1 Grain tank unloading auger . . . . .	255
5.13.1.2 Sensors to check tank filling . . . . .	256
5.13.1.3 Grain tank control window . . . . .	257
5.13.1.4 Doors for Grain Tank Maintenance and Cleaning . . . . .	258
5.13.1.5 Vertical auger tank drain door . . . . .	259
5.13.1.6 Tank bottom door . . . . .	259
5.13.1.7 Grain Tank Cover . . . . .	260
5.13.2 Basic Settings . . . . .	262
<b>6 Lubrication and Maintenance . . . . .</b>	<b>265</b>
<b>6.1 General Information . . . . .</b>	<b>267</b>
6.1.1 Lubrication and Maintenance . . . . .	267
<b>6.2 Preliminary Service Inspection . . . . .</b>	<b>269</b>
6.2.1 After the first 50 working hours . . . . .	269
<b>6.3 Scheduled Service Inspection . . . . .</b>	<b>270</b>
6.3.1 Operation and adjustment . . . . .	270

*Table of contents*


---

6.3.2	When and where to carry it out . . . . .	271
6.3.3	Interval - 10 hours . . . . .	276
6.3.3.1	Hydraulic and hydrostatic systems tank (1) . . . . .	276
6.3.3.2	Engine oil (2) . . . . .	277
6.3.3.3	Threshing drum variator (3) . . . . .	278
6.3.3.4	Coolant expansion tank (4) . . . . .	278
6.3.3.5	Prefilter/water separator (5) . . . . .	279
6.3.3.6	Straw chopper rotor (6) . . . . .	279
6.3.4	Interval - 50 hours . . . . .	280
6.3.4.1	Rear axle support (11) . . . . .	280
6.3.4.2	Table drive-belt tensioner (12) . . . . .	280
6.3.4.3	Service brakes (13) . . . . .	281
6.3.4.4	Cab air filters (14) . . . . .	281
6.3.4.5	Fanning mill variator (15) . . . . .	283
6.3.4.6	Coupling bushes of final drive shafts (16) . . . . .	283
6.3.4.7	Rear-axle king pins (17) . . . . .	284
6.3.4.8	Evaporator (18) . . . . .	284
6.3.4.9	Condenser (19) . . . . .	285
6.3.4.10	Engine radiator and hydraulic oil radiator (20) . . . . .	286
6.3.4.11	Adjusting the rotary screen brushes and aspirator brushes . . . . .	287
6.3.4.12	Grain-tank filling auger gearbox (21) . . . . .	288
6.3.4.13	Track frames (22) . . . . .	289
6.3.4.14	Rear straw walker shaft supports (23) . . . . .	290
6.3.5	Interval - 100 hours . . . . .	291
6.3.5.1	Unloading auger bottom gearbox (31) . . . . .	291
6.3.5.2	Crop-unloading auger drive belt tensioner (32) . . . . .	292
6.3.5.3	Main crop-elevator belt tensioner (33) . . . . .	292
6.3.5.4	Chaff spreader drive (if installed) (34) . . . . .	293
6.3.5.5	Crop unloading-auger control cylinder (35) . . . . .	293
6.3.5.6	Main crop elevator adapter (36) . . . . .	294
6.3.5.7	MCS belt tensioner (if installed) (37) . . . . .	294
6.3.5.8	Threshing-mechanism belt tensioner (38) . . . . .	295
6.3.5.9	Hydrostatic-pump belt tensioner (39) . . . . .	295
6.3.5.10	Cab access ladder (40) . . . . .	296
6.3.5.11	Tires (41) . . . . .	296
6.3.5.12	Main crop elevator supports (42) . . . . .	297
6.3.5.13	Rear wheel 4WD tie rod (if fitted) (43) . . . . .	298
6.3.5.14	Engine (44) . . . . .	298
6.3.5.15	Engine air filter (45) . . . . .	299
6.3.5.16	Park brake (46) . . . . .	300
6.3.6	Interval - 250 hours . . . . .	301
6.3.6.1	Gearbox (61) . . . . .	301
6.3.6.2	Reduction gearbox (62) . . . . .	301
6.3.6.3	Main clutch (63) . . . . .	302
6.3.6.4	Unloading auger support (64) . . . . .	302
6.3.6.5	Straw chopper driven-belt tensioner (65) . . . . .	303
6.3.6.6	Straw chopper drive-belt tensioner (66) . . . . .	303
6.3.6.7	Straw chopper idler shaft (67) . . . . .	304
6.3.6.8	Tank unloading-auger clutch (68) . . . . .	304
6.3.6.9	Aspirator drive-belt tensioner (69) . . . . .	305
6.3.6.10	Rotary-screen belt tensioner (70) . . . . .	305
6.3.6.11	Windshield wash fluid reservoir (71) . . . . .	306
6.3.6.12	Engine oil and filters (72) . . . . .	306
6.3.6.13	Tailing-auger left support (73) . . . . .	309
6.3.6.14	Unloading-auger top angle gear (74) . . . . .	309
6.3.7	Interval - 500 hours . . . . .	310
6.3.7.1	Hydraulic systems oil (81) . . . . .	310
6.3.7.2	Hydraulic and hydrostatic systems return filter (82) . . . . .	311

6.3.7.3	Hydraulic-oil intake filter (83) . . . . .	312
6.3.7.4	Hydrostatic transmission filter (84) . . . . .	312
6.3.7.5	Engine diesel-fuel filters (85) . . . . .	313
6.3.7.6	Dehydrator filter (86) . . . . .	314
6.3.7.7	Catalytic fluid filter (87) . . . . .	315
6.3.7.8	Reduction gears (88) . . . . .	316
6.3.7.9	Gearbox (89) . . . . .	316
6.3.7.10	Air compressor (if installed) (90) . . . . .	317
6.3.7.11	Battery (91) . . . . .	317
<b>6.4</b>	<b>Periodical maintenance operations</b> . . . . .	<b>318</b>
6.4.1	Description . . . . .	318
6.4.1.1	Engine valves (1) . . . . .	319
6.4.1.2	Coolant (2) . . . . .	320
6.4.1.3	Service brake circuit fluid (3) . . . . .	321
6.4.1.4	Diesel fuel tank (4) . . . . .	321
6.4.1.5	Turbocharger (5) . . . . .	322
6.4.1.6	Hydraulic hoses (6) . . . . .	322
6.4.1.7	Catalytic fluid tank (DEF) (7) . . . . .	323
<b>6.5</b>	<b>Lubrication</b> . . . . .	<b>324</b>
6.5.1	Summary table . . . . .	324
<b>7</b>	<b>Adjustments</b> . . . . .	<b>325</b>
<b>7.1</b>	<b>Adjustments</b> . . . . .	<b>327</b>
7.1.1	Important information . . . . .	327
<b>7.2</b>	<b>Belt and chain adjustment</b> . . . . .	<b>328</b>
7.2.1	Belts and chains (left-hand side) . . . . .	328
7.2.1.1	Feeder drive belt (1) . . . . .	329
7.2.1.2	Threshing unit drive belt (2) . . . . .	330
7.2.1.3	Multi-Crop Separator drive belt (3) . . . . .	331
7.2.1.4	Unloading-auger drive belt (4) . . . . .	332
7.2.1.5	Belt drive for hydrostatic pump (5) . . . . .	333
7.2.1.6	Belt drive for chaff spreader (if fitted) (6) . . . . .	334
7.2.1.7	Belt drive for reversing (7) . . . . .	335
7.2.1.8	Main transmission belt (8) . . . . .	336
7.2.1.9	Belt drives for good grain and tailings augers (9) . . . . .	337
7.2.1.10	Belt drive for straw walkers (10) . . . . .	337
7.2.1.11	Belt drive for cutting table (11) . . . . .	338
7.2.1.12	Chain drive for unloading auger (12) . . . . .	338
7.2.1.13	Belt drive for straw chopper (if fitted) (13) . . . . .	339
7.2.1.14	Belt drive for straw chopper (if fitted) (14) . . . . .	340
7.2.1.15	Air-compressor drive belt (if installed) (15) . . . . .	341
7.2.2	Belts and chains (right-hand side) . . . . .	343
7.2.2.1	Reel-pump drive belt (20) . . . . .	344
7.2.2.2	Dust aspirator drive belt (21) . . . . .	344
7.2.2.3	Rotary-screen drive belt (22) . . . . .	345
7.2.2.4	Belt drive for engine coolant pump (23) . . . . .	345
7.2.2.5	Drive belt for engine fan and alternator (24) . . . . .	346
7.2.2.6	Belt drive for cylinder variator (25) . . . . .	346
7.2.2.7	Belt drive for fanning mill variator (26) . . . . .	347
7.2.2.8	Top chain drive for tailings auger (27) . . . . .	348
7.2.2.9	Crop elevator chain (28) . . . . .	348
7.2.2.10	Chain drive for tailings elevator (29) . . . . .	349
7.2.2.11	Front crop elevator chain (30) . . . . .	349
7.2.2.12	Finger-feed-roller drive chain (31) . . . . .	350
7.2.2.13	Tank filling-auger drive chain (32) . . . . .	350
7.2.2.14	Belt drive for cab air conditioning compressor (33) . . . . .	351
<b>7.3</b>	<b>Reverse drive system</b> . . . . .	<b>352</b>

7.3.1 Adjustment of control tie rod . . . . .	352
7.3.2 Adjustment of the distance between disks . . . . .	353
<b>7.4 Slip clutches . . . . .</b>	<b>354</b>
7.4.1 Description . . . . .	354
7.4.1.1 Clutch for main crop elevator upper shaft (1) . . . . .	354
7.4.1.2 Clutch on finger feed roller (2) . . . . .	354
7.4.1.3 Clutch for shaker shoe counter drive (3) . . . . .	355
7.4.1.4 Shear bolt for unloading-auger counter drive (4) . . . . .	355
<b>7.5 Grain tank unloading auger . . . . .</b>	<b>356</b>
7.5.1 Adjustment of the support . . . . .	356
<b>7.6 Tires . . . . .</b>	<b>357</b>
7.6.1 Tire pressure . . . . .	357
7.6.2 Replacement of Front Wheels . . . . .	358
7.6.3 Replacement of Rear Wheels . . . . .	359
7.6.4 Front and rear wheels assembly . . . . .	360
<b>7.7 Brakes . . . . .</b>	<b>361</b>
7.7.1 Service brakes . . . . .	361
7.7.2 Park brake . . . . .	362
<b>7.8 Rear axle . . . . .</b>	<b>363</b>
7.8.1 Toe-in setting . . . . .	363
7.8.2 Steering ram ball joints . . . . .	363
7.8.3 Width setting . . . . .	364
7.8.4 Telescopic arm position . . . . .	365
7.8.5 Rear axle support . . . . .	367
<b>7.9 Battery . . . . .</b>	<b>368</b>
7.9.1 Battery Replacement . . . . .	368
7.9.2 Suggestions regarding the battery . . . . .	369
<b>8 Systems . . . . .</b>	<b>371</b>
<b>  8.1 Safety Precautions . . . . .</b>	<b>373</b>
8.1.1 Notes . . . . .	373
<b>  8.2 Engine supply system . . . . .</b>	<b>374</b>
8.2.1 Permitted fuels . . . . .	374
8.2.2 Fuel Circuit . . . . .	375
8.2.3 Bleeding the Fuel Supply Circuit . . . . .	376
8.2.4 Catalytic fluid tank (DEF) . . . . .	377
8.2.5 Injection system operation . . . . .	378
<b>  8.3 Engine air intake and exhaust system . . . . .</b>	<b>380</b>
8.3.1 Operation . . . . .	380
<b>  8.4 Engine cooling system . . . . .</b>	<b>382</b>
8.4.1 Coolant . . . . .	382
8.4.2 Engine cooling system operation . . . . .	383
<b>  8.5 Engine lubrication system . . . . .</b>	<b>384</b>
8.5.1 Operation . . . . .	384
8.5.2 Oil vapor recovery system . . . . .	385
<b>  8.6 SCR system . . . . .</b>	<b>386</b>
8.6.1 Operation . . . . .	386
<b>  8.7 Hydraulics system . . . . .</b>	<b>389</b>
8.7.1 Pumps and fuel tank . . . . .	389
8.7.2 Table positioning hydraulic circuits . . . . .	391
8.7.2.1 Cutting table oleopneumatic shock absorbers . . . . .	392
8.7.2.2 Flow rate proportional valve . . . . .	392
8.7.2.3 Hose burst valves . . . . .	393
8.7.2.4 Table horizontal positioning circuit . . . . .	393
8.7.3 Reel rotation control hydraulic circuit . . . . .	394

8.7.4 Hydraulic steering system . . . . .	395
8.7.5 Auxiliary hydraulics circuit . . . . .	396
<b>8.8 Hydrostatic transmission system . . . . .</b>	<b>397</b>
8.8.1 Front-wheel drive . . . . .	397
8.8.2 Rear-wheel drive . . . . .	398
<b>8.9 Electrical system . . . . .</b>	<b>399</b>
8.9.1 Main components . . . . .	399
8.9.2 Computerized system . . . . .	400
8.9.3 Fuses . . . . .	401
8.9.4 Additional fuses . . . . .	405
8.9.5 Relays . . . . .	407
8.9.5.1 Additional relays . . . . .	412
8.9.6 Control units . . . . .	413
8.9.6.1 EXT control unit . . . . .	414
8.9.6.2 ENEDC control unit . . . . .	414
8.9.6.3 FTD1 control unit . . . . .	415
8.9.6.4 FTD2 control unit . . . . .	415
8.9.6.5 Engine control unit . . . . .	416
8.9.6.6 Engine sensors and control unit . . . . .	417
8.9.7 Electric motors . . . . .	418
8.9.7.1 Engine ignition control motor . . . . .	418
8.9.7.2 Concave position control motors . . . . .	418
8.9.7.3 MCS concave position control motor (if installed) . . . . .	419
8.9.7.4 Grain tank cover position control motor . . . . .	420
8.9.7.5 Straw deflector control motor (if fitted) . . . . .	420
8.9.7.6 Fanning mill variator control motor . . . . .	421
8.9.7.7 Top sieve control motor . . . . .	421
8.9.7.8 Lower sieve motor . . . . .	422
8.9.8 Sensors . . . . .	422
8.9.8.1 Forward speed sensor . . . . .	422
8.9.8.2 Cylinder speed sensor . . . . .	423
8.9.8.3 Fanning mill speed sensor . . . . .	423
8.9.8.4 Reel speed sensor . . . . .	424
8.9.8.5 Straw chopper speed sensor . . . . .	424
8.9.8.6 Performance control sensors . . . . .	425
8.9.8.7 Exhaust gas sensors . . . . .	426
8.9.8.8 Returns control sensors . . . . .	427
8.9.9 Electric connectors . . . . .	427
8.9.10 Connections for diagnostics . . . . .	430
8.9.11 Flashing lights . . . . .	430
<b>9 Troubleshooting . . . . .</b>	<b>431</b>
<b>9.1 Description . . . . .</b>	<b>433</b>
9.1.1 Feeding . . . . .	433
9.1.2 Threshing . . . . .	433
9.1.3 Separation and cleaning . . . . .	435
9.1.4 Hydrostatic Transmission . . . . .	438
9.1.5 Engine . . . . .	439
9.1.5.1 EEM4 engine troubleshooting (self-diagnosis) . . . . .	441
9.1.5.2 Fault codes . . . . .	441
9.1.6 Hydraulics system . . . . .	453
9.1.7 Electrical system . . . . .	454
9.1.8 Air conditioning circuit . . . . .	454
9.1.9 Straw chopper . . . . .	455
<b>10 Off-Season Storage . . . . .</b>	<b>457</b>
<b>10.1 Procedure to follow . . . . .</b>	<b>459</b>

10.1.1 Operations to be carried out after the harvest . . . . .	459
10.1.2 Ordering spare parts . . . . .	460
10.1.3 Operations to be carried out before the new season . . . . .	460
<b>11 Optional equipment . . . . .</b>	<b>463</b>
<b>11.1 Information . . . . .</b>	<b>465</b>
11.1.1 General considerations . . . . .	465
<b>11.2 Optional equipment . . . . .</b>	<b>466</b>
11.2.1 Four-wheel drive . . . . .	466
11.2.2 Camera . . . . .	466
11.2.3 Windbreak . . . . .	467
11.2.4 Additional lights . . . . .	467
11.2.5 Additional lights for flip-up maize headers . . . . .	469
11.2.6 Additional mirrors . . . . .	469
11.2.7 Additional fire extinguisher . . . . .	470
11.2.8 Diesel fuel prefilter . . . . .	470
11.2.9 Air compressor for maintenance . . . . .	471
11.2.10 Weight and moisture control monitor . . . . .	472
11.2.11 Multimedia navigation system . . . . .	472
11.2.12 Trailer hitch . . . . .	473
11.2.13 Refrigerator . . . . .	473
11.2.14 Vertical Knives . . . . .	474
11.2.15 Electrically-operated sieves and returns sensors . . . . .	474
11.2.16 Cylinder cover . . . . .	475
11.2.17 Tailings cover plate . . . . .	476
11.2.18 Top sieve . . . . .	476
11.2.19 Bottom sieve . . . . .	477
<b>11.3 Equipment for threshing . . . . .</b>	<b>478</b>
11.3.1 Equipment for maize . . . . .	478
11.3.2 Equipment for corn-cob . . . . .	480
11.3.3 Equipment for rice . . . . .	480
11.3.4 Equipment for light seed crops . . . . .	481
11.3.5 Equipment for soya and peas . . . . .	481
<b>11.4 Ballast weights . . . . .</b>	<b>482</b>
11.4.1 Description . . . . .	482
11.4.2 Ballast weights on rear axle . . . . .	483
11.4.3 Ballast weights on the straw walker hood for machines without straw chopper . . . . .	484
11.4.4 Ballast weights on the rear wheels with a liquid mix (for tubeless tires) . . . . .	485
11.4.5 Filling tires with anti-freeze solutions . . . . .	486
<b>11.5 Straw chopper . . . . .</b>	<b>487</b>
11.5.1 Electrically operated straw chopper straw deflectors . . . . .	487
11.5.2 Transport position . . . . .	487
11.5.3 Working position . . . . .	488
11.5.4 Operating the straw chopper . . . . .	490
11.5.5 Disengaging the straw chopper . . . . .	491
11.5.6 Access to the straw chopper rotor . . . . .	491
11.5.7 Straw chopper rotor knives . . . . .	492
11.5.8 Counter-knives . . . . .	493
11.5.9 Chopping quality . . . . .	493
11.5.10 Use of straw chopper in maize . . . . .	494
<b>11.6 Chaff Spreader . . . . .</b>	<b>496</b>
11.6.1 Working and maintenance positions . . . . .	496
11.6.2 Chaff spreader speed . . . . .	498
11.6.3 Disengaging the chaff spreader . . . . .	498
11.6.4 Chaff spreader belt tensioning . . . . .	498
<b>11.7 Tracks . . . . .</b>	<b>499</b>
11.7.1 Use and maintenance . . . . .	499

11.7.2 Track chain tension . . . . .	500
<b>12 Technical Specifications . . . . .</b>	<b>501</b>
<b>12.1 Wheels and tires . . . . .</b>	<b>503</b>
12.1.1 information . . . . .	503
12.1.2 Wheel tightening torque . . . . .	503
12.1.3 Tire capacity . . . . .	503
12.1.4 Tire equipment . . . . .	504
12.1.5 Description . . . . .	507
<b>12.2 Dimensions . . . . .</b>	<b>508</b>
12.2.1 Combine dimensions . . . . .	508
12.2.2 Clearance between unloading auger and table . . . . .	512
<b>12.3 Technical specifications . . . . .</b>	<b>514</b>
12.3.1 Feeding unit . . . . .	514
12.3.2 Threshing sys. . . . .	515
12.3.3 Cleaning unit . . . . .	520
12.3.4 Grain tank . . . . .	521
12.3.5 Hydraulic system . . . . .	522
12.3.6 Hydrostatic system . . . . .	522
12.3.7 Engine . . . . .	523
12.3.8 Electrical components . . . . .	523
12.3.9 Transmission . . . . .	524
12.3.10 Rear axle . . . . .	525
12.3.11 Weight . . . . .	525
<b>13 Index . . . . .</b>	<b>527</b>

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**