

# Operator's Manual

**FENDT**

## Combines

### FENDT 5275 C - 6335 C

*FENDT 5275 C - S/N => 553910034  
ZN205539x03010037*  
*FENDT 5275 C PL/PLI - S/N => 554010052  
ZN205540x03010057*  
*FENDT 6335 C - S/N => 564010181  
ZN205640x03010200*  
*FENDT 6335 C PL/PLI - S/N => 564110081  
ZN205641x03010098*



#### Breganze

AGCO S.p.A. - Via F. Laverda, 15/17 - 36042

BREGANZE (VI) – Italy.

FENDT is a worldwide brand of AGCO

© AGCO 2017

Original Operator's Manual

March 2017

FENDT 5275C-6335C\_EN\_327317017

EME

English

# Combines

<b>1 General Information</b>	15
<b>1.1 Information</b>	17
1.1.1 Introduction	17
1.1.2 Company policy	17
1.1.3 Optional equipment	17
1.1.4 Spare parts and accessories	18
1.1.5 Warranty	18
1.1.6 Lubricants	18
<b>1.2 Use of the combine</b>	20
<b>1.3 Identification</b>	22
1.3.1 Combine identification	22
1.3.2 Engine Identification	23
1.3.3 Cutting table identification	24
1.3.4 Operator seat identification	24
1.3.5 Hydrostatic pump identification	25
1.3.6 Hydrostatic motor identification	25
1.3.7 Straw chopper identification (if fitted)	26
1.3.8 Chaff spreader identification (if fitted)	26
1.3.9 Trailer hitch identification (if fitted)	27
<b>1.4 Identification form</b>	28
1.4.1 Machine data	28
<b>1.5 Conformity</b>	29
1.5.1 EC Declaration of Conformity	29
<b>1.6 Information</b>	30
1.6.1 Ecology	30
1.6.2 Hydraulic systems: hoses	30
1.6.3 Scrapping and disposal	31
<b>1.7 Weight</b>	32
1.7.1 Weight distribution	32
<b>2 Safety</b>	35
<b>2.1 Warning symbols and safety instructions</b>	37
2.1.1 Warnings	37
<b>2.2 Information for road transport</b>	38
2.2.1 Road transport	38
<b>2.3 Information for operations</b>	41
2.3.1 Field Operations	41
<b>2.4 Information for maintenance</b>	45
2.4.1 Maintenance work	45
<b>2.5 Information on the engine</b>	49
2.5.1 Engine	49
<b>2.6 Leveling information</b>	52
<b>2.7 Safety and function decals</b>	53
2.7.1 Location of decals	53
2.7.2 Description of decals	56
<b>2.8 Work on the battery</b>	68
2.8.1 Battery	68
<b>2.9 Safety devices</b>	69
2.9.1 Emergency exit	69

2.9.2 Operator presence device . . . . .	70
2.9.2.1 Returning the machine to normal operation . . . . .	70
2.9.2.2 Operator presence device anomaly . . . . .	71
2.9.3 Safety belts . . . . .	72
2.9.4 Cutting table safety stops . . . . .	73
2.9.5 Safety guard for main crop elevator . . . . .	74
2.9.6 Sprags for wheels . . . . .	74
2.9.7 Audible alarm for reversing . . . . .	75
2.9.8 Reflectors for road transport . . . . .	76
2.9.9 Safety Guards . . . . .	77
2.9.10 Fall protection rails . . . . .	77
2.9.11 Safety devices for operations to be carried out in the upper part of the machine . . . . .	79
2.9.12 Straw chopper . . . . .	80
2.9.13 Fire extinguisher . . . . .	80
<b>2.10 Trailer hitch . . . . .</b>	<b>81</b>
2.10.1 Automatic towing hooks . . . . .	81
2.10.2 CUNA and CE trailer hitches . . . . .	82
2.10.2.1 Procedure for attaching and removing . . . . .	83
2.10.2.2 Drawbar coupling . . . . .	84
2.10.3 ROCKINGER trailer hitch . . . . .	84
2.10.3.1 Removal . . . . .	84
2.10.3.2 Drawbar coupling . . . . .	85
2.10.4 Fixed trailer hitch (non-automatic - CUNA type) . . . . .	86
<b>2.11 Machine lifting . . . . .</b>	<b>87</b>
2.11.1 Attachment points . . . . .	87
<b>2.12 Towing . . . . .</b>	<b>88</b>
2.12.1 Towing the combine . . . . .	88
<b>2.13 Further information . . . . .</b>	<b>89</b>
2.13.1 Noise level in the cab . . . . .	89
2.13.2 Vibrations in the cab . . . . .	89
2.13.3 Statutory regulations . . . . .	89
2.13.4 Electromagnetic emissions . . . . .	90
<b>2.14 Notes . . . . .</b>	<b>91</b>
2.14.1 Notes for road transport . . . . .	91
<b>3 Operation . . . . .</b>	<b>93</b>
<b>3.1 Combine operation . . . . .</b>	<b>95</b>
3.1.1 Crop processing . . . . .	95
<b>3.2 Stage 1 . . . . .</b>	<b>96</b>
3.2.1 Feeding . . . . .	96
<b>3.3 Stage 2 . . . . .</b>	<b>97</b>
3.3.1 Threshing . . . . .	97
<b>3.4 Stage 3 . . . . .</b>	<b>98</b>
3.4.1 Separation . . . . .	98
<b>3.5 Stage 4 . . . . .</b>	<b>99</b>
3.5.1 Cleaning . . . . .	99
<b>3.6 Stage 5 . . . . .</b>	<b>100</b>
3.6.1 Grain storage and unloading . . . . .	100
<b>3.7 Transmission . . . . .</b>	<b>101</b>
3.7.1 Rear-wheel drive . . . . .	101
<b>3.8 Leveling . . . . .</b>	<b>102</b>
3.8.1 Cross leveling . . . . .	102
3.8.2 Cross and longitudinal leveling (FENDT 5275 C PLI – 6335 C PLI models only) . . . . .	102
<b>4 Controls and Instruments . . . . .</b>	<b>103</b>

<b>4.1 Steering column</b>	107
4.1.1 Adjustments	107
4.1.2 Ignition switch	108
4.1.3 Direction indicators	109
<b>4.2 Brakes</b>	110
4.2.1 Service brakes	110
4.2.2 Park brake	110
<b>4.3 Multifunction lever</b>	112
4.3.1 Main components	112
4.3.2 Push buttons on the multifunction lever	113
<b>4.4 Gear shift lever and reversing lever</b>	115
4.4.1 General Information	115
<b>4.5 Instrument panel</b>	117
4.5.1 Components (FENDT 5275 C - 6335 C models)	117
4.5.2 Components (FENDT 5275 C PL - 6335 C PL models)	118
4.5.3 Components (FENDT 5275 C PLI – 6335 C PLI models)	119
4.5.4 Armrest	120
4.5.5 Throttle control	120
4.5.6 Switch for threshing mechanism and straw chopper	121
4.5.7 Switch for feed mechanism engagement	121
4.5.8 Switch for rear-wheel drive	122
4.5.9 Toggle switch for parking brake	122
4.5.10 Miscellaneous push buttons	123
4.5.11 Push button for road transport mode	123
4.5.12 Switch for cross leveling mode	124
4.5.13 Toggle switch for machine front position	124
4.5.14 Toggle switch for cross leveling	125
4.5.15 Control switch for longitudinal leveling mode	125
<b>4.6 Computer</b>	126
4.6.1 Description	126
4.6.1.1 Screen	127
4.6.1.2 Push buttons and knob	128
4.6.2 Main function controls	128
4.6.2.1 Activated device checks	130
4.6.2.2 Meaning of the symbols:	130
4.6.3 Machine information	133
4.6.3.1 Fields 4 and 5	134
4.6.4 Combine main menu	135
4.6.5 Machine settings and performance control	136
4.6.6 Setting straw chopper deflectors	137
4.6.7 Monitoring performance and returns	138
4.6.8 Header settings	139
4.6.8.1 Header configuration	139
4.6.8.2 Advanced header settings	140
4.6.8.3 Header settings	141
4.6.9 Reel	142
4.6.10 Automatic controls	143
4.6.11 Preset height	144
4.6.12 Automatic height	146
4.6.13 Field pressure	148
4.6.14 Lateral floatation	149
4.6.15 Header compensation (FENDT 5275 C PLI – 6335 C PLI models only)	150
4.6.16 Automatic control combinations	150
4.6.16.1 Pre-set height and Automatic height	151
4.6.16.2 Pre-set height and Field pressure	153
4.6.16.3 Pre-set height and Lateral floatation	153
4.6.16.4 Pre-set height, Automatic height and Field pressure	154

4.6.16.5 Pre-set height, Automatic height and Lateral flotation . . . . .	156
4.6.16.6 Pre-set height, Field pressure and Lateral floatation . . . . .	156
4.6.16.7 Pre-set height, Automatic height, Field pressure and Lateral floatation (recommended setting) . . . . .	157
4.6.16.8 Automatic height and Field pressure . . . . .	158
4.6.16.9 Automatic height and Lateral floatation . . . . .	160
4.6.16.10 Automatic height, Field pressure and Lateral floatation . . . . .	160
4.6.16.11 Field pressure and Lateral floatation . . . . .	161
4.6.17 Settings for harvesting specific crops . . . . .	162
4.6.18 Levelling combine settings . . . . .	163
4.6.19 Maintenance & calibration . . . . .	164
4.6.19.1 Calibrations . . . . .	165
4.6.19.2 Information on the management system . . . . .	166
4.6.19.3 System setup . . . . .	167
4.6.20 Error codes . . . . .	170
4.6.21 Diagnostics . . . . .	171
4.6.22 Meters . . . . .	175
4.6.23 Display adjustment . . . . .	176
4.6.23.1 Night-time screen brightness . . . . .	177
4.6.23.2 Cleaning the screen . . . . .	178
4.6.24 Additional information . . . . .	179
4.6.25 Camera . . . . .	183
<b>4.7 Cab . . . . .</b>	<b>184</b>
4.7.1 Main components . . . . .	184
4.7.2 Air conditioning . . . . .	185
4.7.2.1 Control unit . . . . .	185
4.7.2.2 Compressor . . . . .	186
4.7.2.3 Condenser . . . . .	186
4.7.2.4 Expansion valve – evaporator . . . . .	187
4.7.3 Pressurization and heating . . . . .	187
4.7.4 Cab controls . . . . .	189
4.7.4.1 Rear-view mirrors . . . . .	193
4.7.5 Cab seats . . . . .	194
4.7.6 Other cab components . . . . .	196
4.7.6.1 Refrigerator . . . . .	196
4.7.6.2 Document Pocket . . . . .	196
4.7.6.3 Sun visor . . . . .	197
4.7.6.4 Rear Cab Window . . . . .	197
4.7.6.5 Reading light . . . . .	198
4.7.6.6 Footrest . . . . .	198
4.7.6.7 Preparation for radio installation . . . . .	199
<b>4.8 Access to combine components . . . . .</b>	<b>200</b>
4.8.1 Access to the operator platform . . . . .	200
4.8.2 Access to and cleaning of the front windshield of the cab . . . . .	201
4.8.3 Cleaning the rear-view mirrors . . . . .	202
4.8.4 Cleaning the camera . . . . .	203
4.8.5 Access to the engine compartment . . . . .	203
4.8.6 Access to the grain tank . . . . .	205
4.8.7 Access to the inside of the grain tank . . . . .	206
<b>4.9 Engine . . . . .</b>	<b>207</b>
4.9.1 Starting the engine . . . . .	207
4.9.2 Useful advice . . . . .	208
4.9.3 Stopping the engine . . . . .	209
<b>4.10 Road transport . . . . .</b>	<b>210</b>
<b>4.11 Using the combine . . . . .</b>	<b>213</b>
4.11.1 Operations to be carried out before use . . . . .	213

<b>5 Field Operations .....</b>	215
<b>5.1 General Information .....</b>	217
5.1.1 Notes .....	217
5.1.2 Before operating the machine in the field .....	217
<b>5.2 Starting and Stopping the Combine .....</b>	219
5.2.1 Procedure to follow .....	219
<b>5.3 Cutting table .....</b>	221
5.3.1 Attaching and removing the table .....	221
5.3.2 Table lateral floatation .....	225
<b>5.4 Main Crop Elevator .....</b>	227
5.4.1 Adjustments .....	227
5.4.1.1 Access to the main components .....	229
5.4.1.2 P.F.R. — Finger feed roller .....	230
5.4.2 Reverse drive system .....	231
5.4.3 Stone trap .....	232
5.4.3.1 Stone trap assembly removal/refitting .....	233
<b>5.5 Cylinder Housing .....</b>	235
5.5.1 Threshing drum .....	235
5.5.1.1 Unblocking the cylinder .....	236
5.5.2 Concave .....	237
5.5.2.1 Concave filler plates (wheat concave) .....	238
5.5.2.2 Parallelism between the cylinder and concave .....	239
5.5.3 Sectional concave .....	240
5.5.3.1 Concave filler plates .....	241
5.5.3.2 Parallelism between the cylinder and concave .....	242
5.5.4 Universal wheat/maize concave .....	243
5.5.4.1 Basic settings - universal concave .....	244
5.5.5 Spike-toothed Cylinder/Concave (for rice) .....	245
5.5.6 Rear beater .....	246
<b>5.6 Multi-Crop Separator (MCS) .....</b>	248
5.6.1 Operational description .....	248
5.6.2 Checking the concave position .....	249
5.6.3 Disengaging the Multi Crop Separator concaves .....	250
5.6.4 Multi Crop Separator speed .....	251
<b>5.7 Straw walkers .....</b>	253
5.7.1 Description and adjustments .....	253
<b>5.8 Main Grain Pan .....</b>	255
5.8.1 Description .....	255
5.8.2 Checking the main grain pan .....	256
5.8.3 Cleaning the main grain pan .....	257
<b>5.9 Fanning Mill .....</b>	258
5.9.1 Description and adjustments .....	258
5.9.1.1 Fanning mill for threshing light seed crops .....	260
<b>5.10 Top sieve .....</b>	261
5.10.1 Adjustment .....	261
<b>5.11 Bottom sieve .....</b>	265
5.11.1 Adjustment .....	265
<b>5.12 Tailings .....</b>	267
5.12.1 Description and adjustments .....	267
<b>5.13 Grain tank .....</b>	269
5.13.1 Description .....	269
5.13.1.1 Grain tank unloading auger .....	269
5.13.1.2 Sensors to check tank filling .....	270
5.13.1.3 Grain tank control window .....	271

5.13.1.4	Doors for Grain Tank Maintenance and Cleaning . . . . .	272
5.13.1.5	Vertical auger tank drain door . . . . .	273
5.13.1.6	Tank bottom door . . . . .	274
5.13.1.7	Grain Tank Cover . . . . .	275
5.13.2	Basic Settings . . . . .	278
<b>6</b>	<b>Lubrication and Maintenance . . . . .</b>	<b>281</b>
<b>6.1</b>	<b>General Information . . . . .</b>	<b>283</b>
6.1.1	Lubrication and Maintenance . . . . .	283
<b>6.2</b>	<b>Preliminary Service Inspection . . . . .</b>	<b>285</b>
6.2.1	After the first 50 working hours . . . . .	285
<b>6.3</b>	<b>Scheduled Service Inspection . . . . .</b>	<b>286</b>
6.3.1	Operation and adjustment . . . . .	286
6.3.2	When and where to carry it out . . . . .	287
6.3.3	Interval - 10 hours . . . . .	292
6.3.3.1	Hydraulic and hydrostatic systems tank (1) . . . . .	292
6.3.3.2	Engine oil (2) . . . . .	293
6.3.3.3	Threshing drum variator (3) . . . . .	294
6.3.3.4	Coolant expansion tank (4) . . . . .	294
6.3.3.5	Prefilter/water separator (5) . . . . .	295
6.3.3.6	Straw chopper rotor (6) . . . . .	295
6.3.4	Interval - 50 hours . . . . .	296
6.3.4.1	Rear axle support (11) . . . . .	296
6.3.4.2	Table drive-belt tensioner (12) . . . . .	296
6.3.4.3	Service brakes (13) . . . . .	297
6.3.4.4	Cab air filters (14) . . . . .	297
6.3.4.5	Fanning mill variator (15) . . . . .	299
6.3.4.6	Coupling bushes of final drive shafts (16) . . . . .	299
6.3.4.7	Rear-axle king pins (17) . . . . .	300
6.3.4.8	Evaporator (18) . . . . .	300
6.3.4.9	Condenser (19) . . . . .	301
6.3.4.10	Engine radiator and hydraulic oil radiator (20) . . . . .	302
6.3.4.11	Adjusting the rotary screen brushes and aspirator brushes . . . . .	303
6.3.4.12	Grain-tank filling auger gearbox (21) . . . . .	304
6.3.4.13	Track frames (22) . . . . .	305
6.3.4.14	Rear straw walker shaft supports (23) . . . . .	306
6.3.5	Interval - 100 hours . . . . .	307
6.3.5.1	Unloading auger bottom gearbox (31) . . . . .	307
6.3.5.2	Crop-unloading auger drive belt tensioner (32) . . . . .	308
6.3.5.3	Main crop-elevator belt tensioner (33) . . . . .	308
6.3.5.4	Chaff spreader drive (if installed) (34) . . . . .	309
6.3.5.5	Crop unloading-auger control cylinder (35) . . . . .	309
6.3.5.6	Main crop elevator adapter (36) . . . . .	310
6.3.5.7	MCS belt tensioner (37) . . . . .	310
6.3.5.8	Threshing-mechanism belt tensioner (38) . . . . .	311
6.3.5.9	Hydrostatic-pump belt tensioner (39) . . . . .	311
6.3.5.10	Cab access ladder (40) . . . . .	312
6.3.5.11	Tires (41) . . . . .	312
6.3.5.12	Main crop elevator supports (42) . . . . .	313
6.3.5.13	Rear wheel 4WD tie rod (if fitted) (43) . . . . .	314
6.3.5.14	Engine (44) . . . . .	314
6.3.5.15	Engine air filter (45) . . . . .	316
6.3.5.16	Front levelling (46) . . . . .	317
6.3.5.17	Rear leveling control cylinders (FENDT 5275 C PLI – 6335 C PLI models only) (47) . . . . .	317
6.3.5.18	Cutting table levelling cylinders (48) . . . . .	318
6.3.6	Interval - 250 hours . . . . .	318

6.3.6.1 Gearbox (61) . . . . .	318
6.3.6.2 Reduction gearbox (62) . . . . .	319
6.3.6.3 Main clutch (63) . . . . .	319
6.3.6.4 Unloading auger support (64) . . . . .	320
6.3.6.5 Straw chopper driven-belt tensioner (65) . . . . .	320
6.3.6.6 Straw chopper drive-belt tensioner (66) . . . . .	321
6.3.6.7 Straw chopper idler shaft (67) . . . . .	321
6.3.6.8 Tank unloading-auger clutch (68) . . . . .	322
6.3.6.9 Aspirator drive-belt tensioner (69) . . . . .	322
6.3.6.10 Rotary-screen belt tensioner (70) . . . . .	323
6.3.6.11 Windshield wash fluid reservoir (71) . . . . .	323
6.3.6.12 Engine oil and filters (72) . . . . .	323
6.3.6.13 Tailing-auger left support (73) . . . . .	327
6.3.6.14 Unloading-auger top angle gear (74) . . . . .	327
6.3.7 Interval - 500 hours . . . . .	328
6.3.7.1 Hydraulic systems oil (81) . . . . .	328
6.3.7.2 Hydraulic and hydrostatic systems return filter (82) . . . . .	329
6.3.7.3 Hydraulic-oil intake filter (83) . . . . .	330
6.3.7.4 Hydrostatic transmission filter (84) . . . . .	330
6.3.7.5 Engine diesel-fuel filters (85) . . . . .	331
6.3.7.6 Dehydrator filter (86) . . . . .	332
6.3.7.7 Catalytic fluid filter (87) . . . . .	333
6.3.7.8 Reduction gears (88) . . . . .	334
6.3.7.9 Gearbox (89) . . . . .	334
6.3.7.10 Air compressor (if installed) (90) . . . . .	335
6.3.7.11 Battery (91) . . . . .	335
<b>6.4 Periodical maintenance operations</b> . . . . .	<b>336</b>
6.4.1 Description . . . . .	336
6.4.1.1 Engine valves (1) . . . . .	336
6.4.1.2 Coolant (2) . . . . .	338
6.4.1.3 Service brake circuit fluid (3) . . . . .	339
6.4.1.4 Diesel fuel tank (4) . . . . .	339
6.4.1.5 Turbocharger (5) . . . . .	340
6.4.1.6 Hydraulic hoses (6) . . . . .	340
6.4.1.7 Catalytic fluid tank (DEF) (7) . . . . .	341
<b>6.5 Lubrication</b> . . . . .	<b>342</b>
<b>7 Adjustments</b> . . . . .	<b>345</b>
<b>7.1 Adjustments</b> . . . . .	<b>347</b>
7.1.1 Important information . . . . .	347
<b>7.2 Belt and chain adjustment</b> . . . . .	<b>348</b>
7.2.1 Belts and chains (left-hand side) . . . . .	348
7.2.1.1 Feeder drive belt (1) . . . . .	349
7.2.1.2 Threshing unit drive belt (2) . . . . .	350
7.2.1.3 Multi-Crop Separator drive belt (3) . . . . .	351
7.2.1.4 Unloading-auger drive belt (4) . . . . .	351
7.2.1.5 Belt drive for hydrostatic pump (5) . . . . .	352
7.2.1.6 Belt drive for chaff spreader (if fitted) (6) . . . . .	353
7.2.1.7 Belt drive for reversing (7) . . . . .	353
7.2.1.8 Main transmission belt (8) . . . . .	354
7.2.1.9 Belt drives for good grain and tailings augers (9) . . . . .	355
7.2.1.10 Belt drive for straw walkers (10) . . . . .	355
7.2.1.11 Belt drive for cutting table (11) . . . . .	356
7.2.1.12 Chain drive for unloading auger (12) . . . . .	356
7.2.1.13 Belt drive for straw chopper (if fitted) (13) . . . . .	357
7.2.1.14 Belt drive for straw chopper (if fitted) (14) . . . . .	358
7.2.1.15 Air-compressor drive belt (if installed) (15) . . . . .	359

7.2.1.16 Leveling pump drive belt (FENDT 5275 C PL - FENDT 6335 C PL - FENDT 5275 C PLI - FENDT 6335 C PLI models only) (16) . . . . .	360
<b>7.2.2 Belts and chains (right-hand side) . . . . .</b>	<b>361</b>
7.2.2.1 Reel-pump drive belt (20) . . . . .	361
7.2.2.2 Dust aspirator drive belt (21) . . . . .	362
7.2.2.3 Rotary-screen drive belt (22) . . . . .	362
7.2.2.4 Belt drive for engine coolant pump (23) . . . . .	363
7.2.2.5 Drive belt for engine fan and alternator (24) . . . . .	363
7.2.2.6 Belt drive for cylinder variator (25) . . . . .	364
7.2.2.7 Belt drive for fanning mill variator (26) . . . . .	365
7.2.2.8 Top chain drive for tailings auger (27) . . . . .	366
7.2.2.9 Crop elevator chain (28) . . . . .	366
7.2.2.10 Chain drive for tailings elevator (29) . . . . .	367
7.2.2.11 Front crop elevator chain (30) . . . . .	367
7.2.2.12 Finger-feed-roller drive chain (31) . . . . .	368
7.2.2.13 Tank filling-auger drive chain (32) . . . . .	368
7.2.2.14 Belt drive for cab air conditioning compressor (33) . . . . .	369
<b>7.3 Shuttle . . . . .</b>	<b>370</b>
7.3.1 Adjustment of control tie rod . . . . .	370
7.3.2 Adjustment of the distance between disks . . . . .	371
<b>7.4 Slip clutches . . . . .</b>	<b>372</b>
7.4.1 Description . . . . .	372
7.4.1.1 Clutch for main crop elevator upper shaft (1) . . . . .	372
7.4.1.2 Clutch on finger feed roller (2) . . . . .	372
7.4.1.3 Clutch for shaker shoe counter drive (3) . . . . .	373
7.4.1.4 Shear bolt for unloading-auger counter drive (4) . . . . .	373
<b>7.5 Grain tank unloading auger . . . . .</b>	<b>374</b>
7.5.1 Adjustment of the support . . . . .	374
<b>7.6 Tires . . . . .</b>	<b>375</b>
7.6.1 Tire pressure . . . . .	375
7.6.2 Replacement of Front Wheels . . . . .	375
7.6.3 Replacement of Rear Wheels . . . . .	378
7.6.4 Front and rear wheels assembly . . . . .	380
<b>7.7 Brakes . . . . .</b>	<b>382</b>
7.7.1 Service brakes . . . . .	382
7.7.2 Park brake . . . . .	383
7.7.2.1 Disengaging the brake . . . . .	383
<b>7.8 Rear axle . . . . .</b>	<b>385</b>
7.8.1 Toe-in setting . . . . .	385
7.8.2 Steering ram ball joints . . . . .	385
7.8.3 Width setting . . . . .	386
7.8.4 Telescopic arm position . . . . .	387
7.8.5 Rear axle support . . . . .	389
<b>7.9 Battery . . . . .</b>	<b>390</b>
7.9.1 Battery Replacement . . . . .	390
7.9.2 Suggestions regarding the battery . . . . .	391
<b>8 Systems . . . . .</b>	<b>393</b>
<b>8.1 Safety Precautions . . . . .</b>	<b>395</b>
8.1.1 Notes . . . . .	395
<b>8.2 Engine supply system . . . . .</b>	<b>396</b>
8.2.1 Permitted fuels . . . . .	396
8.2.2 Fuel Circuit . . . . .	397
8.2.3 Bleeding the Fuel Supply Circuit . . . . .	398
8.2.4 Catalytic fluid tank (DEF) . . . . .	399
8.2.5 Injection system operation . . . . .	400

<b>8.3 Engine air intake and exhaust system</b>	402
8.3.1 Operation	402
<b>8.4 Engine cooling system</b>	405
8.4.1 Coolant	405
8.4.2 Engine cooling system operation	406
<b>8.5 Engine lubrication system</b>	407
8.5.1 Operation	407
8.5.2 Oil vapor recovery system	408
<b>8.6 SCR system</b>	409
8.6.1 Operation	409
<b>8.7 Hydraulics system</b>	412
8.7.1 Pumps and fuel tank	412
8.7.2 Table positioning hydraulic circuits	413
8.7.2.1 Cutting table oleopneumatic shock absorbers	414
8.7.2.2 Flow rate proportional valve	415
8.7.2.3 Hose burst valves	415
8.7.2.4 Table horizontal positioning circuit	416
8.7.3 Reel rotation control hydraulic circuit	417
8.7.4 Hydraulic steering system	418
8.7.5 Auxiliary hydraulics circuit	419
8.7.6 Leveling hydraulic circuit	420
8.7.6.1 Rear automatic leveling (FENDT 5275 C PLI and FENDT 6335 C PLI models only)	422
8.7.6.2 Manual leveling	423
<b>8.8 Hydrostatic transmission system</b>	424
8.8.1 Front-wheel drive	424
8.8.2 Rear-wheel drive	425
<b>8.9 Electrical system</b>	426
8.9.1 Main components	426
8.9.2 Computerized system	427
8.9.3 Fuses	428
8.9.4 Additional fuses	433
8.9.5 Relays	435
8.9.5.1 Additional relays	440
8.9.6 Control units	441
8.9.6.1 EXT control unit	441
8.9.6.2 ENEDC control unit	441
8.9.6.3 FTD1 control unit	442
8.9.6.4 FTD2 control unit	442
8.9.6.5 I/O module (leveling)	443
8.9.6.6 Engine control unit	443
8.9.6.7 Engine sensors and control unit	444
8.9.7 Electric motors	445
8.9.7.1 Engine ignition control motor	445
8.9.7.2 Concave position control motors	445
8.9.7.3 MCS concave position control motor	446
8.9.7.4 Grain tank cover position control motor	446
8.9.7.5 Straw deflector control motor (if fitted)	447
8.9.7.6 Fanning mill variator control motor	447
8.9.7.7 Top sieve control motor	448
8.9.7.8 Lower sieve motor	448
8.9.8 Sensors	449
8.9.8.1 Forward speed sensor	449
8.9.8.2 Cylinder speed sensor	449
8.9.8.3 Fanning mill speed sensor	450
8.9.8.4 Reel speed sensor	450
8.9.8.5 Straw chopper speed sensor	451

8.9.8.6 Performance control sensors . . . . .	451
8.9.8.7 Exhaust gas sensors . . . . .	452
8.9.8.8 Returns control sensors . . . . .	452
8.9.9 Electric connectors . . . . .	453
8.9.10 Connections for diagnostics . . . . .	455
8.9.11 Flashing lights . . . . .	456
<b>9 Troubleshooting . . . . .</b>	<b>457</b>
<b>9.1 Description . . . . .</b>	<b>459</b>
9.1.1 Feeding . . . . .	459
9.1.2 Threshing . . . . .	459
9.1.3 Separation and cleaning . . . . .	461
9.1.4 Hydrostatic Transmission . . . . .	464
9.1.5 Engine . . . . .	465
9.1.5.1 EEM4 engine troubleshooting (self-diagnosis) . . . . .	467
9.1.5.2 Fault codes . . . . .	467
9.1.6 Hydraulics system . . . . .	479
9.1.7 Electrical system . . . . .	481
9.1.8 Air conditioning circuit . . . . .	481
9.1.9 Straw chopper . . . . .	482
<b>10 Off-Season Storage . . . . .</b>	<b>485</b>
<b>10.1 Procedure to follow . . . . .</b>	<b>487</b>
10.1.1 Operations to be carried out after the harvest . . . . .	487
10.1.2 Ordering spare parts . . . . .	488
10.1.3 Operations to be carried out before the new season . . . . .	488
<b>11 Optional equipment . . . . .</b>	<b>491</b>
<b>11.1 Information . . . . .</b>	<b>493</b>
11.1.1 General considerations . . . . .	493
<b>11.2 Optional equipment . . . . .</b>	<b>494</b>
11.2.1 Four-wheel drive . . . . .	494
11.2.2 Windbreak . . . . .	494
11.2.3 Additional lights . . . . .	495
11.2.4 Additional lights for flip-up maize headers . . . . .	496
11.2.5 Additional fire extinguisher . . . . .	496
11.2.6 Diesel fuel prefilter . . . . .	497
11.2.7 Air compressor for maintenance . . . . .	498
11.2.8 Weight and moisture control monitor . . . . .	499
11.2.9 Multimedia navigation system . . . . .	499
11.2.10 Trailer hitch . . . . .	500
11.2.11 Vertical Knives . . . . .	500
11.2.12 Cylinder cover . . . . .	501
11.2.13 Tailings cover plate . . . . .	501
11.2.14 Top sieve . . . . .	502
11.2.15 Bottom sieve . . . . .	503
11.2.16 Auto-Guide . . . . .	504
11.2.17 AGCOMMAND . . . . .	504
<b>11.3 Equipment for threshing . . . . .</b>	<b>505</b>
11.3.1 Equipment for maize . . . . .	505
11.3.2 Equipment for corn-cob . . . . .	506
11.3.3 Equipment for rice . . . . .	507
11.3.4 Equipment for light seed crops . . . . .	507
11.3.5 Equipment for soya and peas . . . . .	508
<b>11.4 Ballast weights . . . . .</b>	<b>509</b>
11.4.1 Description . . . . .	509
11.4.2 Ballast weights on rear axle . . . . .	509

11.4.3 Ballast weights on the straw walker hood for machines without straw chopper . . . . .	510
11.4.4 Ballast weights on the rear wheels with a liquid mix (for tubeless tires) . . . . .	511
11.4.5 Filling tires with anti-freeze solutions . . . . .	512
<b>11.5 Straw chopper . . . . .</b>	<b>513</b>
11.5.1 Electrically operated straw chopper straw deflectors . . . . .	513
11.5.2 Transport position . . . . .	513
11.5.3 Working position . . . . .	514
11.5.4 Operating the straw chopper . . . . .	516
11.5.5 Disengaging the straw chopper . . . . .	517
11.5.6 Access to the straw chopper rotor . . . . .	517
11.5.7 Straw chopper rotor knives . . . . .	518
11.5.8 Counter-knives . . . . .	519
11.5.9 Chopping quality . . . . .	519
11.5.10 Use of straw chopper in maize . . . . .	520
<b>11.6 Chaff Spreader . . . . .</b>	<b>522</b>
11.6.1 Working and maintenance positions . . . . .	522
11.6.2 Chaff spreader speed . . . . .	524
11.6.3 Disengaging the chaff spreader . . . . .	524
11.6.4 Chaff spreader belt tensioning . . . . .	524
<b>11.7 Tracks . . . . .</b>	<b>525</b>
11.7.1 Use and maintenance . . . . .	525
11.7.2 Track chain tension . . . . .	526
<b>12 Technical Specifications . . . . .</b>	<b>527</b>
<b>12.1 Wheels and tires . . . . .</b>	<b>529</b>
12.1.1 information . . . . .	529
12.1.2 Wheel tightening torque . . . . .	529
12.1.3 Tire capacity . . . . .	529
12.1.4 Front tire equipment . . . . .	530
12.1.5 Rear tire equipment . . . . .	534
12.1.6 Ballast weights . . . . .	535
<b>12.2 Dimensions . . . . .</b>	<b>536</b>
12.2.1 Combine dimensions . . . . .	536
12.2.2 Clearance between unloading auger and table . . . . .	544
<b>12.3 Technical specifications . . . . .</b>	<b>545</b>
12.3.1 Feeding unit . . . . .	545
12.3.2 Threshing sys . . . . .	545
12.3.3 Cleaning unit . . . . .	551
12.3.4 Grain tank . . . . .	552
12.3.5 Hydraulic system . . . . .	553
12.3.6 Hydrostatic system . . . . .	553
12.3.7 Engine . . . . .	554
12.3.8 Electrical components . . . . .	555
12.3.9 Transmission . . . . .	555
12.3.10 Rear axle . . . . .	557
12.3.11 Weight . . . . .	557
<b>13 Index . . . . .</b>	<b>561</b>

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**