

# Operator's Manual

**FENDT**

## Combine Harvester FENDT 5225 E

*FENDT 5225 E - S/N => 551620077*  
*ZN205516J03020093*



### Breganze

AGCO S.p.A. - Via F. Laverda, 15/17 - 36042  
BREGANZE (VI) – Italy.

FENDT is a worldwide brand of AGCO

© AGCO 2016

Original Operator's Manual

November 2016

FENDT 5225 E\_EN\_LA327432011

EAME

English

# Combine Harvester

<b>1 General Information</b>	13
<b>1.1 Information</b>	15
1.1.1 Introduction	15
1.1.2 Company policy	15
1.1.3 Optional equipment	15
1.1.4 Spare parts and accessories	16
1.1.5 Warranty	16
1.1.6 Lubricants	16
<b>1.2 Use</b>	18
1.2.1 Use of the combine	18
<b>1.3 Identification</b>	19
1.3.1 Combine identification	19
1.3.2 Engine Identification	20
1.3.3 Cutting table identification	21
1.3.4 Cab identification	21
1.3.5 Hydrostatic pump identification	22
1.3.6 Hydrostatic motor identification	22
1.3.7 Straw chopper identification (if fitted)	23
1.3.8 Chaff spreader identification (if fitted)	23
1.3.9 Trailer hitch identification (if fitted)	24
<b>1.4 Identification form</b>	25
1.4.1 Machine data	25
<b>1.5 Conformity</b>	26
1.5.1 EC Declaration of Conformity	26
<b>1.6 Information</b>	27
1.6.1 Ecology	27
1.6.2 Hydraulic systems: hoses	27
1.6.3 Scrapping and disposal	28
<b>1.7 Weight</b>	29
1.7.1 Weight distribution	29
<b>2 Safety</b>	31
<b>2.1 Warning symbols and safety instructions</b>	33
2.1.1 Warnings	33
<b>2.2 Information for road transport</b>	34
2.2.1 Road transport	34
<b>2.3 Information for operations</b>	37
2.3.1 Field Operations	37
<b>2.4 Information for maintenance</b>	41
2.4.1 Maintenance work	41
<b>2.5 Information on the engine</b>	45
2.5.1 Engine	45
<b>2.6 Safety and function decals</b>	49
2.6.1 Location of decals	49
2.6.2 Description of decals	53
<b>2.7 Work on the battery</b>	64
2.7.1 Battery	64
<b>2.8 Safety devices</b>	65
2.8.1 Emergency exit	65

2.8.2 Operator presence device . . . . .	66
2.8.2.1 Returning the machine to normal operation . . . . .	67
2.8.3 Safety belts . . . . .	68
2.8.4 Cutting table safety stops . . . . .	69
2.8.5 Safety guard for main crop elevator . . . . .	70
2.8.6 Sprags for wheels . . . . .	70
2.8.7 Audible alarm for reversing . . . . .	71
2.8.8 Reflectors for road transport . . . . .	72
2.8.9 Safety Guards . . . . .	73
2.8.10 Fall protection rails . . . . .	73
2.8.11 Safety devices for operations to be carried out in the upper part of the machine . . . . .	74
2.8.12 Straw Chopper (if fitted) . . . . .	75
2.8.13 Fire extinguisher . . . . .	75
<b>2.9 Trailer hitch . . . . .</b>	<b>76</b>
2.9.1 Automatic towing hooks . . . . .	76
2.9.2 CUNA and CE trailer hitches . . . . .	77
2.9.2.1 Procedure for attaching and removing . . . . .	78
2.9.2.2 Drawbar coupling . . . . .	79
2.9.3 ROCKINGER trailer hitch . . . . .	79
2.9.3.1 Removal . . . . .	79
2.9.3.2 Drawbar coupling . . . . .	80
2.9.4 Fixed trailer hitch (non-automatic - CUNA type) . . . . .	81
<b>2.10 Machine lifting . . . . .</b>	<b>82</b>
2.10.1 Attachment points . . . . .	82
<b>2.11 Towing . . . . .</b>	<b>83</b>
2.11.1 Towing the combine . . . . .	83
<b>2.12 Further information . . . . .</b>	<b>84</b>
2.12.1 Noise level in the cab . . . . .	84
2.12.2 Vibrations in the cab . . . . .	84
2.12.3 Statutory regulations . . . . .	84
2.12.4 Electromagnetic emissions . . . . .	85
<b>2.13 Notes . . . . .</b>	<b>86</b>
2.13.1 Notes for road transport . . . . .	86
<b>3 Operation . . . . .</b>	<b>89</b>
<b>3.1 Combine operation . . . . .</b>	<b>91</b>
3.1.1 Crop processing . . . . .	91
<b>3.2 Stage 1 . . . . .</b>	<b>92</b>
3.2.1 Feeding . . . . .	92
<b>3.3 Stage 2 . . . . .</b>	<b>93</b>
3.3.1 Threshing . . . . .	93
<b>3.4 Stage 3 . . . . .</b>	<b>94</b>
3.4.1 Separation . . . . .	94
<b>3.5 Stage 4 . . . . .</b>	<b>95</b>
3.5.1 Cleaning . . . . .	95
<b>3.6 Stage 5 . . . . .</b>	<b>96</b>
3.6.1 Grain storage and unloading . . . . .	96
<b>4 Controls and Instruments . . . . .</b>	<b>97</b>
<b>4.1 Steering column . . . . .</b>	<b>99</b>
4.1.1 Components and adjustments . . . . .	99
<b>4.2 Multifunction lever . . . . .</b>	<b>100</b>
4.2.1 Main components . . . . .	100
<b>4.3 Instrument panel . . . . .</b>	<b>102</b>
4.3.1 Front control panel . . . . .	102

4.3.2 Rear control panel .....	103
<b>4.4 Controls at the operator seat .....</b>	<b>110</b>
4.4.1 Description .....	110
<b>4.5 Agritronicplus .....</b>	<b>111</b>
4.5.1 Components .....	111
4.5.2 Multiple light indicators .....	112
4.5.3 On-board Computer .....	114
4.5.3.1 Using the computer .....	116
4.5.3.2 Scheduled service inspection hours .....	116
4.5.3.3 Resetting partial or total hectare counter .....	117
4.5.3.4 Calibrating constants used for calculating covered area .....	117
4.5.3.5 C6: Working width .....	118
4.5.3.6 C2: Forward speed .....	118
4.5.3.7 Table of constants .....	119
4.5.3.8 Partial hectare counter .....	120
4.5.3.9 Hectare counter operation .....	120
4.5.3.10 Activation of the audible alarm .....	121
4.5.4 Performance monitor .....	122
4.5.4.1 Using the monitor .....	123
4.5.4.2 Selecting the measurement range (straw walker, sieves or total) .....	123
4.5.4.3 Calibrating the bar cursor scale .....	124
4.5.4.4 Sensitivity adjustment .....	124
4.5.4.5 Shifting to forward speed monitoring .....	125
4.5.4.6 Summary of keyboard functions .....	125
4.5.5 Terra Control System .....	126
4.5.5.1 Using Terra Control .....	129
4.5.5.2 Terra Control sensitivity .....	131
4.5.5.3 Calibrating the potentiometer for cutting table floatation .....	132
4.5.5.4 Calibrating the potentiometer for main crop elevator height control .....	135
<b>4.6 Cab .....</b>	<b>138</b>
4.6.1 Cab controls .....	138
4.6.2 Operator seat .....	142
4.6.3 Passenger seat .....	143
4.6.4 Footrest .....	143
4.6.5 Preparation for radio installation .....	144
4.6.6 Rear Cab Window .....	144
4.6.7 Reading light .....	145
4.6.8 Air conditioning in the cab .....	146
4.6.9 Heating .....	148
<b>4.7 Access to combine components .....</b>	<b>149</b>
4.7.1 Access to the operator platform .....	149
4.7.2 Accessing and cleaning the front windscreens of the cab .....	150
4.7.3 Access to the engine compartment .....	151
4.7.4 Access to the grain tank .....	152
4.7.5 Access to the inside of the grain tank .....	153
<b>4.8 Engine .....</b>	<b>154</b>
4.8.1 Starting the engine .....	154
4.8.2 Useful advice .....	155
4.8.3 Stopping the engine .....	155
<b>4.9 Road transport .....</b>	<b>157</b>
4.9.1 Operations to be carried out before transportation .....	157
4.9.2 Position light and sidelight adjustment .....	158
<b>4.10 Using the combine .....</b>	<b>159</b>
4.10.1 Operations to be carried out before use .....	159
<b>5 Field Operations .....</b>	<b>161</b>

<b>5.1 General Information</b>	163
5.1.1 Notes	163
5.1.2 Before operating the machine in the field	163
<b>5.2 Starting and Stopping the Combine</b>	165
5.2.1 Procedure to follow	165
<b>5.3 Cutting table</b>	167
5.3.1 Attaching and removing the table	167
5.3.2 Table lateral floatation (optional)	171
5.3.3 GSAX system (ground self-alignment) (optional)	173
<b>5.4 Main Crop Elevator</b>	174
5.4.1 Adjustments	174
5.4.1.1 Access to the main components	176
5.4.2 Reverse drive system	177
<b>5.5 Cylinder Housing</b>	178
5.5.1 Components	178
5.5.2 Threshing drum	179
5.5.3 Wheat concave	181
5.5.3.1 Concave filler plates	182
5.5.3.2 Parallelism between the cylinder and concave	183
5.5.3.3 Unblocking the cylinder	184
5.5.4 Sectional concave	185
5.5.4.1 Concave filler plates	186
5.5.4.2 Parallelism between the cylinder and concave	187
5.5.5 Universal wheat/maize concave	188
5.5.5.1 Basic concave settings	189
5.5.6 Spike-toothed Cylinder/Concave (for rice)	189
5.5.7 Rear beater	191
<b>5.6 Straw walkers</b>	192
5.6.1 Description and adjustments	192
<b>5.7 Main Grain Pan</b>	193
5.7.1 Description	193
5.7.2 Checking the main grain pan	194
5.7.3 Cleaning the main grain pan	195
5.7.4 Stone trap assembly removal/refitting	196
<b>5.8 Fanning Mill</b>	198
5.8.1 Description and adjustments	198
5.8.1.1 Fanning mill for threshing light seed crops	200
<b>5.9 Top sieve</b>	201
5.9.1 Adjustment	201
<b>5.10 Bottom sieve</b>	205
5.10.1 Adjustment	205
<b>5.11 Tailings</b>	207
5.11.1 Description and adjustments	207
<b>5.12 Grain tank</b>	209
5.12.1 Description	209
5.12.1.1 Grain tank unloading auger	210
5.12.1.2 Sensors to check tank filling	211
5.12.1.3 Grain tank control window	212
5.12.1.4 Doors for Grain Tank Maintenance and Cleaning	212
5.12.1.5 Vertical auger tank drain door	214
5.12.1.6 Tank bottom door	214
5.12.1.7 Grain tank cover	216
5.12.1.8 Basic Settings	217
<b>6 Lubrication and Maintenance</b>	219

<b>6.1 General Information</b>	221
6.1.1 Lubrication and Maintenance	221
<b>6.2 Preliminary Service Inspection</b>	223
6.2.1 After the first 50 working hours	223
<b>6.3 Scheduled Service Inspection</b>	224
6.3.1 Operation and adjustment	224
6.3.2 When and where to carry it out	226
6.3.3 Interval - 10 hours	228
6.3.3.1 Cylinder variator (1)	228
6.3.3.2 Engine oil (2)	229
6.3.3.3 Coolant expansion tank (3)	230
6.3.3.4 Hydraulic and hydrostatic systems tank (4)	230
6.3.3.5 Prefilter/water separator (5)	231
6.3.3.6 Straw chopper rotor (if fitted) (6)	231
6.3.4 Interval - 75 hours (Sa)	232
6.3.4.1 Service brakes (7)	232
6.3.4.2 Main crop elevator belt tensioner (9)	232
6.3.4.3 Fanning mill variator (10)	233
6.3.4.4 Belt tensioner for crop unloading auger (11)	234
6.3.4.5 Coupling bushes of final drive shafts (12)	234
6.3.4.6 Rear axle support (13)	235
6.3.4.7 Rear axle king pins (14)	235
6.3.4.8 Rear wheel 4WD tie rod (if fitted) (14)	236
6.3.4.9 Bearings for rear straw walker crank (15)	236
6.3.4.10 Bottom angle gear for unloading auger (16)	237
6.3.4.11 Top angle gear for unloading auger (17)	237
6.3.4.12 Table belt tensioner (18)	238
6.3.4.13 Angle gear at tank filling elevator (19)	238
6.3.4.14 Track frames (20)	239
6.3.4.15 Cab air filters (21)	239
6.3.4.16 Evaporator (22)	241
6.3.4.17 Condenser (23)	241
6.3.4.18 Radiator and hydraulic oil (24)	242
6.3.4.19 Adjusting the rotary screen brushes and aspirator brushes	243
6.3.4.20 Main crop elevator adapter (with lateral floatation fitted) (25)	244
6.3.4.21 Chaff spreader drive (if fitted) (26)	245
6.3.5 Interval - 150 hours (Sb)	245
6.3.5.1 Park brake (27)	245
6.3.5.2 Gearbox (28)	246
6.3.5.3 Reduction gear housings (29)	246
6.3.5.4 Bottom angle gear for unloading auger (30)	247
6.3.5.5 Main crop elevator supports (31)	248
6.3.5.6 Reversing belt tensioner arm pin (32)	248
6.3.5.7 Main clutch (33)	249
6.3.5.8 Left bearing for tailings auger (34)	249
6.3.5.9 Windscreen wash fluid tank (35)	250
6.3.5.10 Threshing unit belt tensioner (36)	250
6.3.5.11 Hydrostatic pump belt tensioner (37)	251
6.3.5.12 Bottom ring nut for unloading auger (38)	251
6.3.5.13 Engine air filter (39)	252
6.3.5.14 Driven belt tensioner for straw chopper (40)	253
6.3.5.15 Drive belt tensioner for straw chopper (41)	253
6.3.5.16 Engine (42)	253
6.3.5.17 Cab access ladder (43)	255
6.3.5.18 Straw chopper layshaft (44)	255
6.3.5.19 Belt tensioner for return rotary screen (45)	256
6.3.5.20 Rotary screen belt tensioner (46)	256

6.3.6 Interval - 225 hours (Sa + engine) . . . . .	256
6.3.6.1 Engine oil and filters (51) . . . . .	256
6.3.7 Interval - 450 hours (Sc) . . . . .	260
6.3.7.1 Battery (58) . . . . .	260
6.3.7.2 Dehydrator filter (59) . . . . .	261
6.3.7.3 Reduction gear housings (60) . . . . .	262
6.3.7.4 Gearbox (61) . . . . .	262
6.3.7.5 Hydraulic oil intake filter (62) . . . . .	263
6.3.7.6 Filter, hydrostatic transmission (63) . . . . .	264
6.3.7.7 Hydraulic systems oil (64) . . . . .	265
6.3.7.8 Hydraulic and hydrostatic system return filter (65) . . . . .	266
6.3.7.9 Air compressor (if fitted) (66) . . . . .	267
6.3.7.10 Engine diesel oil filter (67) . . . . .	267
6.3.7.11 Catalytic fluid filter (68) . . . . .	269
<b>6.4 Periodical maintenance operations</b> . . . . .	<b>270</b>
6.4.1 Description . . . . .	270
6.4.1.1 Engine valves (1) . . . . .	271
6.4.1.2 Coolant (2) . . . . .	272
6.4.1.3 Service brake circuit fluid (3) . . . . .	273
6.4.1.4 Diesel fuel tank (4) . . . . .	273
6.4.1.5 Turbocharger (5) . . . . .	274
6.4.1.6 Hydraulic hoses (6) . . . . .	274
6.4.1.7 Catalytic fluid tank (DEF) (7) . . . . .	275
<b>6.5 Lubrication</b> . . . . .	<b>276</b>
6.5.1 Summary table . . . . .	276
<b>7 Adjustments</b> . . . . .	<b>277</b>
<b>7.1 Adjustments</b> . . . . .	<b>279</b>
7.1.1 Important information . . . . .	279
<b>7.2 Belt and chain adjustment</b> . . . . .	<b>280</b>
7.2.1 Belts and chains (left-hand side) . . . . .	280
7.2.1.1 Feeder drive belt (1) . . . . .	281
7.2.1.2 Belt drive for threshing unit (2) . . . . .	282
7.2.1.3 Belt drive for unloading auger (3) . . . . .	283
7.2.1.4 Belt drive for air compressor (if fitted) (4) . . . . .	284
7.2.1.5 Belt drive for hydrostatic pump (5) . . . . .	285
7.2.1.6 Belt drive for chaff spreader (if fitted) (6) . . . . .	286
7.2.1.7 Belt drive for reversing (7) . . . . .	287
7.2.1.8 Main transmission belt (8) . . . . .	287
7.2.1.9 Belt drives for good grain and tailings augers (9) . . . . .	288
7.2.1.10 Belt drive for straw walkers (10) . . . . .	288
7.2.1.11 Belt drive for cutting table (11) . . . . .	289
7.2.1.12 Chain drive for unloading auger (12) . . . . .	289
7.2.1.13 Belt drive for straw chopper (if fitted) (13) . . . . .	290
7.2.1.14 Belt drive for straw chopper (if fitted) (14) . . . . .	291
7.2.2 Belts and chains (right-hand side) . . . . .	292
7.2.2.1 Belt drive for rotary screen (21) . . . . .	292
7.2.2.2 Counter drive for rotary screen (22) . . . . .	293
7.2.2.3 Belt drive for engine coolant pump (23) . . . . .	293
7.2.2.4 Belt drive for alternator and cooling fan (24) . . . . .	294
7.2.2.5 Belt drive for cylinder variator (25) . . . . .	294
7.2.2.6 Belt drive for fanning mill variator (26) . . . . .	295
7.2.2.7 Top chain drive for tailings auger (27) . . . . .	296
7.2.2.8 Crop elevator chain (28) . . . . .	296
7.2.2.9 Chain drive for tailings elevator (29) . . . . .	297
7.2.2.10 Front crop elevator chain (30) . . . . .	297
7.2.2.11 Chain drive for tank filling auger (31) . . . . .	298

7.2.2.12	Belt drive for reel pump (32) . . . . .	298
7.2.2.13	Belt drive for cab air conditioning compressor (33) . . . . .	299
7.2.2.14	Belt drive for dust aspirator (34) . . . . .	300
<b>7.3 Slip clutches</b>	.....	<b>301</b>
7.3.1	Description . . . . .	301
7.3.1.1	Clutch for main crop elevator upper shaft (1) . . . . .	301
7.3.1.2	Clutch for shaker shoe counter drive (2) . . . . .	301
7.3.1.3	Shear bolt for unloading auger counter drive (3) . . . . .	302
<b>7.4 Tires</b>	.....	<b>303</b>
7.4.1	Tire pressure . . . . .	303
7.4.2	Replacement of Front Wheels . . . . .	304
7.4.3	Replacement of Rear Wheels . . . . .	305
7.4.4	Front wheel assembly . . . . .	306
7.4.5	Rear wheel assembly . . . . .	307
<b>7.5 Brakes</b>	.....	<b>308</b>
7.5.1	Service brakes . . . . .	308
7.5.2	Park brake . . . . .	309
<b>7.6 Rear axle</b>	.....	<b>310</b>
7.6.1	Toe-in setting . . . . .	310
7.6.2	Steering ram ball joints . . . . .	310
7.6.3	Width setting . . . . .	311
7.6.4	Telescopic arm position . . . . .	311
7.6.5	Rear axle support . . . . .	313
<b>7.7 Battery</b>	.....	<b>314</b>
7.7.1	Battery Replacement . . . . .	314
7.7.2	Suggestions regarding the battery . . . . .	314
7.7.3	Indicator Light for Battery Charging . . . . .	315
<b>8 Systems</b>	.....	<b>317</b>
<b>8.1 Safety Precautions</b>	.....	<b>319</b>
8.1.1	Notes . . . . .	319
<b>8.2 Engine supply system</b>	.....	<b>320</b>
8.2.1	Permitted fuels . . . . .	320
8.2.2	Fuel Circuit . . . . .	321
8.2.3	Bleeding the Fuel Supply Circuit . . . . .	322
8.2.4	Catalytic fluid tank (DEF) . . . . .	323
8.2.5	Injection system operation . . . . .	324
<b>8.3 Engine air intake and exhaust system</b>	.....	<b>325</b>
8.3.1	Operation . . . . .	325
<b>8.4 Engine cooling system</b>	.....	<b>327</b>
8.4.1	Coolant . . . . .	327
8.4.2	Engine cooling system operation . . . . .	328
<b>8.5 Engine lubrication system</b>	.....	<b>329</b>
8.5.1	Operation . . . . .	329
8.5.2	Oil vapor recovery system . . . . .	330
<b>8.6 SCR system</b>	.....	<b>331</b>
8.6.1	Operation . . . . .	331
<b>8.7 Hydraulics system</b>	.....	<b>333</b>
8.7.1	Pumps and fuel tank . . . . .	333
8.7.2	Table positioning hydraulic circuits . . . . .	335
8.7.2.1	Cutting table oleopneumatic shock absorbers . . . . .	336
8.7.2.2	Flow limiting solenoid valve . . . . .	336
8.7.2.3	Hose burst valve . . . . .	337
8.7.2.4	Table horizontal positioning circuit (optional) . . . . .	337
8.7.3	Reel rotation control hydraulic circuit . . . . .	338
8.7.4	Hydraulic steering system . . . . .	339

8.7.5 Auxiliary hydraulics circuit . . . . .	340
<b>8.8 Hydrostatic transmission system . . . . .</b>	<b>341</b>
8.8.1 Front-wheel drive . . . . .	341
8.8.2 Rear-wheel drive (optional) . . . . .	342
<b>8.9 Electrical system . . . . .</b>	<b>343</b>
8.9.1 Main components . . . . .	343
8.9.2 Fuses . . . . .	344
8.9.3 Additional fuses . . . . .	347
8.9.4 Cab fuses . . . . .	350
8.9.5 Relays . . . . .	351
8.9.5.1 Additional relays . . . . .	352
8.9.5.2 Various relays . . . . .	353
8.9.6 Control units . . . . .	355
8.9.6.1 Engine sensors and control unit . . . . .	356
8.9.7 Connections for additional equipment . . . . .	357
8.9.7.1 Electric connectors . . . . .	357
8.9.8 Headlight adjustment . . . . .	359
<b>9 Troubleshooting . . . . .</b>	<b>361</b>
<b>  9.1 Description . . . . .</b>	<b>363</b>
9.1.1 Feeding . . . . .	363
9.1.2 Threshing . . . . .	363
9.1.3 Separation and cleaning . . . . .	365
9.1.4 Hydrostatic Transmission . . . . .	368
9.1.5 Engine . . . . .	369
9.1.6 Hydraulics system . . . . .	371
9.1.7 Electrical system . . . . .	372
9.1.8 Air conditioning circuit . . . . .	373
9.1.9 Straw chopper . . . . .	373
<b>10 Off-Season Storage . . . . .</b>	<b>377</b>
<b>  10.1 Procedure to follow . . . . .</b>	<b>379</b>
10.1.1 Operations to be carried out after the harvest . . . . .	379
10.1.2 Ordering spare parts . . . . .	380
10.1.3 Operations to be carried out before the new season . . . . .	380
<b>11 Optional equipment . . . . .</b>	<b>383</b>
<b>  11.1 Information . . . . .</b>	<b>385</b>
11.1.1 General considerations . . . . .	385
<b>  11.2 Optional equipment . . . . .</b>	<b>386</b>
11.2.1 Auxiliary table lifting ram . . . . .	386
11.2.2 Four-wheel drive . . . . .	387
11.2.3 Camera . . . . .	387
11.2.4 Windbreak . . . . .	388
11.2.5 Additional lights and mirrors . . . . .	388
11.2.6 Electrically operated straw chopper straw deflectors . . . . .	389
11.2.7 Additional fire extinguisher . . . . .	389
11.2.8 Diesel fuel prefilter . . . . .	390
11.2.9 Air compressor . . . . .	390
11.2.10 Additional Portable Lamp . . . . .	391
11.2.11 Weight and moisture control monitor . . . . .	391
11.2.12 Trailer hitch . . . . .	392
11.2.13 Refrigerator . . . . .	392
11.2.14 Lateral floatation . . . . .	393
11.2.15 Vertical Knives . . . . .	393
11.2.16 Electrically-operated sieves and returns sensors . . . . .	394
11.2.17 Cylinder cover . . . . .	395

11.2.18 Tailings cover plate . . . . .	395
11.2.19 Top sieve . . . . .	396
11.2.20 Bottom sieve . . . . .	397
<b>11.3 Equipment for threshing . . . . .</b>	<b>398</b>
11.3.1 Equipment for maize . . . . .	398
11.3.2 Equipment for corn-cob . . . . .	399
11.3.3 Equipment for rice . . . . .	400
11.3.4 Equipment for light seed crops . . . . .	400
11.3.5 Equipment for soya and peas . . . . .	401
<b>11.4 Ballast weights . . . . .</b>	<b>402</b>
11.4.1 Description . . . . .	402
11.4.2 Ballast weights on rear axle . . . . .	403
11.4.3 Ballast weights on the straw walker hood for machines without straw chopper . . . . .	404
11.4.4 Ballast weights on the rear wheels with a liquid mix (for tubeless tires) . . . . .	405
11.4.5 Filling tires with anti-freeze solutions . . . . .	406
<b>11.5 Straw chopper . . . . .</b>	<b>407</b>
11.5.1 Transport positions . . . . .	407
11.5.2 Working position . . . . .	408
11.5.3 Operating the straw chopper . . . . .	409
11.5.4 Disengaging the straw chopper . . . . .	411
11.5.5 Access to the straw chopper rotor . . . . .	411
11.5.6 Straw chopper rotor knives . . . . .	411
11.5.7 Counter-knives . . . . .	412
11.5.8 Chopping quality . . . . .	412
11.5.9 Use of straw chopper in maize . . . . .	414
<b>11.6 Chaff Spreader . . . . .</b>	<b>416</b>
11.6.1 Working and maintenance positions . . . . .	416
11.6.2 Chaff spreader speed . . . . .	418
11.6.3 Disengaging the chaff spreader . . . . .	418
11.6.4 Chaff spreader belt tensioning . . . . .	418
<b>11.7 Tracks . . . . .</b>	<b>419</b>
11.7.1 Use and maintenance . . . . .	419
11.7.2 Track chain tension . . . . .	420
<b>12 Technical Specifications . . . . .</b>	<b>421</b>
<b>12.1 Wheels and tires . . . . .</b>	<b>423</b>
12.1.1 information . . . . .	423
12.1.2 Wheel tightening torque . . . . .	423
12.1.3 Tire capacity . . . . .	423
12.1.4 Tire equipment- front axle . . . . .	424
12.1.5 Tire equipment - rear axle . . . . .	425
12.1.6 Tire equipment - Version with half-tracks on front axle . . . . .	426
12.1.7 Ballast weights . . . . .	427
<b>12.2 Dimensions . . . . .</b>	<b>428</b>
12.2.1 Combine dimensions . . . . .	428
12.2.2 Tracks with runners . . . . .	430
12.2.3 Clearance between unloading auger and table . . . . .	431
12.2.4 Clearance between unloading auger and ground . . . . .	432
<b>12.3 Technical specifications . . . . .</b>	<b>433</b>
12.3.1 Feeding unit . . . . .	433
12.3.2 Threshing sys. . . . .	433
12.3.3 Cleaning unit . . . . .	435
12.3.4 Grain tank . . . . .	436
12.3.5 Hydraulic system . . . . .	436
12.3.6 Hydrostatic system . . . . .	437
12.3.7 Engine . . . . .	437

*Table of contents*

---

12.3.8 Electrical components . . . . .	438
12.3.9 Transmission . . . . .	438
12.3.10 Rear axle . . . . .	439
12.3.11 Weight . . . . .	439
<b>13 Index . . . . .</b>	<b>441</b>

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**