

Operator's Manual

**FENDT**

# Combine harvesters

## FENDT 5225 E

FENDT 5225 E - S/N => 551620077  
ZN205516x03020093  
ZN205516\_03030001



Breganze  
AGCO S.p.A. - Via F. Laverda, 15/17 - 36042  
BREGANZE (VI) – Italy.  
FENDT is a worldwide brand of AGCO  
© AGCO 2017  
Original Operator's Manual

September 2017  
FENDT 5225 E\_EN\_LA327432012  
EME  
English

# Combine harvesters

<b>1 General Information</b>	<b>13</b>
<b>1.1 Information</b>	<b>15</b>
1.1.1 Introduction	15
1.1.2 Company policy	15
1.1.3 Optional equipment	15
1.1.4 Spare parts and accessories	16
1.1.5 Warranty	16
1.1.6 Lubricants	16
<b>1.2 Use</b>	<b>18</b>
1.2.1 Use of the combine	18
<b>1.3 Identification</b>	<b>19</b>
1.3.1 Combine identification	19
1.3.2 Engine Identification	20
1.3.3 Cutting table identification	21
1.3.4 Cab identification	21
1.3.5 Hydrostatic pump identification	22
1.3.6 Hydrostatic motor identification	22
1.3.7 Straw chopper identification (if fitted)	23
1.3.8 Chaff spreader identification (if fitted)	23
1.3.9 Trailer hitch identification (if fitted)	24
<b>1.4 Identification form</b>	<b>25</b>
1.4.1 Machine data	25
<b>1.5 Conformity</b>	<b>26</b>
1.5.1 EC Declaration of Conformity	26
<b>1.6 Information</b>	<b>27</b>
1.6.1 Ecology	27
1.6.2 Hydraulic systems: hoses	27
1.6.3 Scrapping and disposal	28
<b>1.7 Weight</b>	<b>29</b>
1.7.1 Weight distribution	29
<b>2 Safety</b>	<b>31</b>
<b>2.1 Warning symbols and safety instructions</b>	<b>33</b>
2.1.1 Warnings	33
<b>2.2 Information for road transport</b>	<b>34</b>
2.2.1 Road transport	34
<b>2.3 Information for operations</b>	<b>37</b>
2.3.1 Field Operations	37
<b>2.4 Information for maintenance</b>	<b>41</b>
2.4.1 Maintenance work	41
<b>2.5 Information on the engine</b>	<b>45</b>
2.5.1 Engine	45
<b>2.6 Safety and function decals</b>	<b>48</b>
2.6.1 Location of decals	48
2.6.2 Description of decals	51
<b>2.7 Work on the battery</b>	<b>62</b>
2.7.1 Battery	62
<b>2.8 Safety devices</b>	<b>63</b>
2.8.1 Emergency exit	63

2.8.2	Operator presence device	64
2.8.2.1	Returning the machine to normal operation	64
2.8.3	Safety belts	65
2.8.4	Cutting table safety stops	66
2.8.5	Safety guard for main crop elevator	67
2.8.6	Sprags for wheels	67
2.8.7	Audible alarm for reversing	68
2.8.8	Reflectors for road transport	69
2.8.9	Safety Guards	70
2.8.10	Fall protection rails	70
2.8.11	Safety devices for operations to be carried out in the upper part of the machine	71
2.8.12	Straw Chopper (if fitted)	72
2.8.13	Fire extinguisher	72
<b>2.9</b>	<b>Trailer hitch</b>	<b>73</b>
2.9.1	Automatic towing hooks	73
2.9.2	CUNA and CE trailer hitches	74
2.9.2.1	Procedure for attaching and removing	75
2.9.2.2	Drawbar coupling	76
2.9.3	ROCKINGER trailer hitch	76
2.9.3.1	Removal	76
2.9.3.2	Drawbar coupling	77
2.9.4	Fixed trailer hitch (non-automatic - CUNA type)	78
<b>2.10</b>	<b>Machine lifting</b>	<b>79</b>
2.10.1	Attachment points	79
<b>2.11</b>	<b>Towing</b>	<b>80</b>
2.11.1	Towing the combine	80
<b>2.12</b>	<b>Further information</b>	<b>81</b>
2.12.1	Noise level in the cab	81
2.12.2	Vibrations in the cab	81
2.12.3	Statutory regulations	81
2.12.4	Electromagnetic emissions	82
<b>2.13</b>	<b>Notes</b>	<b>83</b>
2.13.1	Notes for road transport	83
<b>3</b>	<b>Operation</b>	<b>85</b>
<b>3.1</b>	<b>Combine operation</b>	<b>87</b>
3.1.1	Crop processing	87
<b>3.2</b>	<b>Stage 1</b>	<b>88</b>
3.2.1	Feeding	88
<b>3.3</b>	<b>Stage 2</b>	<b>89</b>
3.3.1	Threshing	89
<b>3.4</b>	<b>Stage 3</b>	<b>90</b>
3.4.1	Separation	90
<b>3.5</b>	<b>Stage 4</b>	<b>91</b>
3.5.1	Cleaning	91
<b>3.6</b>	<b>Stage 5</b>	<b>92</b>
3.6.1	Grain storage and unloading	92
<b>4</b>	<b>Controls and Instruments</b>	<b>93</b>
<b>4.1</b>	<b>Steering column</b>	<b>95</b>
4.1.1	Components and adjustments	95
<b>4.2</b>	<b>Multifunction lever</b>	<b>96</b>
4.2.1	Main components	96
<b>4.3</b>	<b>Instrument panel</b>	<b>98</b>
4.3.1	Front control panel	98

4.3.2	Rear control panel	99
<b>4.4</b>	<b>Controls at the operator seat</b>	<b>106</b>
4.4.1	Description	106
<b>4.5</b>	<b>Agritronicplus</b>	<b>107</b>
4.5.1	Components	107
4.5.2	Multiple light indicators	108
4.5.3	On-board Computer	110
4.5.3.1	Using the computer	111
4.5.3.2	Scheduled service inspection hours	111
4.5.3.3	Resetting partial or total hectare counter	112
4.5.3.4	Calibrating constants used for calculating covered area	112
4.5.3.5	C6: Working width	113
4.5.3.6	C2: Forward speed	113
4.5.3.7	Table of constants	115
4.5.3.8	Partial hectare counter	115
4.5.3.9	Hectare counter operation	115
4.5.3.10	Activation of the audible alarm	116
4.5.4	Performance monitor	117
4.5.4.1	Using the monitor	118
4.5.4.2	Selecting the measurement range (straw walker, sieves or total)	118
4.5.4.3	Calibrating the bar cursor scale	119
4.5.4.4	Sensitivity adjustment	119
4.5.4.5	Shifting to forward speed monitoring	120
4.5.4.6	Summary of keyboard functions	120
4.5.5	Terra Control System	121
4.5.5.1	Using Terra Control	124
4.5.5.2	Terra Control sensitivity	126
4.5.5.3	Calibrating the potentiometer for cutting table floatation	127
4.5.5.4	Calibrating the potentiometer for main crop elevator height control	130
<b>4.6</b>	<b>Cab</b>	<b>133</b>
4.6.1	Cab controls	133
4.6.2	Operator seat	137
4.6.3	Passenger seat	138
4.6.4	Footrest	138
4.6.5	Preparation for radio installation	139
4.6.6	Rear Cab Window	139
4.6.7	Reading light	140
4.6.8	Air conditioning in the cab	141
4.6.9	Heating	143
<b>4.7</b>	<b>Access to combine components</b>	<b>144</b>
4.7.1	Access to the operator platform	144
4.7.2	Accessing and cleaning the front windscreen of the cab	145
4.7.3	Access to the engine compartment	146
4.7.4	Access to the grain tank	147
4.7.5	Access to the inside of the grain tank	148
<b>4.8</b>	<b>Engine</b>	<b>149</b>
4.8.1	Starting the engine	149
4.8.2	Useful advice	150
4.8.3	Stopping the engine	150
<b>4.9</b>	<b>Road transport</b>	<b>152</b>
4.9.1	Operations to be carried out before transportation	152
4.9.2	Position light and sidelight adjustment	153
<b>4.10</b>	<b>Using the combine</b>	<b>154</b>
4.10.1	Operations to be carried out before use	154
<b>5</b>	<b>Field Operations</b>	<b>155</b>

<b>5.1 General Information</b>	157
5.1.1 Notes	157
5.1.2 Before operating the machine in the field	157
<b>5.2 Starting and Stopping the Combine</b>	159
5.2.1 Procedure to follow	159
<b>5.3 Cutting table</b>	161
5.3.1 Attaching and removing the table	161
5.3.2 Table lateral floatation (optional)	165
5.3.3 GSAX system (ground self-alignment) (optional)	166
<b>5.4 Main Crop Elevator</b>	167
5.4.1 Adjustments	167
5.4.1.1 Access to the main components	169
5.4.2 Reverse drive system	170
<b>5.5 Cylinder Housing</b>	171
5.5.1 Components	171
5.5.2 Threshing drum	172
5.5.3 Wheat concave	174
5.5.3.1 Concave filler plates	175
5.5.3.2 Parallelism between the cylinder and concave	176
5.5.3.3 Unblocking the cylinder	177
5.5.4 Sectional concave	178
5.5.4.1 Concave filler plates	179
5.5.4.2 Parallelism between the cylinder and concave	180
5.5.5 Universal wheat/maize concave	181
5.5.5.1 Basic concave settings	182
5.5.6 Spike-toothed Cylinder/Concave (for rice)	182
5.5.7 Rear beater	184
<b>5.6 Straw walkers</b>	185
5.6.1 Description and adjustments	185
<b>5.7 Main Grain Pan</b>	186
5.7.1 Description	186
5.7.2 Checking the main grain pan	187
5.7.3 Cleaning the main grain pan	188
5.7.4 Stone trap assembly removal/refitting	189
<b>5.8 Fanning Mill</b>	191
5.8.1 Description and adjustments	191
5.8.1.1 Fanning mill for threshing light seed crops	193
<b>5.9 Top sieve</b>	194
5.9.1 Adjustment	194
<b>5.10 Bottom sieve</b>	198
5.10.1 Adjustment	198
<b>5.11 Tailings</b>	200
5.11.1 Description and adjustments	200
<b>5.12 Grain tank</b>	202
5.12.1 Description	202
5.12.1.1 Grain tank unloading auger	203
5.12.1.2 Sensors to check tank filling	204
5.12.1.3 Grain tank control window	205
5.12.1.4 Doors for Grain Tank Maintenance and Cleaning	205
5.12.1.5 Vertical auger tank drain door	207
5.12.1.6 Tank bottom door	207
5.12.1.7 Grain tank cover	209
5.12.1.8 Basic Settings	210
<b>6 Lubrication and Maintenance</b>	213

<b>6.1 General Information</b> . . . . .	215
6.1.1 Lubrication and Maintenance . . . . .	215
<b>6.2 Preliminary Service Inspection</b> . . . . .	217
6.2.1 After the first 50 working hours . . . . .	217
<b>6.3 Scheduled Service Inspection</b> . . . . .	218
6.3.1 Operation and adjustment . . . . .	218
6.3.2 When and where to carry it out . . . . .	219
6.3.3 Interval - 10 hours . . . . .	221
6.3.3.1 Cylinder variator (1) . . . . .	221
6.3.3.2 Engine oil (2) . . . . .	222
6.3.3.3 Coolant expansion tank (3) . . . . .	223
6.3.3.4 Hydraulic and hydrostatic systems tank (4) . . . . .	223
6.3.3.5 Prefilter/water separator (5) . . . . .	224
6.3.3.6 Straw chopper rotor (if fitted) (6) . . . . .	224
6.3.4 Interval - 75 hours (Sa) . . . . .	225
6.3.4.1 Service brakes (7) . . . . .	225
6.3.4.2 Main crop elevator belt tensioner (9) . . . . .	225
6.3.4.3 Fanning mill variator (10) . . . . .	226
6.3.4.4 Belt tensioner for crop unloading auger (11) . . . . .	227
6.3.4.5 Coupling bushes of final drive shafts (12) . . . . .	227
6.3.4.6 Rear axle support (13) . . . . .	228
6.3.4.7 Rear axle king pins (14) . . . . .	228
6.3.4.8 Rear wheel 4WD tie rod (if fitted) (14) . . . . .	229
6.3.4.9 Bearings for rear straw walker crank (15) . . . . .	229
6.3.4.10 Bottom angle gear for unloading auger (16) . . . . .	230
6.3.4.11 Top angle gear for unloading auger (17) . . . . .	230
6.3.4.12 Table belt tensioner (18) . . . . .	231
6.3.4.13 Angle gear at tank filling elevator (19) . . . . .	231
6.3.4.14 Track frames (20) . . . . .	232
6.3.4.15 Cab air filters (21) . . . . .	232
6.3.4.16 Evaporator (22) . . . . .	233
6.3.4.17 Condenser (23) . . . . .	234
6.3.4.18 Radiator and hydraulic oil (24) . . . . .	235
6.3.4.19 Adjusting the rotary screen brushes and aspirator brushes . . . . .	236
6.3.4.20 Main crop elevator adapter (with lateral floatation fitted) (25) . . . . .	237
6.3.4.21 Chaff spreader drive (if fitted) (26) . . . . .	238
6.3.5 Interval - 150 hours (Sb) . . . . .	238
6.3.5.1 Park brake (27) . . . . .	238
6.3.5.2 Gearbox (28) . . . . .	239
6.3.5.3 Reduction gear housings (29) . . . . .	239
6.3.5.4 Bottom angle gear for unloading auger (30) . . . . .	240
6.3.5.5 Main crop elevator supports (31) . . . . .	241
6.3.5.6 Reversing belt tensioner arm pin (32) . . . . .	241
6.3.5.7 Main clutch (33) . . . . .	242
6.3.5.8 Left bearing for tailings auger (34) . . . . .	242
6.3.5.9 Windscreen wash fluid tank (35) . . . . .	243
6.3.5.10 Threshing unit belt tensioner (36) . . . . .	243
6.3.5.11 Hydrostatic pump belt tensioner (37) . . . . .	244
6.3.5.12 Bottom ring nut for unloading auger (38) . . . . .	244
6.3.5.13 Engine air filter (39) . . . . .	245
6.3.5.14 Driven belt tensioner for straw chopper (40) . . . . .	246
6.3.5.15 Drive belt tensioner for straw chopper (41) . . . . .	246
6.3.5.16 Engine (42) . . . . .	246
6.3.5.17 Cab access ladder (43) . . . . .	248
6.3.5.18 Straw chopper layshaft (44) . . . . .	248
6.3.5.19 Belt tensioner for return rotary screen (45) . . . . .	249
6.3.5.20 Rotary screen belt tensioner (46) . . . . .	249

6.3.6	Interval - 225 hours (Sa + engine)	249
6.3.6.1	Engine oil and filters (51)	249
6.3.7	Interval - 450 hours (Sc)	252
6.3.7.1	Battery (58)	252
6.3.7.2	Dehydrator filter (59)	253
6.3.7.3	Reduction gear housings (60)	254
6.3.7.4	Gearbox (61)	254
6.3.7.5	Hydraulic oil intake filter (62)	255
6.3.7.6	Filter, hydrostatic transmission (63)	256
6.3.7.7	Hydraulic systems oil (64)	257
6.3.7.8	Hydraulic and hydrostatic system return filter (65)	259
6.3.7.9	Air compressor (if fitted) (66)	260
6.3.7.10	Engine diesel oil filter (67)	260
6.3.7.11	Catalytic fluid filter (68)	262
<b>6.4</b>	<b>Periodical maintenance operations</b>	<b>263</b>
6.4.1	Description	263
6.4.1.1	Engine valves (1)	264
6.4.1.2	Coolant (2)	265
6.4.1.3	Service brake circuit fluid (3)	266
6.4.1.4	Diesel fuel tank (4)	266
6.4.1.5	Turbocharger (5)	267
6.4.1.6	Hydraulic hoses (6)	267
6.4.1.7	Catalytic fluid tank (DEF) (7)	268
<b>6.5</b>	<b>Lubrication</b>	<b>269</b>
6.5.1	Lubrication	269
<b>7</b>	<b>Adjustments</b>	<b>271</b>
<b>7.1</b>	<b>Adjustments</b>	<b>273</b>
7.1.1	Important information	273
<b>7.2</b>	<b>Belt and chain adjustment</b>	<b>274</b>
7.2.1	Belts and chains (left-hand side)	274
7.2.1.1	Feeder drive belt (1)	275
7.2.1.2	Belt drive for threshing unit (2)	276
7.2.1.3	Belt drive for unloading auger (3)	277
7.2.1.4	Belt drive for air compressor (if fitted) (4)	278
7.2.1.5	Belt drive for hydrostatic pump (5)	279
7.2.1.6	Belt drive for chaff spreader (if fitted) (6)	280
7.2.1.7	Belt drive for reversing (7)	280
7.2.1.8	Main transmission belt (8)	281
7.2.1.9	Belt drives for good grain and tailings augers (9)	281
7.2.1.10	Belt drive for straw walkers (10)	282
7.2.1.11	Belt drive for cutting table (11)	282
7.2.1.12	Chain drive for unloading auger (12)	283
7.2.1.13	Belt drive for straw chopper (if fitted) (13)	283
7.2.1.14	Belt drive for straw chopper (if fitted) (14)	284
7.2.2	Belts and chains (right-hand side)	285
7.2.2.1	Belt drive for rotary screen (21)	285
7.2.2.2	Counter drive for rotary screen (22)	286
7.2.2.3	Belt drive for engine coolant pump (23)	286
7.2.2.4	Belt drive for alternator and cooling fan (24)	287
7.2.2.5	Belt drive for cylinder variator (25)	287
7.2.2.6	Belt drive for fanning mill variator (26)	288
7.2.2.7	Top chain drive for tailings auger (27)	289
7.2.2.8	Crop elevator chain (28)	289
7.2.2.9	Chain drive for tailings elevator (29)	290
7.2.2.10	Front crop elevator chain (30)	290
7.2.2.11	Chain drive for tank filling auger (31)	291

7.2.2.12	Belt drive for reel pump (32)	291
7.2.2.13	Belt drive for cab air conditioning compressor (33)	292
7.2.2.14	Belt drive for dust aspirator (34)	293
<b>7.3</b>	<b>Slip clutches</b>	<b>294</b>
7.3.1	Description	294
7.3.1.1	Clutch for main crop elevator upper shaft (1)	294
7.3.1.2	Clutch for shaker shoe counter drive (2)	294
7.3.1.3	Shear bolt for unloading auger counter drive (3)	295
<b>7.4</b>	<b>Tires</b>	<b>296</b>
7.4.1	Tire pressure	296
7.4.2	Replacement of Front Wheels	297
7.4.3	Replacement of Rear Wheels	298
7.4.4	Front wheel assembly	299
7.4.5	Rear wheel assembly	300
<b>7.5</b>	<b>Brakes</b>	<b>301</b>
7.5.1	Service brakes	301
7.5.2	Park brake	302
<b>7.6</b>	<b>Rear axle</b>	<b>303</b>
7.6.1	Toe-in setting	303
7.6.2	Steering ram ball joints	303
7.6.3	Width setting	304
7.6.4	Telescopic arm position	304
7.6.5	Rear axle support	306
<b>7.7</b>	<b>Battery</b>	<b>307</b>
7.7.1	Battery Replacement	307
7.7.2	Suggestions regarding the battery	307
7.7.3	Indicator Light for Battery Charging	308
<b>8</b>	<b>Systems</b>	<b>309</b>
<b>8.1</b>	<b>Safety Precautions</b>	<b>311</b>
8.1.1	Notes	311
<b>8.2</b>	<b>Engine supply system</b>	<b>312</b>
8.2.1	Permitted fuels	312
8.2.2	Fuel Circuit	313
8.2.3	Bleeding the Fuel Supply Circuit	314
8.2.4	Catalytic fluid tank (DEF)	315
8.2.5	Injection system operation	316
<b>8.3</b>	<b>Engine air intake and exhaust system</b>	<b>317</b>
8.3.1	Operation	317
<b>8.4</b>	<b>Engine cooling system</b>	<b>319</b>
8.4.1	Coolant	319
8.4.2	Engine cooling system operation	320
<b>8.5</b>	<b>Engine lubrication system</b>	<b>321</b>
8.5.1	Operation	321
8.5.2	Oil vapor recovery system	322
<b>8.6</b>	<b>SCR system</b>	<b>323</b>
8.6.1	Operation	323
<b>8.7</b>	<b>Hydraulics system</b>	<b>325</b>
8.7.1	Pumps and fuel tank	325
8.7.2	Table positioning hydraulic circuits	327
8.7.2.1	Cutting table oleopneumatic shock absorbers	328
8.7.2.2	Flow limiting solenoid valve	328
8.7.2.3	Hose burst valve	329
8.7.2.4	Table horizontal positioning circuit (optional)	329
8.7.3	Reel rotation control hydraulic circuit	330
8.7.4	Hydraulic steering system	331



8.7.5 Auxiliary hydraulics circuit . . . . .	332
<b>8.8 Hydrostatic transmission system . . . . .</b>	<b>333</b>
8.8.1 Front-wheel drive . . . . .	333
8.8.2 Rear-wheel drive (optional) . . . . .	334
<b>8.9 Electrical system . . . . .</b>	<b>335</b>
8.9.1 Main components . . . . .	335
8.9.2 Fuses . . . . .	336
8.9.3 Additional fuses . . . . .	339
8.9.4 Cab fuses . . . . .	342
8.9.5 Relays . . . . .	343
8.9.5.1 Additional relays . . . . .	344
8.9.5.2 Various relays . . . . .	345
8.9.6 Control units . . . . .	347
8.9.6.1 Engine sensors and control unit . . . . .	348
8.9.7 Connections for additional equipment . . . . .	349
8.9.7.1 Electric connectors . . . . .	349
8.9.8 Headlight adjustment . . . . .	351
<b>9 Troubleshooting . . . . .</b>	<b>353</b>
<b>9.1 Description . . . . .</b>	<b>355</b>
9.1.1 Feeding . . . . .	355
9.1.2 Threshing . . . . .	355
9.1.3 Separation and cleaning . . . . .	357
9.1.4 Hydrostatic Transmission . . . . .	360
9.1.5 Engine . . . . .	361
9.1.6 Hydraulics system . . . . .	363
9.1.7 Electrical system . . . . .	364
9.1.8 Air conditioning circuit . . . . .	365
9.1.9 Straw chopper . . . . .	365
<b>10 Off-Season Storage . . . . .</b>	<b>369</b>
<b>10.1 Procedure to follow . . . . .</b>	<b>371</b>
10.1.1 Operations to be carried out after the harvest . . . . .	371
10.1.2 Ordering spare parts . . . . .	372
10.1.3 Operations to be carried out before the new season . . . . .	372
<b>11 Optional equipment . . . . .</b>	<b>375</b>
<b>11.1 Information . . . . .</b>	<b>377</b>
11.1.1 General considerations . . . . .	377
<b>11.2 Optional equipment . . . . .</b>	<b>378</b>
11.2.1 Auxiliary table lifting ram . . . . .	378
11.2.2 Four-wheel drive . . . . .	379
11.2.3 Camera . . . . .	379
11.2.4 Windbreak . . . . .	380
11.2.5 Additional lights and mirrors . . . . .	380
11.2.6 Electrically operated straw chopper straw deflectors . . . . .	381
11.2.7 Additional fire extinguisher . . . . .	381
11.2.8 Diesel fuel prefilter . . . . .	382
11.2.9 Air compressor . . . . .	382
11.2.10 Additional Portable Lamp . . . . .	383
11.2.11 Weight and moisture control monitor . . . . .	383
11.2.12 Trailer hitch . . . . .	384
11.2.13 Refrigerator . . . . .	384
11.2.14 Lateral floatation . . . . .	385
11.2.15 Vertical Knives . . . . .	385
11.2.16 Electrically-operated sieves and returns sensors . . . . .	386
11.2.17 Cylinder cover . . . . .	387

11.2.18	Tailings cover plate	387
11.2.19	Top sieve	388
11.2.20	Bottom sieve	389
<b>11.3</b>	<b>Equipment for threshing</b>	<b>390</b>
11.3.1	Equipment for maize	390
11.3.2	Equipment for corn-cob	391
11.3.3	Equipment for rice	392
11.3.4	Equipment for light seed crops	392
11.3.5	Equipment for soya and peas	393
<b>11.4</b>	<b>Ballast weights</b>	<b>394</b>
11.4.1	Description	394
11.4.2	Ballast weights on rear axle	395
11.4.3	Ballast weights on the straw walker hood for machines without straw chopper	396
11.4.4	Ballast weights on the rear wheels with a liquid mix (for tubeless tires)	397
11.4.5	Filling tires with anti-freeze solutions	398
<b>11.5</b>	<b>Straw chopper</b>	<b>399</b>
11.5.1	Transport positions	399
11.5.2	Working position	400
11.5.3	Operating the straw chopper	401
11.5.4	Disengaging the straw chopper	403
11.5.5	Access to the straw chopper rotor	403
11.5.6	Straw chopper rotor knives	403
11.5.7	Counter-knives	404
11.5.8	Chopping quality	404
11.5.9	Use of straw chopper in maize	406
<b>11.6</b>	<b>Chaff Spreader</b>	<b>408</b>
11.6.1	Working and maintenance positions	408
11.6.2	Chaff spreader speed	410
11.6.3	Disengaging the chaff spreader	410
11.6.4	Chaff spreader belt tensioning	410
<b>11.7</b>	<b>Tracks</b>	<b>411</b>
11.7.1	Use and maintenance	411
11.7.2	Track chain tension	412
<b>12</b>	<b>Technical Specifications</b>	<b>413</b>
<b>12.1</b>	<b>Wheels and tires</b>	<b>415</b>
12.1.1	information	415
12.1.2	Wheel tightening torque	415
12.1.3	Tire capacity	415
12.1.4	Tire equipment- front axle	416
12.1.5	Tire equipment - rear axle	417
12.1.6	Tire equipment - Version with half-tracks on front axle	418
12.1.7	Ballast weights	419
<b>12.2</b>	<b>Dimensions</b>	<b>420</b>
12.2.1	Combine dimensions	420
12.2.2	Tracks with runners	422
12.2.3	Clearance between unloading auger and table	423
12.2.4	Clearance between unloading auger and ground	424
<b>12.3</b>	<b>Technical specifications</b>	<b>425</b>
12.3.1	Feeding unit	425
12.3.2	Threshing sys.	425
12.3.3	Cleaning unit	427
12.3.4	Grain tank	428
12.3.5	Hydraulic system	428
12.3.6	Hydrostatic system	429
12.3.7	Engine	429

---

12.3.8 Electrical components .....	430
12.3.9 Transmission .....	430
12.3.10 Rear axle .....	431
12.3.11 Weight .....	431
<b>13 Index .....</b>	<b>433</b>

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)