

# Operator's Manual

**FENDT**

## Combines FENDT 5185 E

*FENDT 5185 E - S/N => 551200044  
ZN205512x03000044*



### Breganze

AGCO S.p.A. - Via F. Laverda, 15/17 - 36042  
BREGANZE (VI) – Italy.

FENDT is a worldwide brand of AGCO

© AGCO 2016

Original Operator's Manual

November 2016

FENDT 5185 E\_EN\_LA327435011

EAME

English

# Combines

<b>1 General Information</b>	13
<b>1.1 Information</b>	15
1.1.1 Introduction	15
1.1.2 Company policy	15
1.1.3 Optional equipment	15
1.1.4 Spare parts and accessories	16
1.1.5 Warranty	16
1.1.6 Lubricants	16
<b>1.2 Use</b>	18
1.2.1 Use of the combine	18
<b>1.3 Identification</b>	19
1.3.1 Combine identification	19
1.3.2 Engine Identification	20
1.3.3 Cutting table identification	21
1.3.4 Cab identification	21
1.3.5 Hydrostatic pump identification	22
1.3.6 Hydrostatic motor identification	22
1.3.7 Straw chopper identification (if fitted)	23
1.3.8 Chaff spreader identification (if fitted)	23
1.3.9 Trailer hitch identification (if fitted)	24
<b>1.4 Identification form</b>	25
1.4.1 Machine data	25
<b>1.5 Conformity</b>	26
1.5.1 EC Declaration of Conformity	26
<b>1.6 Information</b>	27
1.6.1 Ecology	27
1.6.2 Hydraulic systems: hoses	27
1.6.3 Scrapping and disposal	28
<b>1.7 Weight</b>	29
1.7.1 Weight distribution	29
<b>2 Safety</b>	31
<b>2.1 Warning symbols and safety instructions</b>	33
2.1.1 Warnings	33
<b>2.2 Information for road transport</b>	34
2.2.1 Road transport	34
<b>2.3 Information for operations</b>	37
2.3.1 Field Operations	37
<b>2.4 Information for maintenance</b>	41
2.4.1 Maintenance work	41
<b>2.5 Information on the engine</b>	45
2.5.1 Engine	45
<b>2.6 Safety and function decals</b>	49
2.6.1 Location of decals	49
2.6.2 Description of decals	54
<b>2.7 Work on the battery</b>	64
2.7.1 Battery	64
<b>2.8 Safety devices</b>	65
2.8.1 Emergency exit	65

2.8.2 Operator presence device . . . . .	66
2.8.3 Safety belts . . . . .	67
2.8.4 Table safety stops . . . . .	68
2.8.5 Safety guard for main crop elevator . . . . .	69
2.8.6 Safety Stop . . . . .	69
2.8.7 Sprags for wheels . . . . .	70
2.8.8 Audible alarm for reversing . . . . .	71
2.8.9 Reflectors for road transport . . . . .	72
2.8.10 Safety Guards . . . . .	73
2.8.11 Fall protection rails . . . . .	73
2.8.12 Safety devices for operations to be carried out in the upper part of the machine . .	74
2.8.13 Straw chopper . . . . .	75
2.8.14 Fire extinguisher . . . . .	75
<b>2.9 Trailer hitch . . . . .</b>	<b>76</b>
2.9.1 Automatic towing hooks . . . . .	76
2.9.2 CUNA and CE trailer hitches . . . . .	77
2.9.2.1 Procedure for attaching and removing . . . . .	78
2.9.2.2 Drawbar coupling . . . . .	79
2.9.3 Fixed trailer hitch (non-automatic - CUNA type) . . . . .	79
<b>2.10 Machine lifting . . . . .</b>	<b>80</b>
2.10.1 Attachment points . . . . .	80
<b>2.11 Towing . . . . .</b>	<b>81</b>
2.11.1 Towing the combine . . . . .	81
<b>2.12 Further information . . . . .</b>	<b>82</b>
2.12.1 Noise level in the cab . . . . .	82
2.12.2 Vibrations in the cab . . . . .	82
2.12.3 Statutory regulations . . . . .	82
2.12.4 Electromagnetic emissions . . . . .	83
<b>2.13 Notes . . . . .</b>	<b>84</b>
2.13.1 Notes for road transport . . . . .	84
<b>3 Operation . . . . .</b>	<b>87</b>
<b>3.1 Combine operation . . . . .</b>	<b>89</b>
3.1.1 Crop processing . . . . .	89
<b>3.2 Stage 1 . . . . .</b>	<b>90</b>
3.2.1 Feeding . . . . .	90
<b>3.3 Stage 2 . . . . .</b>	<b>91</b>
3.3.1 Threshing . . . . .	91
<b>3.4 Stage 3 . . . . .</b>	<b>92</b>
3.4.1 Separation . . . . .	92
<b>3.5 Stage 4 . . . . .</b>	<b>93</b>
3.5.1 Cleaning . . . . .	93
<b>3.6 Stage 5 . . . . .</b>	<b>94</b>
3.6.1 Grain storage and unloading . . . . .	94
<b>4 Controls and Instruments . . . . .</b>	<b>95</b>
<b>4.1 Steering column . . . . .</b>	<b>97</b>
4.1.1 Components and adjustments . . . . .	97
<b>4.2 Multifunction lever . . . . .</b>	<b>98</b>
4.2.1 Main components . . . . .	98
<b>4.3 Instrument panel . . . . .</b>	<b>99</b>
4.3.1 Front control panel . . . . .	99
4.3.2 Rear control panel . . . . .	101
4.3.3 Multiple light indicators . . . . .	105
4.3.4 On-board Computer . . . . .	106

4.3.4.1 Graphical user interface . . . . .	108
4.3.4.2 Day/night mode . . . . .	110
4.3.4.3 Operational parameters . . . . .	111
4.3.4.4 Auto-calibration . . . . .	111
4.3.4.5 Hectare counter . . . . .	112
4.3.4.6 No communication . . . . .	112
4.3.4.7 Alarm statuses . . . . .	113
4.3.5 Performance monitor (on request) . . . . .	113
4.3.5.1 Using the monitor . . . . .	114
4.3.5.2 Selecting the measurement range (straw walker, sieves or total) . . . . .	114
4.3.5.3 Calibrating the bar cursor scale . . . . .	115
4.3.5.4 Sensitivity adjustment . . . . .	115
4.3.5.5 Shifting to forward speed monitoring . . . . .	116
4.3.5.6 Summary of keyboard functions . . . . .	116
<b>4.4 Controls at the operator seat</b> . . . . .	117
4.4.1 Description . . . . .	117
<b>4.5 Cab</b> . . . . .	119
4.5.1 Cab controls (top right-hand side) . . . . .	119
4.5.2 Operator seat . . . . .	122
4.5.3 Preparation for radio installation . . . . .	123
4.5.4 Rear Cab Window . . . . .	123
4.5.5 Reading light . . . . .	124
4.5.6 Document Pocket . . . . .	124
4.5.7 Air conditioning in the cab . . . . .	125
4.5.7.1 Pressurization . . . . .	126
4.5.8 Heating . . . . .	127
<b>4.6 Access to combine components</b> . . . . .	128
4.6.1 Access to the operator platform . . . . .	128
4.6.2 Accessing and cleaning the front windscreen of the cab . . . . .	129
4.6.3 Access to the engine compartment . . . . .	130
4.6.4 Access to the grain tank . . . . .	131
4.6.5 Access to the inside of the grain tank . . . . .	132
<b>4.7 Engine</b> . . . . .	133
4.7.1 Starting the engine . . . . .	133
4.7.2 Useful advice . . . . .	134
4.7.3 Stopping the engine . . . . .	135
<b>4.8 Road transport</b> . . . . .	136
4.8.1 Operations to be carried out before transportation . . . . .	136
4.8.2 Position light and sidelight adjustment . . . . .	137
<b>4.9 Using the combine</b> . . . . .	138
4.9.1 Operations to be carried out before use . . . . .	138
<b>5 Field Operations</b> . . . . .	139
<b>5.1 General Information</b> . . . . .	141
5.1.1 Notes . . . . .	141
5.1.2 Before operating the machine in the field . . . . .	141
<b>5.2 Starting and Stopping the Combine</b> . . . . .	143
5.2.1 Procedure to follow . . . . .	143
<b>5.3 Cutting table</b> . . . . .	145
5.3.1 Attaching the cutting table . . . . .	145
5.3.1.1 Adjustments for attaching the cutting table . . . . .	147
5.3.2 Removing the table . . . . .	148
5.3.3 Adjustment of cutting table ground clearance . . . . .	149
<b>5.4 Main Crop Elevator</b> . . . . .	150
5.4.1 Adjustments . . . . .	150
5.4.1.1 Access to the main components . . . . .	152

5.4.2 Reverse drive system .....	153
<b>5.5 Cylinder Housing .....</b>	<b>154</b>
5.5.1 Components .....	154
5.5.2 Threshing drum .....	155
5.5.3 Wheat concave .....	156
5.5.3.1 Concave filler plates .....	157
5.5.3.2 Parallelism between the cylinder and concave .....	158
5.5.3.3 Unblocking the threshing drum .....	159
5.5.4 Sectional concave .....	160
5.5.4.1 Concave filler plates .....	161
5.5.4.2 Parallelism between the cylinder and concave .....	162
5.5.5 Universal wheat/maize concave .....	163
5.5.5.1 Basic concave settings .....	164
5.5.6 Spike-toothed Cylinder/Concave (for rice) .....	164
5.5.7 Rear beater .....	166
<b>5.6 Straw walkers .....</b>	<b>167</b>
5.6.1 Description and adjustments .....	167
<b>5.7 Main Grain Pan .....</b>	<b>168</b>
5.7.1 Description .....	168
5.7.2 Checking the main grain pan .....	169
5.7.3 Cleaning the main grain pan .....	170
5.7.4 Stone trap assembly removal/refitting .....	171
<b>5.8 Fanning Mill .....</b>	<b>173</b>
5.8.1 Description and adjustments .....	173
5.8.1.1 Fanning mill for threshing light seed crops .....	175
<b>5.9 Top sieve .....</b>	<b>176</b>
5.9.1 Adjustment .....	176
<b>5.10 Bottom sieve .....</b>	<b>180</b>
5.10.1 Adjustment .....	180
<b>5.11 Tailings .....</b>	<b>182</b>
5.11.1 Description and adjustments .....	182
<b>5.12 Grain tank .....</b>	<b>184</b>
5.12.1 Description .....	184
5.12.1.1 Grain tank unloading auger .....	185
5.12.1.2 Sensor to measure tank filling .....	186
5.12.1.3 Grain tank control window .....	187
5.12.1.4 Doors for Grain Tank Maintenance and Cleaning .....	187
5.12.1.5 Vertical auger tank drain door .....	189
5.12.1.6 Tank bottom door .....	189
5.12.1.7 Grain Tank Cover .....	190
5.12.1.8 Basic Settings .....	191
<b>6 Lubrication and Maintenance .....</b>	<b>193</b>
<b>6.1 General Information .....</b>	<b>195</b>
6.1.1 Lubrication and Maintenance .....	195
<b>6.2 Preliminary Service Inspection .....</b>	<b>196</b>
6.2.1 After the first 50 working hours .....	196
<b>6.3 Scheduled Service Inspection .....</b>	<b>197</b>
6.3.1 When and where to carry it out .....	197
6.3.2 Interval - 10 hours .....	199
6.3.2.1 Cylinder variator (1) .....	199
6.3.2.2 Engine oil (2) .....	200
6.3.2.3 Coolant expansion tank (3) .....	201
6.3.2.4 Hydraulic and hydrostatic systems tank (4) .....	201
6.3.2.5 Prefilter/water separator (5) .....	202
6.3.2.6 Straw chopper rotor (if fitted) (6) .....	202

6.3.3 Interval - 75 hours . . . . .	203
6.3.3.1 Service brakes (11) . . . . .	203
6.3.3.2 Main crop elevator lower shaft (12) . . . . .	203
6.3.3.3 Main crop elevator belt tensioner (13) . . . . .	204
6.3.3.4 Fanning mill variator (14) . . . . .	204
6.3.3.5 Crop-unloading auger drive belt tensioner (15) . . . . .	205
6.3.3.6 Coupling bushes of final drive shafts (16) . . . . .	205
6.3.3.7 Rear axle support (17) . . . . .	206
6.3.3.8 Rear axle king pins (18) . . . . .	206
6.3.3.9 Rear straw-walker shaft supports (19) . . . . .	207
6.3.3.10 Unloading auger bottom gearbox (20) . . . . .	207
6.3.3.11 Unloading auger top gearbox (21) . . . . .	208
6.3.3.12 Table drive-belt tensioner (22) . . . . .	208
6.3.3.13 Track frames (23) . . . . .	209
6.3.3.14 Cab air filters (24) . . . . .	209
6.3.3.15 Evaporator (25) . . . . .	210
6.3.3.16 Condenser (26) . . . . .	211
6.3.3.17 Radiators and hydraulic oil (27) . . . . .	212
6.3.3.18 Adjusting the rotary screen brushes and aspirator brushes . . . . .	213
6.3.3.19 Chaff spreader drive (if fitted) (28) . . . . .	214
6.3.4 Interval - 150 hours . . . . .	215
6.3.4.1 Park brake (41) . . . . .	215
6.3.4.2 Gearbox (42) . . . . .	215
6.3.4.3 Final drives (43) . . . . .	216
6.3.4.4 Unloading auger bottom gearbox (44) . . . . .	216
6.3.4.5 Main crop elevator supports (45) . . . . .	217
6.3.4.6 Reversing-belt tensioner-arm pin (46) . . . . .	217
6.3.4.7 Main clutch (47) . . . . .	218
6.3.4.8 Tailings-auger left support (48) . . . . .	218
6.3.4.9 Windscreen wash fluid reservoir (49) . . . . .	219
6.3.4.10 Threshing-mechanism belt tensioner (50) . . . . .	219
6.3.4.11 Hydrostatic pump belt tensioner (51) . . . . .	220
6.3.4.12 Unloading auger slewing ring (52) . . . . .	220
6.3.4.13 Engine air filter (53) . . . . .	221
6.3.4.14 Straw-chopper driven belt tensioner (54) . . . . .	222
6.3.4.15 Straw chopper drive-belt tensioner (55) . . . . .	222
6.3.4.16 Engine (56) . . . . .	222
6.3.4.17 Straw chopper layshaft (57) . . . . .	224
6.3.4.18 Return rotary-screen belt tensioner (58) . . . . .	224
6.3.4.19 Rotary-screen belt tensioner (59) . . . . .	225
6.3.4.20 Radiator-fan drive belt tensioner (60) . . . . .	225
6.3.5 Interval - 225 hours . . . . .	225
6.3.5.1 Engine oil and filters (71) . . . . .	225
6.3.6 Interval - 450 hours . . . . .	229
6.3.6.1 Battery (81) . . . . .	229
6.3.6.2 Dehydrator filter (82) . . . . .	230
6.3.6.3 Final drives (83) . . . . .	231
6.3.6.4 Gearbox (84) . . . . .	231
6.3.6.5 Hydraulic oil intake filter (85) . . . . .	232
6.3.6.6 Hydrostatic transmission filter (86) . . . . .	233
6.3.6.7 Hydraulic systems oil (87) . . . . .	234
6.3.6.8 Hydraulic and hydrostatic system return filter (88) . . . . .	235
6.3.6.9 Engine diesel-fuel filters (89) . . . . .	236
6.3.6.10 Catalytic fluid filter (90) . . . . .	237
<b>6.4 Periodical maintenance operations . . . . .</b>	<b>238</b>
6.4.1 Description . . . . .	238
6.4.1.1 Engine valves (1) . . . . .	239
6.4.1.2 Coolant (2) . . . . .	240

6.4.1.3 Service brake circuit fluid (3) . . . . .	241
6.4.1.4 Diesel fuel tank (4) . . . . .	241
6.4.1.5 Turbocharger (5) . . . . .	242
6.4.1.6 Hydraulic hoses (6) . . . . .	242
6.4.1.7 Catalytic fluid tank (DEF) (7) . . . . .	243
<b>6.5 Lubrication . . . . .</b>	<b>244</b>
6.5.1 Summary table . . . . .	244
<b>7 Adjustments . . . . .</b>	<b>245</b>
<b>    7.1 Adjustments . . . . .</b>	<b>247</b>
7.1.1 Important information . . . . .	247
<b>    7.2 Belt and chain adjustment . . . . .</b>	<b>248</b>
7.2.1 Belts and chains (left-hand side) . . . . .	248
7.2.1.1 Feeder drive belt (1) . . . . .	248
7.2.1.2 Threshing unit drive belt (2) . . . . .	249
7.2.1.3 Unloading auger drive belt (3) . . . . .	250
7.2.1.4 Hydrostatic pump drive belt (4) . . . . .	251
7.2.1.5 Chaff spreader drive belt (if fitted) (5) . . . . .	252
7.2.1.6 Reversing drive belt (6) . . . . .	253
7.2.1.7 Main transmission belt (7) . . . . .	253
7.2.1.8 Clean grain and tailings augers drive belt (8) . . . . .	254
7.2.1.9 Straw walker drive belt (9) . . . . .	254
7.2.1.10 Cutting table drive belt (10) . . . . .	255
7.2.1.11 Unloading auger chain (11) . . . . .	255
7.2.1.12 Straw chopper drive belt (if fitted) (12) . . . . .	256
7.2.1.13 Straw chopper drive belt (if fitted) (13) . . . . .	257
7.2.2 Belts and chains (right-hand side) . . . . .	258
7.2.2.1 Belt drive for rotary screen (21) . . . . .	258
7.2.2.2 Counter drive for rotary screen (22) . . . . .	259
7.2.2.3 Drive belt for alternator and engine coolant pump (23) . . . . .	259
7.2.2.4 Radiator fan drive belt (24) . . . . .	260
7.2.2.5 Belt drive for cylinder variator (25) . . . . .	260
7.2.2.6 Belt drive for fanning mill variator (26) . . . . .	261
7.2.2.7 Top chain drive for tailings auger (27) . . . . .	262
7.2.2.8 Tailings elevator chain (28) . . . . .	262
7.2.2.9 Tank filling auger drive chain (29) . . . . .	263
7.2.2.10 Crop elevator chain (30) . . . . .	263
7.2.2.11 Front crop-elevator chain (31) . . . . .	264
7.2.2.12 Cab air-conditioning compressor drive belt (32) . . . . .	265
7.2.2.13 Dust aspirator drive belt (33) . . . . .	266
<b>    7.3 Slip clutches . . . . .</b>	<b>267</b>
7.3.1 Description . . . . .	267
7.3.1.1 Clutch for main crop elevator upper shaft (1) . . . . .	267
7.3.1.2 Clutch for shaker shoe counter drive (2) . . . . .	267
7.3.1.3 Shear bolt for unloading auger counter drive (3) . . . . .	268
<b>    7.4 Tires . . . . .</b>	<b>269</b>
7.4.1 Tire pressure . . . . .	269
7.4.2 Replacement of Front Wheels . . . . .	270
7.4.3 Replacement of Rear Wheels . . . . .	271
7.4.4 Front wheel assembly . . . . .	272
7.4.5 Rear wheel assembly . . . . .	273
<b>    7.5 Brakes . . . . .</b>	<b>274</b>
7.5.1 Service brakes . . . . .	274
7.5.2 Park brake . . . . .	275
<b>    7.6 Rear axle . . . . .</b>	<b>276</b>
7.6.1 Toe-in setting . . . . .	276
7.6.2 Steering ram ball joints . . . . .	276

7.6.3 Rear axle support . . . . .	277
<b>7.7 Battery</b> . . . . .	278
7.7.1 Battery Replacement . . . . .	278
7.7.2 Suggestions regarding the battery . . . . .	278
7.7.3 Indicator Light for Battery Charging . . . . .	279
<b>8 Systems</b> . . . . .	281
<b>8.1 Safety Precautions</b> . . . . .	283
8.1.1 Notes . . . . .	283
<b>8.2 Engine supply system</b> . . . . .	284
8.2.1 Permitted fuels . . . . .	284
8.2.2 Fuel Circuit . . . . .	285
8.2.3 Bleeding the Fuel Supply Circuit . . . . .	286
8.2.4 Catalytic fluid tank (DEF) . . . . .	287
8.2.5 Injection system operation . . . . .	289
<b>8.3 Engine air intake and exhaust system</b> . . . . .	290
8.3.1 Operation . . . . .	290
<b>8.4 Engine cooling system</b> . . . . .	292
8.4.1 Coolant . . . . .	292
8.4.2 Engine cooling system operation . . . . .	293
<b>8.5 Engine lubrication system</b> . . . . .	294
8.5.1 Operation . . . . .	294
8.5.2 Oil vapor recovery system . . . . .	295
<b>8.6 SCR system</b> . . . . .	296
8.6.1 Operation . . . . .	296
<b>8.7 Hydraulics system</b> . . . . .	298
8.7.1 Pumps and fuel tank . . . . .	298
8.7.2 Table positioning hydraulic circuits . . . . .	299
8.7.2.1 Cutting table oleopneumatic shock absorber . . . . .	300
8.7.2.2 Hose burst valve . . . . .	300
8.7.2.3 Cutting table positioning pressure switch . . . . .	301
8.7.3 Hydraulic steering system . . . . .	302
8.7.4 Auxiliary hydraulics circuit . . . . .	303
<b>8.8 Hydrostatic transmission system</b> . . . . .	304
8.8.1 Front-wheel drive . . . . .	304
<b>8.9 Electrical system</b> . . . . .	305
8.9.1 Main components . . . . .	305
8.9.2 Fuses . . . . .	306
8.9.3 Additional fuses . . . . .	309
8.9.4 Cab fuses . . . . .	312
8.9.5 Relays . . . . .	313
8.9.5.1 Additional relays . . . . .	315
8.9.5.2 Various relays . . . . .	316
8.9.6 Control units . . . . .	317
8.9.6.1 Engine sensors and control unit . . . . .	318
8.9.7 Connections for additional equipment . . . . .	319
8.9.7.1 Electric connectors . . . . .	319
8.9.8 Headlight adjustment . . . . .	321
8.9.9 Unloading area light . . . . .	322
8.9.10 Reversing area light . . . . .	322
8.9.11 Light in grain tank . . . . .	323
8.9.12 Engine access-ladder light . . . . .	323
<b>9 Troubleshooting</b> . . . . .	325
<b>9.1 Description</b> . . . . .	327
9.1.1 Feeding . . . . .	327

9.1.2 Threshing . . . . .	327
9.1.3 Separation and cleaning . . . . .	329
9.1.4 Hydrostatic Transmission . . . . .	332
9.1.5 Engine . . . . .	333
9.1.6 Hydraulics system . . . . .	335
9.1.7 Electrical system . . . . .	336
9.1.8 Air conditioning circuit . . . . .	337
9.1.9 Straw chopper . . . . .	337
<b>10 Off-Season Storage . . . . .</b>	<b>341</b>
<b>10.1 Procedure to follow . . . . .</b>	<b>343</b>
10.1.1 Operations to be carried out after the harvest . . . . .	343
10.1.2 Ordering spare parts . . . . .	344
10.1.3 Operations to be carried out before the new season . . . . .	344
<b>11 Optional equipment . . . . .</b>	<b>347</b>
<b>11.1 Information . . . . .</b>	<b>349</b>
11.1.1 General considerations . . . . .	349
<b>11.2 Optional equipment . . . . .</b>	<b>350</b>
11.2.1 Auxiliary table lifting ram . . . . .	350
11.2.2 Camera . . . . .	351
11.2.3 Additional rear view mirrors . . . . .	351
11.2.4 Additional lights (for work) . . . . .	352
11.2.5 Performance monitor . . . . .	352
11.2.6 Windbreak . . . . .	353
11.2.7 Additional fire extinguisher . . . . .	353
11.2.8 Diesel fuel prefilter . . . . .	354
11.2.9 Additional Portable Lamp . . . . .	354
11.2.10 Weight and moisture control monitor . . . . .	355
11.2.11 Trailer hitch . . . . .	355
11.2.12 Refrigerator . . . . .	356
11.2.13 Cylinder cover . . . . .	356
11.2.14 Tailings cover plate . . . . .	357
11.2.15 Top sieve . . . . .	357
11.2.16 Bottom sieve . . . . .	358
11.2.17 Electrically-operated sieves and returns sensors . . . . .	359
11.2.18 Cutting height control . . . . .	360
11.2.19 Hydraulic quick couplers . . . . .	360
<b>11.3 Equipment for threshing . . . . .</b>	<b>361</b>
11.3.1 Equipment for maize . . . . .	361
11.3.2 Equipment for corn-cob . . . . .	362
11.3.3 Equipment for rice . . . . .	363
11.3.4 Equipment for light seed crops . . . . .	363
11.3.5 Equipment for soya and peas . . . . .	364
<b>11.4 Ballast weights . . . . .</b>	<b>365</b>
11.4.1 Description . . . . .	365
11.4.2 Ballast weights on rear axle . . . . .	365
11.4.3 Ballast weights on the straw walker hood for machines without straw chopper . . . . .	366
11.4.4 Ballast weights on the rear wheels with a liquid mix (for tubeless tires) . . . . .	367
11.4.5 Filling tires with anti-freeze solutions . . . . .	368
<b>11.5 Straw chopper . . . . .</b>	<b>369</b>
11.5.1 Transport position . . . . .	369
11.5.2 Working position . . . . .	370
11.5.3 Operating the straw chopper . . . . .	371
11.5.4 Disengaging the straw chopper . . . . .	373
11.5.5 Access to the straw chopper rotor . . . . .	373
11.5.6 Straw chopper rotor knives . . . . .	373

11.5.7 Counter-knives . . . . .	374
11.5.8 Chopping quality . . . . .	374
11.5.9 Use of straw chopper in maize . . . . .	376
<b>11.6 Chaff Spreader . . . . .</b>	<b>378</b>
11.6.1 Working and maintenance positions . . . . .	378
11.6.2 Chaff spreader speed . . . . .	380
11.6.3 Disengaging the chaff spreader . . . . .	380
11.6.4 Chaff spreader belt tensioning . . . . .	380
<b>11.7 Tracks . . . . .</b>	<b>381</b>
11.7.1 Use and maintenance . . . . .	381
11.7.2 Track chain tension . . . . .	382
<b>12 Technical Specifications . . . . .</b>	<b>383</b>
<b>12.1 Wheels and tires . . . . .</b>	<b>385</b>
12.1.1 information . . . . .	385
12.1.2 Wheel tightening torque . . . . .	385
12.1.3 Tire capacity . . . . .	385
12.1.4 Tire equipment- front axle . . . . .	386
12.1.5 Tire equipment - rear axle . . . . .	387
12.1.6 Tire equipment - Version with half-tracks on front axle . . . . .	388
<b>12.2 Dimensions . . . . .</b>	<b>389</b>
12.2.1 Combine dimensions . . . . .	389
12.2.2 Tracks with runners . . . . .	391
12.2.3 Clearance between unloading auger and table . . . . .	392
12.2.4 Available cutting tables and weights . . . . .	392
12.2.5 Clearance between unloading auger and ground . . . . .	393
<b>12.3 Technical specifications . . . . .</b>	<b>394</b>
12.3.1 Feeding unit . . . . .	394
12.3.2 Threshing sys. . . . .	394
12.3.3 Cleaning unit . . . . .	396
12.3.4 Grain tank . . . . .	397
12.3.5 Hydraulic system . . . . .	398
12.3.6 Hydrostatic system . . . . .	398
12.3.7 Engine . . . . .	398
12.3.8 Electrical components . . . . .	399
12.3.9 Transmission . . . . .	399
12.3.10 Rear axle . . . . .	400
12.3.11 Weight . . . . .	400
<b>13 Index . . . . .</b>	<b>401</b>

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**