

Operator's Manual

FENDT

Combines

FENDT 5185 E

FENDT 5185 E - S/N => ZN205512_03010001



Breganze
AGCO S.p.A. - Via F. Laverda, 15/17 - 36042
BREGANZE (VI) – Italy.
FENDT is a worldwide brand of AGCO
© AGCO 2017
Original Operator's Manual

September 2017
FENDT 5185 E_EN_LA327435012
EME
English

Combines

1 General Information	13
1.1 Information	15
1.1.1 Introduction	15
1.1.2 Company policy	15
1.1.3 Optional equipment	15
1.1.4 Spare parts and accessories	16
1.1.5 Warranty	16
1.1.6 Lubricants	16
1.2 Use	18
1.2.1 Use of the combine	18
1.3 Identification	19
1.3.1 Combine identification	19
1.3.2 Engine Identification	20
1.3.3 Cutting table identification	21
1.3.4 Cab identification	21
1.3.5 Hydrostatic pump identification	22
1.3.6 Hydrostatic motor identification	22
1.3.7 Straw chopper identification (if fitted)	23
1.3.8 Chaff spreader identification (if fitted)	23
1.3.9 Trailer hitch identification (if fitted)	24
1.4 Identification form	25
1.4.1 Machine data	25
1.5 Conformity	26
1.5.1 EC Declaration of Conformity	26
1.6 Information	27
1.6.1 Ecology	27
1.6.2 Hydraulic systems: hoses	27
1.6.3 Scrapping and disposal	28
1.7 Weight	29
1.7.1 Weight distribution	29
2 Safety	31
2.1 Warning symbols and safety instructions	33
2.1.1 Warnings	33
2.2 Information for road transport	34
2.2.1 Road transport	34
2.3 Information for operations	37
2.3.1 Field Operations	37
2.4 Information for maintenance	41
2.4.1 Maintenance work	41
2.5 Information on the engine	45
2.5.1 Engine	45
2.6 Safety and function decals	48
2.6.1 Location of decals	48
2.6.2 Description of decals	52
2.7 Work on the battery	62
2.7.1 Battery	62
2.8 Safety devices	63
2.8.1 Emergency exit	63

2.8.2 Operator presence device	64
2.8.3 Safety belts	65
2.8.4 Table safety stops	66
2.8.5 Safety guard for main crop elevator	67
2.8.6 Safety Stop	67
2.8.7 Sprags for wheels	68
2.8.8 Audible alarm for reversing	69
2.8.9 Reflectors for road transport	70
2.8.10 Safety Guards	71
2.8.11 Fall protection rails	71
2.8.12 Safety devices for operations to be carried out in the upper part of the machine	72
2.8.13 Straw chopper	73
2.8.14 Fire extinguisher	73
2.9 Trailer hitch	74
2.9.1 Automatic towing hooks	74
2.9.2 CUNA and CE trailer hitches	75
2.9.2.1 Procedure for attaching and removing	76
2.9.2.2 Drawbar coupling	77
2.9.3 Fixed trailer hitch (non-automatic - CUNA type)	77
2.10 Machine lifting	78
2.10.1 Attachment points	78
2.11 Towing	79
2.11.1 Towing the combine	79
2.12 Further information	80
2.12.1 Noise level in the cab	80
2.12.2 Vibrations in the cab	80
2.12.3 Statutory regulations	80
2.12.4 Electromagnetic emissions	81
2.13 Notes	82
2.13.1 Notes for road transport	82
3 Operation	85
3.1 Combine operation	87
3.1.1 Crop processing	87
3.2 Stage 1	88
3.2.1 Feeding	88
3.3 Stage 2	89
3.3.1 Threshing	89
3.4 Stage 3	90
3.4.1 Separation	90
3.5 Stage 4	91
3.5.1 Cleaning	91
3.6 Stage 5	92
3.6.1 Grain storage and unloading	92
4 Controls and Instruments	93
4.1 Steering column	95
4.1.1 Components and adjustments	95
4.2 Multifunction lever	96
4.2.1 Main components	96
4.3 Instrument panel	97
4.3.1 Front control panel	97
4.3.2 Rear control panel	99
4.3.3 Multiple light indicators	103
4.3.4 On-board Computer	104

4.3.4.1	Graphical user interface	106
4.3.4.2	Day/night mode	108
4.3.4.3	Operational parameters	109
4.3.4.4	Auto-calibration	109
4.3.4.5	Hectare counter	110
4.3.4.6	No communication	110
4.3.4.7	Alarm statuses	111
4.3.5	Performance monitor (on request)	111
4.3.5.1	Using the monitor	112
4.3.5.2	Selecting the measurement range (straw walker, sieves or total)	112
4.3.5.3	Calibrating the bar cursor scale	113
4.3.5.4	Sensitivity adjustment	113
4.3.5.5	Shifting to forward speed monitoring	114
4.3.5.6	Summary of keyboard functions	114
4.4	Description	115
4.5	Cab	116
4.5.1	Cab controls (top right-hand side)	116
4.5.2	Operator seat	119
4.5.3	Preparation for radio installation	120
4.5.4	Rear Cab Window	120
4.5.5	Reading light	121
4.5.6	Document Pocket	121
4.5.7	Air conditioning in the cab	122
4.5.7.1	Pressurization	123
4.5.8	Heating	124
4.6	Access to combine components	125
4.6.1	Access to the operator platform	125
4.6.2	Accessing and cleaning the front windscreen of the cab	126
4.6.3	Access to the engine compartment	127
4.6.4	Access to the grain tank	128
4.6.5	Access to the inside of the grain tank	129
4.7	Engine	130
4.7.1	Starting the engine	130
4.7.2	Useful advice	131
4.7.3	Stopping the engine	132
4.8	Road transport	133
4.8.1	Operations to be carried out before transportation	133
4.8.2	Position light and sidelight adjustment	134
4.9	Using the combine	135
4.9.1	Operations to be carried out before use	135
5	Field Operations	137
5.1	General Information	139
5.1.1	Notes	139
5.1.2	Before operating the machine in the field	139
5.2	Starting and Stopping the Combine	141
5.2.1	Procedure to follow	141
5.3	Cutting table	143
5.3.1	Attaching the cutting table	143
5.3.1.1	Adjustments for attaching the cutting table	145
5.3.2	Removing the table	146
5.3.3	Adjustment of cutting table ground clearance	147
5.4	Main Crop Elevator	148
5.4.1	Adjustments	148
5.4.1.1	Access to the main components	150
5.4.2	Reverse drive system	151

5.5 Cylinder Housing	152
5.5.1 Components	152
5.5.2 Threshing drum	153
5.5.3 Wheat concave	154
5.5.3.1 Concave filler plates	155
5.5.3.2 Parallelism between the cylinder and concave	156
5.5.3.3 Unblocking the threshing drum	157
5.5.4 Sectional concave	158
5.5.4.1 Concave filler plates	159
5.5.4.2 Parallelism between the cylinder and concave	160
5.5.5 Universal wheat/maize concave	161
5.5.5.1 Basic concave settings	162
5.5.6 Spike-toothed Cylinder/Concave (for rice)	162
5.5.7 Rear beater	164
5.6 Straw walkers	165
5.6.1 Description and adjustments	165
5.7 Main Grain Pan	166
5.7.1 Description	166
5.7.2 Checking the main grain pan	167
5.7.3 Cleaning the main grain pan	168
5.7.4 Stone trap assembly removal/refitting	169
5.8 Fanning Mill	171
5.8.1 Description and adjustments	171
5.8.1.1 Fanning mill for threshing light seed crops	173
5.9 Top sieve	174
5.9.1 Adjustment	174
5.10 Bottom sieve	178
5.10.1 Adjustment	178
5.11 Tailings	180
5.11.1 Description and adjustments	180
5.12 Grain tank	182
5.12.1 Description	182
5.12.1.1 Grain tank unloading auger	183
5.12.1.2 Sensor to measure tank filling	184
5.12.1.3 Grain tank control window	184
5.12.1.4 Doors for Grain Tank Maintenance and Cleaning	185
5.12.1.5 Vertical auger tank drain door	186
5.12.1.6 Tank bottom door	187
5.12.1.7 Grain Tank Cover	188
5.12.1.8 Basic Settings	189
6 Lubrication and Maintenance	191
6.1 General Information	193
6.1.1 Lubrication and Maintenance	193
6.2 Preliminary Service Inspection	194
6.2.1 After the first 50 working hours	194
6.3 Scheduled Service Inspection	195
6.3.1 When and where to carry it out	195
6.3.2 Interval - 10 hours	197
6.3.2.1 Cylinder variator (1)	197
6.3.2.2 Engine oil (2)	198
6.3.2.3 Coolant expansion tank (3)	199
6.3.2.4 Hydraulic and hydrostatic systems tank (4)	199
6.3.2.5 Prefilter/water separator (5)	200
6.3.2.6 Straw chopper rotor (if fitted) (6)	200
6.3.3 Interval - 75 hours	201

6.3.3.1	Service brakes (11)	201
6.3.3.2	Main crop elevator lower shaft (12)	201
6.3.3.3	Main crop elevator belt tensioner (13)	202
6.3.3.4	Fanning mill variator (14)	202
6.3.3.5	Crop-unloading auger drive belt tensioner (15)	203
6.3.3.6	Coupling bushes of final drive shafts (16)	203
6.3.3.7	Rear axle support (17)	204
6.3.3.8	Rear axle king pins (18)	204
6.3.3.9	Rear straw-walker shaft supports (19)	205
6.3.3.10	Unloading auger bottom gearbox (20)	205
6.3.3.11	Unloading auger top gearbox (21)	206
6.3.3.12	Table drive-belt tensioner (22)	206
6.3.3.13	Track frames (23)	207
6.3.3.14	Cab air filters (24)	207
6.3.3.15	Evaporator (25)	209
6.3.3.16	Condenser (26)	209
6.3.3.17	Radiators and hydraulic oil (27)	210
6.3.3.18	Adjusting the rotary screen brushes and aspirator brushes	211
6.3.3.19	Chaff spreader drive (if fitted) (28)	212
6.3.4	Interval - 150 hours	213
6.3.4.1	Park brake (41)	213
6.3.4.2	Gearbox (42)	213
6.3.4.3	Final drives (43)	214
6.3.4.4	Unloading auger bottom gearbox (44)	214
6.3.4.5	Main crop elevator supports (45)	215
6.3.4.6	Reversing-belt tensioner-arm pin (46)	215
6.3.4.7	Main clutch (47)	216
6.3.4.8	Tailings-auger left support (48)	216
6.3.4.9	Windscreen wash fluid reservoir (49)	217
6.3.4.10	Threshing-mechanism belt tensioner (50)	217
6.3.4.11	Hydrostatic pump belt tensioner (51)	218
6.3.4.12	Unloading auger slewing ring (52)	218
6.3.4.13	Engine air filter (53)	219
6.3.4.14	Straw-chopper driven belt tensioner (54)	220
6.3.4.15	Straw chopper drive-belt tensioner (55)	220
6.3.4.16	Engine (56)	220
6.3.4.17	Straw chopper layshaft (57)	222
6.3.4.18	Return rotary-screen belt tensioner (58)	222
6.3.4.19	Rotary-screen belt tensioner (59)	223
6.3.4.20	Radiator-fan drive belt tensioner (60)	223
6.3.5	Interval - 225 hours	223
6.3.5.1	Engine oil and filters (71)	223
6.3.6	Interval - 450 hours	226
6.3.6.1	Battery (81)	226
6.3.6.2	Dehydrator filter (82)	227
6.3.6.3	Final drives (83)	228
6.3.6.4	Gearbox (84)	228
6.3.6.5	Hydraulic oil intake filter (85)	229
6.3.6.6	Hydrostatic transmission filter (86)	230
6.3.6.7	Hydraulic systems oil (87)	231
6.3.6.8	Hydraulic and hydrostatic system return filter (88)	233
6.3.6.9	Engine diesel-fuel filters (89)	233
6.3.6.10	Catalytic fluid filter (90)	235
6.4	Periodical maintenance operations	236
6.4.1	Description	236
6.4.1.1	Engine valves (1)	237
6.4.1.2	Coolant (2)	238
6.4.1.3	Service brake circuit fluid (3)	239

6.4.1.4 Diesel fuel tank (4)	239
6.4.1.5 Turbocharger (5)	240
6.4.1.6 Hydraulic hoses (6)	240
6.4.1.7 Catalytic fluid tank (DEF) (7)	241
6.5 Lubrication	242
6.5.1 Summary table	242
7 Adjustments	243
7.1 Adjustments	245
7.1.1 Important information	245
7.2 Belt and chain adjustment	246
7.2.1 Belts and chains (left-hand side)	246
7.2.1.1 Feeder drive belt (1)	246
7.2.1.2 Threshing unit drive belt (2)	247
7.2.1.3 Unloading auger drive belt (3)	247
7.2.1.4 Hydrostatic pump drive belt (4)	248
7.2.1.5 Chaff spreader drive belt (if fitted) (5)	249
7.2.1.6 Reversing drive belt (6)	249
7.2.1.7 Main transmission belt (7)	250
7.2.1.8 Clean grain and tailings augers drive belt (8)	250
7.2.1.9 Straw walker drive belt (9)	251
7.2.1.10 Cutting table drive belt (10)	251
7.2.1.11 Unloading auger chain (11)	252
7.2.1.12 Straw chopper drive belt (if fitted) (12)	252
7.2.1.13 Straw chopper drive belt (if fitted) (13)	253
7.2.2 Belts and chains (right-hand side)	254
7.2.2.1 Belt drive for rotary screen (21)	254
7.2.2.2 Counter drive for rotary screen (22)	255
7.2.2.3 Drive belt for alternator and engine coolant pump (23)	255
7.2.2.4 Radiator fan drive belt (24)	256
7.2.2.5 Belt drive for cylinder variator (25)	256
7.2.2.6 Belt drive for fanning mill variator (26)	257
7.2.2.7 Top chain drive for tailings auger (27)	258
7.2.2.8 Tailings elevator chain (28)	258
7.2.2.9 Tank filling auger drive chain (29)	259
7.2.2.10 Crop elevator chain (30)	259
7.2.2.11 Front crop-elevator chain (31)	260
7.2.2.12 Cab air-conditioning compressor drive belt (32)	260
7.2.2.13 Dust aspirator drive belt (33)	261
7.3 Slip clutches	262
7.3.1 Description	262
7.3.1.1 Clutch for main crop elevator upper shaft (1)	262
7.3.1.2 Clutch for shaker shoe counter drive (2)	262
7.3.1.3 Shear bolt for unloading auger counter drive (3)	263
7.4 Tires	264
7.4.1 Tire pressure	264
7.4.2 Replacement of Front Wheels	265
7.4.3 Replacement of Rear Wheels	266
7.4.4 Front wheel assembly	267
7.4.5 Rear wheel assembly	268
7.5 Brakes	269
7.5.1 Service brakes	269
7.5.2 Park brake	270
7.6 Rear axle	271
7.6.1 Toe-in setting	271
7.6.2 Steering ram ball joints	271
7.6.3 Rear axle support	272

7.7 Battery	273
7.7.1 Battery Replacement	273
7.7.2 Suggestions regarding the battery	273
7.7.3 Indicator Light for Battery Charging	274
8 Systems	275
8.1 Safety Precautions	277
8.1.1 Notes	277
8.2 Engine supply system	278
8.2.1 Permitted fuels	278
8.2.2 Fuel Circuit	279
8.2.3 Bleeding the Fuel Supply Circuit	280
8.2.4 Catalytic fluid tank (DEF)	281
8.2.5 Injection system operation	283
8.3 Engine air intake and exhaust system	284
8.3.1 Operation	284
8.4 Engine cooling system	286
8.4.1 Coolant	286
8.4.2 Engine cooling system operation	287
8.5 Engine lubrication system	288
8.5.1 Operation	288
8.5.2 Oil vapor recovery system	289
8.6 SCR system	290
8.6.1 Operation	290
8.7 Hydraulics system	292
8.7.1 Pumps and fuel tank	292
8.7.2 Table positioning hydraulic circuits	293
8.7.2.1 Cutting table oleopneumatic shock absorber	294
8.7.2.2 Hose burst valve	294
8.7.2.3 Cutting table positioning pressure switch	295
8.7.3 Hydraulic steering system	296
8.7.4 Auxiliary hydraulics circuit	297
8.8 Hydrostatic transmission system	298
8.8.1 Front-wheel drive	298
8.9 Electrical system	299
8.9.1 Main components	299
8.9.2 Fuses	300
8.9.3 Additional fuses	303
8.9.4 Cab fuses	305
8.9.5 Relays	306
8.9.5.1 Additional relays	308
8.9.5.2 Various relays	309
8.9.6 Control units	310
8.9.6.1 Engine sensors and control unit	311
8.9.7 Connections for additional equipment	312
8.9.7.1 Electric connectors	312
8.9.8 Headlight adjustment	314
8.9.9 Unloading area light	315
8.9.10 Reversing area light	315
8.9.11 Light in grain tank	316
8.9.12 Engine access-ladder light	316
9 Troubleshooting	317
9.1 Description	319
9.1.1 Feeding	319
9.1.2 Threshing	319

9.1.3 Separation and cleaning	321
9.1.4 Hydrostatic Transmission	324
9.1.5 Engine	325
9.1.6 Hydraulics system	327
9.1.7 Electrical system	328
9.1.8 Air conditioning circuit	329
9.1.9 Straw chopper	329
10 Off-Season Storage	333
10.1 Procedure to follow	335
10.1.1 Operations to be carried out after the harvest	335
10.1.2 Ordering spare parts	336
10.1.3 Operations to be carried out before the new season	336
11 Optional equipment	339
11.1 Information	341
11.1.1 General considerations	341
11.2 Optional equipment	342
11.2.1 Auxiliary table lifting ram	342
11.2.2 Camera	343
11.2.3 Additional rear view mirrors	343
11.2.4 Additional lights (for work)	344
11.2.5 Performance monitor	344
11.2.6 Windbreak	345
11.2.7 Additional fire extinguisher	345
11.2.8 Diesel fuel prefilter	346
11.2.9 Additional Portable Lamp	346
11.2.10 Weight and moisture control monitor	347
11.2.11 Trailer hitch	347
11.2.12 Refrigerator	348
11.2.13 Cylinder cover	348
11.2.14 Tailings cover plate	349
11.2.15 Top sieve	349
11.2.16 Bottom sieve	350
11.2.17 Electrically-operated sieves and returns sensors	351
11.2.18 Cutting height control	352
11.2.19 Hydraulic quick couplers	352
11.3 Equipment for threshing	353
11.3.1 Equipment for maize	353
11.3.2 Equipment for corn-cob	354
11.3.3 Equipment for rice	355
11.3.4 Equipment for light seed crops	355
11.3.5 Equipment for soya and peas	356
11.4 Ballast weights	357
11.4.1 Description	357
11.4.2 Ballast weights on rear axle	357
11.4.3 Ballast weights on the straw walker hood for machines without straw chopper	358
11.4.4 Ballast weights on the rear wheels with a liquid mix (for tubeless tires)	359
11.4.5 Filling tires with anti-freeze solutions	360
11.5 Straw chopper	361
11.5.1 Transport position	361
11.5.2 Working position	362
11.5.3 Operating the straw chopper	363
11.5.4 Disengaging the straw chopper	365
11.5.5 Access to the straw chopper rotor	365
11.5.6 Straw chopper rotor knives	365
11.5.7 Counter-knives	366

11.5.8 Chopping quality	366
11.5.9 Use of straw chopper in maize	368
11.6 Chaff Spreader	370
11.6.1 Working and maintenance positions	370
11.6.2 Chaff spreader speed	372
11.6.3 Disengaging the chaff spreader	372
11.6.4 Chaff spreader belt tensioning	372
11.7 Tracks	373
11.7.1 Use and maintenance	373
11.7.2 Track chain tension	374
12 Technical Specifications	375
12.1 Wheels and tires	377
12.1.1 information	377
12.1.2 Wheel tightening torque	377
12.1.3 Tire capacity	377
12.1.4 Tire equipment- front axle	378
12.1.5 Tire equipment - rear axle	379
12.1.6 Tire equipment - Version with half-tracks on front axle	380
12.2 Dimensions	381
12.2.1 Combine dimensions	381
12.2.2 Tracks with runners	383
12.2.3 Clearance between unloading auger and table	384
12.2.4 Available cutting tables and weights	384
12.2.5 Clearance between unloading auger and ground	385
12.3 Technical specifications	386
12.3.1 Feeding unit	386
12.3.2 Threshing sys.	386
12.3.3 Cleaning unit	388
12.3.4 Grain tank	389
12.3.5 Hydraulic system	390
12.3.6 Hydrostatic system	390
12.3.7 Engine	390
12.3.8 Electrical components	391
12.3.9 Transmission	391
12.3.10 Rear axle	392
12.3.11 Weight	392
13 Index	393

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com