

Section: C0 - ENGINE ACCESSORIES

Ref: C0.02.0 (1)

# INTERCOOLER


Fig.	P/n	QTY	Name
Notes: [XB 100 7	TB ->1001]		
1.5	0.014.8622.3	1	radiator
13	2.6851.006.0	7	clamp Ø 50/70
21	0.014.9366.3/10	1	tube
22	0.015.1779.0/10	1	flange
23	2.6859.112.0	1	clamp Ø 68 mm
25	0.014.9368.0/10	1	sleeve
26	2.6851.008.0	1	clamp Ø 70/90
27	0.014.9367.0/10	1	sleeve
28	0.015.5403.0	1	sleeve
29	2.1532.517.0	1	oil seal

Section: C0 - ENGINE ACCESSORIES

Ref: C0.02.1 (1)

# 8" AIR CLEANER WITH DUST EXHAUSTER

Fig.	<u>P/n</u>	QTY	Name
<b>Notes:</b> [XB 100 7	TB ->1001]		
1	2.4249.718.0	1	air filter 8 "  2.4249.718.0
2	0.014.0679.4	1	support
3	0.015.8329.3/40	1	bracket
4	0.015.8327.0/10	1	tube
5	0.016.7714.2	1	sleeve
6	2.0112.309.2	2	screw m 10 p.1.5 x 25
7	2.1310.006.2	2	flat washer 10.5x21
8	2.6851.004.0	1	clamp Ø 32/50
9	2.1011.105.2	2	nut m 8 p.1.25
10	2.1310.004.2	2	flat washer 8.4x17
11	0.014.7967.0	1	pipe fitting
12	2.6851.009.0	2	clamp Ø 80/100
13	0.016.1885.0	1	ring
14	2.6851.010.0	1	clamp 90/110

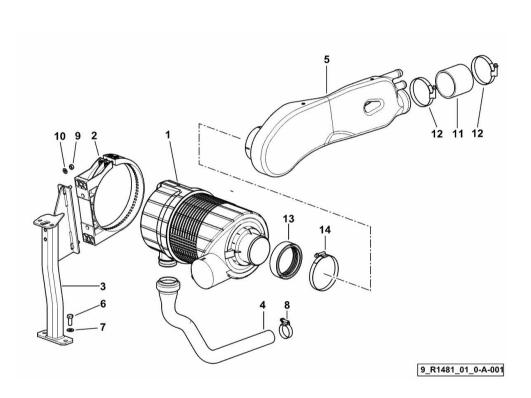



Section: C0 - ENGINE ACCESSORIES

Ref: C0.02.2 (1)

# OIL VAPOUR RECOVERY PIPES

Fig.	P/n	QTY	Name	
Notes: [XB 100 7	TB ->1001]			
4	0.016.8074.2	1	tube	
5	0.014.9301.0	1	tube	
6	2.6851.003.0	3	clamp Ø 25/40	
11	2.1310.002.2	3	flat washer 6.4x12.5	
12	2.0112.003.2	3	screw m 6 p.1 x 12	

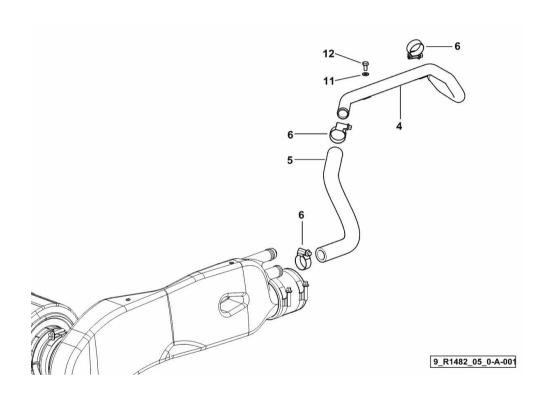

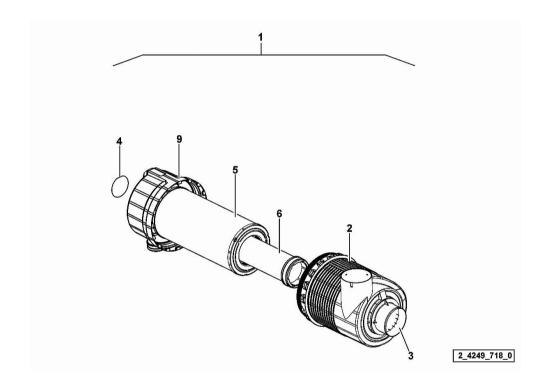

air filter 8 "

cannot be supplied external air filter element

internal air filter element

Name

box

tube

cover

QTY

Section: C0 - ENGINE ACCESSORIES

2.4249.718.0

0.900.0300.7

0.900.1633.7

0.000.0000.1 0.900.0301.0 0.900.0301.1

0.900.0301.3

AIR CLEANER

P/n

Fig.

9


Ref: 2.4249.718.0

Section: C0 - ENGINE ACCESSORIES

Ref: C0.03.1 (1)

# **FUEL COOLER**

Fig.	P/n	QTY	Name	
Notes: [XB 100 T	B ->1001]			
1.4	0.014.8032.3	1	radiator	

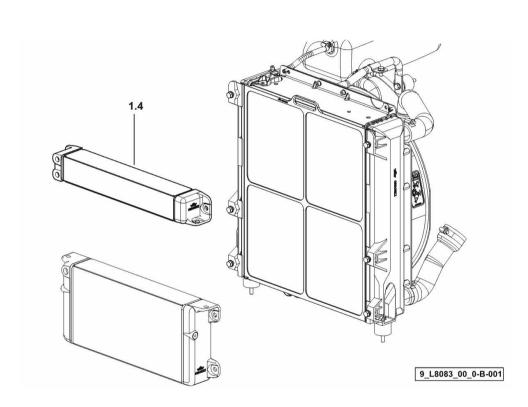


Section: C0 - ENGINE ACCESSORIES

Ref: C0.03.2 (1)

# FUEL COOLER PIPES

Fig.	P/n	QTY	Name
Notes: [XB 100 T	"B ->1001]		
1	0.014.8520.3/20	1	tube
2	0.016.6194.3	1	tube
7	2.6851.019.0	2	clamp Ø 13/20
11	2.3335.053.2	2	pipe union m 14 p.1.5x32
12	2.1561.107.0	4	oil seal Ø 14 -B-
15	0.014.9300.0	1	insulator
17	2.1310.002.2	1	flat washer 6.4x12.5
18	2.0112.003.2	1	screw m 6 p.1 x 12
19	0.015.8799.0	1	bracket

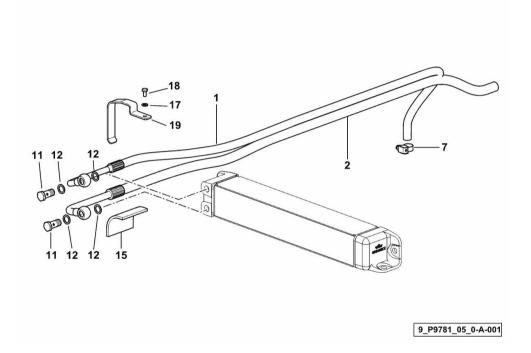

# 

## XB 100 TB ->1001

Section: C0 - ENGINE ACCESSORIES

Ref: C0.03.3 (2)

# FUEL FILTER SUPPLY


Fig.	P/n	QTY	Name
Notes:	TD > 10013		
[XR 100 I	TB ->1001]		
1	0.014.9702.2/20	1	hand of
1	0.014.8692.3/20	1	bracket
2	2.1310.004.2	6	flat washer 8.4x17
3	2.0112.205.2	2	screw m 8 p.1.25 x 16
4	2.0112.211.2	4	screw m 8 p.1.25 x 30
5	2.4319.290.0/10	1	precleaner
			© 2.4319.290.0/10
6	2.1560.012.0	8	gasket 16.2 x 22
7	2.1549.335.2	1	spacer 26.9x5x18
8	0.017.7968.3	1	tube
9	2.3339.597.2/10	1	pipe union m 16 p.1.5x50
10	2.3339.322.2	1	pipe union
11	2.3332.004.2	3	pipe union m 14 p.1.5 x 27
12	2.1560.010.0	9	gasket 14.2 x 20
13	0.017.7970.3	1	tube
14	0.017.7969.3	1	tube
15	2.3110.404.2	2	plug m 16 p.1.5
18	2.3332.005.2	1	pipe fitting m 16 p.1.5
23	2.6851.019.0	2	clamp Ø 13/20
24	0.012.6449.0	0.1	tube
25	0.017.8246.0	1	small column
26	2.3321.007.0	1	collar Ø10/10
27	2.1310.002.2	1	flat washer 6.4x12.5
28	2.0114.015.2	1	screw m 6 p.1 x 40
	2.0111.010.2	•	beton in a pri a to


Section: C0 - ENGINE ACCESSORIES

Ref: C0.03.4 (1)

# FUEL SYSTEM - TANK

Fig.	P/n	QTY	Name
Notes:		,	
[XB 100 T	B ->10011		
[213 100 1	2 1001]		
1.1	0.016.0158.3/20	1	fuel tank
1.1.2	0.016.1346.3	2	tube
1.1.6	0.011.5133.0	1	plug m 12
1.1.7	2.1530.056.0	3	oil seal 21.82 x 3.53
1.2	0.008.9280.4	1	plug
1.3	2.7059.002.0	1	float
			<b>2.7059.002.0</b>
1.4	2.1311.002.2	6	flat washer 4
1.5	2.1011.101.2	6	nut
2	0.016.4716.3/10	1	tube
3	0.016.4717.3/10	1	tube
4	2.1560.008.0	4	gasket 12.2 x 18
5	2.3339.472.2/10	2	pipe union m 12 p.1.25x26
6	0.016.4696.0	1	bracket
7	0.016.4693.0	1	bracket
8	0.016.4691.0	1	bracket
9	2.1470.002.2	5	lock washer 6
10	2.0112.002.2	5	screw m 6 p.1 x 10
11	0.016.1825.2	1	pin
12	0.016.1826.0	1	shim
15	2.6851.019.0	2	clamp Ø 13/20
18	2.1470.004.2	1	lock washer 8
19	2.0112.205.2	1	screw m 8 p.1.25 x 16
20	2.6839.051.0	1	clamp 20/20
21	2.1549.062.2	4	spacer 11x14x13
22	2.6569.011.0	4	rubber plug
23	2.1312.005.2	4	washer 10.2
24	2.0112.311.2	4	screw m 10 p.1.5 x 30
25	0.016.4667.0	1	bracket

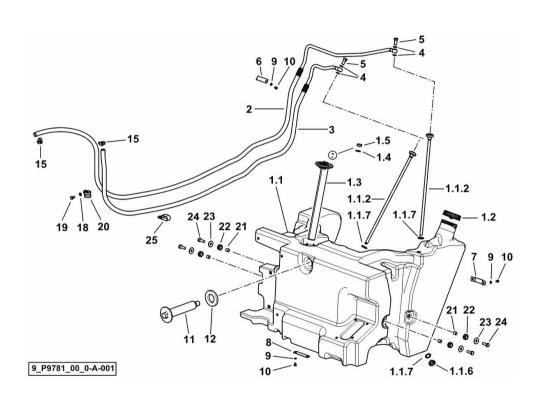

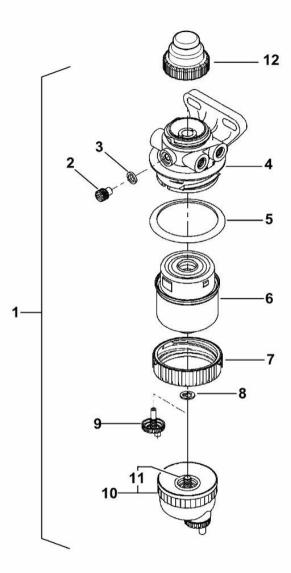

2\_4319\_290\_0\_10


# XB 100 TB ->1001

Section: C0 - ENGINE ACCESSORIES

Ref: 2.4319.290.0/10

# PRE-FILTER - COMPONENTS

Fig.	P/n	QTY	Name
1	2.4319.290.0/10	1	precleaner
2	0.900.0789.7	1	valve
3	0.900.0789.8	1	ring
4	0.000.0000.1	1	cannot be supplied
5	0.900.0789.9	1	oil seal
6	0.900.0456.2	1	fuel filter element
7	0.900.0790.0	1	ring
8	0.900.0790.1	1	gasket
9	0.900.0790.2	1	valve
10	0.900.0790.4	1	small tank
11	0.900.0790.3	1	gasket
12	0.900.1450.6	1	small pump

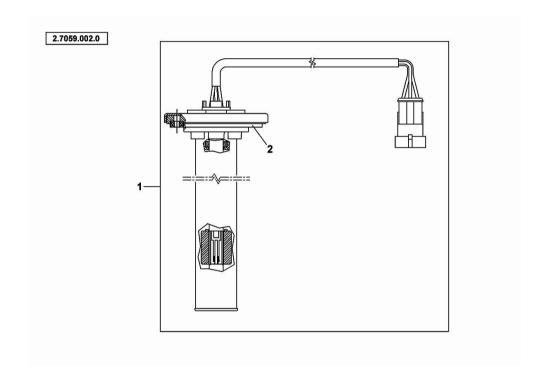

Ref: 2.7059.002.0

Section: C0 - ENGINE ACCESSORIES

FUEL LEVEL SENSOR

Fig.	P/n	QTY	Name	
	'	,		
1	2.7059.002.0	1	float	
2	0.900.1581.8	1	gasket	


1/1

Section: C0 - ENGINE ACCESSORIES

Ref: C0.05.1 (1)

# STARTER MOTOR COVER

Fig.	P/n	QTY	Name	
Notes: [XB 100 7	TB ->1001]			
1	0.008.0391.0	1	cover	
4	0.008.0616.0	1	pipe fitting m 10	
5	0.008.0378.0	1	cover	
6	2.6519.033.0	1	cap	

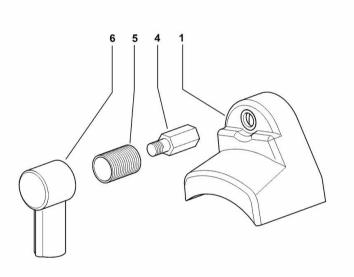

9\_R1484\_02\_0-B-001

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com