# JOHN DEERE AG & TURF DIVISION

# Sprayer 25 and 45 Gallon

OMM166996 B2

## **OPERATOR'S MANUAL**



## JOHN DEERE

Original Instruction
All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 2012

Deere & Co.

John Deere Ag & Turf Division
All rights reserved

Previous Editions

COPYRIGHT©

North American Version Litho in U.S.A.

### Introduction

#### **Table of Contents**

Introduction	I
Product Identification	1
Safety Labels	2
Safety	3
Assembly	5
Installing	9
Preparing Vehicle	10
Removing and Storing	10
Operating	10
Service	14
Troubleshooting	15
Specifications	15
Getting Quality Service	15

#### Introduction

#### **Using Your Operator's Manual**

Read this entire operator's manual, especially the safety information, before operating.

This manual is an important part of your machine. Keep all manuals in a convenient location so they can be accessed easily.

Use the safety and operating information in the attachment operator's manual, along with the machine operator's manual, to operate and service the attachment safely and correctly.

If your attachment manual has a section called Preparing the Machine, it means that you will have to do something to your tractor or vehicle before you can install the attachment. The Assembly and Installation sections of this manual provide information to assemble and install the attachment to your tractor or vehicle. Use the Service section to make any needed adjustments and routine service to your attachment.

If you have any questions or concerns with the assembly, installation, or operation of this attachment, see your local John Deere dealer or call the John Deere Customer Contact Center at 1-800-537-8233 for assistance.

Warranty information on this John Deere attachment can be found in the warranty that came with your John Deere tractor or vehicle.

#### **Product Identification**

#### **Product Compatibility**

This Sprayer is designed for use with John Deere Gator™ Utility Vehicles. Contact your John Deere dealer for specific utility vehicle compatibility information.

### **Safety Labels**

#### **Safety Labels**




#### **Understanding The Machine Safety Labels**

The machine safety labels shown in this section are placed in important areas on your machine to draw attention to potential safety hazards.

On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards.

The operator's manual also explains any potential safety hazards whenever necessary in special safety messages that are identified with the word, CAUTION, and the safety-alert symbol.

#### Safety Labels

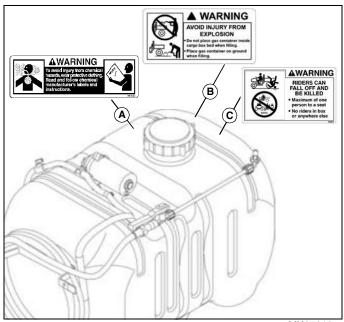

MX27819

- A- Warning MT3980
- B- Warning M152038\*
- C- Warning M150930\*

#### **WARNING M152038**



M152038

#### **AVOID INJURY FROM EXPLOSION**

- Do not place gas container inside cargo box bed when filling.
- $\bullet$  Place gas container on ground when filling.

#### **WARNING M150930**



M150930


#### RIDERS CAN FALL OFF AND BE KILLED

• Maximum of one person to a seat

<sup>\*</sup> Label installed on rear tank for 90 gallon sprayer only.

• No riders in box or anywhere else

#### **WARNING MT3980**

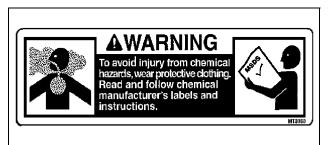

MT3980

• To avoid injury from chemical hazards, wear protective clothing. Read and follow chemical manufacturer's labels and instructions.

#### Safety

#### **Read Safety in Machine Operator's Manual**

Read the general safety operating precautions in your machine operator's manual for additional safety information.

#### **Operate Safely**

- Read the machine and attachment operator's manual carefully. Be thoroughly familiar with the controls and the proper use of the equipment. Know how to stop the machine and disengage the controls quickly.
- Do not let children or an untrained person operate machine.
- Make any necessary adjustments before you operate. Never attempt to make any adjustments while the engine is running, unless if recommended in adjustment procedure.
- Take all possible precautions when leaving the machine unattended. Shut off the engine before making any repairs, adjustments, or inspections. Lower the attachment, lock the parking brake, stop the engine, and remove the key.
- · Look behind machine before you back up. Back up carefully.
- Do not let anyone, especially children, ride on machine or attachment. Riders are subject to injury such as being struck by foreign objects and being thrown off. Riders may also obstruct the operator's view, resulting in the machine being operated in an unsafe manner.
- Use only attachments and accessories approved by the manufacturer of this product.
- If the machine vibrates abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of trouble.
- Always refer to the Storage section of the operator's manual for important details if storing this product for a long period of time.
- Keep people and pets out of the work area. Stop machine if anyone enters the area.
- If you hit an object, stop the machine and inspect it. Make repairs before you operate. Keep machine properly maintained and in good working order. Keep all shields and guards in place.
- Always inspect the sprayer completely before and after each use. Before pressurizing the system, check to be sure all fittings and hoses are tightly installed. Be sure guards and shields are in good condition and fastened in place. Make any necessary adjustments before you operate.
- Never use the sprayer during windy conditions.
- Always release pressure in the system before filling, cleaning or servicing the sprayer.
- Do not put nozzle tip or other sprayer parts to your lips to blow out dirt. Use compressed air.
- If the sprayer is mounted to the bed of a utility vehicle, never raise the bed with the sprayer installed. Empty the sprayer and remove it from the bed if you need to raise the bed for any reason.

#### **Parking Safely**

- 1. Stop vehicle on a level surface, not on a slope.
- 2. Lock park brake.
- 3. Stop engine.
- 4. Remove key.
- 5. Before you leave the operator's seat, wait for engine and all moving parts to stop.



Our support email: ebooklibonline@outlook.com