

2800 SEMI-INTEGRAL MOLDBOARD PLOW

 


OPERATORS MANUAL 2800 SEMI-INTEGRAL MOLDBOARD PLOW

OMA50281 C5 English

JOHN DEERE HARVESTER WORKS
OMA50281 C5

LITHO IN THE U.S.A. (REVISED)
ENGLISH




INTRODUCTION



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

"Right-hand" and "left-hand" sides are determined by facing in the direction the plow will travel when in use.

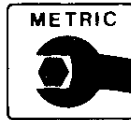

This plow is of metric design.

For your convenience, most specifications are given in metric measurement with the customary U.S. measurement following.

Some specifications cannot be converted. These appear in metric only.

Most hardware is metric. Specified metric hardware must be used for replacement.



CAUTION: Use only metric tools. Other tools may not fit properly. They may slip and cause injury.

Record the identification number(s) in the space provided following Specifications. Accurately record all of the characters because (should the product be stolen) tracing is sometimes through a computer match of letters and numbers. Also, your dealer needs this information when ordering parts. If you carry your operator's manual on the machine for reference, be sure to also record the identification number(s) on a separate sheet of paper and file it in a secure place not on the machine so you will still have a record in case the machine is stolen.

The warranty on this plow appears on your copy of the purchase order which you should have received from your dealer when you purchased the plow.



Contents

Page**2-3 Safety****4 Identification Views****5-8 Preparing the Tractor****9-19 Preparing the Plow****20-26 Attaching and Detaching****27-31 Transporting****32-57 Operating the Plow****58-59 Attachments****60-64 Lubrication****65-66 Trouble Shooting****67-71 Service****72 Storage****73-74 Specifications****75 Index**




Safety

2-3

Transport Safely

While transporting the plow on a public road, install transport safety locks and follow safety instructions outlined under "Transporting."

Use care when transporting across rough ground.

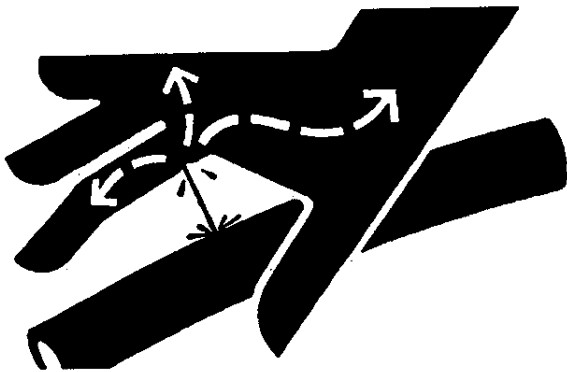

Avoid High-Pressure Fluids

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

X3811

Operate the Plow Safely

Never ride or permit others to ride on the plow.

Allow the tailwheel to clear the furrow before making sharp turns at end of field.

Stay clear of standards while plowing.

Stay clear of the reset path if the standards hang in a partially-tripped position from an obstruction or during maintenance.

Always lower the plow to the ground when not in use.

Always use the support stand to support the plow before unhitching from the tractor.

Lower plow to within 50 mm (2 in.) of ground before releasing quick-coupler latch handles.

Do Not Modify the Plow

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

Buy Now



Our support email:

ebooklibonline@outlook.com