


REPAIR MANUAL

CLAAS

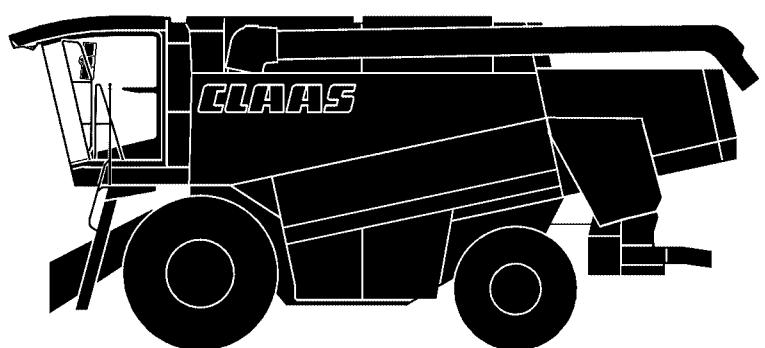

LEXION 480

CONTENTS

1. General information

General	1.1.1
Introduction	1.1.1
Introduction to the CLAAS Repair Manual	1.1.2
Key to symbols	1.1.3
Safety Rules	1.2.1
Important notice	1.2.1
Identification of warning and danger signs	1.2.2
Correct use of the machine	1.2.2
General safety and accident prevention regulations	1.2.2
Leaving the machine	1.2.3
Compressor-type air conditioner	1.2.3
Maintenance	1.2.3
Basic rule	1.2.3
Pressure accumulator	1.2.3
General repair information	1.3.1
Reason of damage	1.3.1
Spare parts	1.3.1
Engine	1.3.1
Gearboxes	1.3.1
Alternator	1.3.1
Tensioning the steel roller chains	1.3.1
Taper ring fasteners	1.3.1
Self-locking bolts	1.3.1
Liquid locking compound	1.3.2
Correct installation of lock collar bearings	1.3.2
Correct installation of adapter sleeve bearings	1.3.2
Ferrule fittings on hydraulic lines	1.3.2
Progressive ring fittings on hydraulic lines	1.3.3
Taper fittings on hydraulic lines	1.3.3
Welding	1.3.4
Some advice for speedy and correct repair work	1.3.4
Tightening torques	1.4.1
Bolts	1.4.1
Hydraulic fittings	1.4.2
Brake line screw joints	1.4.3
Wheel bolts	1.4.4
Safety features	1.4.4
Specifications	1.5.1
Lubricants chart	1.5.1
Hydraulic pressure values	1.5.2
Sectional view of machine	1.6.1
Drive diagram	1.7.1
Drive diagram, left-hand	1.7.1
Drive system diagram, right-hand side	1.7.2

2. Operator's platform

Air conditioner	2.1.1
Important instructions regarding the compressor-type air conditioning system	2.1.1
Important instructions regarding the installation of parts in the compressor-type air conditioner	2.1.2
Air conditioning system – Topping up refrigerant	2.1.3
Checking / topping up the refrigerant oil level at the air conditioner compressor	2.1.4
Topping up refrigerant oil	2.1.5

Removing the condenser	2.1.5
Refitting the condenser	2.1.6
Removing the air conditioner compressor	2.1.7
Installing the air conditioner compressor	2.1.8
Removing the air conditioner compressor electro-magnetic clutch	2.1.8
Air conditioner compressor Sanden Sd 7h 15, disassembled	2.1.12
Installing the air conditioner compressor electro-magnetic clutch	2.1.13
Removing the air conditioner compressor cylinder head / cylinder head gasket	2.1.15
Installing the air conditioner compressor cylinder head / cylinder head gasket	2.1.16
Removing the air conditioner compressor shaft seal	2.1.17
Installing the air conditioner compressor shaft seal	2.1.19
Removing the expansion valve	2.1.20
Air conditioning system (cab side), disassembled	2.1.22
Installing the expansion valve	2.1.23
Removing the thermostat	2.1.23
Installing the thermostat	2.1.25
Removing the evaporator	2.1.26
Installing the evaporator	2.1.27
Removing the filter receiver drier	2.1.29
Filter receiver drier, disassembled	2.1.30
Installing the filter receiver drier	2.1.30
Steering	2.2.1
Scenes of failures on the Orbitrol steering unit	2.2.1
External leaks	2.2.1
Internal leaks	2.2.1
Removing the steering column	2.2.2
Disassembling the steering column	2.2.4
Steering column, disassembled	2.2.7
Assembling the steering column	2.2.8
Installing the steering column	2.2.9
Removing the valve block from the Orbitrol	2.2.11
Installing the valve block on the Orbitrol	2.2.12
Removing the Orbitrol	2.2.14
Orbitrol, disassembled	2.2.14
Installing the Orbitrol	2.2.15
Parking brake	2.3.1
Removing the parking brake	2.3.1
Installing the parking brake	2.3.2
Foot brake	2.4.1
Removing the master brake cylinder	2.4.1
Master brake cylinder, disassembled	2.4.1
Assembling the master brake cylinder	2.4.1
Installing the master brake cylinder	2.4.2
Adjusting the master brake cylinder	2.4.2
Engine electric system	2.5.1
Alternator	2.5.1

3. Threshing mechanism

Feed rake conveyor	3.1.1
Removing the feed rake conveyor	3.1.1
Installing the feed rake conveyor	3.1.3
Removing the intercepting piece	3.1.4
Installing the intercepting piece	3.1.4
Removing the feed rake conveyor	
suction blower	3.1.5
Disassembling the feed rake conveyor	
suction blower	3.1.5
Feed rake conveyor suction blower,	
disassembled	3.1.7
Assembling the feed rake conveyor	
suction blower	3.1.8
Installing the feed rake conveyor	
suction blower	3.1.9
Removing the top feed rake shaft	3.1.9
Feed rake top shaft, disassembled	3.1.14
Installing the feed rake top shaft	3.1.15
Removing the bottom feed rake roller	3.1.19
Bottom feed rake roller, disassembled	3.1.21
Assembling the bottom feed rake roller	3.1.21
Installing the bottom feed rake roller	3.1.21
Replacing the wooden ledges	3.1.22
Removing the intermediate floor	3.1.23
Installing the intermediate floor	3.1.25
Replacing the runners	3.1.25
Removing the intermediate drive shaft	3.1.26
Intermediate drive shaft, disassembled	3.1.30
Installing the intermediate drive shaft	3.1.31
Removing the reverser drive	3.1.32
Reverser drive, disassembled	3.1.34
Installing the reverser drive	3.1.35
Replacing the feeder chains	3.1.35
Threshing concave	3.2.1
Removing the stone trap	3.2.1
Installing the stone trap	3.2.1
Removing the preconcave	3.2.2
Preconcave, disassembled	3.2.5
Installing the preconcave	3.2.6
Removing the main concave	3.2.7
Main concave, disassembled	3.2.10
Installing the main concave	3.2.12
Basic concave setting	3.2.16
Adjusting the concave potentiometer	3.2.21
Learning the limit stops	3.2.21
Learning the limit stops	3.2.22
Accelerator	3.3.1
Removing the bearing assembly and	
the shaft on the right-hand side	3.3.1
Disassembling the right-hand bearing assembly	3.3.3
Assembling the right-hand bearing	3.3.3
Installing the right-hand bearing assembly	
and shaft	3.3.5
Removing the bearing assembly	
on the left-hand side	3.3.8
Disassembling the left-hand bearing assembly	3.3.10
Assembling the left-hand bearing assembly	3.3.11
Installing the left-hand bearing assembly	3.3.12
Replacing the accelerator caps	3.3.13
Removing the accelerator	3.3.14
Accelerator, disassembled	3.3.17
Installing the accelerator	3.3.18
Threshing drum	3.4.1
Removing the right-hand drum bearing assembly	3.4.1
Disassembling the right-hand drum bearing	3.4.3
Right-hand drum bearing, disassembled	3.4.4
Installing the right-hand drum bearing	3.4.5
Removing the left-hand drum bearing assembly	3.4.6
Disassembling the left-hand drum bearing	3.4.8
Left-hand drum bearing assembly,	
disassembled	3.4.8
Installing the left-hand drum bearing assembly	3.4.9
Removing the threshing drum	3.4.10
Threshing drum, disassembled	3.4.12
Renewing the beater bars	3.4.13
Removing the threshing drum shaft	3.4.14
Installing the threshing drum shaft	3.4.16
Installing the threshing drum	3.4.17
Impeller	3.5.1
Removing the right-hand impeller bearing	3.5.1
Installing the right-hand impeller bearing	3.5.3
Removing the left-hand impeller bearing	3.5.3
Installing the left-hand impeller bearing	3.5.5
Removing the impeller	3.5.6
Installing the impeller	3.5.8
Removing the flanged shaft	
(from serial no. ...)	3.5.9
Impeller disassembled	
(from serial no. ...)	3.5.10
Installing the flanged shaft	3.5.11
Removing the impeller shaft	
(up to serial no. ...)	3.5.12
Impeller disassembled	
(up to serial no. ...)	3.5.13
Installing the impeller shaft	
(up to serial no. ...)	3.5.14
Axial rotors	3.6.1
Removing the separation grates	3.6.1
Installing the separation grates	3.6.3
Removing the separating jacket	3.6.3
Installing the separating jacket	3.6.6
Removing the axial rotor supporting arm	3.6.7
Disassembling the axial rotor supporting arm	3.6.8
Supporting arm, disassembled	3.6.9
Installing the axial rotor supporting arm	3.6.9
Removing the axial rotor	3.6.11
Installing the axial rotor	3.6.13
Removing the hybrid unit completely	3.6.14
Installing the hybrid unit	3.6.22

4. Cleaning unit

Return pan	4.1.1
Lowering the return pan	
(from serial no. ...)	4.1.1
Raising and installing the return pan	
(from serial no. ...)	4.1.2

Removing the return pan	4.1.3
Rear rocker arm, disassembled	4.1.5
Installing the return pan	4.1.5
Sieve pan	4.2.1
Removing and installing the sieves	4.2.1
Removing the upper sieves (from serial no. ...)	4.2.1
Removing the lower sieves (from serial no. ...)	4.2.3
Installing the sieves (from serial no. ...)	4.2.4
Tightening torques of axial mountings for the upper and lower sieves (from serial no. ...)	4.2.4
Sieves – Basic setting (electric sieve adjustment – from serial no. ...)	4.2.5
Removing the upper sieves (up to serial no. ...)	4.2.5
Removing the lower sieves (up to serial no. ...)	4.2.7
Installing the sieves (up to serial no. ...)	4.2.8
Tightening torques of axial mountings for the upper and lower sieves (up to serial no. ...)	4.2.9
Sieves – Basic setting (electric sieve adjustment – up to serial no. ...)	4.2.9
Removing the 3-D upper sieve frame	4.2.10
3-D upper sieve frame, disassembled	4.2.15
Installing the 3-D upper sieve frame	4.2.16
Removing the sieve pan	4.2.17
Sieve pan, disassembled	4.2.20
Installing the sieve pan	4.2.21
Checking and adjusting the alignment of preparation floor and sieve pan	4.2.24
Preparation floor	4.3.1
Removing the preparation floor	4.3.1
Preparation floor, disassembled	4.3.3
Installing the preparation floor	4.3.4
3-D sieve pan control system	4.4.1
Adjusting the 3-D sieve pan control system	4.4.1
Adjusting pivot arm (A) with the “3-D gauge”	4.4.2
Rocker arm drive	4.5.1
Removing the intermediate drive shaft for the rocker arm drive	4.5.1
Intermediate drive shaft for rocker arm drive, disassembled	4.5.2
Installing the intermediate drive shaft for the rocker arm drive	4.5.3
Cleaning fan	4.6.1
Removing the bearings of the cleaning fan	4.6.1
Cleaning fan bearing, disassembled	4.6.4
Installing the cleaning fan bearing	4.6.4
Removing the cleaning fan shaft	4.6.5
Removing the centre cleaning fan bearing	4.6.9
Centre cleaning fan bearing, disassembled	4.6.9
Installing the cleaning fan shaft	4.6.10
Removing the cleaning fan rotors	4.6.11
Installing the cleaning fan rotors	4.6.11
Removing the cleaning fan housing	4.6.12
Installing the cleaning fan housing	4.6.14
5. Grain delivery	
Returns elevator	5.1.1
Removing the returns elevator chain	5.1.1
Installing the returns elevator chain	5.1.3
Removing the top returns auger	5.1.3
Installing the top returns auger	5.1.5
Removing the returns elevator	5.1.6
Disassembling the returns elevator	5.1.7
Assembling the returns elevator	5.1.9
Installing the returns elevator	5.1.9
Removing the returns elevator boot	5.1.10
Installing the returns elevator boot	5.1.11
Removing the lower returns auger	5.1.11
Installing the lower returns auger	5.1.13
Grain elevator	5.2.1
Removing the clean grain elevator chain	5.2.1
Installing the clean grain elevator chain	5.2.2
Removing the clean grain elevator head	5.2.3
Dismantling the clean grain elevator head	5.2.4
Clean grain elevator head, disassembled	5.2.6
Assembling and installing the clean grain elevator head	5.2.7
Removing the clean grain elevator shaft	5.2.7
Installing the grain elevator shaft	5.2.8
Removing the clean grain elevator boot	5.2.9
Installing the clean grain elevator boot	5.2.10
Removing the clean grain auger	5.2.10
Installing the clean grain auger	5.2.13
Removing the grain tank filler auger	5.2.14
Removing the grain tank filler auger angle drive	5.2.15
Disassembling the grain tank filler auger angle drive	5.2.16
Grain tank filler auger, disassembled	5.2.17
Installing the grain tank filler auger	5.2.18
Grain tank unloading	5.3.1
Removing the grain tank cross auger	5.3.1
Grain tank cross augers, disassembled	5.3.4
Installing the grain tank cross auger	5.3.5
Removing the vertical grain tank unloading auger	5.3.7
Installing the vertical grain tank unloading auger	5.3.10
Removing the horizontal grain tank unloading auger	5.3.11
Installing the horizontal grain tank unloading auger	5.3.13
Removing the lower grain tank unloading angle drive (from serial no. ...)	5.3.13
Disassembling the lower grain tank unloading angle drive (from serial no. ...)	5.3.15

Lower grain tank unloading angle drive, disassembled (from serial no.)	5.3.18	7. Drives	
Assembling the lower grain tank unloading angle drive (from serial no.)	5.3.19	Drive belts	7.1.1
Installing the lower grain tank unloading angle drive (from serial no.)	5.3.22	General Information	7.1.1
Removing the lower grain tank unloading angle drive (up to serial no.)	5.3.23	Drive diagram	7.1.2
Disassembling the lower grain tank unloading angle drive (up to serial no.)	5.3.24	Drive diagram, left-hand	7.1.2
Lower grain tank unloading angle drive, disassembled (up to serial no.)	5.3.27	Drive system diagram, right-hand side	7.1.3
Assembling the lower grain tank unloading angle drive (up to serial no.)	5.3.28	Left-hand drive belts	7.2.1
Installing the lower grain tank unloading angle drive (up to serial no.)	5.3.31	Removing the cutterbar drive belt (1) (Cutterbar drive without variable-speed drive)	7.2.1
Removing the upper grain tank unloading angle drive	5.3.32	Installing and adjusting the cutterbar drive belt (1) (Cutterbar drive without variable-speed drive)	7.2.2
Disassembling the upper grain tank unloading angle drive	5.3.33	Removing the cutterbar drive belt (2) (Cutterbar drive with variable-speed drive)	7.2.3
Upper grain tank unloading angle drive, disassembled	5.3.34	Installing and adjusting the cutterbar drive belt (2) (Cutterbar drive with variable-speed drive)	7.2.4
Assembling the upper grain tank unloading angle drive	5.3.35	Removing the cutterbar variable-speed drive belt (3)	7.2.5
Installing the upper grain tank unloading angle drive	5.3.38	Installing and adjusting the cutterbar variable-speed drive belt (3)	7.2.6
Removing the grain tank unloading tube	5.3.39	Removing the impeller drive belt (4)	7.2.7
Refitting the unloading auger tube	5.3.40	Installing and adjusting the impeller drive belt (4)	7.2.8
Removing the grain tank unloading tube elbow	5.3.40	Removing the cutterbar intermediate drive belt (5)	7.2.9
Installing the grain tank unloading tube elbow	5.3.41	Installing and adjusting the cutterbar intermediate drive belt (5)	7.2.10
Removing the vertical unloading auger tube	5.3.41	Removing the uni-spreader hydraulic pump drive belt (6)	7.2.11
Installing the vertical unloading auger tube	5.3.42	Installing and adjusting the uni-spreader hydraulic pump drive belt (6)	7.2.11
6. Straw discharge		Removing the main intermediate drive belt (7)	7.2.12
Straw chopper	6.1.1	Installing and adjusting the main intermediate drive belt (7)	7.2.14
Removing the right-hand straw chopper bearing	6.1.1	Removing the grain tank unloading intermediate drive belt (8)	7.2.16
Right-hand straw chopper bearing assembly, disassembled	6.1.3	Installing and adjusting the grain tank unloading intermediate drive belt (8)	7.2.17
Installing the right-hand straw chopper bearing	6.1.3	Removing the straw chopper intermediate drive belt (9)	7.2.18
Removing the left-hand straw chopper bearing	6.1.5	Installing and adjusting the straw chopper intermediate drive belt (9)	7.2.19
Left-hand straw chopper bearing assembly, disassembled	6.1.6	Removing the straw chopper drive belts (10 and 11)	7.2.20
Installing the left-hand straw chopper bearing	6.1.6	Installing and adjusting the straw chopper drive belts (10 and 11)	7.2.22
Removing the cutting cylinder	6.1.7	Removing the uni-spreader intermediate drive belt (12)	7.2.23
Cutting cylinder, disassembled	6.1.11	Installing and adjusting the uni-spreader intermediate drive belt (12)	7.2.24
Installing the cutting cylinder	6.1.12	Removing the sieve pan intermediate drive belt (13)	7.2.25
Replacing the free-swinging knives	6.1.13	Installing and adjusting the sieve pan intermediate drive belt (13)	7.2.26
Uni-spreader	6.2.1	Removing the sieve pan intermediate drive belt (14)	7.2.27
Removing the fan blade bearings	6.2.1	Installing and adjusting the sieve pan intermediate drive belt (14)	7.2.28
Assembling and installing the fan blade bearing	6.2.8	Removing the sieve pan drive belt (15)	7.2.29

Installing and adjusting the sieve pan drive belt (15)	7.2.31	Installing and adjusting the straw spreader drive belt (36)	7.3.29
Removing the uni-spreader drive belt (16)	7.2.32	Cutterbar drive	7.4.1
Installing and adjusting the uni-spreader drive belt (16)	7.2.33	Removing the front pulley of cutterbar drive (1)	7.4.1
Removing the grain tank unloading drive chain (17)	7.2.34	Installing the front pulley of cutterbar drive (1)	7.4.2
Installing and adjusting the grain tank unloading drive chain (17)	7.2.35	Removing the deflection pulley of cutterbar drive (1)	7.4.2
Right-hand drive belts	7.3.1	Deflection pulley of cutterbar drive (1), disassembled	7.4.3
Adjusting the axial rotor step drive (18)	7.3.1	Installing the deflection pulley of cutterbar drive (1)	7.4.3
Adjusting the axial rotor intermediate drive (19)	7.3.2	Removing the slip clutch of cutterbar drive (1)	7.4.3
Removing the fan intermediate drive belt (20)	7.3.3	Installing the slip clutch of cutterbar drive (1)	7.4.4
Installing and adjusting the fan intermediate drive belt (20)	7.3.4	Replacing the slip clutch linings of cutterbar drive (1)	7.4.5
Removing the fan drive belt (21)	7.3.5	Slip clutch of cutterbar drive (1), dismantled	7.4.5
Installing and adjusting the fan drive belt (21)	7.3.5	Removing the jockey pulley of cutterbar drive (1)	7.4.7
Removing the threshing mechanism variable-speed drive belt (22)	7.3.6	Jockey pulley of cutterbar drive (1), disassembled	7.4.7
Installing and adjusting the threshing mechanism variable-speed drive belt (22)	7.3.7	Removing the rear pulley of cutterbar drive (1) (up to serial no. ...)	7.4.7
Removing the threshing drum drive belt (23)	7.3.8	Dismantling the rear pulley of cutterbar drive (1) (up to serial no. ...)	7.4.10
Installing and adjusting the threshing drum drive belt (23)	7.3.9	Rear pulley of cutterbar drive (1), disassembled (up to serial no. ...)	7.4.12
Removing the accelerator drive belt (24)	7.3.10	Assembling the rear pulley of cutterbar drive (1) (up to serial no. ...)	7.4.13
Installing and adjusting the accelerator drive belt (24)	7.3.11	Installing the rear pulley of cutterbar drive (1) (up to serial no. ...)	7.4.15
Removing the radiator chaff screen intermediate drive belt (25)	7.3.12	Removing the rear pulley of cutterbar drive (1) (from serial no. ...)	7.4.17
Installing and adjusting the rotary chaff screen intermediate drive belt (25)	7.3.13	Dismantling the rear pulley of cutterbar drive (1) (from serial no. ...)	7.4.20
Removing the radiator chaff screen drive belt (26)	7.3.14	Rear pulley of cutterbar drive (1), disassembled (from serial no. ...)	7.4.22
Installing and adjusting the rotary chaff screen drive belt (26)	7.3.14	Assembling the rear pulley of cutterbar drive (1) (from serial no. ...)	7.4.23
Removing the fan drive belt (27)	7.3.15	Installing the rear pulley of cutterbar drive (1) (from serial no. ...)	7.4.24
Installing and adjusting the fan drive belt (27)	7.3.16	Removing the cutterbar variable-speed pulley assembly (spring-loaded)	7.4.26
Removing the suction blower drive belt (28)	7.3.17	Disassembling the cutterbar variable-speed pulley assembly (spring-loaded)	7.4.27
Installing and adjusting the suction blower drive belt (28)	7.3.18	Cutterbar variable-speed pulley assembly (spring-loaded), disassembled	7.4.30
Removing the air conditioner compressor drive belt (29)	7.3.19	Assembling the cutterbar variable-speed pulley assembly (spring-loaded)	7.4.31
Installing and adjusting the air conditioner compressor drive belt (29)	7.3.20	Installing the cutterbar variable-speed pulley assembly (spring-loaded)	7.4.35
Removing the compressed-air compressor drive belt (30)	7.3.21	Removing the cutterbar drive V-belt pulley when a cutterbar variable-speed drive is fitted	7.4.37
Installing and adjusting the compressed-air compressor drive belt (30)	7.3.22	Disassembling the cutterbar drive V-belt pulley when a cutterbar variable-speed drive is fitted	7.4.37
Removing the alternator drive belt (31)	7.3.23	Cutterbar drive V-belt pulley with a cutterbar variable-speed drive fitted, disassembled	7.4.39
Installing and adjusting the alternator drive belt (31)	7.3.24		
Removing the feed rake conveyor suction blower drive belt (34)	7.3.26		
Installing and adjusting the feed rake conveyor suction blower drive belt (34)	7.3.27		
Removing the straw spreader drive belt (36)	7.3.28		

Assembling the cutterbar drive V-belt pulley with a cutterbar variable-speed drive fitted	7.4.40	Assembling the threshing mechanism drive pulley	7.6.21
Installing the cutterbar drive V-belt pulley with a cutterbar variable-speed drive fitted	7.4.42	Installing the threshing mechanism drive pulley	7.6.23
Removing and disassembling the cutterbar drive deflection pulley (2) with a cutterbar variable-speed drive fitted	7.4.42	Threshing drum reduction gearbox	7.7.1
Assembling and installing the cutterbar drive deflection pulley (2) with a cutterbar variable-speed drive fitted	7.4.43	Removing the threshing drum reduction gearbox	7.7.1
Removing the cutterbar variable-speed pulley assembly (hydraulic)	7.4.43	Disassembling the threshing drum reduction gearbox	7.7.2
Disassembling the cutterbar variable-speed pulley assembly (hydraulic)	7.4.46	Threshing drum reduction gearbox, disassembled	7.7.6
Cutterbar variable-speed pulley assembly (hydraulic), disassembled	7.4.48	Assembling the threshing drum reduction gearbox	7.7.8
Assembling the cutterbar variable-speed pulley assembly (hydraulic)	7.4.50	Installing the threshing drum reduction gearbox	7.7.11
Installing the cutterbar variable-speed pulley assembly (hydraulic)	7.4.51	Threshing mechanism intermediate drive	7.8.1
Removing the cutterbar clutch	7.4.52	Removing the right-hand intermediate drive shaft bearing	7.8.1
Cutterbar clutch, disassembled	7.4.59	Installing the right-hand intermediate drive shaft bearing	7.8.2
Installing the cutterbar clutch	7.4.60	Removing the left-hand intermediate drive shaft bearing	7.8.2
Left-hand threshing mechanism drive	7.5.1	Installing the left-hand intermediate drive shaft bearing	7.8.3
Removing the threshing mechanism drive pulley assembly	7.5.1	Removing the intermediate drive shaft	7.8.4
Threshing mechanism drive pulley assembly, disassembled	7.5.7	Installing the intermediate drive shaft	7.8.4
Installing the threshing mechanism drive pulley assembly	7.5.8	Grain tank unloading drive	7.9.1
Right-hand threshing mechanism drive	7.6.1	Removing the grain tank unloading drive pulley	7.9.1
Removing the threshing drum variable-speed pulley assembly (hydraulic)	7.6.1	Installing the grain tank unloading drive pulley	7.9.3
Disassembling the threshing drum variable-speed pulley assembly (hydraulic)	7.6.2	Chopper drive	7.10.1
Threshing drum variable-speed pulley assembly (hydraulic), disassembled	7.6.4	Removing the stage 1 chopper drive V-belt pulley	7.10.1
Assembling the threshing drum variable-speed pulley assembly (hydraulic)	7.6.6	Stage 1 chopper drive V-belt pulley, disassembled	7.10.3
Installing the threshing drum variable-speed pulley assembly (hydraulic)	7.6.6	Assembling and installing the stage 1 chopper drive V-belt pulley	7.10.4
Removing the threshing drum variable-speed pulley assembly (spring-loaded)	7.6.7	Removing the stage 2 chopper drive V-belt pulley	7.10.6
Disassembling the threshing drum variable-speed pulley assembly (spring-loaded)	7.6.8	Stage 2 chopper drive V-belt pulley, disassembled	7.10.8
Threshing drum variable-speed pulley assembly (spring-loaded), disassembled	7.6.11	Assembling and installing the stage 2 chopper drive V-belt pulley	7.10.9
Assembling the threshing drum variable-speed pulley assembly (spring-loaded)	7.6.12	Removing the jockey pulley of straw chopper drive (10)	7.10.11
Installing the threshing drum variable-speed pulley assembly (spring-loaded)	7.6.16	Jockey pulley of straw chopper drive (10), disassembled	7.10.11
Removing the threshing mechanism drive pulley	7.6.18	Assembling and installing the jockey pulley of straw chopper drive (10)	7.10.11
Disassembling the threshing mechanism drive pulley	7.6.18	Removing the jockey pulley of straw chopper drive (11)	7.10.12
Threshing mechanism drive pulley, disassembled	7.6.20	Jockey pulley of straw chopper drive (11), disassembled	7.10.12
		Assembling and installing the jockey pulley of straw chopper drive (11)	7.10.13
		Removing the stage 3 chopper drive V-belt pulley	7.10.13

Disassembling the stage 3 chopper	
drive V-belt pulley	7.10.15
Stage 3 chopper drive V-belt pulley,	
dismantled	7.10.17
Assembling and installing the stage 3 chopper	
drive V-belt pulley	7.10.18
Straw spreader drive	7.11.1
Removing the straw spreader bearing housing	7.11.1
Disassembling the straw spreader bearing housing	7.11.2
Straw spreader bearing housing, disassembled	7.11.5
Assembling the straw spreader bearing housing	7.11.7
Installing the straw spreader bearing housing	7.11.9
Uni-spreader drive	7.12.1
Removing the uni-spreader drive angle drive	7.12.1
Mounting the uni-spreader drive angle drive	7.12.2
Sieve pan drive	7.13.1
Removing the sieve pan drive V-belt pulley	7.13.1
Sieve pan drive V-belt pulley, disassembled	7.13.2
Installing the sieve pan drive V-belt pulley	7.13.3
Removing the front sieve pan drive	
deflection pulley	7.13.4
Front sieve pan drive deflection pulley,	
disassembled	7.13.4
Assembling the front sieve pan drive	
deflection pulley	7.13.5
Installing the front sieve pan drive	
deflection pulley	7.13.5
Removing the rear sieve pan drive	
deflection pulley	7.13.5
Rear sieve pan drive deflection pulley,	
disassembled	7.13.6
Assembling the rear sieve pan drive	
deflection pulley	7.13.7
Installing the rear sieve pan drive	
deflection pulley	7.13.7
Fan drive	7.14.1
Removing the stage 1 fan drive V-belt pulley	7.14.1
Stage 1 fan drive V-belt pulley, disassembled	7.14.1
Installing the stage 1 fan drive V-belt pulley	7.14.1
Fan adjustment (electric)	7.14.2
Fan adjustment (electric)	
Version 1	
(up to serial no. ...)	7.14.3
Fan adjustment (electric)	
Version 2	
(from serial no. ., up to serial no. .)	7.14.4
Fan adjustment (electric)	
Version 3	
(from serial no. ...)	7.14.5
Removing the fan adjustment (electric)	
(Version 1)	7.14.6
Disassembling the fan adjustment (electric)	
(Version 1)	7.14.7
Fan adjustment (electric), disassembled	
(Version 1)	7.14.9
Assembling the fan adjustment (electric)	
(Version 1)	7.14.10
Installing the fan adjustment (electric)	
(Version 1)	7.14.12
Removing the fan adjustment (electric)	
(Version 1, version 3)	7.14.14
Disassembling the fan adjustment (electric)	
(Version 1, version 3)	7.14.15
Fan adjustment (electric), disassembled	
(Version 1, version 3)	7.14.17
Assembling the fan adjustment (electric)	
(Version 1, version 3)	7.14.18
Installing the fan adjustment (electric)	
(Version 1, version 3)	7.14.20
Removing the fan adjustment (electric)	
(Version 2)	7.14.22
Disassembling the fan adjustment (electric)	
(Version 2)	7.14.23
Fan adjustment (electric), disassembled	
(Version 2)	7.14.25
Assembling the fan adjustment (electric)	
(Version 2)	7.14.26
Installing the fan adjustment (electric)	
(Version 2)	7.14.29
Removing the fan variable-speed drive	
(electric)	7.14.31
Electric fan variable-speed pulley assembly,	
disassembled	7.14.32
Assembling and installing the electric fan	
variable-speed pulley assembly	7.14.33
Removing the fan drive jockey pulley (20)	7.14.36
Fan drive jockey pulley (20), disassembled	7.14.36
Installing the fan drive jockey pulley (20)	7.14.37
Removing the fan variable-speed	
pulley assembly (spring-loaded)	7.14.37
Disassembling the fan drive variable-speed	
pulley assembly (spring-loaded)	7.14.38
Fan variable-speed pulley assembly	
(spring-loaded), disassembled	7.14.40
Assembling the fan variable-speed	
pulley assembly (spring-loaded)	7.14.41
Installing and adjusting the fan variable-speed	
pulley assembly (spring-loaded)	7.14.42
Axial rotor drive	7.15.1
Removing the axial rotor intermediate	
drive V-belt pulley	7.15.1
Axial rotor intermediate drive V-belt pulley,	
disassembled	7.15.3
Assembling and installing the axial rotor	
intermediate drive V-belt pulley	7.15.4
Removing the axial rotors drive jockey	
pulley (18)	7.15.6
Axial rotor drive jockey pulley (18),	
disassembled	7.15.6
Installing the axial rotors drive jockey	
pulley (18)	7.15.7
Removing the bearings of axial rotors	
drive (18)	7.15.7
Bearing of axial rotors drive (18),	
disassembled	7.15.9

Installing the bearings of axial rotors	7.15.10
drive (18)	7.15.11
Removing the axial rotors drive	7.15.11
Disassembling the axial rotor gearbox	7.15.12
Axial rotor gearbox, disassembled	7.15.15
Assembling the axial rotor gearbox	7.15.16
Installing the axial rotor gearbox	7.15.20
Engine output	7.16.1
Removing the engine output pulley	7.16.1
Installing the engine output pulley	7.16.1
Removing the transfer gearbox	7.16.2
Disassembling the transfer gearbox	7.16.7
Transfer gearbox, disassembled	7.16.11
Assembling the transfer gearbox	7.16.12
Installing the transfer gearbox	7.16.19
Rotary screen drive	7.17.1
Removing the rotary screen drive	7.17.1
Disassembling the rotary screen drive	7.17.1
Rotary screen drive, disassembled	7.17.3
Assembling and installing the rotary screen drive	7.17.4
Removing the fan drive	7.17.5
Installing the fan drive	7.17.5
Final drives	7.18.1
Removing the final drive gearbox	7.18.1
Disassembling the final drive gearbox	7.18.1
Removing the wheel drive shaft	7.18.1
Removing the intermediate shaft	7.18.3
Removing the drive shaft	7.18.5
Final drive gearbox, disassembled	7.18.6
Assembling the final drive gearbox	7.18.7
Installing the drive shaft	7.18.7
Installing the intermediate shaft	7.18.8
Installing the wheel drive shaft	7.18.11
Disassembling the planetary	
final drive gearbox	7.18.15
Planetary final drive gearbox,	
disassembled	7.18.22
Assembling the planetary	
final drive gearbox	7.18.23
Installing the final drive gearbox	7.18.27
Manual gearbox	7.19.1
Removing the manual gearbox	7.19.1
Disassembling the manual gearbox	7.19.3
Removing the shifter rails	7.19.3
Removing the drive shaft	7.19.5
Removing the main shaft	7.19.6
Removing the differential	7.19.8
Disassembling the differential	7.19.9
Differential, disassembled	7.19.11
Assembling the differential	7.19.11
Installing the differential	7.19.13
Manual gearbox, disassembled	7.19.15
Assembling the manual gearbox	7.19.16
Installing the main shaft	7.19.17
Installing the drive shaft	7.19.18
Installing the shifter rails	7.19.19
Installing the manual gearbox	7.19.22
Servo gearshift	7.19.25
Removing the shifter pistons	7.19.25
Servo gearshift, disassembled	7.19.27
Installing the shifter pistons	7.19.27
Bleeding the shifter piston	7.19.28
Brake	7.20.1
Parking brake – Replacing the brake linings	7.20.1
Bleeding the brake system	7.20.2
Disc brake – Changing the brake pads	7.20.2
Removing a brake calliper	7.20.3
Installing a brake calliper	7.20.4
Steering axle	7.21.1
Removing the wheel bearing	7.21.1
Wheel bearing, disassembled	7.21.4
Installing the wheel bearing	7.21.5
Removing the stub axle	7.21.7
Stub axle, disassembled	7.21.10
Installing the stub axle	7.21.10
Setting the track width	7.21.13
Adjusting the steering axle end stops	7.21.15
Removing the steering axle	7.21.16
Steering axle bearing, disassembled	7.21.18
Installing the steering axle	7.21.19

8. Machine body

Rotary screen	8.1.1
Removing the rotary screen	8.1.1
Disassembling the rotary screen	8.1.1
Rotary screen, disassembled	8.1.3
Assembling and installing the rotary screen	8.1.4
Trough and lateral panel, disassembled	8.1.6
Adjusting the trough and the lateral panel	
(if suction blower with drive is fitted)	8.1.7
Removing the fan drive	8.1.8
Installing the fan drive	8.1.8
Removing the rotary screen suction blower	8.1.9
Disassembling the rotary screen suction blower	8.1.9
Rotary screen suction blower, disassembled	8.1.11
Assembling and installing the rotary screen	
suction blower	8.1.12
Drive axle	8.2.1
Removing the drive axle	8.2.1
Installing the drive axle	8.2.4

9. Hydraulic system

Oil cooler	9.1.1
Removing the oil cooler	9.1.1
Installing the oil cooler	9.1.4
Maintenance	9.2.1
Hydraulic system	9.2.1
Checking the oil level	9.2.1
Changing the hydraulic oil	9.2.2
Filling instructions when changing the hydraulic oil	9.2.3
Hydraulic pumps	9.3.1
Removing the uni-spreader hydraulic pump	9.3.1
Disassembling the uni-spreader hydraulic pump	9.3.2
Uni-spreader hydraulic pump, disassembled	9.3.3
Assembling the uni-spreader hydraulic pump	9.3.3
Installing the uni-spreader hydraulic pump	9.3.4
Removing the ground drive hydraulic pump	9.3.4

Installing the ground drive hydraulic pump	9.3.7
Removing the hydraulic double pump	9.3.8
Installing the hydraulic double pump	9.3.8
Hydrostatic fixed displacement motors	9.4.1
Removing the ground drive hydrostatic fixed displacement motor	9.4.1
Installing the ground drive hydrostatic fixed displacement motor	9.4.3
Removing the reverser drive hydrostatic fixed displacement motor	9.4.5
Reverser drive hydrostatic fixed displacement motor, disassembled	9.4.8
Installing the reverser drive hydrostatic fixed displacement motor	9.4.9
Hydraulic cylinders – High-pressure hydraulic circuit	9.5.1
Removing the cutterbar cross levelling hydraulic cylinders	9.5.1
Disassembling the cutterbar cross levelling hydraulic cylinders	9.5.1
Cutterbar cross levelling hydraulic cylinder, disassembled	9.5.3
Assembling the cutterbar cross levelling hydraulic cylinders	9.5.4
Installing the cutterbar cross levelling hydraulic cylinders	9.5.4
Bleeding the cutterbar cross levelling hydraulic cylinders	9.5.6
Removing the cutterbar hydraulic cylinders	9.5.7
Cutterbar hydraulic cylinders –	
Replacing the seals	9.5.7
Disassembling the cutterbar hydraulic cylinders	9.5.8
Cutterbar hydraulic cylinder, disassembled	9.5.10
Assembling the cutterbar hydraulic cylinder	9.5.11
Installing the cutterbar hydraulic cylinders	9.5.12
Adjusting the cutterbar hydraulic cylinders	9.5.12
Removing the cutterbar variable-speed drive hydraulic cylinder	9.5.13
Installing the cutterbar variable-speed drive hydraulic cylinder	9.5.14
Disassembling the rotary coupling	9.5.14
Rotary coupling, disassembled	9.5.16
Assembling the rotary coupling	9.5.17
Removing the concave adjustment hydraulic cylinder	9.5.18
Disassembling the concave adjustment hydraulic cylinder	9.5.19
Concave adjustment hydraulic cylinder, disassembled	9.5.21
Assembling the concave adjustment hydraulic cylinder	9.5.22
Installing the concave adjustment hydraulic cylinder	9.5.23
Removing the grain tank unloading tube swing hydraulic cylinder	9.5.23
Disassembling the grain tank unloading tube swing hydraulic cylinder	9.5.23
Grain tank unloading tube swing hydraulic cylinder, disassembled	9.5.25
Assembling the grain tank unloading tube swing hydraulic cylinder	9.5.26
Installing the grain tank unloading tube swing hydraulic cylinder	9.5.27
Removing the straw chopper drive hydraulic cylinder	9.5.27
Disassembling the straw chopper drive hydraulic cylinder	9.5.28
Straw chopper drive hydraulic cylinder, disassembled	9.5.29
Assembling the straw chopper drive hydraulic cylinder	9.5.29
Installing the straw chopper drive hydraulic cylinder	9.5.30
Removing the threshing drum variable-speed drive hydraulic cylinder	9.5.30
Installing the threshing drum variable-speed drive hydraulic cylinder	9.5.31
Removing the reverser drive hydraulic cylinder	9.5.32
Disassembling the reverser drive hydraulic cylinder	9.5.32
Reverser drive hydraulic cylinder, disassembled	9.5.33
Assembling the reverser drive hydraulic cylinder	9.5.34
Installing the reverser drive hydraulic cylinder	9.5.34
Hydraulic cylinders for low-pressure hydraulics	9.6.1
Removing the threshing mechanism engagement hydraulic cylinder	9.6.1
Disassembling the threshing mechanism engagement hydraulic cylinder	9.6.2
Threshing mechanism engagement hydraulic cylinder, disassembled	9.6.2
Assembling the threshing mechanism engagement hydraulic cylinder	9.6.3
Installing the threshing mechanism engagement hydraulic cylinder	9.6.4
Removing the grain tank unloading engagement hydraulic cylinder	9.6.4
Disassembling the grain tank unloading engagement hydraulic cylinder	9.6.5
Grain tank unloading engagement hydraulic cylinder, disassembled	9.6.6
Assembling the grain tank unloading engagement hydraulic cylinder	9.6.7
Installing the grain tank unloading engagement hydraulic cylinder	9.6.8
Removing the engine speed control hydraulic cylinder (from serial no. ...)	9.6.9
Disassembling the engine speed control hydraulic cylinder (from serial no. ...)	9.6.9
Engine speed control hydraulic cylinder, disassembled (from serial no. ...)	9.6.11

Assembling the engine speed control hydraulic cylinder (from serial no. ...)	9.6.12	Removing the yield meter moisture sensor hydraulic cylinder	9.6.35
Pre-setting the engine speed control hydraulic cylinder (from serial no. ...)	9.6.14	Disassembling the yield meter moisture sensor hydraulic cylinder	9.6.36
Installing the engine speed control hydraulic cylinder (from serial no. ...)	9.6.14	Yield meter moisture sensor hydraulic cylinder, disassembled	9.6.37
Setting the engine speed control hydraulic cylinder (from serial no. ...)	9.6.15	Assembling the yield meter moisture sensor hydraulic cylinder	9.6.37
Changing the road travel engine speed (country variants 20 km/h and/or 25 km/h) by converting the cylinder	9.6.16	Installing the yield meter moisture sensor hydraulic cylinder	9.6.38
Conversion of cylinder to another country variant (20 km/h and/or 25 km/h)	9.6.16	Checking and adjusting the yield meter hydraulic cylinder	9.6.38
Removing the engine speed control hydraulic cylinder (up to serial no. ...)	9.6.19	Yield meter hydraulic cylinder, disassembled	9.6.40
Disassembling the engine speed control hydraulic cylinder (up to serial no. ...)	9.6.20	Hydraulic cylinders – Steering hydraulics	9.7.1
Engine speed control hydraulic cylinder, disassembled (up to serial no. ...)	9.6.23	Removing the steering cylinder	9.7.1
Assembling the engine speed control hydraulic cylinder (up to serial no. ...)	9.6.24	Disassembling the steering cylinder	9.7.1
Pre-setting the engine speed control hydraulic cylinder (up to serial no. ...)	9.6.25	Steering cylinder, disassembled	9.7.3
Installing the engine speed control hydraulic cylinder (up to serial no. ...)	9.6.25	Assembling the steering cylinder	9.7.4
Setting the engine speed control hydraulic cylinder (up to serial no. ...)	9.6.26	Installing the steering cylinder	9.7.5
Removing the 3-D sieve pan hydraulic cylinder	9.6.28	Removing the Autopilot steering cylinder	9.7.5
Disassembling the 3-D sieve pan hydraulic cylinder	9.6.28	Disassembling the Autopilot steering cylinder	9.7.6
3-D sieve pan hydraulic cylinder, disassembled	9.6.29	Autopilot steering cylinder, disassembled	9.7.9
Assembling the 3-D sieve pan hydraulic cylinder	9.6.30	Assembling the Autopilot steering cylinder	9.7.10
Installing the 3-D sieve pan hydraulic cylinder	9.6.31	Installing the Autopilot steering cylinder	9.7.11
Removing the pendulum control unit of the 3-D sieve pan	9.6.31	Valve combinations	9.8.1
Disassembling the 3-D sieve pan pendulum control unit	9.6.31	Removing the feeder reversing 3/2-way valve	9.8.1
Pendulum control unit of 3-D sieve pan, disassembled	9.6.33	Feeder reversing 3/2-way valve, disassembled	9.8.1
Assembling the pendulum control unit for 3-D sieve pan	9.6.34	Removing the cutterbar cross levelling 4/3-way valve	9.8.2
Installing the 3-D sieve pan pendulum control unit	9.6.34	Cutterbar cross levelling 4/3-way valve, disassembled	9.8.3

Removing the concave and grain tank	
unloading tube 4/3 way valves	9.8.11
Concave and grain tank unloading tube	
4/3-way valve, disassembled	9.8.13
Assembling the concave and grain tank	
unloading tube 4/3-way valves	9.8.14
Installing the concave and grain tank	
unloading tube 4/3-way valves	9.8.14
Removing the main valve	
Main valve, disassembled	9.8.16
Assembling the main valve	
Main valve	9.8.17
Installing the main valve	
Main valve	9.8.17
Removing the CLAAS Autopilot	
solenoid valve	9.8.18
CLAAS Autopilot solenoid valve,	
disassembled	9.8.19
Assembling the CLAAS Autopilot	
solenoid valve	9.8.20
Installing the CLAAS Autopilot	
solenoid valve	9.8.20
Removing the low-pressure	
solenoid valve block	9.8.20
Low-pressure solenoid valve block,	
disassembled	9.8.22
Assembling the low-pressure	
solenoid valve block	9.8.23
Installing the low-pressure	
solenoid valve block	9.8.23
Removing the low-pressure solenoid valve	
(yield meter)	9.8.23
Yield meter 3/2-way solenoid valve,	
disassembled	9.8.25
Installing the low-pressure solenoid valve	
(yield meter)	9.8.26

10. Engine

Cooling system	10.1.1
Removing the intercooler	10.1.1
Installing the intercooler	10.1.3
Removing the radiator	10.1.3
Installing the radiator	10.1.6
Fuel system	10.2.1
Removing the fuel tank	10.2.1
Installing the fuel tank	10.2.2
Installing the additional fuel tank	10.2.2
Installing the additional fuel tank	10.2.4
Engine	10.3.1
Removing the engine	10.3.1
Installing the engine	10.3.7

11. Index

Index	11.1.1
-------------	--------

AIR CONDITIONER

Important instructions regarding the compressor-type air conditioning system



DANGER!

1. Never get in contact with refrigerants! Refrigerant may cause serious frostbites or injuries.
2. Always wear safety goggles when working on the air conditioning system.
3. When refrigerant splashes into the eyes or on the skin, flush with plenty of sterilized water or tap water immediately and consult a doctor.
4. Maintenance and repair should only be carried out by trained personnel with the correct equipment.
5. Prior to disassembling the refrigerant circuit for maintenance and repair purposes, the refrigerant must be extracted using an approved and suitable recovery system.
6. Never drain out refrigerant to the atmosphere.
7. When in direct contact with open flames or heated metal surfaces, refrigerant shows toxic or caustic reactions.
8. Never check tightness of air conditioning system using compressed air or oxygen – Danger of explosion!
9. Never clean filled air conditioning system with a hot water jet – Danger of explosion!

**Important instructions regarding the
installation of parts in the compressor-type air
conditioner**




ATTENTION!


1. Keep refrigerant circuit absolutely free of dust and humidity. To achieve this, close all loosened connections with suitable caps.



2. Caps of new parts should be removed only directly before installing them.

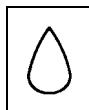

3. O-rings must always be replaced.

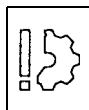

4. Prior to connecting a refrigerant line, apply some drops of refrigerant oil on the thread and the O-ring seat.

5. When tightening or loosening the refrigerant lines, always use two spanners in order to keep the lines from twisting.
-

Buy Now



Our support email:

ebooklibonline@outlook.com