

284 Tractor

Operators Manual

1058732C3

Reprinted

CASE III



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

To The Owner

Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effort less versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory trained servicemen, informed in the latest method of servicing tractors, and modern tools, and original-equipment IH service parts which assure proper fit and good performance.

To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester Dealer.

Before you operate the tractor, study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.


When in need of parts, always specify the tractor and engine serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces provided below.

THIS MANUAL IS FOR TRACTORS WITH SERIAL NUMBER OF
J012 925 AND ABOVE 284 Gasoline tractor
J000 501 AND ABOVE 284 Diesel tractor



METRIC (SI) MEASUREMENTS

A standard of measurement known as International System of Units (SI) has been adopted for world-wide use. English Units followed by Metric Equivalents are used throughout this manual. (Metric Equivalents are given in parentheses.)

Gasoline tractor

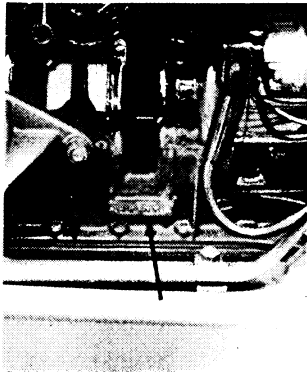

Diesel tractor

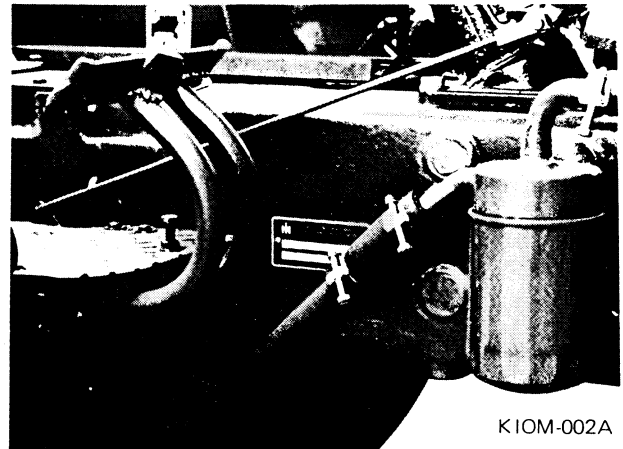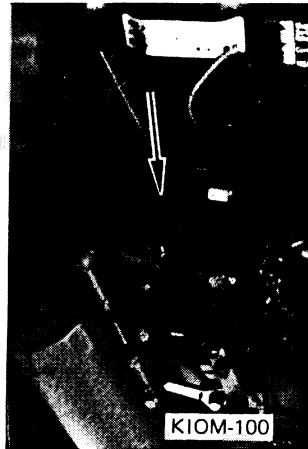

1. Engine serial number

2. Tractor serial number


CONTENTS

CONTENTS	1,2	OPERATING THE TRACTOR	20 thru 24
INTRODUCTION	3	Starting the Tractor	
WORK SAFELY—FOLLOW THESE RULES	4 thru 6	After the Engine Starts	
		Driving the Tractor	
		Driving on Slopes	
		Towing the Tractor	
		Driving on Public Road	
		Stopping the Tractor	
		Differential Lock	
		Hydraulic Auxiliary Valve (Optional)	
		Rear Work Lamp (Optional)	
		Power Steering (Optional)	
INSTRUMENTS AND CONTROLS	7 thru 15		
Brake pedals			
Brake latch			
Choke control (Gasoline tractor)			
Clutch pedal			
Differential lock pedal			
Drop control knob		POWER TAKE-OFF	25, 26
Engine speed control lever		General	
Flashing light switch		Changing the Power Take-Off	
Foot throttle control		Speeds	
Fuel shut off lever (Diesel tractor)		Operating the Power Take-Off	
Fuse block			
Gearshift lever			
Glow signal (Diesel tractor)			
Head and taillight switch			
Hood open knob		HYDRAULIC LIFT AND HITCH	
Ignition switch (Gasoline tractor)		SYSTEMS	27, 28
Instrument cluster (Tachometer, speedmeter, hour meter, water temperature tellite, oil pressure tellite, charge indicator tellite)		Position Control Lever Adjustable	
Starting switch key (Diesel tractor)		Stop	
Low fuel indicator lamp		Position Control Lever Lock	
Park brake lever		Drop Control Knob	
Position control lever		THREE POINT HITCH	29 thru 32
Position control lever adjustable stop		Lower Links and Upper Link	
Position control lever lock		Lower Link Adjustments	
Power take-off lever		Upper Link Adjustment	
Transmission range lever		Attaching to the Tractor	
		Stabilizer	
		Uncoupling the Implement	
		Removing the Three Point Hitch	
		Linkage	
		Installing the Three Point Hitch	
OPTIONAL INSTRUMENTS AND CONTROLS	16, 17	HITCHING TRAILING EQUIPMENT TO THE TRACTOR	33
Hydraulic Auxiliary Valve			
Rear Work Lamp			
Taillight			
All-Wheel Drive		FRONT WHEELS	34, 35
		Adjusting the Tread Width	
BEFORE OPERATING THE TRACTOR	18, 19	REAR WHEELS	35, 36
Lubrication		Adjusting the Tread Width	
Air Cleaning System			
Tires		WEIGHTS	37, 38
Engine Cooling System		Front End Weights	
Fuel		Front Wheel Weights	
Adjusting the Seat		Rear Wheel Weights	
Tractor Break-In Procedure			

CONTENTS

ALL WHEEL DRIVE	39, 40	Using the Spark Plug Tire Pump	61
The All-Wheel Drive Lever		Shipping Tractors Equipped with	
Front Wheel		Pneumatic Tires	61
Adjusting the Tread Width		Mounting Tires on the Rim	61
PREVENTIVE MAINTENANCE		Traction and Weights	61
GUIDE	41, 42	Overloading	61
PREVENTIVE MAINTENANCE	43	Brake	61
Hood	44	Brake Adjustment	62
Fuel System	44	Park Brake Adjustment	62
Fuel Shut Off Valve	45	Bleeding the Brake	62, 63
Filler Cap Air Vent	45	Care and Adjustment of the Engine	
Cleaning the Fuel Strainer and		Clutch	63
Sediment Bowl	45	Engine Speed Control	64
Fuel Filter	45	STORING THE TRACTOR	65
Carburetor (Gasoline tractor)	46	Storage	
Carburetor Adjustment (Gasoline		Removing from Storage	
tractor)	46	COLD WEATHER PRECAUTIONS	66
Draining Water from the Sediment		Fuel System	
Bowl (Diesel tractor)	47	Electrical	
Venting the Fuel System (Diesel		Lubrication	
tractor)	47	Cooling System	
Cooling System	47	LUBRICATION	66 thru 71
Adding Coolant to the Cooling		Checking the Oil Level	
System	48	Changing Engine Oil	
Draining the Cooling System	48	Changing Engine Oil Filter	
Cleaning the Cooling System	48	Gear Lubricant	
Filling the Cooling System	49	Transmission Breather	
Care of the Radiator	49	Lubrication Fitting Grease	
Water Pump Governor and		Hydraulic Fluid Filter	
Fan-Alternator Belt Tension	49, 50	Greasing the Front Wheels	
(Gasoline tractor)		Clutch Housing All-Wheel Drive Case	
Fan Belt Tension (Diesel tractor)	50, 51	Front Axle Differential Housing	
Dry-Type Air Cleaner	51, 52	Front Axle Final Drive Housing	
Electrical System	53, 54	LUBRICATION TABLE	72
Ignition System (Gasoline tractor)	54	LUBRICATION GUIDE	73, thru 77
Charging System and Alternator-		SPECIFICATIONS	78 thru 81
Generator	54, 55	EXTRA EQUIPMENT AND	
Lighting System	55	ACCESSORIES	82
Headlight Replacement	55	METRIC (SI) MEASUREMENTS	83
Flashing Warning Light	56		
Taillight (Optional)	56		
Rear Work Lamp (Optional)	56		
Fuse	57		
Battery	57, 58		
Tellite Bulb Replacement	58, 59		
Front and Rear Wheels	59		
Adjusting the Toe-in (2 wheel Drive)	59, 60		
Adjusting the Toe-in (All Wheel Drive)	60		
Tires	60		
Care of Tires	60		
Inflation	60		

INTRODUCTION

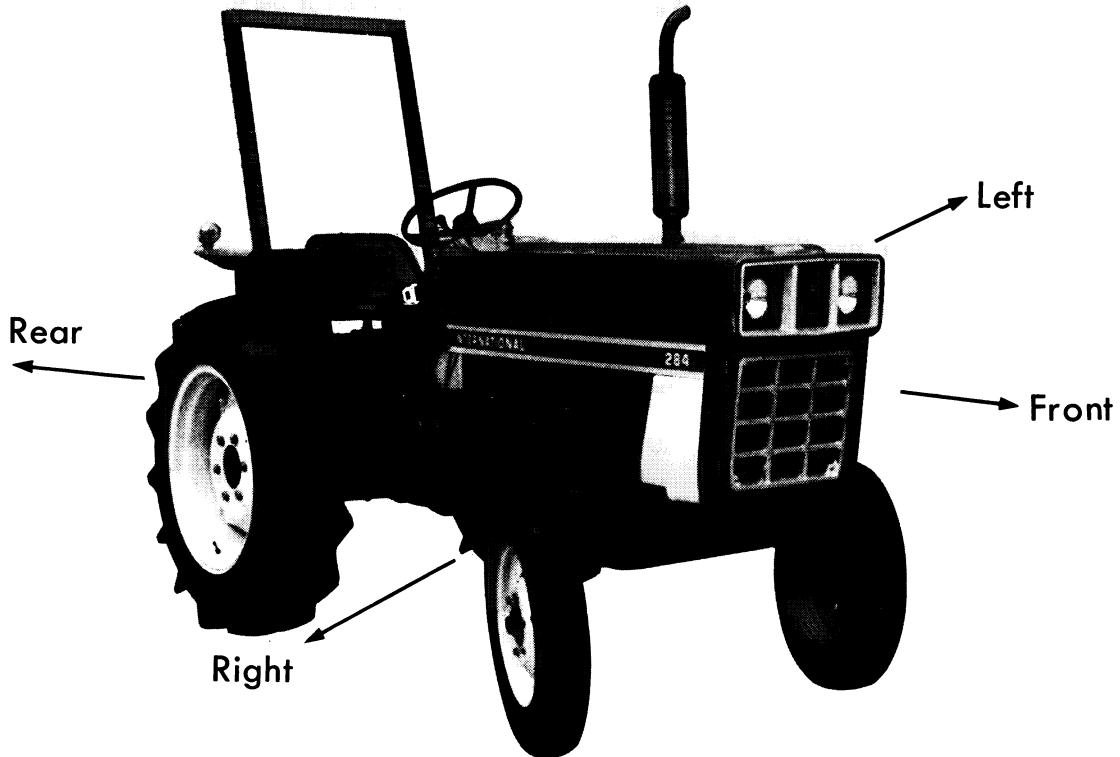

International 284 Tractor showing terms of location
(Tractor in picture with operator protective frame)



CAUTION! For your protection in the event of accidental upset, International Harvester Company recommends the use of a protective frame.

Assembled in this manual are operation, lubrication and maintenance instructions for International 284 Tractors. This material has been prepared in detail in the hope that it will help you to better understand the correct care, efficient and safe operation of the tractor.

Throughout this manual the use of the terms LEFT, RIGHT, FRONT, and REAR must be understood when following instructions to avoid confusion. LEFT and RIGHT indicate the left and right sides of the tractor when facing forward in the driver's seat. FRONT indicates the radiator end of the tractor; REAR indicates the hitch end.



CAUTION

Read the Operator's Manual.
Learn to operate this machine SAFELY.
Be alert Observe All Safety Practices.
Machines can be hazardous in the hands of an
UNFAMILIAR, UNTRAINED or COMPLACENT
operator.
Don't risk INJURY or DEATH.

Buy Now



Our support email:

ebooklibonline@outlook.com