

434 Tractor

Operators Manual

1080186R3

Reprinted

CASE III



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

OPERATORS MANUAL

INTERNATIONAL

434 TRACTOR

1080 186 R3


CONTENTS

	Page
DESCRIPTION	1
INTRODUCTION	3
SPECIFICATIONS	4
INSTRUMENTS AND CONTROLS	8
FOR BETTER PERFORMANCE AND SAFE OPERATION	14
BEFORE STARTING A NEW TRACTOR	15
PREPARING FOR EACH DAY'S WORK	16
OPERATION	
OPERATING THE ENGINE	18
OPERATING THE TRACTOR	19
THE "VARY-TOUCH" HYDRAULIC SYSTEM	22
THE MECHANICAL DEPTH CONTROL HYDRAULIC SYSTEM	25
REMOTE CYLINDERS ("VARY-TOUCH")	30
AUXILIARY CONTROL VALVES	32
SELF SEALING COUPLINGS	32
THREE POINT LINKAGE	33
CHECK CHAINS	35
AUTOMATIC HITCH ("VARY-TOUCH")	37
AUTOMATIC HITCH (MECHANICAL DEPTH CONTROL)	40
POWER TAKE-OFF ATTACHMENTS	41
BELT PULLEY ATTACHMENT	42
SPEED AMPLIFIER ATTACHMENT	43
WHEELS AND WHEEL WEIGHTS	45
WHEEL TREAD ADJUSTMENT	47
POWER ASSISTED STEERING ATTACHMENT	49
PREVENTIVE MAINTENANCE	
LUBRICANT SPECIFICATIONS	50
LUBRICATION GUIDE	52
LUBRICATION CHART	53
COLD WEATHER PRECAUTIONS	57
HOT WEATHER PRECAUTIONS	59
ROUTINE SERVICING SCHEDULE	60
MAINTENANCE	
COOLING SYSTEM	61
AIRCLEANING SYSTEM	63
ENGINE	65
DIESEL FUEL SYSTEM	68
PETROL FUEL SYSTEM	71
ENGINE CLUTCH	72
TRANSMISSION	73
SPEED AMPLIFIER	74
AXLES, WHEELS AND STEERING	75
BRAKES	76


CONTENTS - continued

	Page
HYDRAULIC SYSTEM	79
ELECTRICAL SYSTEM	81
BATTERY	81
GENERATOR	83
STARTING MOTOR	85
GLOWPLUGS	86
GLOWPLUG INDICATOR	87
DISTRIBUTOR	88
SPARK PLUGS	89
SEALED BEAM UNIT	89
DIESEL WIRING DIAGRAM	90
LEGEND FOR DIESEL WIRING DIAGRAM	91
PETROL WIRING DIAGRAM	93
LEGEND FOR PETROL WIRING DIAGRAM	94
FAULT TRACING	96
STORING THE TRACTOR	98
STARTING THE ENGINE AFTER STORAGE	99
WEIGHT ATTACHMENTS	100
OPTIONAL TYRE EQUIPMENT	100
ATTACHMENTS	101

DESCRIPTION

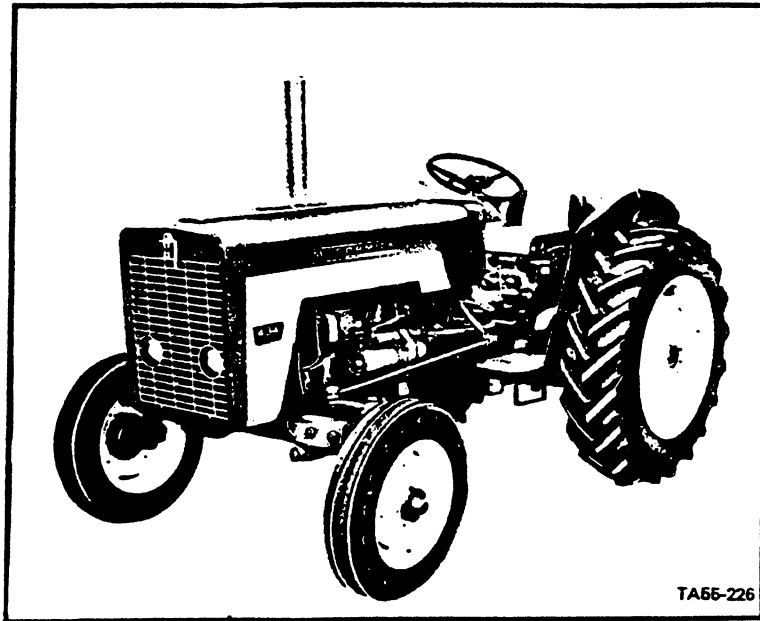


Illust.1 Left Hand View of the Standard Version

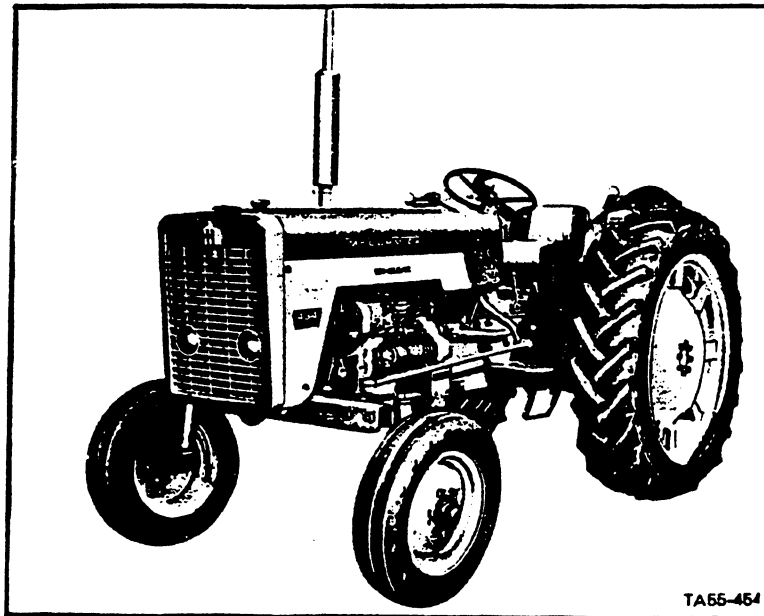


Illust.2 Left Hand View of the High Clear Version

DESCRIPTION

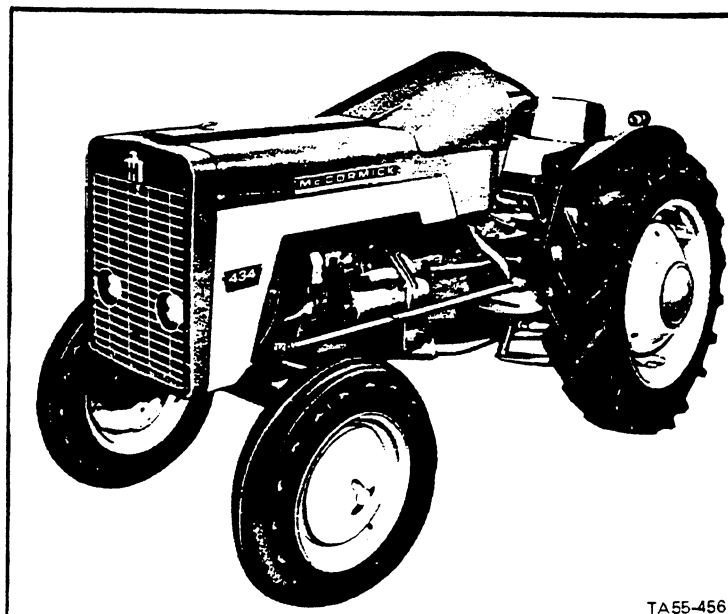

Illust.3 Left Hand View of the Narrow Tread Version

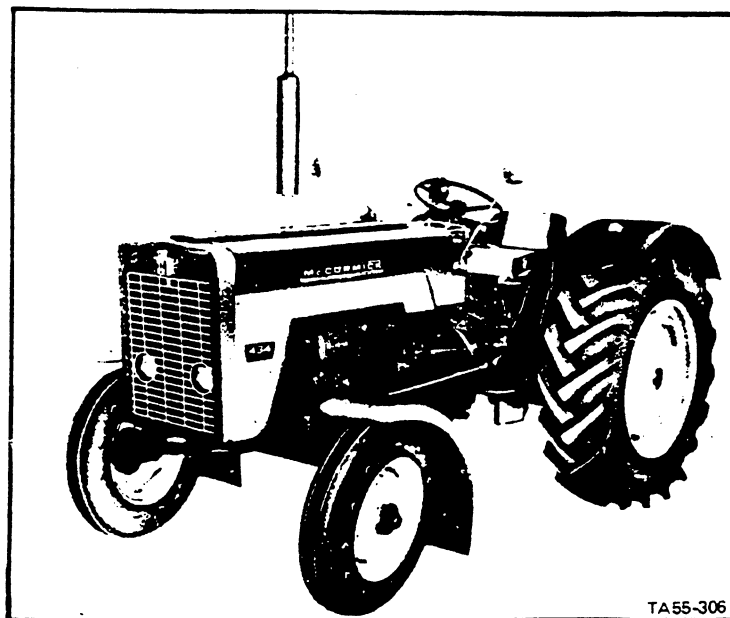

Illust.4 Left Hand View of the Highway Version

INTRODUCTION


Compiled in this manual are the operating and maintenance instructions for the INTERNATIONAL 434 Tractor.

This material has been prepared in detail to help the operator to understand better the correct care and efficient operation of the tractor.


If information not given in this manual is required, consult an International Harvester dealer. Dealers are kept informed on the latest methods of servicing machines, they carry stocks of genuine I.H. service parts and are backed in every way by the full facilities of the International Harvester Company.

Throughout this manual the terms LEFT, RIGHT, FRONT and REAR are to be taken as those applicable to a person seated in the driver's seat and facing the radiator.

When in need of service parts always specify the tractor and engine serial number. The tractor serial number is stamped on a nameplate attached to the right hand side of the clutch housing (Illustr.5). The engine serial number is stamped on the right hand side of the engine crankcase (Illustr.6). For ready reference, write these serial numbers in the spaces provided above the illustrations.

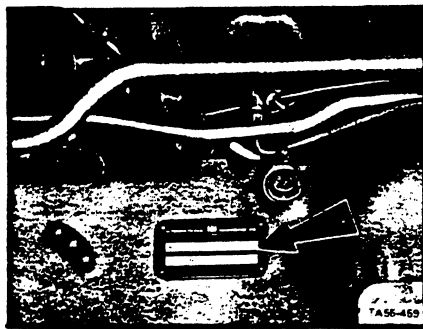

Illustr.5 Tractor Serial Number Location

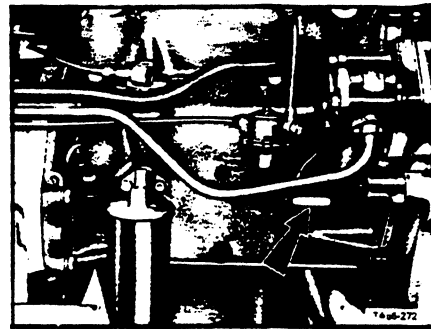

Illustr.6 Engine Serial Number Location

Buy Now



Our support email:

ebooklibonline@outlook.com