

Cub Tractor

Operators Manual

1084506R1

Reprinted

CASE III



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

To The Owner

Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory trained servicemen, informed in the latest method of servicing tractors, and modern tools, and original-equipment IH service parts which assure proper fit and good performance.

To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester Dealer.


Before you operate the tractor, study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

When in need of parts, always specify the tractor and engine serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces provided below.


THIS MANUAL IS FOR TRACTORS WITH SERIAL NUMBER 248 125 AND ABOVE.

METRIC (SI) MEASUREMENTS

A standard of metric measurement known as International System of Units (SI) has been adopted for world-wide use. English Units followed by Metric Equivalents are used throughout this manual. (Metric Equivalents are given in parenthesis)

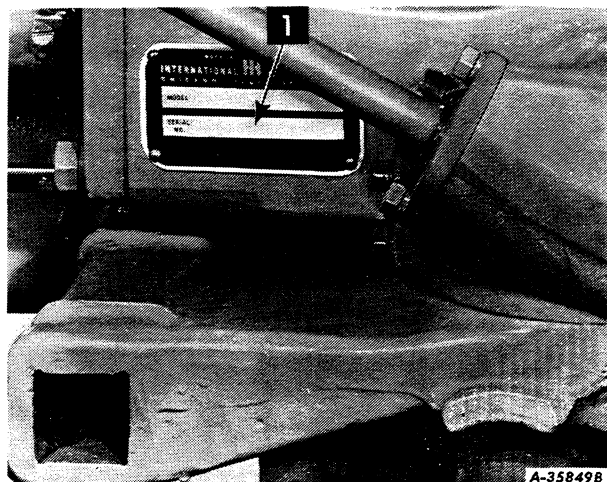

1 - Tractor Serial number _____

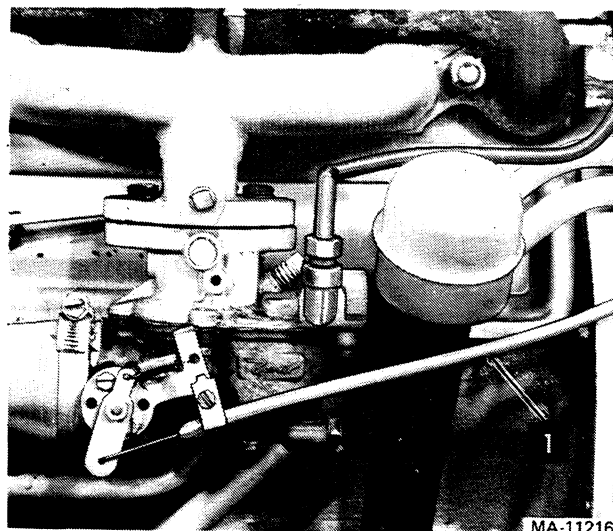

1 - Engine serial number _____

CONTENTS

CONTENTS	1, 2	TOUCH CONTROL LIFT SYSTEM	19
INTRODUCTION	3	FAST-HITCH	20 thru 23
WORK SAFELY – FOLLOW THESE RULES	4 thru 6	Depth Adjusting Crank and Hitch Bail	
INSTRUMENTS AND CONTROLS	7 thru 11	Leveling Crank and Stop Collar	
Brake Pedals		Diagonal Link	
Brake Pedal Latch		Pull Bar	
Brake Pedal Lock		Lift Links	
Choke Control		Pull Bar Extension	
Charge Indicator		Uncoupling the Equipment	
Clutch Pedal		Coupling the Equipment	
Engine Speed Control Lever		DRAWBARS	23, 24
Fuse Holder		Fast-Hitch Drawbar	
Gearshift Lever		Removing the Drawbar	
Ignition Switch		Adjusting the Drawbar	
Lighting Switch		WEIGHTS	25, 26
Oil Pressure Gauge		Front Wheel Weights	
Power Take-Off Shifter Rod		Rear Wheel Weights	
Touch Control Lever (With Adjustable Stop)		TREAD WIDTH ADJUSTMENT	27 thru 30
BEFORE OPERATING THE TRACTOR	11 thru 13	Front Tread Width Adjustment	
Lubrication		Rear Tread Width Adjustment	
Air Cleaning System		PREVENTIVE MAINTENANCE GUIDE	31, 32
Tires		PREVENTIVE MAINTENANCE	33 thru 48
Engine Cooling System		Fuel System	33
Fuel		Fuel Shut Off Valve	33
Tractor Break-In Procedure		Filler Cap Air Vent	33
OPERATING THE TRACTOR	13 thru 15	Cleaning the Fuel Strainer and Sediment Bowl	33, 34
Starting the Tractor		Carburetor	34
After the Engine Starts		Cooling System	34
Driving the Tractor		Radiator Cap Removal	35
Gearshift Lever		Adding Coolant to the Cooling System	35
Brake Pedals		Draining the Cooling System	35
Driving on Slopes		Cleaning the Cooling System	35
Stopping the Tractor		Filling the Cooling System	36
POWER TAKE-OFF	16	Care of the Radiator	36
POWER TAKE-OFF DRIVEN BELT PULLEY	17, 18	Fan, Crank and Alternator Belt Tension	36, 37
Changing from Power Take-Off to Belt Pulley		Oil Cup Service	37
Changing from Belt Pulley to Power Take-Off		Oil Bath Air Cleaner	38
		Air Cleaning System	38
		Washing the Cleaner	38


CONTENTS

PREVENTIVE MAINTENANCE – Continued		COLD WEATHER PRECAUTIONS	50
General Precautions	39	Fuel System	
Crankcase Breather Service	39	Electrical	
Electrical System	39	Lubrication	
Ignition System	40	Cooling System	
Charging System for Alternator	41		
Cranking Motor System	41	LUBRICATION	50 thru 54
Lighting System	41	Crankcase Breather and	
Headlight Removal	41	Checking the Oil Level	
Combination Rear Light and		Crankcase Breather Service	
Taillight Replacement	42, 43	Engine Oil	
Fuse	43	Gear Lubricant and Hydraulic	
Battery	43, 44	Fluid	
Adjusting the Toe-In	45	Lubrication Fitting Grease	
Tires	45	Oil Filter	
Care of Tires	45	Touch Control Lift System	
Inflation	46	Fluid Level	
Using the Spark Plug Tire Pump	46	Fan Hub Lubrication	
Shipping Tractors Equipped with			
Pneumatic Tires	46		
Mounting Tires on the Rim	46		
Traction and Weights	46	LUBRICATION TABLE	55
Tire Chains	46		
Overloading	46	LUBRICATION GUIDE	56 thru 61
Brakes	47		
Brake Adjustment	47	SPECIFICATIONS	61 thru 63
Clutch	47		
Care of the Engine Clutch	47	ATTACHMENTS AND	64
Adjusting the Engine Clutch	47, 48	ACCESSORIES	
STORING THE TRACTOR	49	METRIC (SI) MEASUREMENTS	Inside Back Cover
Storage			
Removing from Storage			



INTERNATIONAL HARVESTER

INTRODUCTION

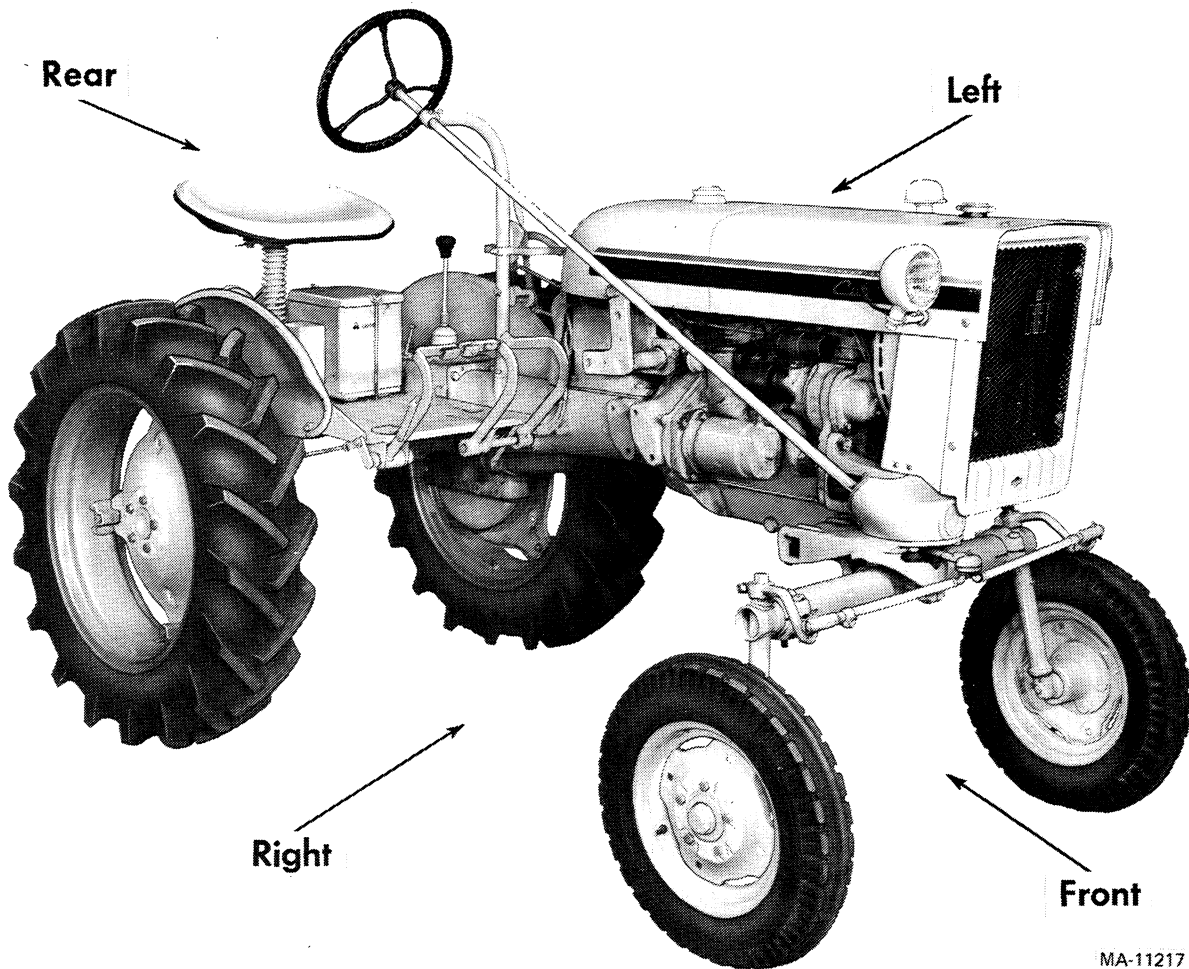

MA-11217

International Cub Tractor showing terms of location.

Assembled in this manual are operation, maintenance and lubrication, instructions for International Cub Tractor. This material has been prepared in detail in the hope that it will help you to better understand the correct care, efficient and safe operation of the tractor.

Throughout this manual the use of the terms LEFT, RIGHT, FRONT, and REAR must be understood when following instructions to avoid confusion. LEFT and RIGHT indicate the left and right sides of the tractor when facing forward in the driver's seat. FRONT indicates the radiator end of the tractor; REAR indicates the hitch end.



CAUTION

Read the Operator's Manual.

Learn to operate this machine SAFELY.

Be alert. Observe ALL Safety Practices.

Machines can be hazardous in the hands of an UNFAMILIAR, UNTRAINED or COMPLACENT operator.

Don't risk INJURY or DEATH.

MA-10034

Buy Now



Our support email:

ebooklibonline@outlook.com