

**140
Tractor**

Operators Manual

1096193R2

Reprinted

CASE III



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

**IMPORTANT FUEL SYSTEM SAFETY WARNING
AND
ANNOUNCEMENT OF FREE, REPLACEMENT GASOLINE CAP**



CAUTION! The following information pertains to personal safety. Be sure to read and follow these instructions.

PROBLEM — Gasoline vapors can build up pressure in your gasoline tank.

All gasoline fuels are more volatile today than ever before. They vaporize and build up pressure in your gasoline tank more easily than in the past. Winter grade gasoline is especially subject to vaporization and pressure build-up when used on hot Spring or Fall days. If you have a tractor which is out of tune or not properly maintained, it can run hotter and increase vaporization.

DANGER — Fire and personal injury.

If the fuel cap is removed when the gasoline tank is hot and vapor pressure has, under certain circumstances, built up in the tank, this sudden release of pressure could force gasoline out of the tank. If the gas cap is not fully secured and tightened, it could come off the tank, and again, gasoline could escape. This sudden eruption of gasoline exposes the operator to, and may cover him with, liquid fuel and vapors and is a clear fire hazard if a source of ignition is present. A running engine is a source of ignition, as are cigarettes, open flames, sparks or a poorly maintained exhaust system. **An immediate fire could occur.** The operator or anyone in the area could be burned and suffer serious injury or even death.

PRECAUTIONS — Observe the following steps for safe operation:

- Always tighten gas caps securely.
- Never, under any circumstances, take the gas cap off a hot or running tractor.
- Never hold over Winter gasoline for use in the Spring. Remove any equipment unnecessary for warm weather operations, such as comfort covers, heat housers, or radiator covers.
- Maintain equipment properly and pay particular attention to electrical, exhaust, fuel, and cooling systems. Repair or replace frayed electrical wires; leaky exhaust manifolds, gaskets, pipes and mufflers; damaged carburetors, sediment bowls and fuel lines. Be sure radiators are clean inside and out. Clean off any accumulation of trash, oil or grease.
- Make sure that fuel cap vent holes are not plugged, gaskets are in good condition, and that cap tangs are firmly riveted. Repair worn, bent, or deformed filler necks and damaged heat shields or shield insulation. If your tractor is not equipped with a heat shield or insulation, install such equipment on applicable models.
- Be alert to any unusual sights and sounds during operation. If you suspect overheating or pressure build-up in the fuel system, do not touch the cap. Turn off the engine and allow the tractor to cool before you touch the cap.

FREE GASOLINE CAP — See your dealer today.

International Harvester has developed a new gasoline cap designed to improve vapor venting and to inhibit the sudden eruption of liquid fuel if the safety precautions against cap removal are not observed.

New caps will be exchanged **free of charge** with owners of certain models of International Harvester farm tractors. To see whether your tractor already has the new cap or to arrange to obtain one, simply contact your local International Harvester dealer. Also ask him for a free International Harvester brochure "New Facts About Fuels" and for free "Warning" decals for all gasoline equipment.

NOTE: New cap **will not** fit on any of these tractors.

Gasoline Tractor Models Included in Cap Exchange Program (See Note)			
A	100	*504	2404
AV	130	F-544 Only	2424
B	140	560	2444
BN	200	600	2504
C	230	*606	2544
H	240	650	*2606
HV	300	F-656 Only	2706
M	330	660	2756
MV	340	666	2806
O	350	686	2826
OS	400	706	2856
W	404	756	
WR	424	766	
70	444	806	
86	450	826	
	460	856	

B-275	I-434
B-276	I-544
I -284	I-656
I -354	I-2656
B-414	

* New cap **will not** fit on these tractors above serial numbers shown.

F-504 above serial No. 13400
 I -504 above serial No. 14272
 I -606 above serial No. 6879
 I -2606 above serial No. 6879

New cap **will not** fit on any lawn and garden tractor in the Cadet model series or on any tractor with the gasoline tank behind the operator's seat.

CONTENTS

TO THE OWNER	Inside Front Cover	COOLING SYSTEM	18, 19
SERIAL NUMBERS	3	Coolants	18
WORK SAFELY — FOLLOW THESE RULES	5, 6, 7	Cooling System Conditioner	18
Servicing and Before		Checking The Coolant Level	18
Starting	5	Draining and Filling the Cooling System	18
Starting	5	Hoses and Clamps	19
During Operation	5	Cleaning the Cooling System	19
Transporting	6	Thermostat	19
Before Dismounting	6	Cleaning the Radiator	
After an Upset	7	Core Fins	19
INSTRUMENTS AND CONTROLS	8	Water Pump, Alternator — Generator and Fan Belt Tension	19
BEFORE OPERATING YOUR TRACTOR	9	AIR CLEANING SYSTEM	20,21
OPERATING THE TRACTOR	9 to 13	Oil-Bath Air Cleaner	20
Neutral Starting Switch	9	Pre-Screener	20
Starting the Gasoline Engine	9	General Precautions	21
Stopping the Gasoline Engine	9	Cylinder Head Breather Cap	21
With the Engine Running	10	ELECTRICAL SYSTEM	22 to 31
Steering the Tractor	11	Charging System for Alternator-Generator	22
Starting the Tractor	11	Cranking System	23
Stopping the Tractor	11	Ignition System	23
Tachometer	11	Lighting System	23
Gearshift Lever	11	Lights	23
Engine Speed Control Lever	12	Combination Rear Light and Taillight	23
Governor	12	Taillight	23
Towing the Tractor	12	Warning Lights (Without Turn Signals)	23
Tractor Break-In Procedure	12	Fuse	24
Seat	13	Combination Turn Signals and Warning Lights	24
GASOLINE ENGINE AND FUEL SYSTEM	14 to 17	Breakaway Connector	24
Warranty Notice	14	Battery	25
Fuel System	14	Spark Plugs and Cables	27
Cleaning the Fuel Strainer and Sediment Bowl	16	Distributor and Coil Unit	28
		Power Timing Light	30
		Ignition Coil	30
		Tachometer Drive Unit	30
		FARMALL TOUCH-CONTROL SYSTEM	32, 33
		Operating the Touch-Control System	32
		Air in the System	33

CONTENTS


FAST-HITCH	34 to 38	COLD WEATHER	
Coupling the Equipment	35	PRECAUTIONS	52
Uncoupling the Equipment	36	Fuel System	52
Hitch Adjustment	36	Electrical	52
Fast-Hitch Load Limitations	37	Lubrication	52
Cushion Springs	38	Cooling System	52
Fast-Hitch Auxiliary Drawbar	38		
Fast-Hitch Coupling Beam	38	BRAKES	53
		Brake Adjustment	53
HITCHING TRAILING EQUIPMENT		CLUTCH	54
TO THE TRACTOR	39	Care of Engine Clutch	54
Removing the Drawbar	39	Adjusting the Engine Clutch	54
Drawbar Adjustment	39		
BELT PULLEY OR		STORING THE TRACTOR	55
POWER TAKE-OFF	40, 41	Storage	55
Operating the Belt Pulley or		Removing from Storage	55
Power Take-Off With the			
Tractor Standing Still	40	LUBRICATION	56 to 59
Operating the Power Take-Off		Engine Oil	56
With the Tractor in Motion	40	Gear Lubricant	56
General Precautions	40	Lubrication Fitting Grease	56
		Engine Oil Filter	57
FRONT WHEELS	41, 42,	Touch-Control System	57
	43	Greasing the Front Wheels	58
Hi-Clear Tractors	42		
Adjusting the Tread Widths	42	LUBRICATION TABLE	60
REAR WHEELS	44, 45,	LUBRICATION GUIDE	61 to 66
	46		
Removing or Changing		PREVENTIVE MAINTENANCE	
Positions of the Rear		GUIDE	67, 68,
Wheels	44		69
Adjusting the Rear Wheel		TROUBLE SHOOTING	70 to 75
Tread Widths	45		
Treads for Tractor With		SPECIFICATIONS	76 to 79
Highway Mower	45		
		OPTIONAL EQUIPMENT	80
TIRES	47, 48		
Inflation	47	METRIC (SI) MEASUREMENTS	Inside
Load Capacities			Back
Front Tires	47		Cover
Rear Tires	48		
WEIGHTS	49 to 52		
Front Wheel Weights	49		
Rear Wheel Weights			
(One-Piece)	50		
(Two-Piece)	51		

SERIAL NUMBERS



Right side of engine crankcase

1 - Engine Serial Number

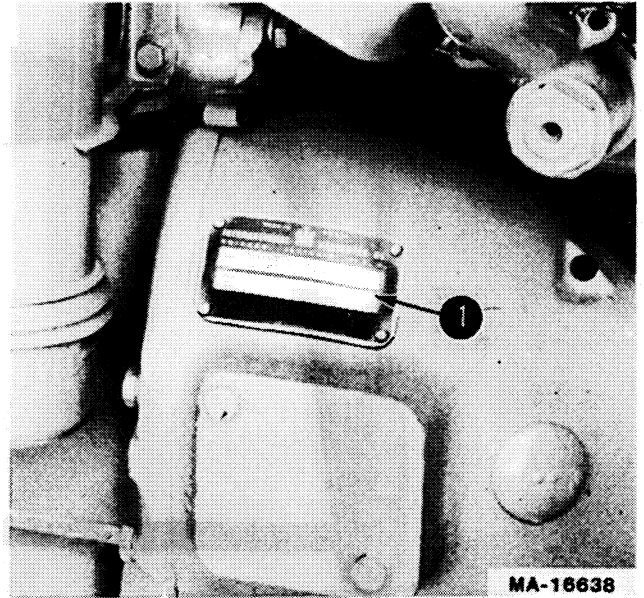

Left side of clutch housing

1 - Tractor Serial Number



MA-16563


**Farmall 140 Tractor.
(Equipped with Roll Over Protective Structure)**

WORK SAFELY — FOLLOW THESE RULES



This symbol is used to call your attention to instructions concerning your personal safety. Be sure to observe and follow these instructions.

A CAREFUL OPERATOR IS THE BEST INSURANCE AGAINST AN ACCIDENT

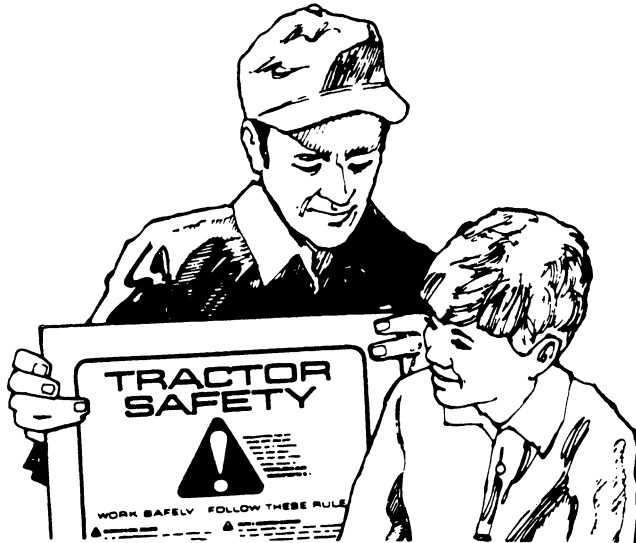

MA-12214

Reduce tipping hazards by spreading wheels as far as your work program permits.

Be sure muffler and exhaust pipe are in place so exhaust gases are discharged above the operator.

Always keep the operators compartment clean. Keep dirt, trash, and grease from the pedals, steps, mounting handles, steering wheel, and controls.

Always carry a "Charged" fire extinguisher and a first aid kit.

Avoid loose-fitting clothing, which could catch on moving parts.

SERVICING AND BEFORE STARTING

Carefully supervise inexperienced operators.

When fueling a tractor, keep any type of open flame away. Do not smoke. Stop the engine and wait for it to cool before removing the fuel cap or refueling.

Be sure that the fuel tank cap is fully tightened against the stop before starting the engine.

Check coolant and engine oil levels, and perform any other necessary services, before starting the engine.

Turn the radiator cap slowly counterclockwise to the pressure release point to allow the pressure or any steam to escape; then press down on the cap and continue to turn until the cap is free to be removed.

Check brakes and clutch pedal for correct adjustments.

STARTING

Know the controls and what they do. Be in the operator's seat and fasten the seat belt.

Set the brake pedal lock and place the transmission gear shift lever in the neutral position before starting the engine.

Be sure the power take-off rod is in the "OFF" or disengaged position before starting the engine. Make sure that the helpers or observers stand clear of the equipment.

Make sure the area is well ventilated.

DURING OPERATION

Carefully supervise inexperienced operators.

Buy Now



Our support email:

ebooklibonline@outlook.com