


Page Number	Page Title	Page Reference
01-0001	ENGINE INSTALLATION - UP TO SERIAL NUMBER 563010119 / 563410050 AL	LC03L008-1
01-0002	ENGINE INSTALLATION - FROM SERIAL NUMBER 563010120 / 563410051 AL	LC03L018-1
01-0003	ENGINE INSTALLATION	LC03L015-1
01-0004	ENGINE INSTALLATION - ENGINE BRACKET	LC03L014-1
01-0005	ENGINE - UP TO SERIAL NUMBER 563010119 / 563410050 AL	LC03L013-1
01-0006	ENGINE - FROM SERIAL NUMBER 563010120 / 563410051 AL	LC03L017-1
01-0007	ENGINE	HB01L001-1
01-0008	ENGINE - CYLINDER-BLOCK - 84ETA-4V MOTOR - UP TO ENGINE NUMBER ...	HB02L002-1
01-0009	ENGINE - CYLINDER-BLOCK - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124 / UP TO ENGINE NUMBER U1000	HB02L003-1
01-0010	ENGINE - CYLINDER-BLOCK - 84CTA-4V ENGINE - FROM ENGINE NUMBER U1001	HB02L005-1
01-0011	ENGINE - TIMING GEAR HOUSING - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB03L002-1
01-0012	ENGINE - TIMING GEAR HOUSING - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB03L003-1
01-0013	ENGINE - FLYWHEEL & FLYWHEEL HOUSING	HB04L002-1
01-0014	ENGINE - CRANKSHAFT, PISTONS & PISTON ROD - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB05L002-1
01-0015	ENGINE - CRANKSHAFT, PISTONS & PISTON ROD - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB05L003-1
01-0016	ENGINE - INTAKE VALVE, EXHAUST VALVE & CAMSHAFT - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB06L001-1
01-0017	ENGINE - INTAKE VALVE, EXHAUST VALVE & CAMSHAFT - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB06L002-1
01-0018	ENGINE - CYLINDER HEAD - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB08L001-1
01-0019	ENGINE - CYLINDER HEAD - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124 / UP TO ENGINE NUMBER T6693	HB07L001-1
01-0020	ENGINE - CYLINDER HEAD - 84CTA-4V ENGINE - FROM ENGINE NUMBER T6694	HB07L004-1
01-0021	ENGINE - AIR INTAKE & EXHAUST - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	0305L002-1
01-0022	ENGINE - AIR INTAKE & EXHAUST - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB19L001-1
01-0023	ENGINE - TURBOCHARGER - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	0650L002-1
01-0024	ENGINE - TURBOCHARGER - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB21L001-1
01-0025	ENGINE - OIL SUMP	HB10L002-1
01-0026	ENGINE - OIL COOLER	HB12L001-1
01-0027	ENGINE - CENTRIFUGAL OIL FILTER	LD98L003-1
01-0028	ENGINE - WATER PUMP - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB45L002-1
01-0029	ENGINE - WATER PUMP - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB13L001-1
01-0030	ENGINE - INJECTION PUMP - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB16L002-1
01-0031	ENGINE - INJECTION PUMP - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB17L001-1
01-0032	ENGINE - INJECTION PUMP - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB14L001-1
01-0033	ENGINE - FUEL FILTER - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB18L002-1
01-0034	ENGINE - FUEL FILTER - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB18L003-1
01-0035	ENGINE - ELECTRONIC ENGINE MANAGEMENT (EEM) - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB48L001-1
01-0036	ENGINE - ELECTRONIC ENGINE MANAGEMENT (EEM) - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB48L002-1
01-0037	ENGINE - STARTER MOTOR - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB25L001-1
01-0038	ENGINE - STARTER MOTOR - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124 / UP TO ENGINE NUMBER U1000	HB25L002-1
01-0039	ENGINE - STARTER MOTOR - 84CTA-4V ENGINE - FROM ENGINE NUMBER U1001	HB25L003-1
01-0040	ENGINE - ALTERNATOR & FITTING BRACKET - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB24L002-1
01-0041	ENGINE - ALTERNATOR & FITTING BRACKET - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB24L003-1
01-0042	ENGINE - BELT TENSIONER - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	LA29L001-1
01-0043	ENGINE - BELT TENSIONER - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	LA29L002-1
01-0044	ENGINE - REPAIR KIT - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB31L002-1
01-0045	ENGINE - REPAIR KIT - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB31L003-1
01-0046	ENGINE - JOINTS AND GASKETS - 84ETA-4V MOTOR - UP TO ENGINE NUMBER R19123	HB28L002-1
01-0047	ENGINE - JOINTS AND GASKETS - 84CTA-4V ENGINE - FROM ENGINE NUMBER R19124	HB28L003-1
01-0048	COOLING SYSTEM	LC60L011-1
01-0049	COOLING SYSTEM	LC60L019-1
01-0050	COOLING SYSTEM	LC60L020-1
01-0051	COOLING SYSTEM - RADIATOR & ATTACHMENTS	LC60L021-1
01-0052	COOLING SYSTEM - RADIATOR (COMPONENTS)	LE18L002-1
01-0053	COOLING SYSTEM - RADIATOR (COMPONENTS)	LE18L003-1
01-0054	COOLING SYSTEM - RADIATOR (COMPONENTS)	LC60L001-1
01-0055	COOLING SYSTEM - UP TO SERIAL NUMBER 563010043 / 563410022 AL	LC60L015-1
01-0056	COOLING SYSTEM - FROM SERIAL NUMBER 563010044 / 563410023 AL	LC60L023-1
01-0057	COOLING SYSTEM	LC60L016-1
01-0058	COOLING SYSTEM	LC60L018-1
01-0059	COOLING SYSTEM	LC60L017-1


Page Number	Page Title	Page Reference
01-0060	COOLING SYSTEM - ROTARY SCREEN	LC60L010-1
01-0061	DUST ASPIRATOR	LC63L007-1
01-0062	DUST ASPIRATOR	LC63L008-1
01-0063	DUST ASPIRATOR	LC63L006-1
01-0064	ENGINE COMPARTMENT - SERVICE HATCH	1914090
01-0065	ENGINE COMPARTMENT - SERVICE HATCH - STANDARD	1914091
01-0066	ENGINE COMPARTMENT - SERVICE HATCH - AUTOLEVEL	1914092
01-0067	ENGINE AIR FILTER	LC57L003-1
01-0068	EXHAUST SYSTEM	LC58L003-1
01-0069	FUEL SYSTEM - FUEL TANK & ATTACHMENTS - UP TO SERIAL NUMBER 563010119 / 563410050 AL	LC59L003-1
01-0070	FUEL SYSTEM - FUEL TANK & ATTACHMENTS - FROM SERIAL NUMBER 563010120 / 563410051 AL	LC59L006-1
01-0071	FUEL SYSTEM - FUEL TANK BRACKET - UP TO SERIAL NUMBER 563010119 / 563410050 AL	LC59L004-1
01-0072	FUEL SYSTEM - FUEL TANK BRACKET - FROM SERIAL NUMBER 563010120 / 563410051 AL	LC59L007-1
01-0073	FUEL FILTER - UP TO SERIAL NUMBER 563010419 / 563410122 AL	1926625
01-0074	FUEL FILTER - FROM SERIAL NUMBER 563010420 / 563410123 AL	1926626

8015452-L-A

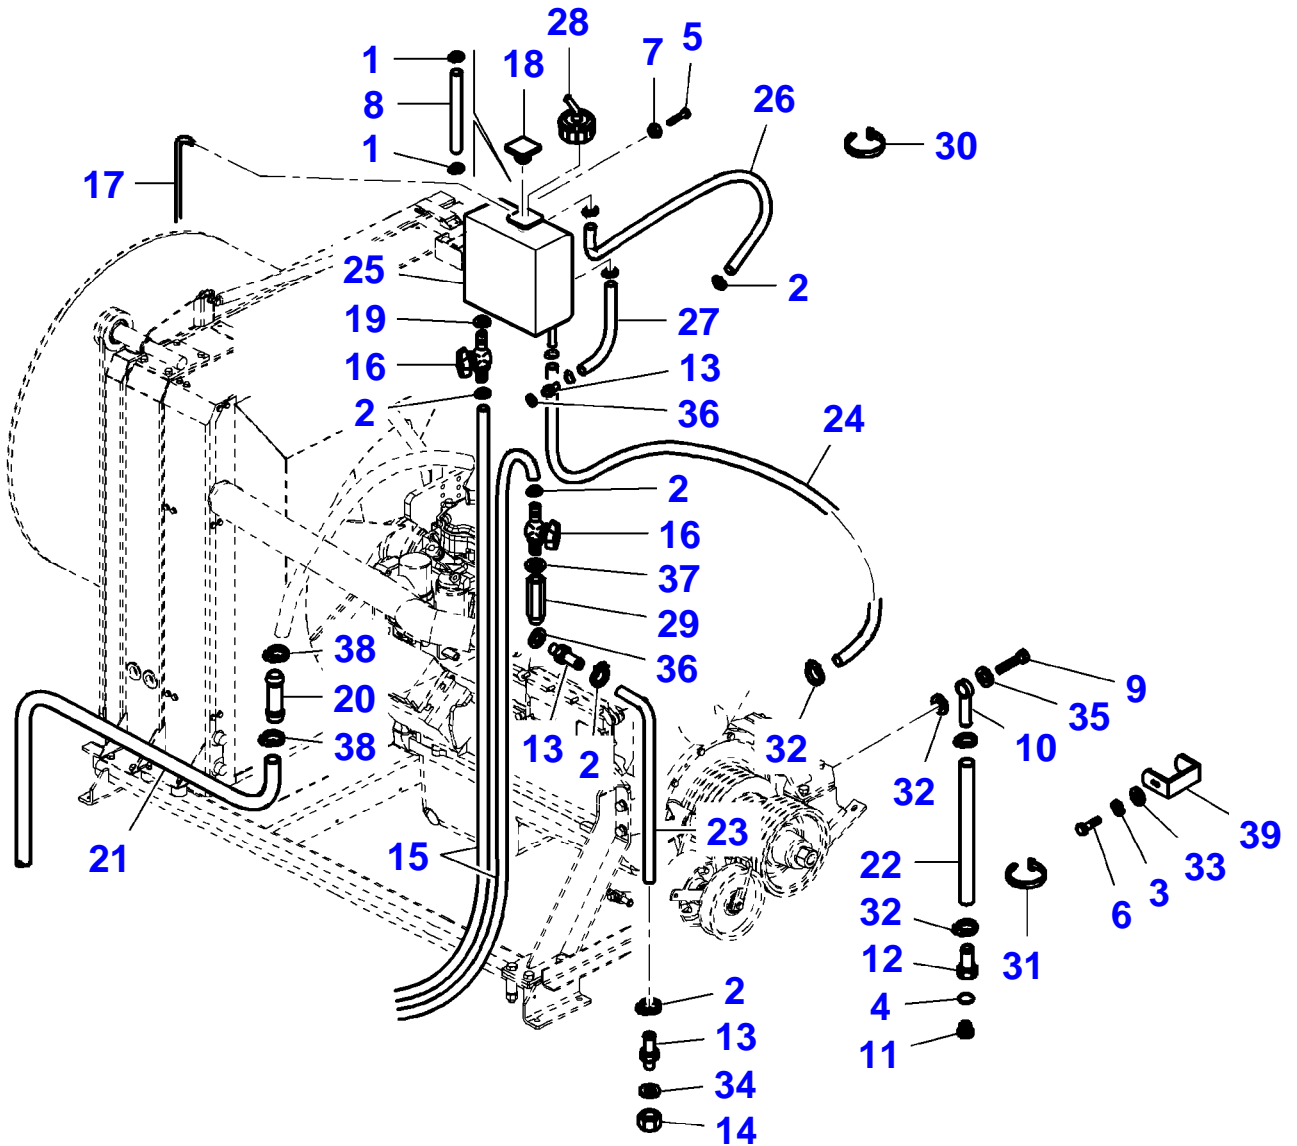

Item	Part Number	Qty	Description Comments	Technical Specification
1	LA10186490	2	HOSE CLIP	?10-12 MM
2	LA10186690	6	HOSE CLIP	?12-14 MM
3	LA12034571	1	SPRING WASHER	M8
4	LA14457180	1	O-RING	?13,95 X 2,62 MM
5	LA16043221	1	HEXAGONAL HEAD BOLT	M8 X 16 ISO 8.8 IF
6	LA16043421	1	HEXAGONAL HEAD BOLT	M8 X 20 (1.25) ISO 8.8 IF
7	LA16104111	1	LOCKNUT	M8 ISO
8	LA19053182	1	HOSE	
9	LA300128295	1	PIPE UNION	M22 (1.5)
10	LA300136355	1	FILLER	
11	LA320479650	1	PLUG	
12	LA321806450	1	FILLER	
13	LA321946550	3	FILLER	
14	LA321946650	1	PLUG	
15	LA322303650	2	WATER HOSE	L = 6000 MM
16	LA322310850	2	COCK	
17	LA322327850	1	WATER HOSE	L = 4500 MM
18	LA322638350	1	TANK CAP	
19	LA322731950	1	SEALING WASHER	
20	LA322895650	1	TUBE	
21	LA322895750	1	AIR HOSE	L = 3350 MM
22	LA322895950	1	HYDRAULIC HOSE	L = 2650 MM
23	LA322896150	2	WATER HOSE	L = 3400 MM
24	LA322944150	1	WATER HOSE	L = 1100 MM
25	LA322995200	1	EXPANSION TANK	
26	LA322995450	1	WATER HOSE	L = 900 MM
27	LA323013550	1	WATER HOSE	L = 500 MM
28	LA323105850	1	TANK CAP	
29	LA323143050	1	UNION	
30	LA340481806	1	CABLE TIE	L = 180 MM
31	LA340481813	1	CABLE TIE	L = 365 MM
32	LA350391518	4	HOSE CLIP	?19-28 MM
33	LA355510820	1	FLAT WASHER	?8,5-24 X 2 MM
34	LA355561430	1	SEALING WASHER	?14,5-22,5 X 3 MM
35	LA355562230	2	SEALING WASHER	?22,5-28,5 X 3 MM
36	LA355571415	2	SEALING WASHER	?14,5-20 X 1,5 MM
37	LA410000794	1	SEALING WASHER	?16,5-22 X 1 MM
38	LA350391526	1	HOSE CLIP	?26-38 MM
39	LA322869150	1	SUPPORT	

8018084-L-A

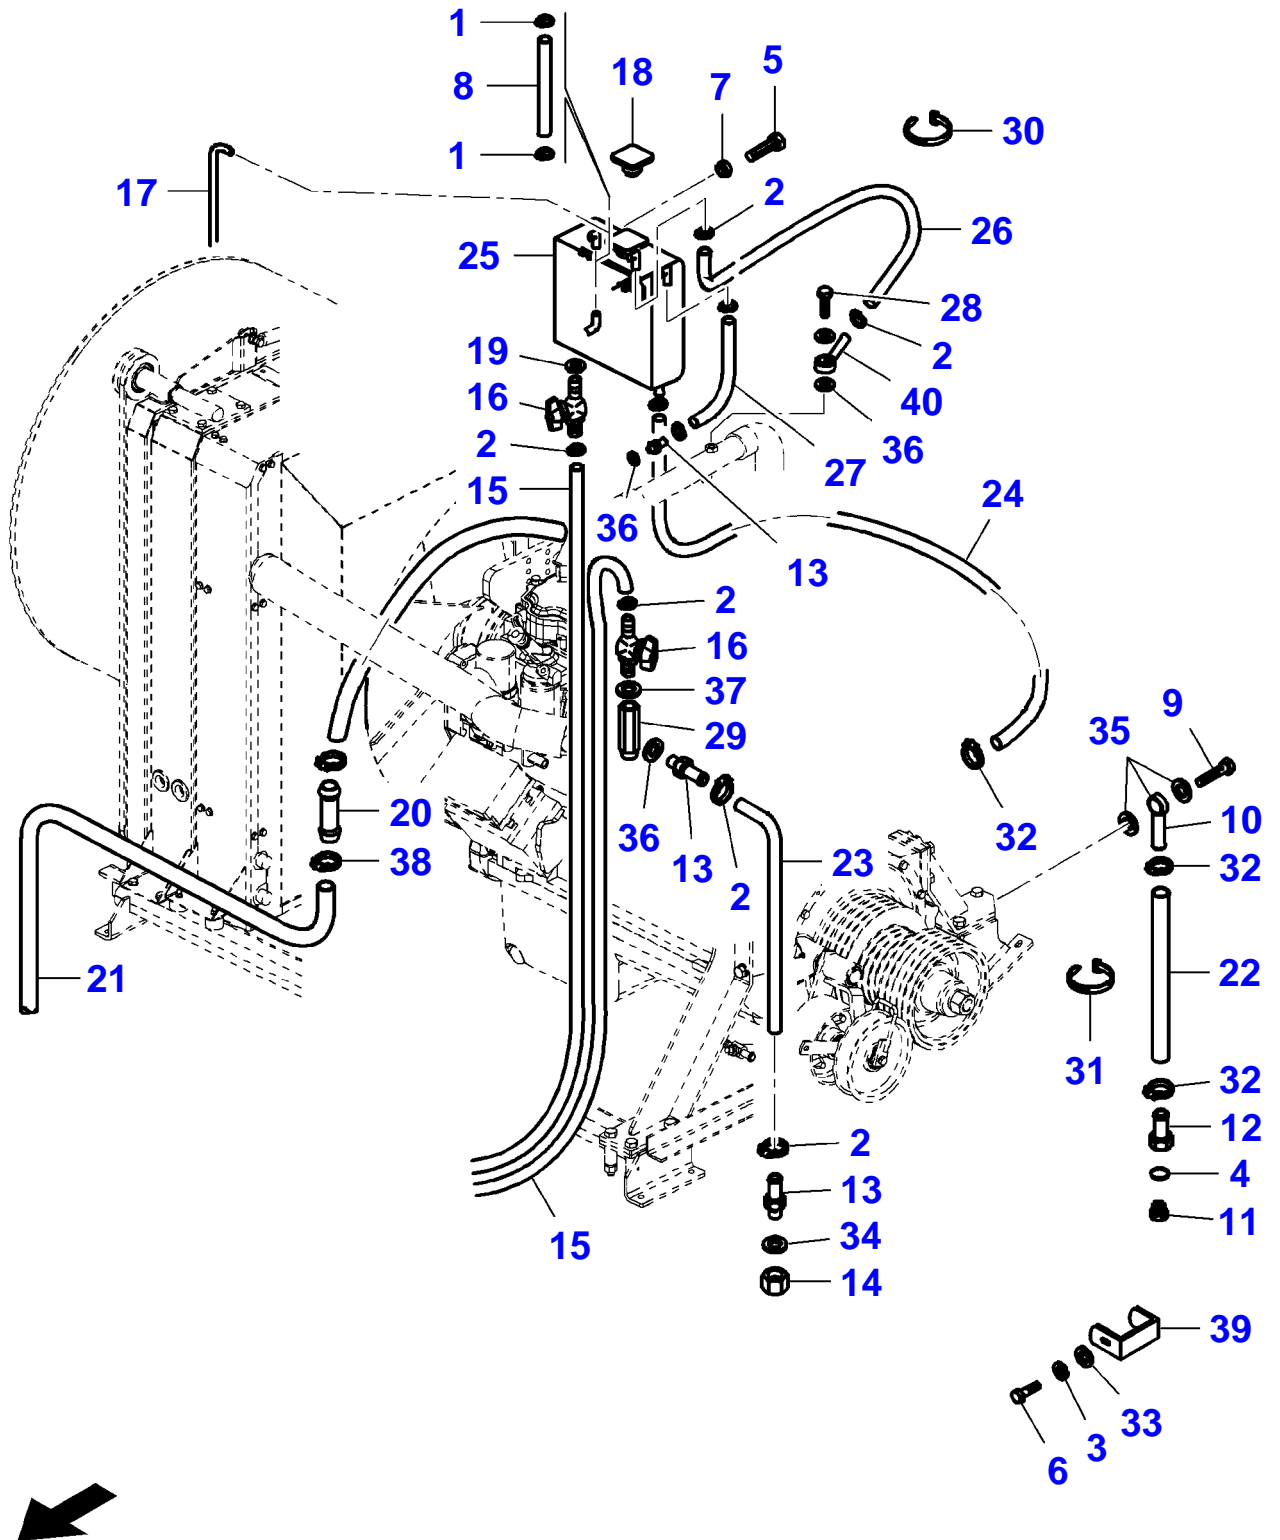

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com