


SUNDSTRAND
SERVICE MANUAL
FOR
HEAVY DUTY
TRANSMISSIONS

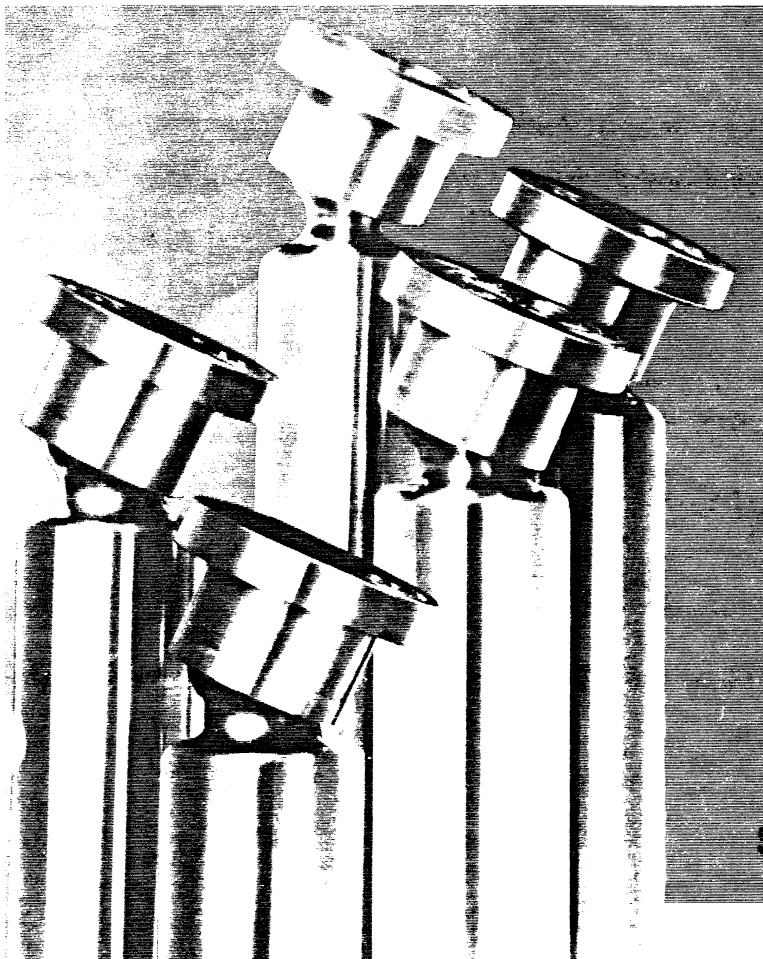

Sundstrand Hydro-Transmission

AMES, IOWA 50010

Unit of Sundstrand Corporation



Reprinted
40891100

TABLE OF CONTENTS

	Page
SECTION I	
INTRODUCTION	1
SECTION II	
GENERAL INFORMATION	
Model Number System	1
Serial Number System	3
Hydraulic Circuits	5-9
Flow Diagrams	10-14
Controls	15-20
SECTION III	
INSTALLATION & PLUMBING	
Complementary Components	1-3
Plumbing Installation PV-MF	4
Plumbing Installation PV-MV	5
Plumbing Reference Chart	6-8
SECTION IV	
START-UP PROCEDURE	1-3
Fluid Recommendation	4
SECTION V	
TROUBLE SHOOTING PROCEDURE	1
Trouble Shooting Gages	2
Gage Installation PV-MF	3
Trouble Shooting	4-16
SECTION VI	
SYSTEM MAINTENANCE	1
SECTION VII	
TRANSMISSION REPAIR SERVICE	1
Authorized Service Stations	4
Field Repair	5-14

I. INTRODUCTION

The purpose of this manual is to provide servicing information pertaining to Sundstrand's family of Heavy Duty Hydrostatic Transmissions.

A complete review of each section for familiarization of content is suggested prior to any operations being performed.

The information is compiled to provide correct procedures for installation, start-up, and system maintenance for trouble free operation of the transmissions. Any deviation of these guidelines should be investigated prior to implementation.

In working with any hydraulic equipment, cleanliness is most important. Any item related to the transmission must be clean. All tools, hose, containers, units, etc. must be protected from contaminants. This pertains whether the system is new or being serviced.

KEEP IT CLEAN

NOTE: *All correspondence, requests, or inquiries on any product must be accompanied with complete MODEL NUMBER(S) and SERIAL NUMBER(S).*

Buy Now



Our support email:

ebooklibonline@outlook.com